

# Manfrotto Fitting Chart - Video Camera Bags & Rain Covers

• Use only with viewfinder

| BRAND     | CAMCORDER                                 | CAMCORDER CASE |               |               |               |              |              |              |              |               |             | BACKPACK    |              |              | RAIN COVER  |              |              |              |              |              |            |             |
|-----------|-------------------------------------------|----------------|---------------|---------------|---------------|--------------|--------------|--------------|--------------|---------------|-------------|-------------|--------------|--------------|-------------|--------------|--------------|--------------|--------------|--------------|------------|-------------|
|           |                                           | MB PL-CC-191N  | MB PL-CC-192N | MB PL-CC-193N | MB PL-CC-195N | MB PL-CC-191 | MB PL-CC-193 | MB PL-CC-195 | MB PL-CC-197 | MB MP-SB-50BB | MB MA-SB-A7 | MB PL-B-220 | MB PL-PV-410 | MB PL-PV-610 | MB PL-E-702 | MB PL-CRC-12 | MB PL-CRC-13 | MB PL-CRC-14 | MB PL-CRC-15 | MB PL-CRC-17 | MB PL-RC-1 | MB PL-RC-10 |
| Canon     | EOS 1D C                                  | •              |               |               |               | •            |              |              |              | •             | •           | •           |              |              | •           |              |              |              |              |              |            |             |
| Canon     | EOS C100/C100 Mark II                     |                | •             |               |               |              |              |              | •            |               |             |             |              |              |             |              |              | •            |              |              |            |             |
| Canon     | EOS C100/C100 MarkII Disassembled         | •              |               |               |               |              |              | •            |              | •             |             | •           |              |              |             |              |              | •            |              |              |            |             |
| Canon     | EOS C100/C100 Mark II microphone detached |                | •             |               |               |              |              |              | •            | •             |             |             |              |              |             |              |              | •            |              |              |            |             |
| Canon     | EOS C300                                  |                | •             |               |               |              |              |              | •            | •             |             |             |              |              |             |              |              | •            |              |              |            |             |
| Canon     | EOS C300 Mark II                          |                |               |               | •             |              |              |              | •            |               |             |             |              |              |             |              |              | •            |              |              |            |             |
| Canon     | EOS C300 Mark II microphone detached      |                | •             |               |               |              |              |              | •            |               |             |             |              |              |             |              |              | •            |              |              |            |             |
| Canon     | EOS C300/C300 Mark II Disassembled        | •              |               |               |               |              |              | •            |              | •             |             | •           |              |              |             |              |              | •            |              |              |            |             |
| Canon     | EOS C500                                  |                | •             |               |               |              |              |              |              | •             |             |             |              |              |             |              |              | •            |              |              |            |             |
| Canon     | EOS C500 Disassembled                     | •              |               |               |               |              |              | •            |              |               |             | •           |              |              |             |              |              | •            |              |              |            |             |
| Canon     | ME20F-SH                                  |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Canon     | XA10                                      | •              |               |               |               | •            |              |              |              |               |             |             |              |              |             |              | •            |              |              |              |            |             |
| Canon     | XA20                                      | •              |               |               |               | •            |              |              |              |               |             |             |              |              |             |              | •            |              |              |              |            |             |
| Canon     | XA25                                      | •              |               |               |               | •            |              |              |              |               |             |             |              |              |             |              | •            |              |              |              |            |             |
| Canon     | XA30                                      | •              |               |               |               | •            |              |              |              |               |             |             |              |              |             |              | •            |              |              |              |            |             |
| Canon     | XA35                                      | •              |               |               |               | •            |              |              |              |               |             |             |              |              |             |              | •            |              |              |              |            |             |
| Canon     | XC10                                      | •              |               |               |               | •            |              |              |              |               |             |             |              |              |             |              |              |              |              | •            |            |             |
| Canon     | XF100                                     | •              |               |               |               | •            |              |              |              |               |             | •           |              |              |             |              |              | •            |              |              |            |             |
| Canon     | XF105                                     | •              |               |               |               | •            |              |              |              |               |             | •           |              |              |             |              |              | •            |              |              |            |             |
| Canon     | XF200                                     | •              |               |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Canon     | XF200 microphone detached                 | •              |               |               |               | •            |              |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Canon     | XF205                                     | •              |               |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Canon     | XF205 microphone detached                 | •              |               |               |               | •            | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Canon     | XF300                                     |                |               | •             |               |              | •            |              |              |               |             |             | •            |              |             |              |              | •            | •            |              |            |             |
| Canon     | XF305                                     |                |               | •             |               |              | •            |              |              |               |             |             | •            |              |             |              |              | •            | •            |              |            |             |
| Canon     | XHA1                                      | •              |               |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Canon     | XHA1s                                     | •              |               |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Panasonic | AG-AC130                                  |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Panasonic | AG-AC160                                  |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |

# Manfrotto Fitting Chart - Video Camera Bags & Rain Covers

• Use only with viewfinder

| BRAND     | CAMCORDER                                  | CAMCORDER CASE |               |               |               |              |              |              |              |               |             | BACKPACK    |              |              | RAIN COVER  |              |              |              |              |              |            |             |
|-----------|--------------------------------------------|----------------|---------------|---------------|---------------|--------------|--------------|--------------|--------------|---------------|-------------|-------------|--------------|--------------|-------------|--------------|--------------|--------------|--------------|--------------|------------|-------------|
|           |                                            | MB PL-CC-191N  | MB PL-CC-192N | MB PL-CC-193N | MB PL-CC-195N | MB PL-CC-191 | MB PL-CC-193 | MB PL-CC-195 | MB PL-CC-197 | MB MP-SB-50BB | MB MA-SB-A7 | MB PL-B-220 | MB PL-PV-410 | MB PL-PV-610 | MB PL-E-702 | MB PL-CRC-12 | MB PL-CRC-13 | MB PL-CRC-14 | MB PL-CRC-15 | MB PL-CRC-17 | MB PL-RC-1 | MB PL-RC-10 |
| Panasonic | AG-AC8P                                    |                |               |               |               |              |              | •            |              |               |             |             |              |              |             |              |              |              |              |              |            |             |
| Panasonic | AG-AC90                                    |                |               |               |               |              | •            |              |              |               |             |             |              |              |             |              |              |              |              |              |            |             |
| Panasonic | AG-AF100                                   |                |               |               |               |              | •            |              |              |               |             |             |              |              |             |              |              |              |              |              |            |             |
| Panasonic | AG-DVX100B                                 | •              |               |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Panasonic | AG-DVX200                                  |                | •             |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Panasonic | AG-HMC155                                  |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Panasonic | AG-HPX170                                  |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Panasonic | AG-HVX200                                  |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Panasonic | AJ-PX270                                   |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             | •            |              |              |              |              |            |             |
| Panasonic | AJ-PX5000G + Fujinon 12x                   |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Panasonic | AJ-PX800G + Fujinon 16x                    |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Panasonic | Lumix GH4                                  | •              |               |               |               | •            |              |              |              |               | •           | •           |              |              |             |              |              |              |              | •            |            |             |
| Sony      | FDR-AX1                                    |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Sony      | HDR-FX7                                    |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              |              |              |            |             |
| Sony      | HVR-Z5                                     |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Sony      | HXR-NX100                                  |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Sony      | HXR-NX100<br>microphone detached           | •              |               |               |               | •            |              |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Sony      | HXR-NX3/1                                  |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Sony      | NEX-EA50M + 18-200                         |                |               |               | •             |              |              | •            |              |               |             |             |              |              |             |              |              |              | •            |              |            |             |
| Sony      | NEX-EA50M + 18-200<br>viewfinder detached  |                |               | •             |               |              | •            |              |              |               |             |             |              |              |             |              |              |              | •            |              |            |             |
| Sony      | NEX-FS100R + 18-200                        |                |               | •             |               |              | •            |              |              |               |             |             |              |              |             |              |              |              | •            |              |            |             |
| Sony      | NEX-FS100R + 18-200<br>Disassembled        |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Sony      | NEX-FS100R + 18-200<br>microphone detached |                |               | •             |               |              | •            |              |              |               |             |             |              | •            |             |              |              |              | •            |              |            |             |
| Sony      | NEX-FS700R + 18-200                        |                |               |               | •             |              | •            |              |              |               |             |             |              |              |             |              |              |              | •            |              |            |             |
| Sony      | NEX-FS700R + 18-200<br>Disassembled        |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Sony      | NEX-FS700R + 18-200<br>microphone detached |                |               |               | •             |              | •            |              |              |               |             |             |              | •            |             |              |              |              | •            |              |            |             |
| Sony      | PDW-680 + Fujinon lens                     |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Sony      | PDW-700 + Fujinon 18x                      |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Sony      | PDW-750 + Fujinon 18x                      |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |

# Manfrotto Fitting Chart - Video Camera Bags & Rain Covers

• Use only with viewfinder

| BRAND      | CAMCORDER                             | CAMCORDER CASE |               |               |               |              |              |              |              |               |             | BACKPACK    |              |              | RAIN COVER  |              |              |              |              |              |            |             |
|------------|---------------------------------------|----------------|---------------|---------------|---------------|--------------|--------------|--------------|--------------|---------------|-------------|-------------|--------------|--------------|-------------|--------------|--------------|--------------|--------------|--------------|------------|-------------|
|            |                                       | MB PL-CC-191N  | MB PL-CC-192N | MB PL-CC-193N | MB PL-CC-195N | MB PL-CC-191 | MB PL-CC-193 | MB PL-CC-195 | MB PL-CC-197 | MB MP-SB-50BB | MB MA-SB-A7 | MB PL-B-220 | MB PL-PV-410 | MB PL-PV-610 | MB PL-E-702 | MB PL-CRC-12 | MB PL-CRC-13 | MB PL-CRC-14 | MB PL-CRC-15 | MB PL-CRC-17 | MB PL-RC-1 | MB PL-RC-10 |
| Sony       | PDW-850 + Fujinon 18x                 |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Sony       | PMW-300K2                             |                |               |               | •             |              |              | •            |              |               |             |             |              | •            |             |              |              |              | •            |              |            |             |
| Sony       | PMW-300K2<br>viewfinder detached      |                |               | •             |               |              | •            |              |              |               |             |             |              | •            |             |              |              |              | •            |              |            |             |
| Sony       | PMW-350K                              |                |               |               | •             |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              |            |             |
| Sony       | PMW-EX1R                              |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Sony       | PMW-F5                                |                | •             |               |               |              |              |              |              |               |             |             |              |              |             |              |              |              | •            |              |            |             |
| Sony       | PMW-F5<br>viewfinder detached         | •              |               |               |               |              | •            |              |              |               |             |             |              |              |             |              |              |              | •            |              |            |             |
| Sony       | PMW-X200                              |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Sony       | PXW-FS5+18-105                        | •              |               |               |               | •            |              |              |              |               | •           | •           |              |              |             |              |              | •            | •            |              |            |             |
| Sony       | PXW-FS7+28-135                        |                |               |               | •             |              |              | •            |              |               |             |             |              | •            |             |              |              |              | •            |              |            |             |
| Sony       | PXW-FS7+28-135<br>viewfinder detached |                |               | •             |               |              |              | •            |              |               |             |             |              | •            |             |              |              |              | •            |              |            |             |
| Sony       | PXW-X180                              |                | •             |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Sony       | PXW-X200                              |                | •             |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| Sony       | PXW-X320 + Fujinon 16x                |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Sony       | PXW-X400 + Fujinon 10x                |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Sony       | PXW-X500 + Fujinon 10x                |                |               |               |               |              |              |              | •            |               |             |             |              |              |             |              |              |              |              |              | •          |             |
| Sony       | PXW-X70                               | •              |               |               |               | •            |              |              |              |               | •           | •           |              |              |             |              |              | •            |              |              |            |             |
| Sony       | PXW-Z100                              |                | •             |               |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| Blackmagic | Micro Studio camera 4k                | •              |               |               |               | •            |              |              |              | •             | •           | •           |              |              | •           |              |              |              |              |              |            |             |
| Blackmagic | Production camera 4k                  | •              |               |               |               | •            |              |              |              | •             | •           | •           |              |              | •           |              |              |              |              |              |            |             |
| Blackmagic | Studio camera                         | •              |               |               |               | •            |              |              |              | •             | •           | •           |              |              | •           |              |              |              |              |              |            |             |
| Blackmagic | URSA Mini                             |                |               |               | •             |              |              |              | •            |               |             |             |              |              |             |              |              |              | •            |              |            |             |
| Blackmagic | URSA Mini<br>handle detached          |                | •             |               |               |              |              |              | •            |               |             | •           |              |              |             |              |              |              | •            |              |            |             |
| JVC        | GY-HM200                              | •              |               |               |               | •            |              |              |              |               |             |             |              |              |             |              |              | •            | •            |              |            |             |
| JVC        | GY-HM600                              |                |               | •             |               |              | •            |              |              |               |             | •           |              |              |             |              |              | •            | •            |              |            |             |
| JVC        | GY-HM850 + Fujinon 20x                |                |               |               | •             |              |              | •            |              |               |             |             |              | •            |             |              |              |              |              |              |            | •           |
| JVC        | GY-LS300CH                            |                |               | •             |               |              | •            |              |              |               |             |             |              |              |             |              |              | •            | •            |              |            |             |

Last update: 2016-04-04

\* The information contained in this fitting chart is for general information purposes only. The information is provided by Manfrotto and while we endeavor to keep the information up to date and correct, we make no representations or warranties of any kind, express or implied, about the completeness, accuracy, reliability, suitability or availability with respect to the website or the information, products, dimensions. Any reliance you place on such information is therefore strictly at your own risk. We suggest you to visit our dealers and check dimensions with your gears to make sure it fits your need.