

SONY®

PROFESSIONAL DISC FIELD STATION

PDW-HR1

The supplied CD-ROM includes operation manuals for the PDW-HR1 Professional Disc Field Station (English, Japanese, French, German, Italian, Spanish and Chinese versions) in PDF format. For more details, see *“Using the CD-ROM Manual”* on page 15.

XDCAM HD
Professional Disc System

MPEG HD422


Professional Disc
DL 

 **CINEALTA**

OPERATION MANUAL

English

1st Edition

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings.
- Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

THIS APPARATUS MUST BE EARTHED.

 

CAUTION

The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

Do not install the appliance in a confined space, such as book case or built-in cabinet.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

This apparatus is provided with a main switch on the rear panel. Install this apparatus so that user can access the main switch easily.

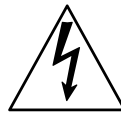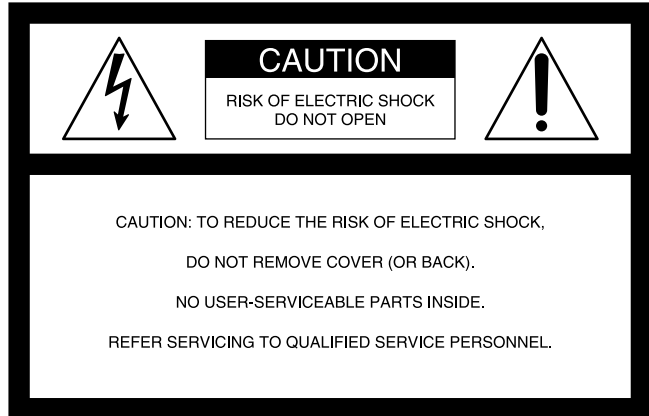

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: THIS WARNING IS APPLICABLE FOR USA ONLY.

If used in USA, use the UL LISTED power cord specified below.
DO NOT USE ANY OTHER POWER CORD.

Plug Cap	Parallel blade with ground pin (NEMA 5-15P Configuration)
Cord	Type SJT, three 16 or 18 AWG wires
Length	Minimum 1.5 m (4 ft. 11 in.), Less than 2.5 m (8 ft. 3 in.)
Rating	Minimum 10 A, 125 V

Using this unit at a voltage other than 120 V may require the use of a different line cord or attachment plug, or both. To reduce the risk of fire or electric shock, refer servicing to qualified service personnel.

WARNING: THIS WARNING IS APPLICABLE FOR OTHER COUNTRIES.

1. Use the approved Power Cord (3-core mains lead)/Appliance Connector/Plug with earthing-contacts that conforms to the safety regulations of each country if applicable.

2. Use the Power Cord (3-core mains lead)/Appliance Connector/Plug conforming to the proper ratings (Voltage, Ampere).

If you have questions on the use of the above Power Cord/ Appliance Connector/Plug, please consult a qualified service personnel.



This Professional Disc Field Station is classified as a CLASS 1 LASER PRODUCT.

Laser diode properties

Wave length: 400 to 410 nm
Emission duration: Continuous
Laser output power: 135 mW (max. of pulse peak), 65 mW (max. of CW)
Standard: IEC60825-1 (2001)

Egenskaber for laserdiod

Bølgelængde: 400 til 410 nm
Strålingsvarighed: Kontinuerlig
Afgivet lasereffekt: 135 mW (maks stråletoppunkt), 65 mW (maks ved kontinuerlig stråling)
Standard: IEC60825-1 (2001)

Tekniska data för laserdiod

Våglängd: 400 till 410 nm
Emissionslängd: Kontinuerlig
Laserut effekt: 135 mW (max. för pulstopp), 65 mW (max. för kontinuerlig våg)
Standard: IEC60825-1 (2001)

Egenskaper for laserdiod

Bølgelængde: 400 til 410 nm
Strålingsvarighet: Uavbrutt
Utgangseffekt for laser: 135 mW (maks av pulshøyde), 65 mW (maks av CW)
Standard: IEC60825-1 (2001)



This label is located on the top panel of the drive unit.

Denna etikett finns på ovansidan av driftenheten.

Denne mærkat sidder på drevenhedens øverste panel.

Tämä kyltti sijaitsee ajurilaitteen yläpinnalla.

Dette merket er plassert på oversiden av driverenheten.

CAUTION

The use of optical instruments with this product will increase eye hazard.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

WARNING

Excessive sound pressure from earphones and headphones can cause hearing loss.

In order to use this product safely, avoid prolonged listening at excessive sound pressure levels.

VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VARNING

OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING, SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.

When installing the installation space must be secured in consideration of the ventilation and service operation.

- Do not block the ventilation slots at the right side and bottom of front side panels, and vents of the fans.
- Leave more than 25 cm of space in the rear of the unit.
- Leave more than 2 cm of space in the left side and right side of the unit.

And leave the space that can open and close the display panel in the top of the unit.

WARNING

Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

For the customers in the USA

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

All interface cables used to connect peripherals must be shielded in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must

accept any interference received, including interference that may cause undesired operation.

Lamp in this product contains mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance (www.eiae.org).

For the customers in Canada

This Class A digital apparatus complies with Canadian ICES-003.

For the customers in Europe

This product with the CE marking complies with both the EMC Directive and the Low Voltage Directive issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European standards:

- EN60065: Product Safety
- EN55103-1: Electromagnetic Interference (Emission)
- EN55103-2: Electromagnetic Susceptibility (Immunity)

This product is intended for use in the following Electromagnetic Environment(s):

E1 (residential), E2 (commercial and light industrial), E3 (urban outdoors) and E4 (controlled EMC environment, ex. TV studio).

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, Japan.

The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany.

For kundene i Norge

Dette utstyret kan kobles til et IT-strømfordelingssystem.

Laite on liitettävä suojamaadoituskoskettimilla varustettuun pistorasiaan

Apparatet må tilkoples jordet stikkontakt

Apparaten skall anslutas till jordat uttag

For the Customers in Taiwan only



廢電池請回收

AVERTISSEMENT

Afin de réduire les risques d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité.

Afin d'écartier tout risque d'électrocution, garder le coffret fermé. Ne confier l'entretien de l'appareil qu'à un personnel qualifié.

CET APPAREIL DOIT ÊTRE RELIÉ À LA TERRE.

ATTENTION


Eviter d'exposer l'appareil à un égouttement ou à des éclaboussures. Ne placer aucun objet rempli de liquide, comme un vase, sur l'appareil.

Ne pas installer l'appareil dans un endroit confiné, par exemple une bibliothèque ou un placard encastré.

Cet appareil n'est pas déconnecté de la source d'alimentation secteur tant qu'il est raccordé à la prise murale, même si l'appareil lui-même a été mis hors tension.

Cet appareil est doté d'un interrupteur principal sur son panneau arrière.

Installez l'appareil de sorte que l'utilisateur puisse facilement accéder à l'interrupteur principal.

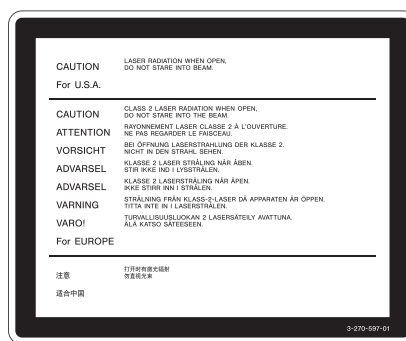

Cette étiquette est placée sur le panneau supérieur de l'unité de commande.

AVERTISSEMENT

Une pression acoustique excessive en provenance des écouteurs ou du casque peut provoquer une baisse de l'acuité auditive.

Pour utiliser ce produit en toute sécurité, évitez l'écoute prolongée à des pressions sonores excessives.

N'exposez pas les batteries à une chaleur excessive, au soleil ou près d'un feu par exemple.

Pour les clients au Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Pour les clients en Europe

Ce produit portant la marque CE est conforme à la fois à la Directive sur la compatibilité électromagnétique (EMC) et à la Directive sur les basses tensions émises par la Commission de la Communauté Européenne.

La conformité à ces directives implique la conformité aux normes européennes suivantes :

- EN60065 : Sécurité des produits
- EN55103-1 : Interférences électromagnétiques (émission)
- EN55103-2 : Sensibilité électromagnétique (immunité)

Ce produit est prévu pour être utilisé dans les environnements électromagnétiques suivants :

E1 (résidentiel), E2 (commercial et industrie légère), E3 (urbain extérieur) et E4 (environnement EMC contrôlé ex. studio de télévision).

Le fabricant de ce produit est Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, Japon.

Le représentant autorisé pour EMC et la sécurité des produits est Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Allemagne.

AVERTISSEMENT

1. Utilisez un cordon d'alimentation (câble secteur à 3 fils)/ fiche femelle/fiche mâle avec des contacts de mise à la terre conformes à la réglementation de sécurité locale applicable.
2. Utilisez un cordon d'alimentation (câble secteur à 3 fils)/ fiche femelle/fiche mâle avec des caractéristiques nominales (tension, ampérage) appropriées.

Pour toute question sur l'utilisation du cordon d'alimentation/ fiche femelle/fiche mâle ci-dessus, consultez un technicien du service après-vente qualifié.

WARNUNG

Um die Gefahr von Bränden oder elektrischen Schlägen zu verringern, darf dieses Gerät nicht Regen oder Feuchtigkeit ausgesetzt werden.

Um einen elektrischen Schlag zu vermeiden, darf das Gehäuse nicht geöffnet werden. Überlassen Sie Wartungsarbeiten stets nur qualifiziertem Fachpersonal.

DIESES GERÄT MUSS GEERDET WERDEN.


VORSICHT

Das Gerät ist nicht tropf- und spritzwassergeschützt. Es dürfen keine mit Flüssigkeiten gefüllten Gegenstände, z. B. Vasen, darauf abgestellt werden.

Das Gerät nicht an Orten aufstellen, z.B. in Bücherregalen oder Einbauschränken, wo keine ausreichende Belüftung gewährleistet ist.

Solange das Netzkabel an eine Netzsteckdose angeschlossen ist, bleibt das Gerät auch im ausgeschalteten Zustand mit dem Stromnetz verbunden.

Dieses Gerät verfügt über einen Hauptschalter an der Rückseite.
Installieren Sie das Gerät so, dass der Benutzer leicht auf den Hauptschalter zugreifen kann.

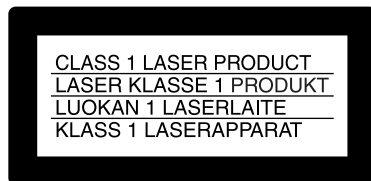

Dieser Professional Disc Field Station ist als LASERPRODUKT DER KLASSE 1 eingestuft.


Daten der Laserdiode

Wellenlänge: 400 bis 410 nm

Emissionsdauer. Ununterbrochen

Laser-Ausgangsleistung: 135 mW (max. Impulsspitze),
65 mW (max. Dauerstrich)

Standard: IEC60825-1 (2001)

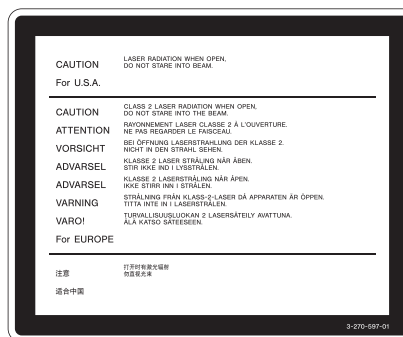

Dieser Aufkleber befindet sich oben auf der Antriebseinheit.

WARNUNG

Zu hoher Schalldruck von Ohrhörern und Kopfhörern kann Gehörschäden verursachen.

Um dieses Produkt sicher zu verwenden, vermeiden Sie längeres Hören bei sehr hohen Schalldruckpegeln.

Akkus dürfen keinesfalls übermäßiger Wärmeeinwirkung ausgesetzt werden, wie z.B. Sonneneinstrahlung, Feuer o. ä.

Für Kunden in Europa

Dieses Produkt besitzt die CE-Kennzeichnung und erfüllt die EMV-Richtlinie sowie die Niederspannungsrichtlinie der EG-Kommission.

Angewandte Normen:

- EN60065: Sicherheitsbestimmungen
- EN55103-1: Elektromagnetische Verträglichkeit (Störaussendung)
- EN55103-2: Elektromagnetische Verträglichkeit (Störfestigkeit)

Für die folgenden elektromagnetischen Umgebungen:
E1 (Wohnbereich), E2 (kommerzieller und in beschränktem Maße industrieller Bereich), E3 (Stadtbereich im Freien) und E4 (kontrollierter EMV-Bereich, z.B. Fernsehstudio)

Der Hersteller dieses Produkts ist Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, Japan.

Der autorisierte Repräsentant für EMV und Produktsicherheit ist Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Deutschland.

WARNUNG

1. Verwenden Sie ein geprüftes Netzkabel (3-adriges Stromkabel)/einen geprüften Geräteanschluss/einen geprüften Stecker mit Schutzkontakten entsprechend den Sicherheitsvorschriften, die im betreffenden Land gelten.
2. Verwenden Sie ein Netzkabel (3-adriges Stromkabel)/einen Geräteanschluss/einen Stecker mit den geeigneten Anschlusswerten (Volt, Ampere).

Wenn Sie Fragen zur Verwendung von Netzkabel/ Geräteanschluss/Stecker haben, wenden Sie sich bitte an qualifiziertes Kundendienstpersonal.

Table of Contents

Chapter 1 Overview

Features	11
Features of this unit	11
System Configurations	14
Using the CD-ROM Manual	15
Preparations	15
Reading the CD-ROM manual	15

Chapter 2 Names and Functions of Parts

Configuration	16
Control Panel	17
Display Panel	25
Display screen	26
Connector Panel	32

Chapter 3 Preparations

Preparing Power Sources	35
Supplying power.....	35
Attaching a battery pack.....	35
Initial Setup	36
Connections and Settings	38
Connections for using PDZ-1 Proxy Browsing Software	38
Connections for cut editing	39
Using in an edit list editing system	42
Connections for pool coverage.....	43
Synchronization Reference Signals	44
Setting System Frequency	45
Setting Timecode	45
Superimposed Text Information	47
Basic Function Menu Operations	50
Function menu operations	50
Function menu settings.....	50
Handling Discs	53

Discs used for recording and playback	53
Notes on handling	53
Write-protecting discs	53
Loading and unloading a disc	53
Formatting a disc	54

Chapter 4 Recording and Playback

Recording	55
Carrying out recording	55
Recording with the HDSDI remote control function	56
Handling of discs when recording does not end normally (salvage functions)	57
Playback	58
Playback operation	59
Playback operations using thumbnails	61

Chapter 5 Operations in GUI Screens

Overview	62
Switching between GUI screens	62
Information and controls in thumbnail screens	63
Displaying menus	67
GUI screen operations	69
Thumbnail Operations	70
Selecting thumbnails	70
Searching with thumbnails	70
Playing the scene you have found	72
Selecting the information displayed on thumbnails	73
Changing clip index pictures	73
Checking clip properties	74
Setting clip flags	76
Locking (write-protecting) clips	76
Deleting clips	77
Scene Selection (Clip List Editing)	78
What is scene selection?	78
Creating and editing clip lists	79
Managing clip lists	84
Disc Operations	86
Checking disc properties	86
Using planning metadata	86

Formatting discs	87
Shortcut List.....	89

Chapter 6 Edit List Editing

Overview.....	90
Switching to the editing screens	90
Parts of the editing screens	92
Displaying the Edit Menu.....	93
Editing screen operations	94
Editing Operations.....	95
Editing modes.....	95
Executing edits	96

Chapter 7 File Operations

Overview.....	99
Directory structure.....	99
File operation restrictions	100
Assigning user-defined clip titles	102
Assigning user-defined clip and clip list names	104
File Operations in File Access Mode (for Windows)	106
Making FAM connections.....	106
Operating on files	107
Exiting file operations	107
File Operations in File Access Mode (for Macintosh)	108
Making FAM connections.....	108
Operating on files	108
Exiting file operations	109
FTP File Operations.....	109
Making FTP connections.....	109
Command list	110
Recording Continuous Timecode with FAM and FTP Connections	115

Chapter 8 Menus

Menu System Configuration	116
Setup Menu	116
Items in the basic menu	117

Basic menu operations	121
Items in the extended menu	123
Extended menu operations.....	137
Maintenance Menu	139
Items in the maintenance menu	139
Maintenance menu operations	143

Chapter 9 Planning Metadata

Overview.....	146
Manipulating planning metadata	146
To set clip names by using planning metadata	146

Appendix

Important Notes on Operation.....	148
Condensation	148
About the LCD panel.....	148
Periodic Maintenance.....	149
Digital hours meter	149
Note about the battery terminal	150
Troubleshooting	151
Alarms.....	151
Error messages.....	159
To eject discs with the unit powered off.....	159
Specifications	159
Using PDZ-1 Proxy Browsing Software.....	162
Using UMID Data.....	163
Ancillary Data.....	165
Ancillary data in HDSDI signals	165
Ancillary data in MXF files	165
General MXF metadata.....	165
List of Supported USB Keyboards.....	166
Trademarks and Licenses	169
MPEG-4 visual patent portfolio license	169
MPEG-2 video patent portfolio license	169
About IJG (Independent JPEG Group).....	169
Character display software “iType”.....	169
Glossary	170

Index	172
--------------------	------------

Features

The PDW-HR1 is a professional disc recorder supporting full HD (1920 × 1080 and 1280 × 720) playback and recording with Professional Disc ¹⁾ media.

When you use this unit in combination with a nonlinear editing system, the FAM ²⁾ function enables data file transfers between the unit and computers over the i.LINK interface, allowing the unit to be used like an external hard drive. The unit can be used as a player for video editing and program output, and as a recorder for nonlinear editing. For these applications, it can be connected to Sony nonlinear editors, monitors, and video equipment with HDSDI interfaces via its standard HDSDI I/O connectors. It has a compact, lightweight body for easy portability outdoors, making it ideal for field applications and also for desktop viewing by journalists, producers, and other production staff.

1) Professional Disc is a trademark of Sony Corporation.

2) FAM: File access mode

Features of this unit

The principal features of this unit are as follows.

MPEG HD422 ¹⁾ codec

High-quality video and audio recording and playback

The MPEG HD422 codec provides video compression compliant with the MPEG-2 422P@HL standard. It enables HD 4:2:2 (50 Mbps) digital component file recording in the 1080i (1,080 effective scanning lines, interlaced) or 720P (720 effective scanning lines, progressive) format currently in use by many broadcast facilities.

Uncompressed PCM recording of 24-bit 48 kHz audio enables 8-channel audio recording at high sound quality.

1) MPEG HD422 is a trademark of Sony Corporation.

Long recording times

PDW-HR1 supports dual-layer Professional Discs (50 GB). When dual-layer Professional Discs are used, this unit can record about 95 minutes.

Recording and playback functions

Support for multiple SD and HD codecs

In addition to the MPEG HD422 codec, this unit supports the MPEG HD codec. ¹⁾ It can record HD 4:2:0 digital component files at both 1080i (35/25/18 Mbps²⁾) and 720P (35/25 Mbps), allowing HD operation across a wide range of recording times and application objectives. The unit is also capable of SD (IMX 30/40/50 Mbps or DVCAM codec) recording and playback.

1) MPEG HD is a registered trademark of Sony Corporation.

2) Playback only supported for 18 Mbps.

Support for multiple frame frequencies

This unit can record and play multiple frame frequencies at both 1080 (59.94i, 50i, 29.97P, 25P, and 23.98P) and 720 (59.94P and 50P) (for MPEG HD422).

SD upconvert function

This unit is provided with an upconvert function, allowing HD recording of SDDS I signals input to the SD/HDSDI INPUT connector and composite signals input to the COMPOSITE IN connector. The unit can also output HD signals while playing discs recorded as SD, allowing SD material to be utilized in an HD environment.

HD downconvert function

The unit is provided with a downconvert function. HD disc playback signals can be downconverted to SD signals and then output as SDDS I or composite signals. This allows you to use SD nonlinear editors and monitors for editing and program output.

1080/720 cross-conversion

This unit supports cross-conversion output. It can output 720 while playing discs recorded as 1080, and output 1080 while playing discs recorded as 720.

HDSDI remote recording

HDSDI connections can be made to camcorders with remote HDSDI support (PDW-F800/700 XDCAM HD422 camcorder, HDW-730/730S/750/790/F900R HDCAM¹⁾ camcorders) to enable recording synchronized to REC and STOP operations on the camcorder.

1) HDCAM is a trademark of Sony Corporation.

Recording of proxy AV data

Proxy AV data is a low-resolution (1.5 Mbps video, 64 kbps per audio channel), MPEG-4 based version of a full resolution data stream. Whenever this unit records full resolution MPEG HD422 data, it simultaneously generates and records low-resolution proxy AV data. Because of its small size, proxy AV data can be transferred quickly over computer networks, easily edited in the field with laptop computers¹⁾, and readily used in a wide variety of applications, such as content management on small-scale servers.

1) The supplied PDZ-1 Proxy Browsing Software can be used to create simple EDLs (Edit Decision Lists).

High-speed searches with the shuttle/jog dial

The shuttle/jog dial can be used to find scenes inside clips, in the same way as the shuttle and jog dials on conventional VTRs.

In jog and variable modes, you can search in field units at from -1 to +1 times normal speed. Shuttle mode supports high-speed searches up to a maximum of ± 20 times normal speed.

Convenient disc-based playback and searching

Like previous products in the XDCAM series, this unit supports a number of convenient search functions, including scene selection, thumbnail searches, essence marks searches, and expand searches.

Scene selection: This function allows you to select clips from the disc and insert them into playlists. Clips can be inserted and played back in any order.

Thumbnail searches: The unit creates thumbnails from the first frame of each generated clip, and displays them in thumbnail lists on the color LCD or an external monitor. You can cue up clips very easily by simply by selecting them from thumbnail lists.

Essence mark searches: Essence marks can be recorded at any scene during or after recording. Lists of these marks can be displayed on the color LCD or an external monitor, allowing you to quickly find scenes that were marked for later reference.

Expand searches: This function allows you to look inside the clip selected in a thumbnail screen, or inside the segment from a selected essence mark to the next essence mark. The selection range is divided into 12 equal blocks, and the first frames of those blocks are displayed as thumbnails. By checking the thumbnails, you can easily find the scene you want.

Usability features

AC, DC, and battery power support

The unit can be used even where AC power is not available, for example outdoors or in cars or helicopters.

Color LCD display

The unit is equipped with a 16:9, 9-inch widescreen color LCD which allows you to check the contents of the disc and use the menu system without connecting an external monitor.

Built-in stereo speakers

The unit features built-in speakers, allowing you to check recorded audio. You can check your clips and editing results on the color LCD and speakers even when no monitors or separate speakers are available.

Compact size, lightweight and battery-powered operation

The PDW-HR1 is small and light enough to carry out into the field. It can be operated with batteries, allowing you to start work immediately in the field.

IT friendly

Computer access to files (file access mode)

Video and audio clip data are recorded as files. The FAM function enables quick random access by computers to the video, audio, and metadata files stored on Professional Discs, with the ability to display thumbnail lists on the computer screen and perform file-based reads and writes.

Equipped with network connector

The unit features a Gigabit Ethernet connector as standard equipment. Via this connector, you can connect the unit to computers and networks to enable listing of the video, audio, and metadata files recorded on the Professional Disc, and rapid file transfers. Support for FTP commands makes it easy to carry out network file transfers from remote locations.

User data recording mode

User data (files other than XDCAM AV files) can be recorded on Professional Discs as PC data via the i.LINK or FTP interface. This allows Professional Discs to be used as data recording media, with a data storage capacity of 46.4 GB (when dual-layer PFD50DLA discs are used).

Supports a variety of interfaces

This unit supports the following interfaces.


- HDSDI video, 8-channel audio input and output
- SDDSI video, 8-channel audio input and output (the SD/HDSDI INPUT connector doubles as an SDDSI input connector)
- SD composite input and output
- Analog audio 4-channel input and output
- Remote
 - RS-422A (D-sub 9-pin × 1)



Video process control is available from the control panel.

- i.LINK TS (HDV) input and output (when the PDBK-202 option board is installed)
- DVB-ASI TS output (when the PDBK-202 option board is installed)
- HDMI output

System Configurations

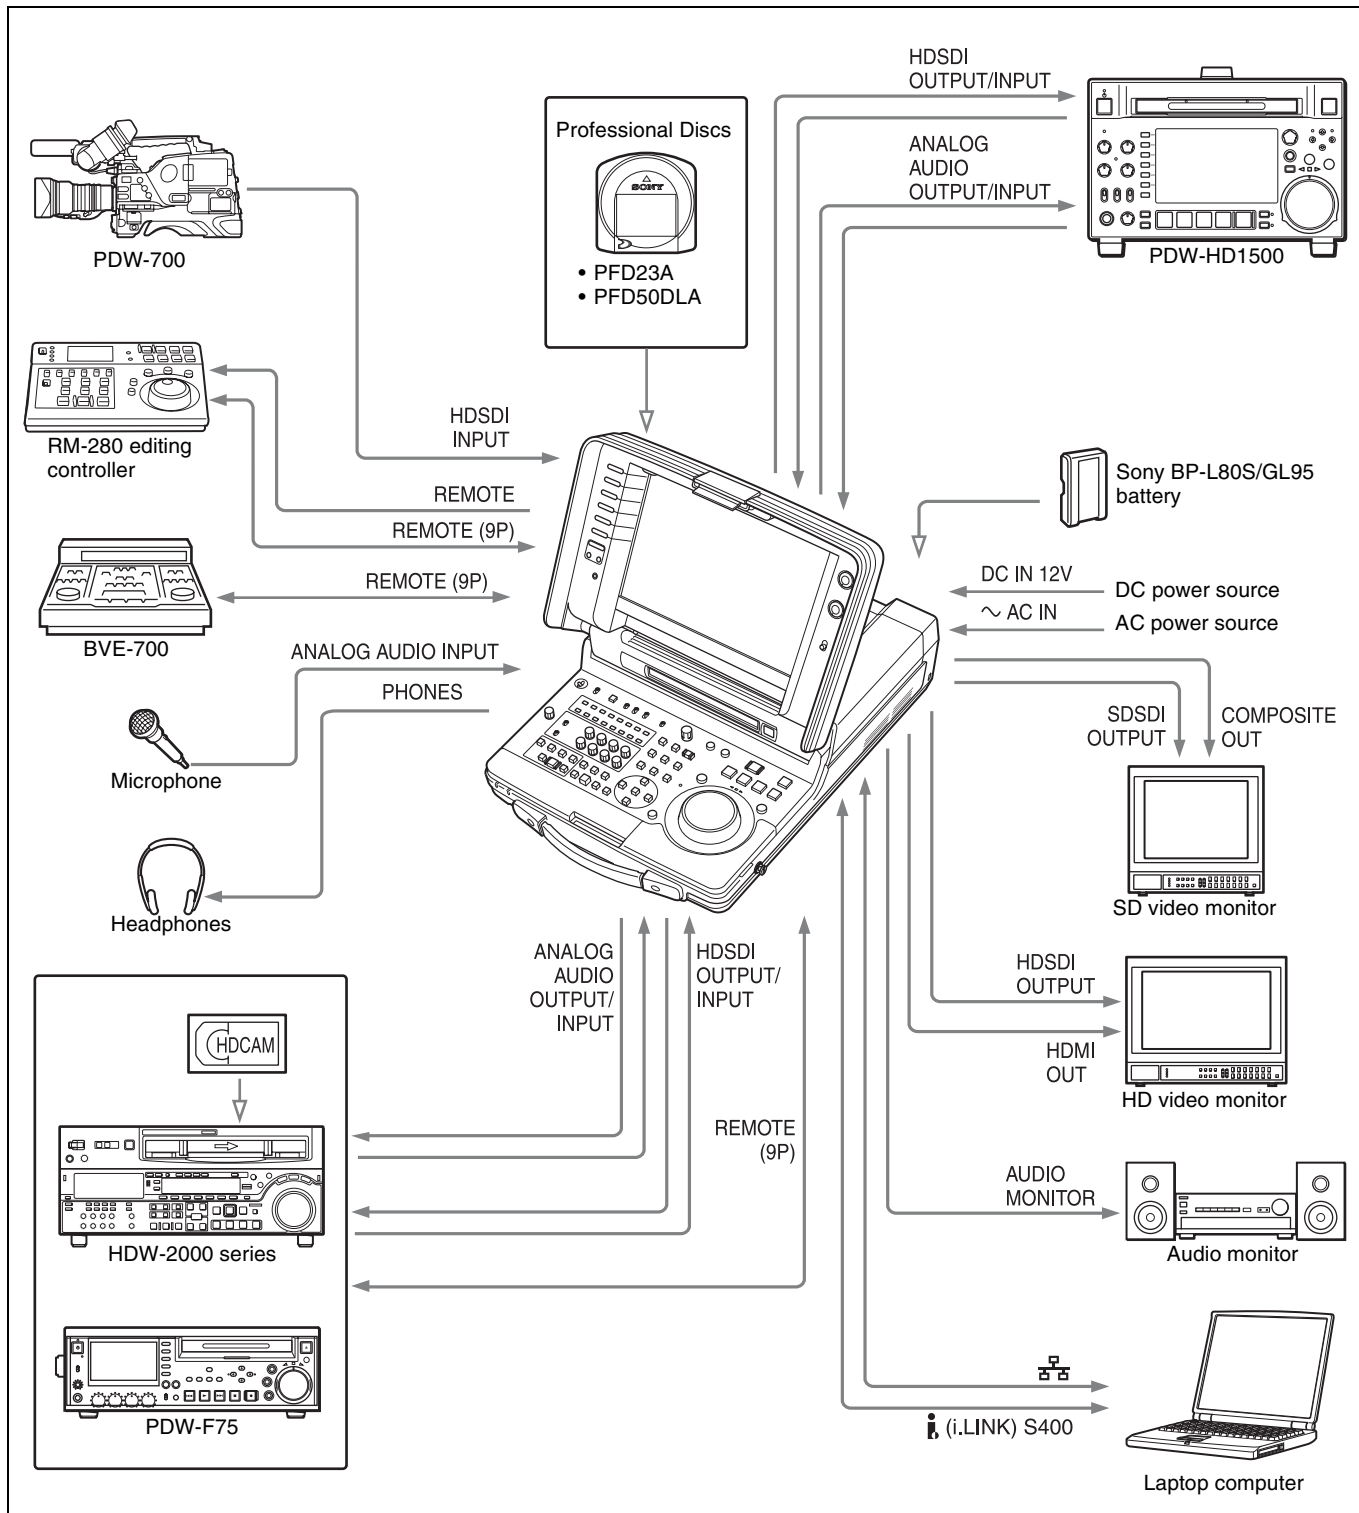

Using the CD-ROM Manual

The supplied CD-ROM includes versions of the Operation Manual for the PDW-HR1 in English, Japanese, French, German, Italian, Spanish and Chinese in PDF format.

Preparations

The following program must be installed on your computer in order to read the operation manuals contained on the CD-ROM.

- Adobe Reader Version 6.0 or higher

Memo

If Adobe Reader is not installed, you can download it from the following URL:

<http://www.adobe.com/>

Adobe and Adobe Reader are trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Reading the CD-ROM manual

To read the operation manual contained on the CD-ROM, do the following.

- 1** Insert the CD-ROM in your CD-ROM drive.

A cover page appears automatically in your browser. If it does not appear automatically in the browser, double-click on the index.htm file on the CD-ROM.

- 2** Select and click on the operation manual that you want to read.

This opens the PDF file of the operation manual.

Memo

The files may not be displayed properly, depending on the version of Adobe Reader. In such a case, install the latest version you can download from the URL mentioned in “Preparations” above.

Note


If you have lost or damaged the CD-ROM, you can purchase a new one to replace it. Contact your Sony service representative.

Names and Functions of Parts

Chapter

2


Configuration

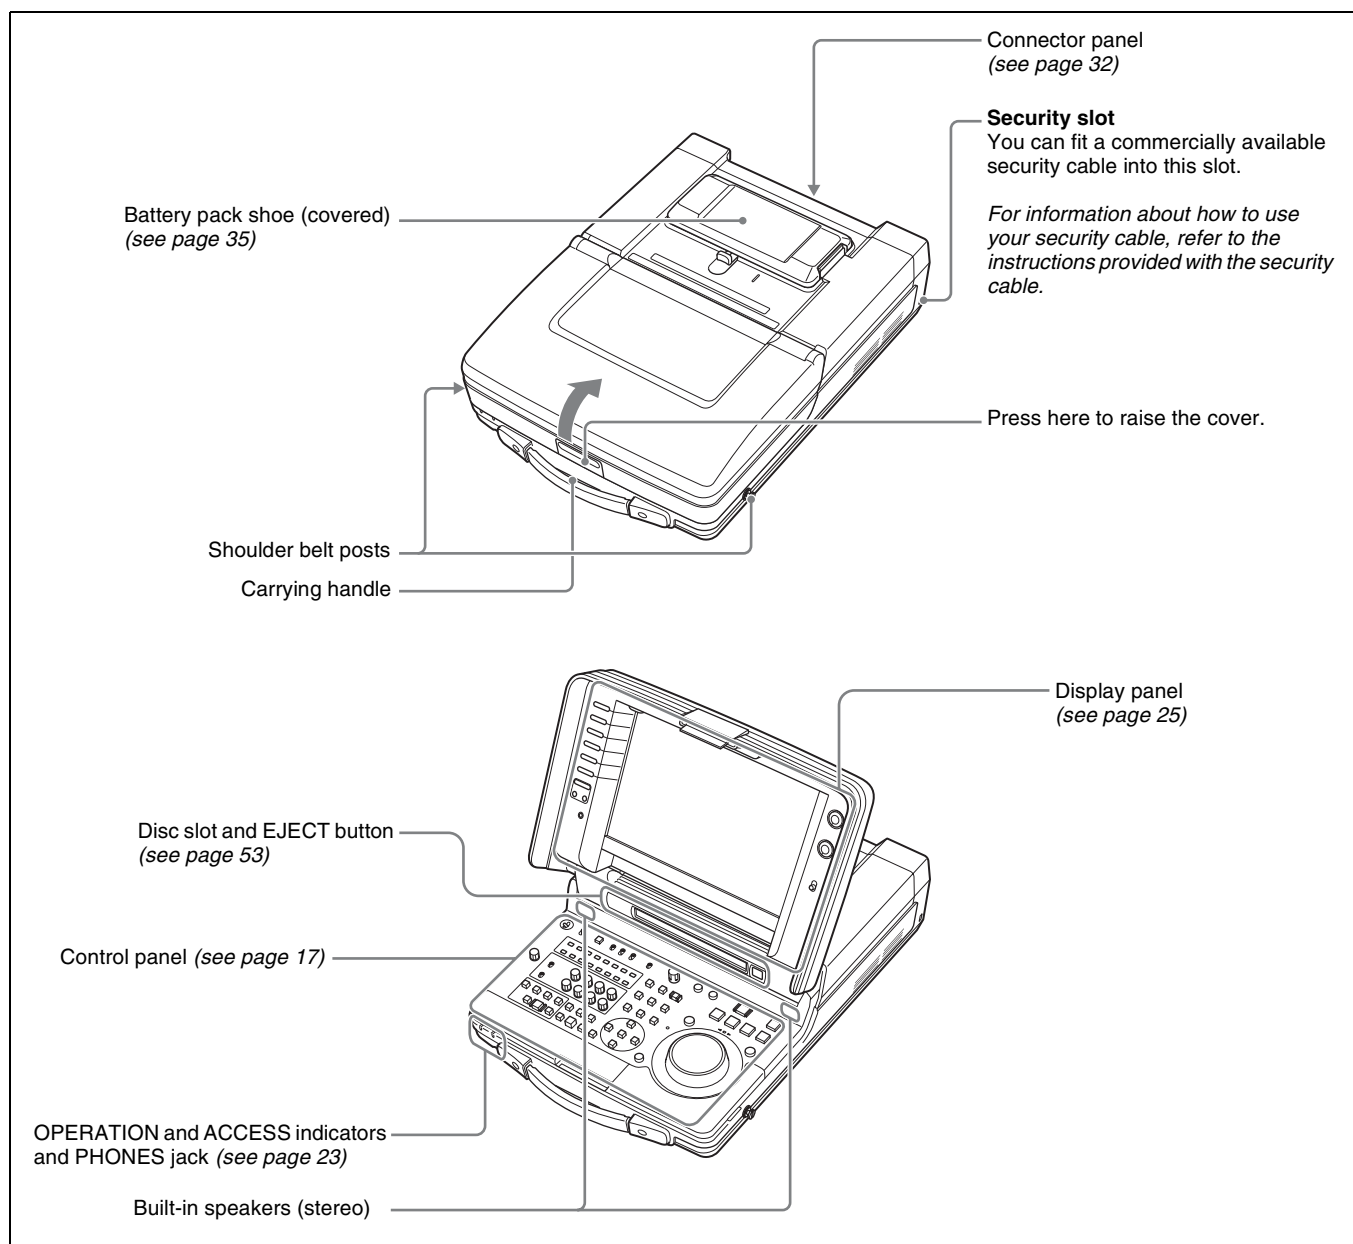


Control Panel

The names and symbols of buttons and knobs on the control panel are color coded according to function.
White: Function when the button or knob is operated independently.

Orange: Function when the button is operated with the SHIFT button held down.

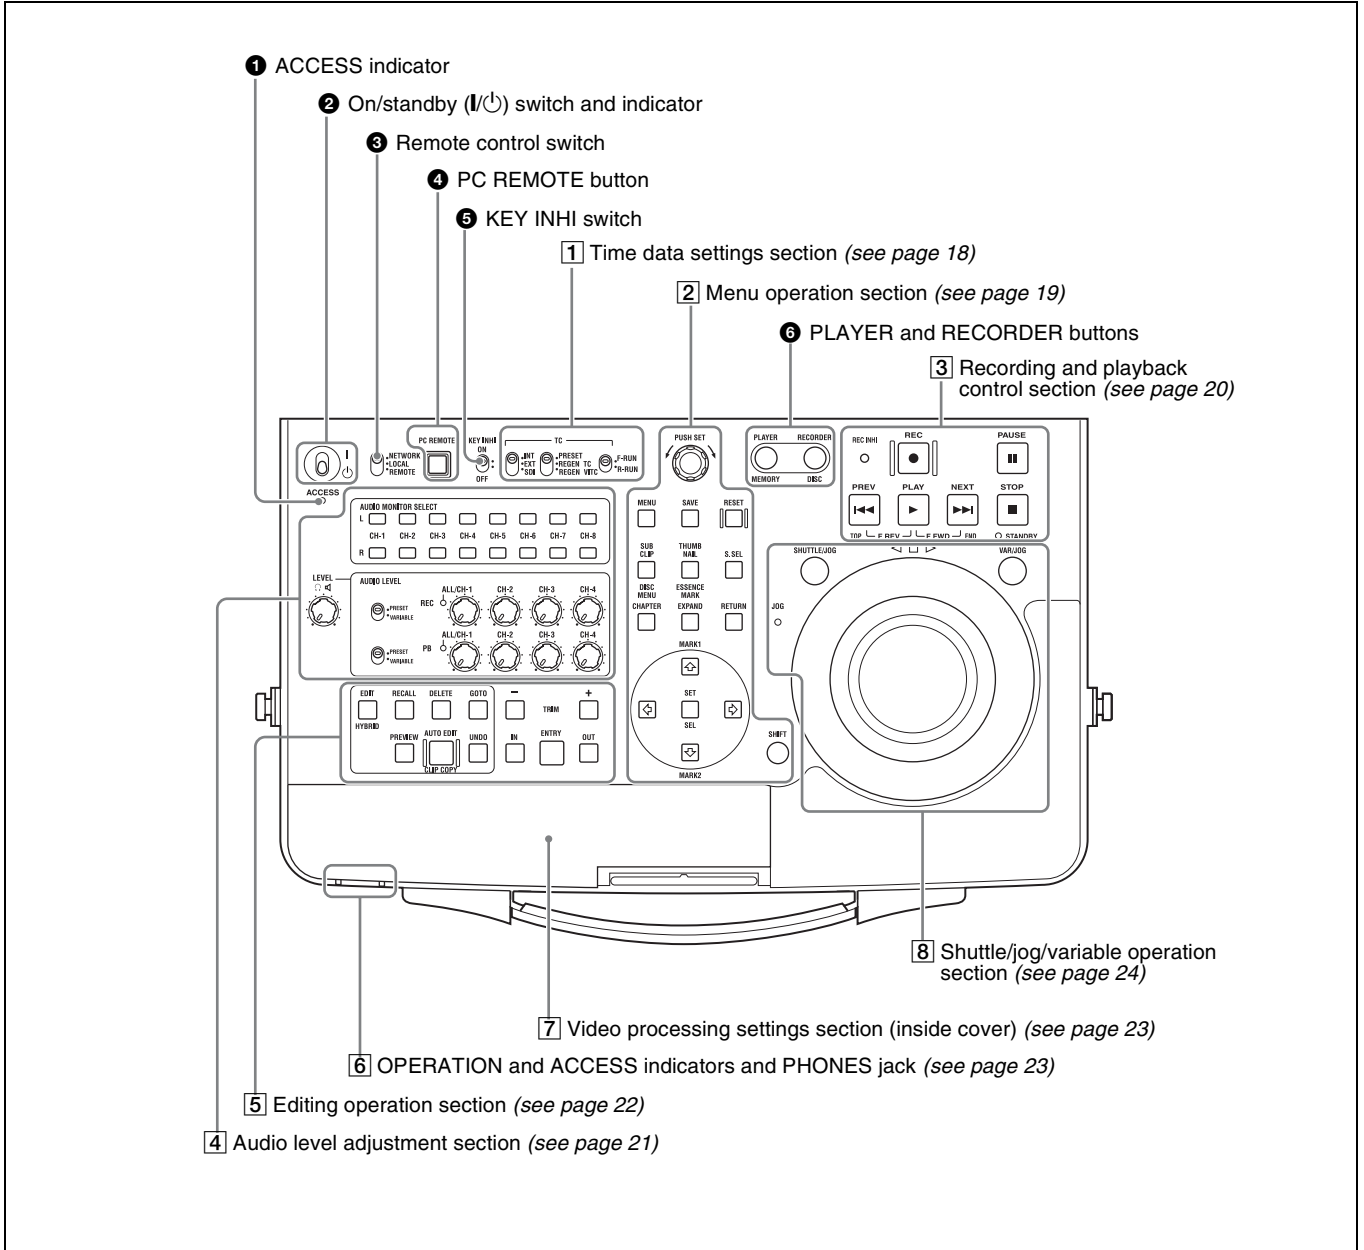

1 ACCESS indicator

 This lights when the disc is accessed and when a file is opened by a FAM or FTP connection (see page 99). If the on/standby switch is set to the  position while this indicator is lit, access to the disc is completed before the unit switches to the standby state.

Note

While the ACCESS indicator is lit, do not turn off the POWER switch on the connector panel or disconnect the power cord. This could lead to a loss of data from the disc.

2 On/standby (I/⏻) switch and indicator

When the POWER switch on the connector panel is set to the I position, and when DC power is connected to the DC IN 12V connector on the connector panel, this switches the unit between the operating state (the switch is in the I position and the indicator is lit green) and the standby state (the switch is in the ⏻ position). When the switch is moved to the I position, the indicator lights. When the switch is moved to the ⏻ position, the indicator goes off. When using this unit, normally leave the connector panel POWER switch in the I (on) position, and switch the unit between the operating and standby states using the on/standby switch.

3 Remote control switch

Different positions of the switch allow different operations as follows.

NETWORK: Enables access to the network. The indicator lights when an external network device is being accessed. In this state, operation from the control panel is not possible.

LOCAL: Enables operation from the control panel.

REMOTE: Enables remote control of this unit from the following devices:

- Devices connected to the REMOTE(9P) connector
- Devices connected to the SD/HDSI INPUT connector with SDI remote control functions
- Devices connected to the i.LINK HDV TS connector¹⁾

Use setup menu item 214 REMOTE INTERFACE to select which of the connectors is used for remote control (see page 126).

1) When the PDBK-202 option board is installed.

See “Setup Menu” on page 116 for more information about how to make extended menu settings.

4 PC REMOTE button

When you have connected this unit to a computer with a FAM or FTP connection, this button allows you to log in to and log off from the computer with the cable still connected.

Lit: Access possible (factory default setting)

Off: Access not possible

5 KEY INHI switch


This turns key operation inhibit mode on or off.

Use setup menu item 118 KEY INHIBIT SWITCH EFFECTIVE AREA to specify the keys to inhibit.

6 PLAYER and RECORDER buttons

Select use of this unit as a player or recorder when you are editing edit lists (see page 90).

1 Time data settings section

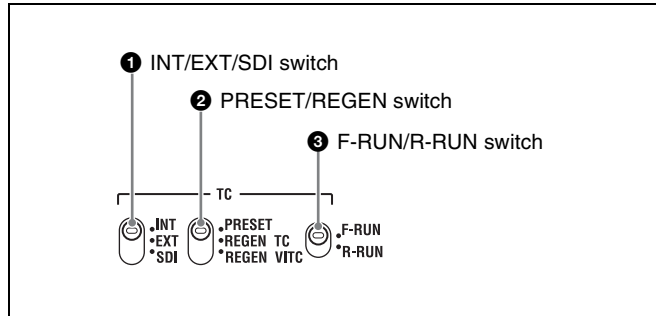

1 INT/EXT/SDI (internal/external/SDI) switch

Selects the timecode to which the internal timecode generator synchronizes.

INT: Synchronize to a value that was preset by an operation on the control panel or remotely from a device connected to the REMOTE(9P) connector, or synchronize to the playback timecode.

EXT: Synchronize to the timecode input to the TIME CODE IN connector.

SDI: Synchronize to the timecode input to timecode embedded in HDSI signals input to the SD/HDSI INPUT connector.

Note

If you select “EXT” or “SDI” when i.LINK TS signals are being input, the internal timecode generator synchronizes to the timecode in the TS signals.

2 PRESET/REGEN (regenerate) switch

Selects one of the following regeneration modes for the internal timecode generator.

PRESET: Preset the initial value of the timecode generated by the internal timecode generator, as specified by a control panel operation or by remote control from a device connected to the REMOTE(9P) connector. This setting is enabled when “INT” is selected with the INT/EXT/SDI switch. When the switch is set to something else, the behavior is as if REGEN TC was selected.

REGEN TC: Synchronize to and regenerate the TC timecode read by the internal timecode reader.

REGEN VITC: Synchronize to and regenerate the VITC timecode read by the internal timecode reader.

3 F-RUN/R-RUN (free run/REC run) switch


Selects the timecode advance mode.

F-RUN: Timecode advances continuously as long as the unit is powered on, regardless of the unit’s operating mode.

R-RUN: Timecode advances while the unit is recording. When you select this mode, set the INT/EXT/SDI switch to “INT”, and set the PRESET/REGEN switch to “PRESET”.

For details, see “Setting Timecode” (page 45).

2 Menu operation section

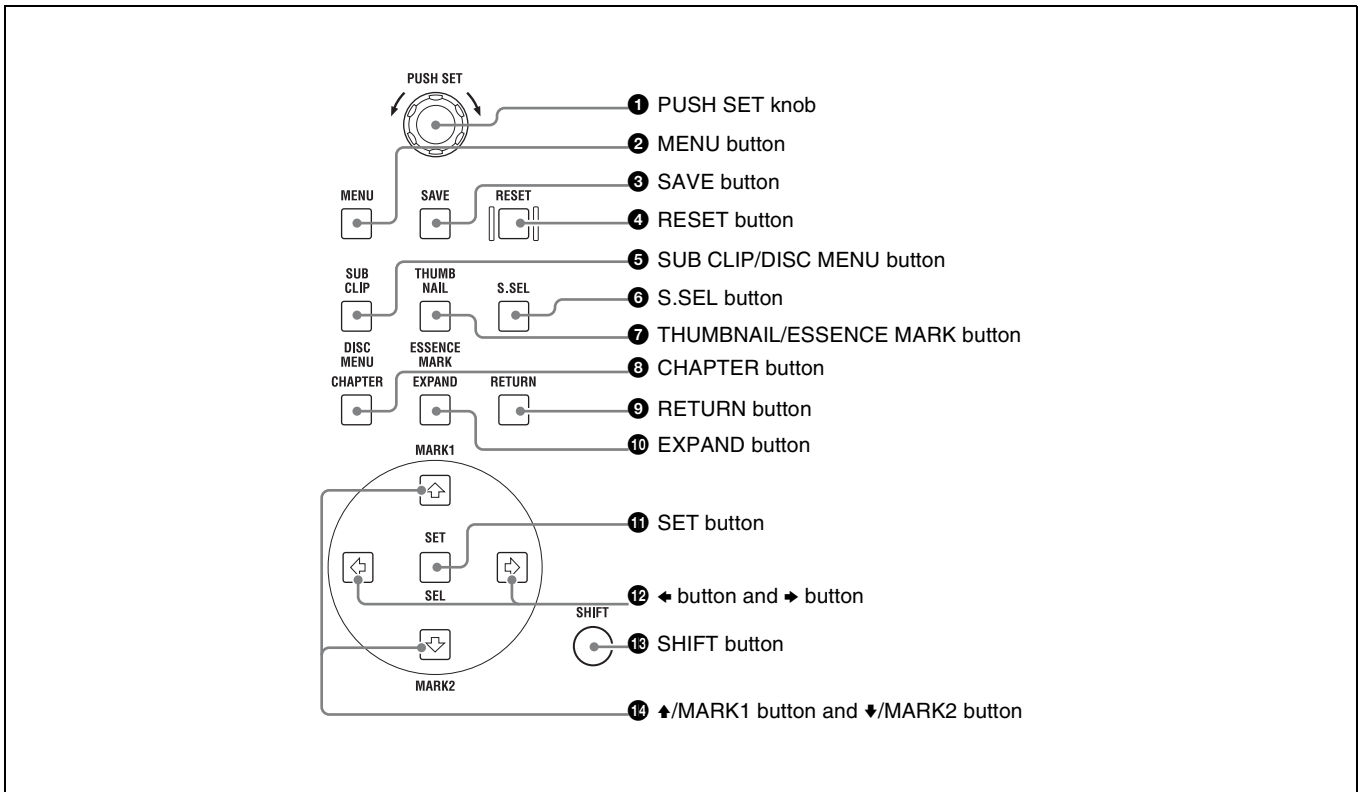

1 PUSH SET knob

Use this for menu settings and thumbnail operations in the GUI screens. Rotate the knob to select an item, and press the knob to confirm the selection. This knob is also used to select values for timecode and other numbers.

See “GUI screen operations” (page 69) for more information about operations in the GUI screens.

2 MENU button

Starts the setup menu and the menus in GUI screens. The settings of the setup menu appear if this button is pressed when no GUI screen is displayed. The same information also appears in an external monitor connected to this unit. The unit returns to the original display when this button is pressed again.

See “GUI screen operations” (page 69) for more information about operations in the GUI screens.

3 SAVE button

Saves function button setting in this unit’s internal memory.

4 RESET button

Resets counters and numeric values, such as settings for the timecode generator. This button is also used to cancel

setup menu settings and to stop scene selection and thumbnail searches.

5 SUB CLIP/DISC MENU button

When pressed alone, function as the SUB CLIP button. When pressed together with the SHIFT button, functions as the DISC MENU button.

SUB CLIP button: Press this button, turning it on, to start playback according to a clip list (see page 62). Press it again, turning it off, to stop playback. Jog and shuttle operations are possible during clip list playback. When you want to play clips in the order that they were recorded, press this button to turn it off.

DISC MENU button: When pressed together with the SHIFT button in a GUI screen, displays the Disc Menu (see page 86). The button lights when pressed. Press it again to turn it off and hide the Disc Menu.

See “GUI screen operations” (page 69) for more information about operations in the GUI screens.

6 S.SEL (scene selection) button

Confirms settings made by a scene search or scene selection operation, or cancels the operation.

7 THUMB NAIL/ESSENCE MARK button

When pressed alone, displays thumbnails of the index pictures of clips and sub clips. Press this button, turning it

on, when you want to perform a thumbnail search or create a clip list from a GUI screen. Press it again, turning it off, to return to full-screen display.

When pressed together with the SHIFT button, displays essence mark frames (frames where essence marks have been set). The essence mark selection menu appears. Select the desired essence mark to display frames where that essence mark has been set. Press the button again to turn it off and return to full-screen display.

See “GUI screen operations” (page 69) for more information about operations in the GUI screens.

8 CHAPTER button

When pressed in a thumbnail screen, displays a list of frames where essence marks are recorded (chapter function). When pressed again, returns to normal thumbnail display. Instead of index pictures, this function displays thumbnails of the frames where essence marks are set, allowing you to gain a quick overview of the clip. This is also convenient for cuing up long clips.

See page 71 for more information about the chapter function.

9 RETURN button

In setup menu and GUI screen operations, returns to the previous step of a setting or procedure.

10 EXPAND button

When pressed in a thumbnail screen, divides the selected clip into 12 blocks and displays a list of thumbnails of the first frame in each block (expand function). The division is repeated with each press (up to 3 times, for a total of 1,728 blocks).

When this button is pressed together with the SHIFT button, the unit returns to the previous division level. Press the RESET button to return to the thumbnail screen.

See page 70 for more information about the expand function.

11 SET button

When pressed in a setup menu or GUI screen operation, confirms the current settings.

12 ◀ button and ▶ button

When the THUMBNAIL/ESSENCE MARK button is lit, you can use these buttons to select clips.

13 SHIFT button

Switches between functions for any button with two functions.

14 ▲/MARK1 button and ▼/MARK2 button


When the THUMBNAIL/ESSENCE MARK button is lit, you can use these buttons to select thumbnails.

During recording or playback, a shot mark 1 or shot mark 2 essence mark is recorded when you press the PUSH SET knob or the SET button with the ▲/MARK1 or ▼/MARK2 button held down.

To delete and modify essence marks, use the PDZ-1 Proxy Browsing Software on the supplied XDCAM Application Software CD-ROM (see page 162).

Essence marks can also be deleted and modified from the Thumbnail Menu of the chapter thumbnail screen (see page 65).

3 Recording and playback control section

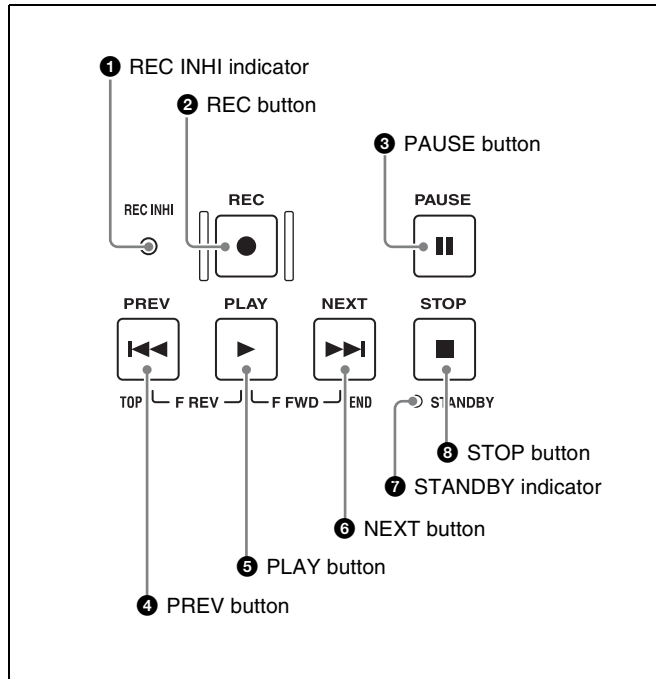

1 REC INHI (recording inhibit) indicator

This lights in the following cases.

- When a disc with recording inhibited is loaded.
- When REC INH on the HOME page of the function menu is set to “ON”.
- The format of the recorded part of the disc does not match the system frequency settings of the unit.

2 REC (record) button

To start recording, hold down this button, and press the PLAY button. The recording takes place on an unrecorded part of the disc.

To stop recording, press the STOP button.

To monitor in E-E mode

You can press this button from stop mode to monitor input signals in E-E mode. The button lights when pressed. Press the STOP button to return to the original video.

You can also press this button during playback and searches. E-E mode playback continues for as long as the button is held down.

3 PAUSE button

Press this button, turning it on, to pause recording or playback.
Press it again to resume recording or playback.

4 PREV (previous) button

Press this button, turning it on, to show the first frame of the current clip. While the first frame of a clip is shown, pressing this button jumps to the beginning of the previous clip. This button is also used together with other buttons for the following operations.

Reverse direction high-speed search: Hold down the PLAY button, and press this button. A high-speed search in the reverse direction is carried out.

Displaying the first frame of the first clip: Hold down the SHIFT button, and press this button.

5 PLAY button

Press this button, turning it on, to start playback. When pressed during recording, this button stops recording and selects stop mode. If you do not want to stop recording when this button is pressed, set setup menu item 145 MODE KEY ENABLE DURING RECORDING to “stop”.

6 NEXT button

Press this button, turning it on, to jump to the next clip, and show the first frame. This button is also used together with other buttons for the following operations.

Forward direction high-speed search: Hold down the PLAY button, and press this button. A high-speed search in the forward direction is carried out.

Displaying the last frame of the last clip: Hold down the SHIFT button, and press this button.

7 STANDBY indicator

Lights when the unit is in standby mode (STOP button and, STANDBY indicator lit).

After a certain time passes in a disc stop mode, the unit automatically enters standby off mode and the indicator goes off.

You can specify the time until the unit enters standby off mode. For details, see the description of setup menu item 501 STILL TIMER (page 127).


8 STOP button

Press this button, turning it on, to stop recording or playback. The frame at the stop point appears. The unit enters standby off mode when you press this button with the SHIFT button held down. It returns from standby off mode to the original state when you press this button again with the SHIFT button held down. (The lit or unlit status of the STOP button does not change.)

Note

This button flashes when setup menu item 105 REFERENCE SYSTEM ALARM is set to “on” and the correct reference video input signal (as specified by OUT REF on page P1 VIDEO of the function menu) is not being input.

This unit can automatically enter standby off mode whenever a specified time elapses in disc stop mode. For details, see the description of setup menu item 501 STILL TIMER (page 127).

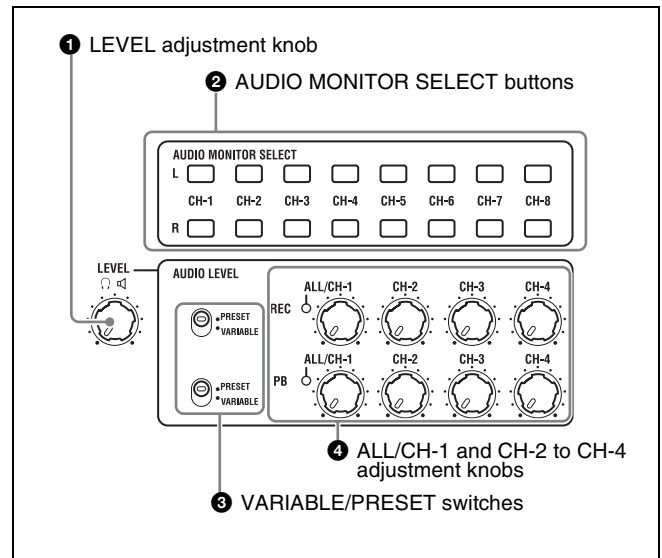4 Audio level adjustment section**1 LEVEL (volume) adjustment knob**

Adjusts the volume of headphones or speakers. You can also cause this to simultaneously adjust the output volume from the ANALOG AUDIO OUTPUT 3 and 4 (MONITOR R and L) connectors on the connector panel. To do this, set setup menu item 114 AUDIO MONITOR OUTPUT LEVEL to “var”.

2 AUDIO MONITOR SELECT (audio monitor channel selection) buttons

The upper (L) and lower (R) rows each contain buttons for channels 1 to 8 (CH1 to CH8). Press the buttons to select the audio channels to output. The audio is output from the PHONES jack on the control panel, from the speakers, and from the ANALOG AUDIO OUTPUT 3 and 4 (MONITOR R and L) connectors on the connector panel. By pressing multiple buttons in the L and R rows, you can monitor the mixed audio of the selected channels. (To cancel a channel selection, press the button for that channel again.)

3 VARIABLE/PRESET switches

These switches select the settings that determine audio levels for recording (upper switch) and playback (lower switch).

VARIABLE: Settings made with the ALL/CH-1 and CH-2 to CH-4 adjustment knobs.

PRESET: Fixed as preset values.


4 ALL/CH-1 and CH-2 to CH-4 adjustment knobs

These knobs adjust the audio levels of channels 1 to 4 (CH-1 to CH-4). The knobs in the upper row adjust recording levels, and the knobs in the lower row adjust playback levels. These settings are enabled when the corresponding VARIABLE/PRESET switch is set to VARIABLE.

You can use the function menu to adjust channels 5 to 8. For details, see page 52.

Setup menu item 131 AUDIO VOLUME allows you to enable simultaneous adjustment of all eight channels with the ALL/CH-1 knob. The ALL indicator lights when simultaneous adjustment is enabled.

5 Editing operation section

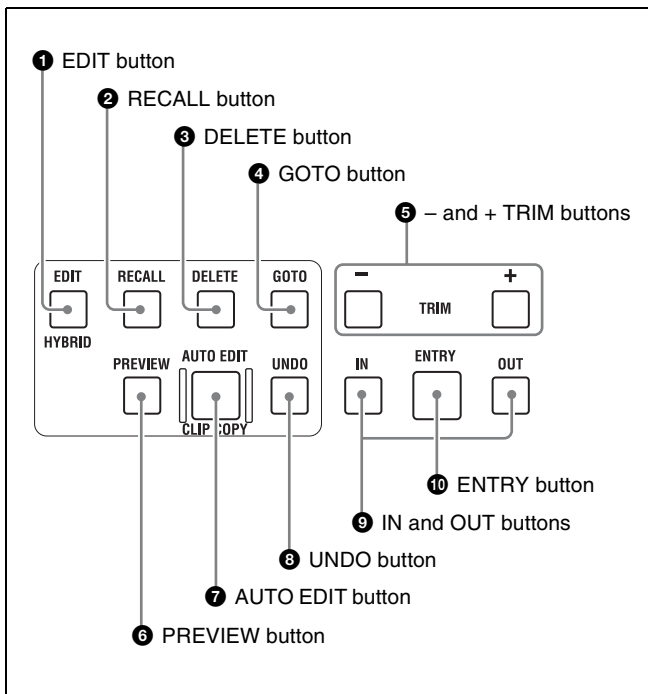

1 EDIT button

Switches to the edit list editing screen (see page 90).

Note

The scene selection function is disabled in the edit list editing screens.

2 RECALL button

When pressed together with the IN button or the OUT button after deleting the In or Out point of a clip or sub clip, recalls the In or Out point.

When pressed in the EDIT LIST screen, switches to the Clip List (Trim) screen, so that you can trim the positions of In and Out points (see page 97).

3 DELETE button

Deletes an In or Out point in a clip or sub clip. Delete the point (if it exists) by holding down the IN or OUT button and pressing this button.

4 GOTO button

Jumps to an In or Out point in a clip or sub clip. Jump to the point (if it exists) by holding down the IN or OUT button and pressing this button.

5 - and + TRIM buttons

Trim an In or Out point in a clip or sub clip. Trim the point (if it exists) by holding down the IN or OUT button and pressing the [-] or [+] button. The In or Out point moves one frame forward or back.

When an edit list editing screen is displayed, the + TRIM and -TRIM buttons enlarge or reduce the time scale of the timeline.

6 PREVIEW button

Flashes when preview is possible.

The editing screen switches to full-screen mode and one of the following screen sections are played back, depending on the screen that was displayed when you pressed the button.

RECORDER mode screen: The editing section, including preroll and postroll sections.

PLAYER mode screen: The editing section only.

Note

When PLAYER SEL in the Edit Menu is set to “external” and EDIT MODE is set to “insert”, the postroll section is not played, even if you press the button in RECORDER mode.

7 AUTO EDIT button

Flashes when auto editing is possible.

Updates an edit list by adding material in the specified editing mode at the location specified by an edit point. When two edit points or less have been set, the editing screen changes into full-screen playback of a section until the edit section is confirmed, including the preroll and postroll sections.

Note

The preroll and postroll sections are not played when PLAYER SEL in the Edit Menu is set to “external”.

8 UNDO button

Undoes the immediately preceding operation.

9 IN (set IN point) and OUT (set OUT point) buttons

This buttons light when an In or Out point is set.


When either button is pressed alone, the timecode of the In or Out point appears. (“--:--:--:--” appears if the corresponding point has not been set.)

The IN and OUT buttons are used with the following buttons to execute the indicated functions.

Button	Function
ENTRY	Set In and Out points
-/+ TRIM	Trim In and Out points
DELETE	Delete In and Out points
RECALL	Recall deleted In and Out points
GOTO	Go to In and Out points

10 ENTRY button

When pressed with the IN or OUT button held down, sets an In or Out point at the current location in a clip or sub clip.

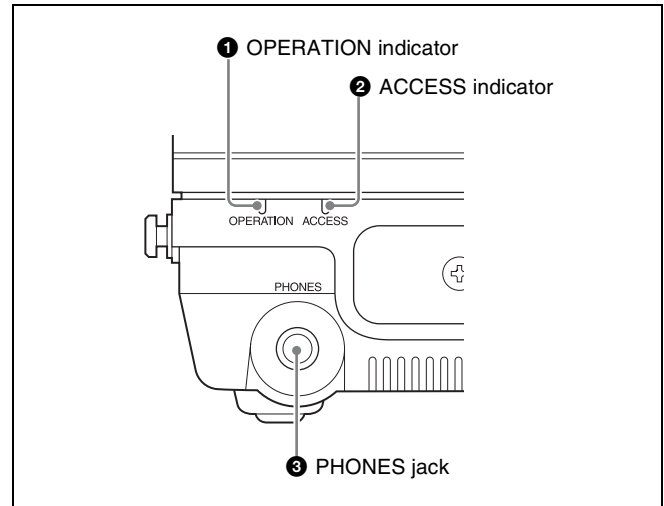6 OPERATION and ACCESS indicators and PHONES jack**1 OPERATION indicator**


Lights in green when this unit is operating.
Lights in red when this unit is recording.

2 ACCESS indicator

Has the same function as the ACCESS indicator on the control panel (*see page 17*).

3 PHONES jack

Stereo jack for connection of stereo headphones for monitoring of audio during recording, playback, and editing. (Non-audio signals are muted.) Select the channels to monitor with the AUDIO MONITOR SELECT buttons.

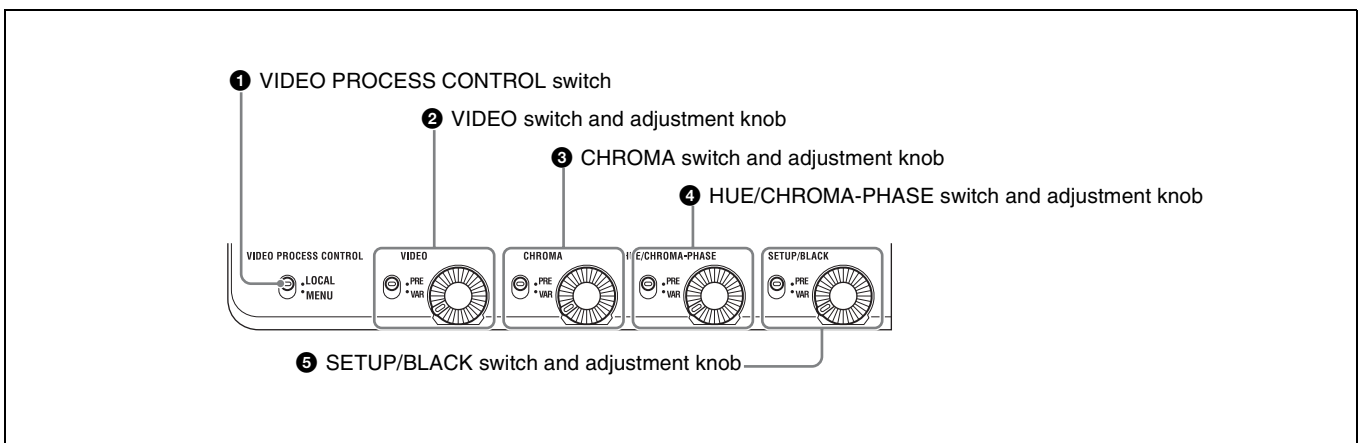7 Video processing settings section**1 VIDEO PROCESS CONTROL switch**

Selects the settings that control the unit's internal digital video processor.

LOCAL: Settings made with the unit's VIDEO, CHROMA, HUE/CHROMA-PHASE, and SETUP/BLACK switches and adjustment knobs.

MENU: Settings made with the setup menu.

2 VIDEO switch and adjustment knob

Set the video signal output levels for HD and SD output.
PRE: Regardless of manual settings, set the video signal output levels to the standard levels.

VAR: Adjust the video signal output levels within the range $-\infty$ to +3 dB by turning the adjustment knob.

③ CHROMA switch and adjustment knob

Set the chroma signal output levels for HD and SD output.

PRE: Regardless of manual settings, set the chroma signal output levels to the standard levels.

VAR: Adjust the chroma signal output levels within the range $-\infty$ to $+3$ dB by turning the adjustment knob.

④ HUE/CHROMA-PHASE switch and adjustment knob

Set the chroma phase.

PRE: Regardless of manual settings, set the chroma phase to the standard value.

VAR: Adjust the chroma phase within the range $\pm 30^\circ$ by turning the adjustment knob.


⑤ SETUP/BLACK switch and adjustment knob

Set the setup and black levels for HD and SD output.

PRE: Regardless of manual settings, set the setup and black levels to the standard levels.

VAR: Adjust the setup and black levels within the following ranges by turning the adjustment knob.

- Setup level (59.94i/59.94P/29.97P mode): ± 30 IRE
- Black level (50i/50P/25P mode): ± 210 mV

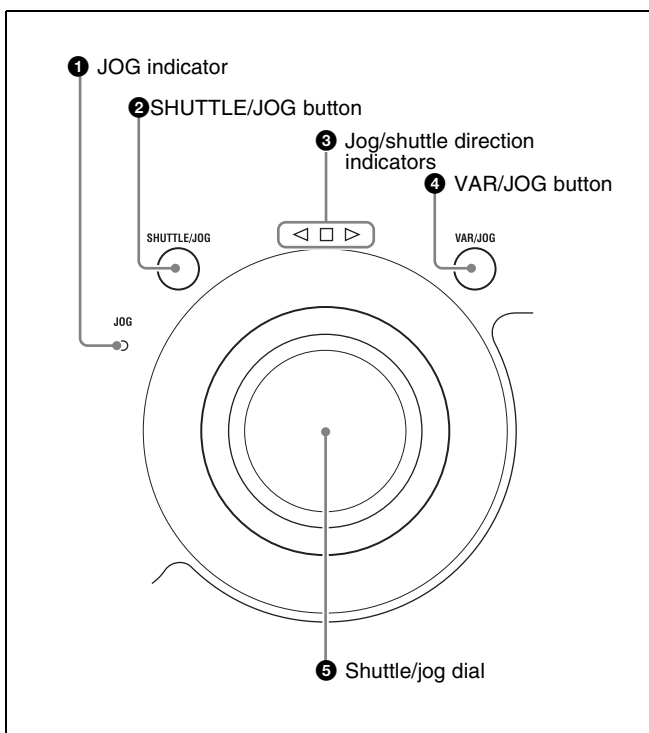⑧ Shuttle/jog/variable operation section**① JOG indicator**

Lights in green when the shuttle/jog dial is in jog mode.

② SHUTTLE/JOG button

Press this button, turning it on, to perform shuttle or jog playback with the shuttle/jog dial.

When pressed during recording, this button stops recording and selects shuttle/jog mode. If you do not want

recording to stop when this button is pressed, set setup menu item 145 MODE KEY ENABLE DURING RECORDING to “stop”.

③ Jog/shuttle direction indicators

These show the playback direction in jog, shuttle, or variable speed mode.

◀ (green): Lights during playback in the reverse direction.

▶ (green): Lights during playback in the forward direction.

■ (red): Lights during still image display.

④ VAR/JOG button

Press this button, turning it on, to perform variable or jog playback with the shuttle/jog dial. When pressed during recording, this button stops recording and selects variable/jog mode.

If you do not want recording to stop when this button is pressed, set setup menu item 145 MODE KEY ENABLE DURING RECORDING to “stop”.

⑤ Shuttle/jog dial

The dial switches between shuttle/variable mode and jog mode each time that you press it all the way in.

Shuttle/variable mode: The dial is in the raised position.

Jog mode: The dial is in the depressed position (the JOG indicator is lit).

Turn the dial to the right to play in the forward direction, and turn it to the left to play in the reverse direction.


- In jog mode, the playback speed varies from -1 to $+1$ times normal speed, according to the rotation speed of the dial. There are no detents.
- In shuttle mode, the playback speed varies in the range ± 20 times normal speed, according to the angular position of the dial. There is a detent at the center position, for still image playback.
- In variable mode, you can make fine adjustments to the playback speed over the range from -1 to $+1$ times normal speed, according to the angular position of the dial. There is a detent at the center position, for still image playback.

Regardless of the playback mode, you will normally press the SHUTTLE/JOG or VAR/JOG button before turning the dial. But it is also possible to put the unit into shuttle, jog, or variable mode simply by turning the dial (by setting setup menu item 101 SELECTION FOR SEARCH DIAL ENABLE to “dial”.)

Note

If you do set the above item to “dial”, then you should return the shuttle/jog dial to the center position after conducting shuttle or variable playback. If you do not return the dial to the center position, playback in shuttle or variable mode can start because of vibrations during other operations.

Display Panel

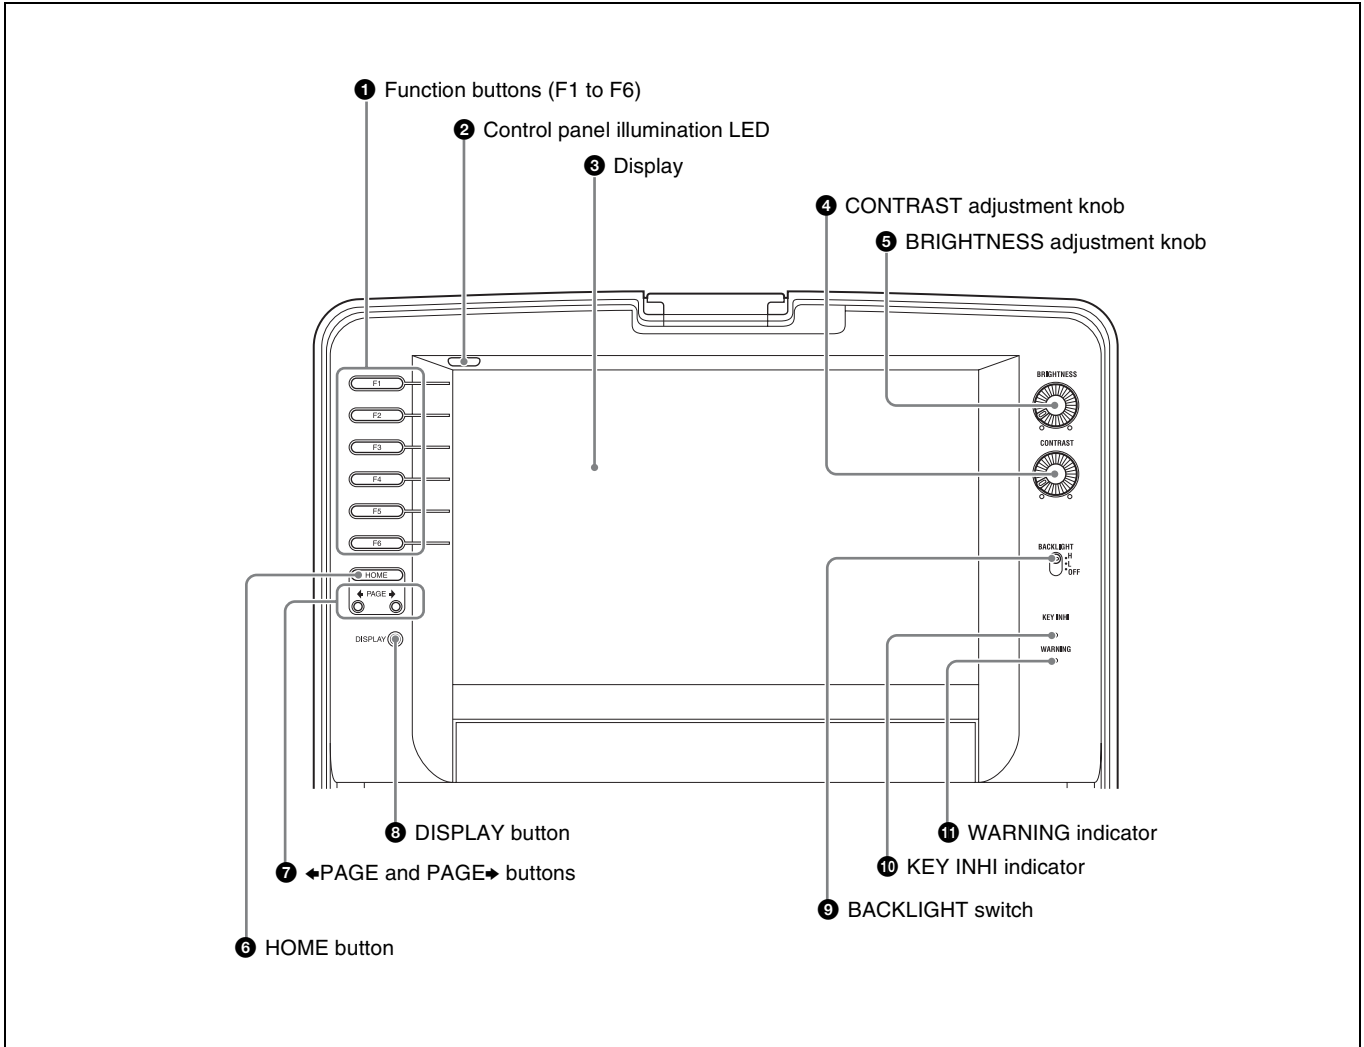

1 Function buttons (F1 to F6)

When these buttons are pressed with the function menu (see page 50) shown in the display, the display changes with each press to the menu items corresponding to the button position.

2 Control panel illumination LED

Illuminates the control panel. The LED can be turned on and off with the LIGHT item on page P4 OTHER of the function menu.

3 Display

Displays menus, audio level meters, timecode, clip information, and other data. You can use the DISPLAY button to switch the display between the basic operating screen and the video monitor.

For details, see “Display screen” (page 26).

4 CONTRAST adjustment knob

Adjusts the contrast of the video monitor.

5 BRIGHTNESS adjustment knob

Adjusts the brightness of the video monitor.

6 HOME button

When pressed with the function menu displayed, returns to the HOME page of the function menu.

7 ←PAGE and PAGE→ buttons

Display the function menu, if it is not already displayed. (The most recently displayed page of the function menu appears.)

If the function menu is already displayed, the ←PAGE button switches to the previous page, and the PAGE→ button switches to the next page.

8 DISPLAY button

With each press, switches the display between the basic operating screen and the video monitor.
This button is disabled when a GUI screen is shown.

9 BACKLIGHT switch

Selects the brightness of the display backlight.

H: High

L: Low

OFF: Off (nothing displayed)

10 KEY INHI (inhibit key operations) indicator

Lights when the KEY INHI switch is on and either the AUDIO/F-KEY item or the CONTROL PANEL item under setup menu item 118 KEY INHIBIT is set to “dis”.


11 WARNING indicator

Lights when the unit detects a hardware error such as condensation inside the unit or a laser diode error. Goes out when the error condition is corrected. When this indicator lights, an error message appears in the time data display section.

For details, see “Alarms” (page 151) and “Error messages” (page 159).

Display screen

Basic operation display

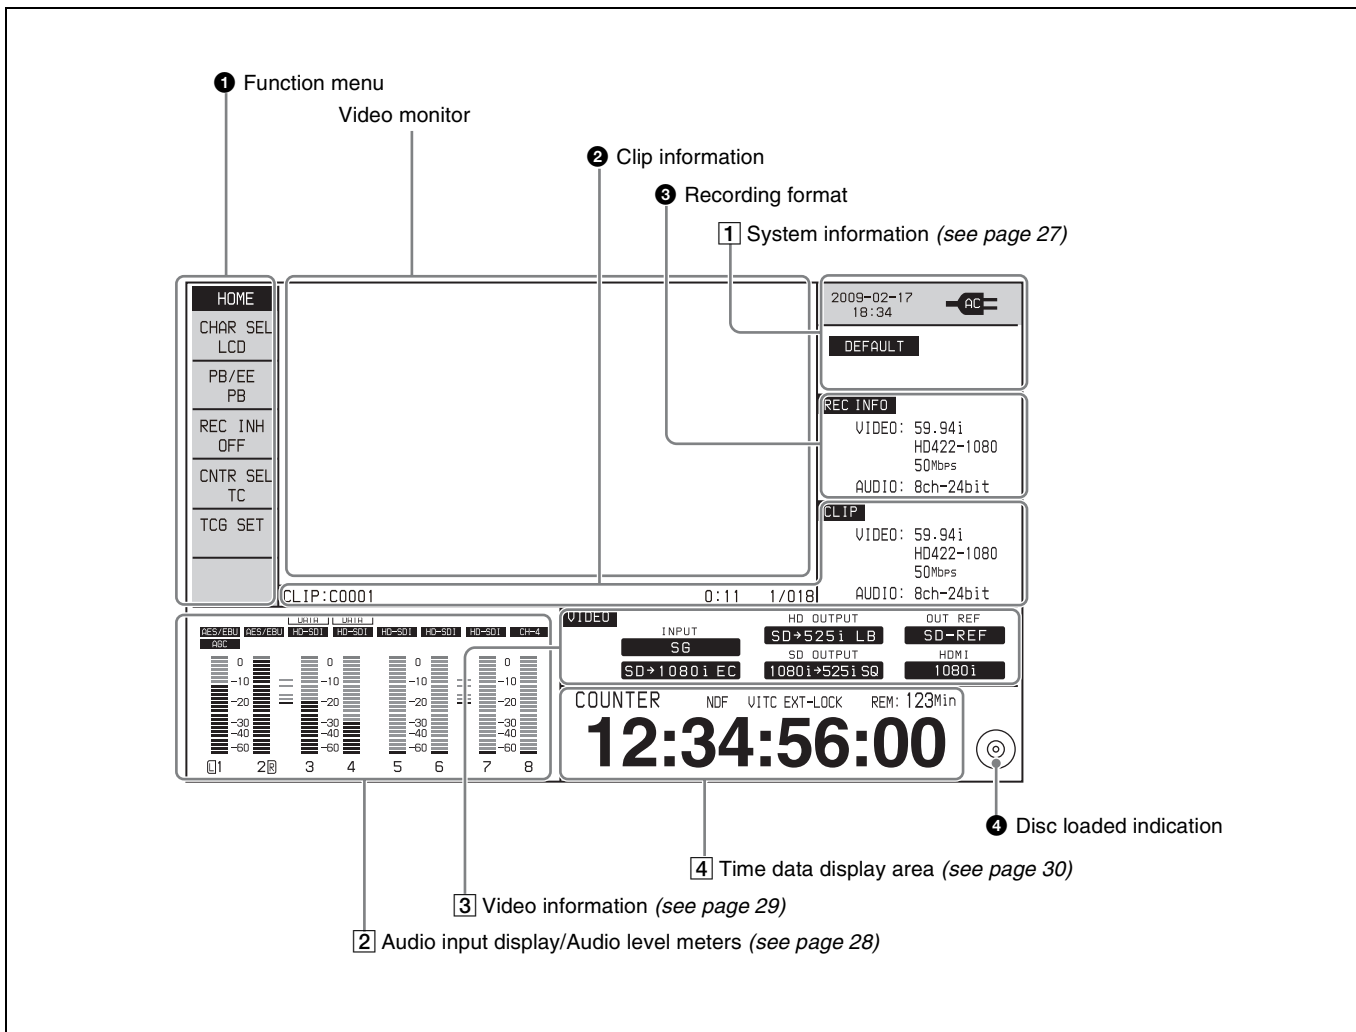**1 Function menu**


Use the ◀PAGE, PAGE▶, and HOME buttons to display this menu and to switch between the pages (HOME, P1 to

P4). Each page has items corresponding to the function buttons. To change a setting, press the function button in that position.

For details, see “Basic Function Menu Operations” (page 50).


2 Clip information

Displays the following information about clips.

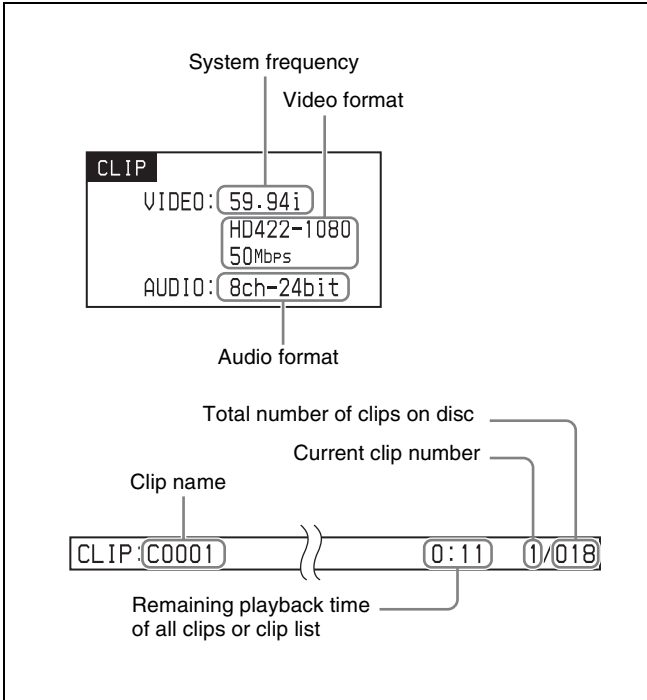

3 Recording format

Displays the system frequency at the time of recording, the video format, and the audio format.

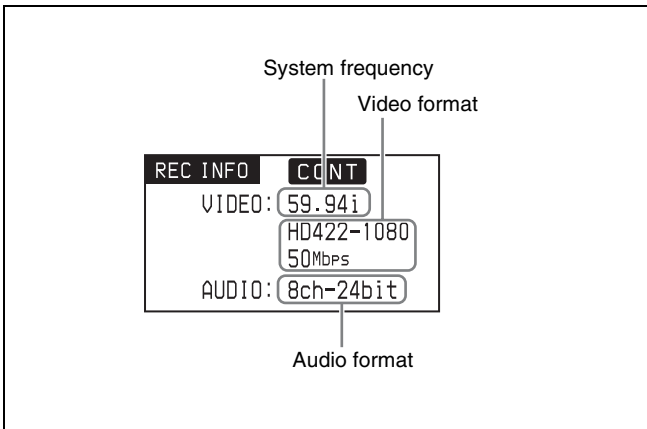

4 Disc loaded indication

A disc loaded indication appears when a disc is loaded in this unit.

The background color of the disc loaded indication indicates the status of the disc, as follows.


- Black:** Recording and playback possible
- Yellow:** Playback only possible
- Red:** Recording and playback not possible

Note

Even when the background color is black, recording is not possible in the following cases.

- The loaded disc is recording inhibited.
- REC INH in the HOME page of the function menu is set to “ON”.

1 System information

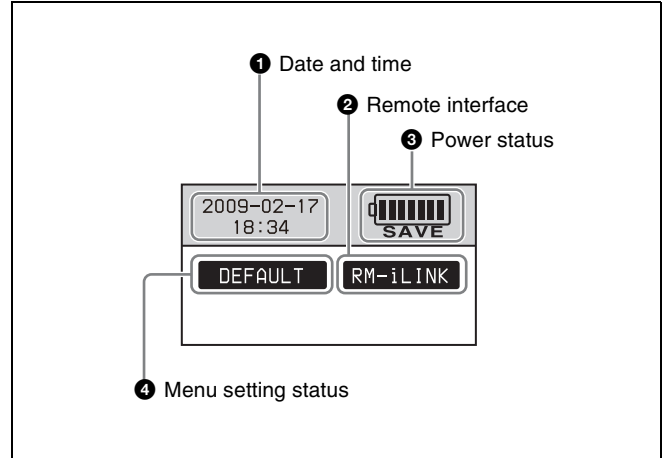

1 Date and time

Displays the current date and time.

2 Remote interface

When the remote control switch is set to “REMOTE”, displays the name of the interface selected with setup menu item 214 REMOTE INTERFACE.

3 Power status

Displays the status of power supply to the unit.

Display	Power status	Notes
	AC power	–
	AC power (power saving mode)	–
	DC power	<ul style="list-style-type: none"> • Remaining capacity expressed by length of bar • Flashing (1 Hz): Almost exhausted • Flashing (4 Hz): Exhausted
	DC power (power saving mode)	
	Battery	
	Battery (power saving mode)	

4 Menu setting status

Displays the current setting status of setup menu.


Display	Description
BANK1	The current menu settings are the same as the settings in menu bank 1.
BANK2	The current menu settings are the same as the settings in menu bank 2.

Display	Description
BANK3	The current menu settings are the same as the settings in menu bank 3.
DEFAULT	The current menu settings are the same as the factory defaults.
No display	The current menu settings are different from all of the above.

2 Audio input display/Audio level meters

Displays information about audio. There are two display modes for the audio level meter: FULL mode and FINE mode.

mode, which can be switched over using AU METER on page P2 AUDIO of the function menu.

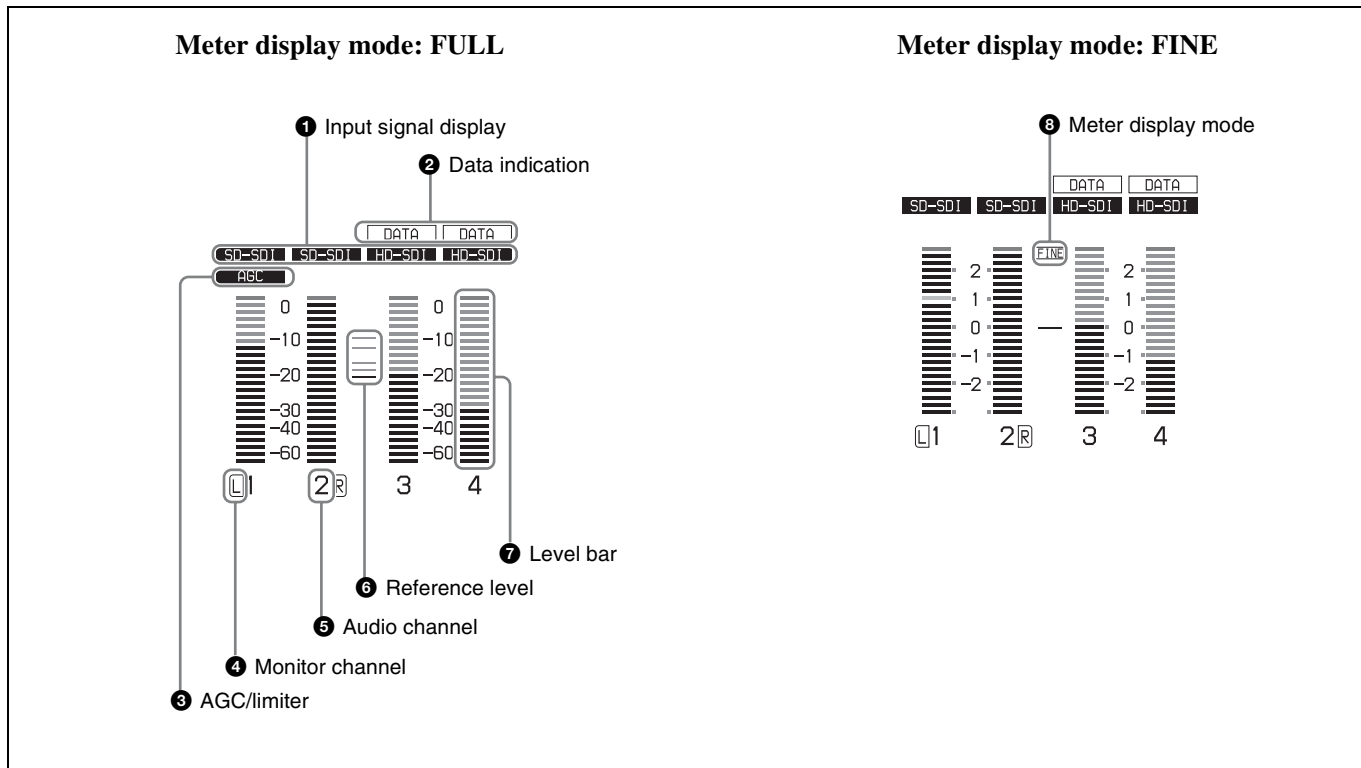

1 Input signal display

Displays the audio input signal.

Display	Input signal
ANA-1	Analog audio signal
ANA-2	
ANA-3	
ANA-4	
MIC-1	Input signal from the microphone connected to ANALOG AUDIO INPUT connector
MIC-2	
MIC-3	
MIC-4	
HD-SDI	HDSDI audio signal (flashes when there is no input signal)
SD-SDI	SDSDI audio signal (flashes when there is no input signal)
SG	Test signal from the internal signal generator

Display	Input signal
iLINK ^{a)}	i.LINK TS (HDV) audio signal
No indication	Undefined audio signal, or no audio input

a) When the PDBK-202 option board is installed

2 Data indication

Appears when the input signals are non-audio signals.

3 AGC/limiter

When analog signals are selected for audio input, displays the AGC or limiter status.

AGC: An AGC value has been selected.

LIMIT: A limiter value has been selected.

4 Monitor channel

Displays the audio monitoring channels set with the AUDIO MONITOR SELECT buttons (*see page 21*).

5 Audio channel

Displays the audio channels.

6 Reference level

Displays the reference level for recording as set in the maintenance menu.


7 Level bars

Display the audio recording or playback levels of channels 1 to 8. The OVER indicators light when the audio level exceeds 0 dB.

8 Meter display mode

Displays the audio level meter display mode selected with AU METER on page P2 AUDIO of the function menu (see page 52).

3 Video information

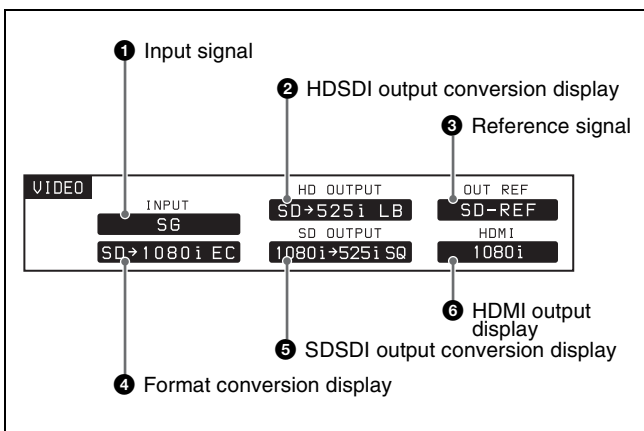

1 Input signal

Displays the currently selected video input signal.

HD-SDI: HDSDI video signal

SD-SDI: SDSDI video signal

COMPOSITE: Composite video signal

i.LINK: i.LINK TS (HDV) signal¹⁾

SG: Test video signal generated by the internal signal generator

1)When the PDBK-202 option board is installed

Note

The display flashes when there is no video input signal, and when the video input signal does not match the system frequency of this unit.

Select the video input signal with V INPUT on page P1 VIDEO of the function menu (see page 51).

2 HDSDI output conversion display

When an upconverted signal is being supplied to the HDSDI OUTPUT 1 and 2 (SUPER) connectors, displays the formats before and after conversion and the conversion mode.

SQ: Squeeze mode

EC: Edge-crop mode

LB: Letter box mode

3 Reference signal

Displays the reference signal to which this unit is synchronized.

INPUT: Input video signal

HD-REF: HD format reference signal

SD-REF: SD format reference signal

No display: Internal reference signal

Note

The HD-REF or SD-REF display flashes if the video input signal is not synchronized with the reference signal, or if the signals are synchronized but out of phase.

4 Format conversion display

When up-conversion or down-conversion is being performed before recording, displays the formats before and after conversion and the conversion mode.

SQ: Squeeze mode

EC: Edge-crop mode

LB: Letter box mode

5 SDSDI output conversion display

When a downconverted signal is being supplied to the SDSDI OUTPUT connector, displays the formats before and after conversion and the conversion mode.

SQ: Squeeze mode

EC: Edge-crop mode

LB: Letter box mode

6 HDMI output display

Displays the signal output to the HDMI OUT connector.

1080i: 1080/59.94i or 1080/50i signal

720P: 720/59.94P or 720/50P signal


480i: 480/59.94i signal

576i: 576/50i signal

480P: 480/59.94P signal

576P: 576/50P signal

4 Time data display area

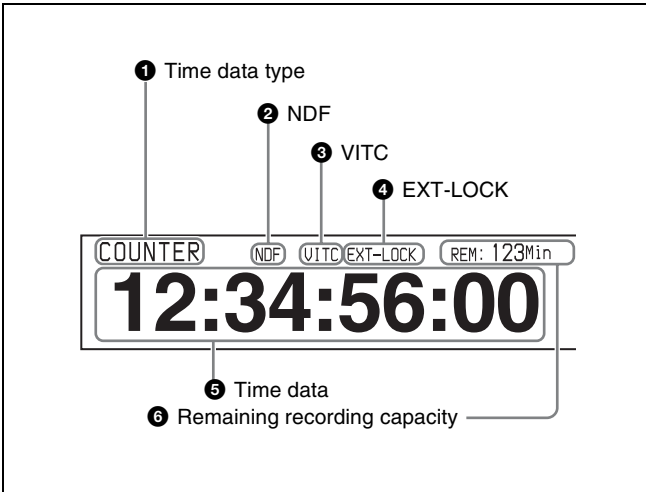

This indication flashes at a rate of 1 Hz when the remaining capacity falls below two minutes, and flashes at a rate of 4 Hz when the disc is full.

1 Time data type

Displays the type of time data shown in the time data display area. The type of time data is selected with CNTR SEL on the HOME page of the function menu (*see page 50*).

Display	Type of time data
TC	Timecode
COUNTER	Elapsed recording/playback time
UB	User bits
VITC	VITC
VIUB	VIUB
TCG	Timecode generator value
UBG	User bits generator value

2 NDF

Lights when the displayed timecode is NDF (non-drop-frame) timecode.

3 VITC

Lights in the following cases.

- When VITC is being read in playback mode. (This has no relation to the display in the time data display area.)
- When VITC recording is possible.

4 EXT-LOCK

Lights when the timecode of the timecode generator is synchronized with external timecode.


5 Time data

Normally displays timecode or VITC, according to the selection made with TCR on page P3 TC of the function menu.

6 Remaining recording capacity

Displays the remaining recording capacity on the disc.

Video monitor display

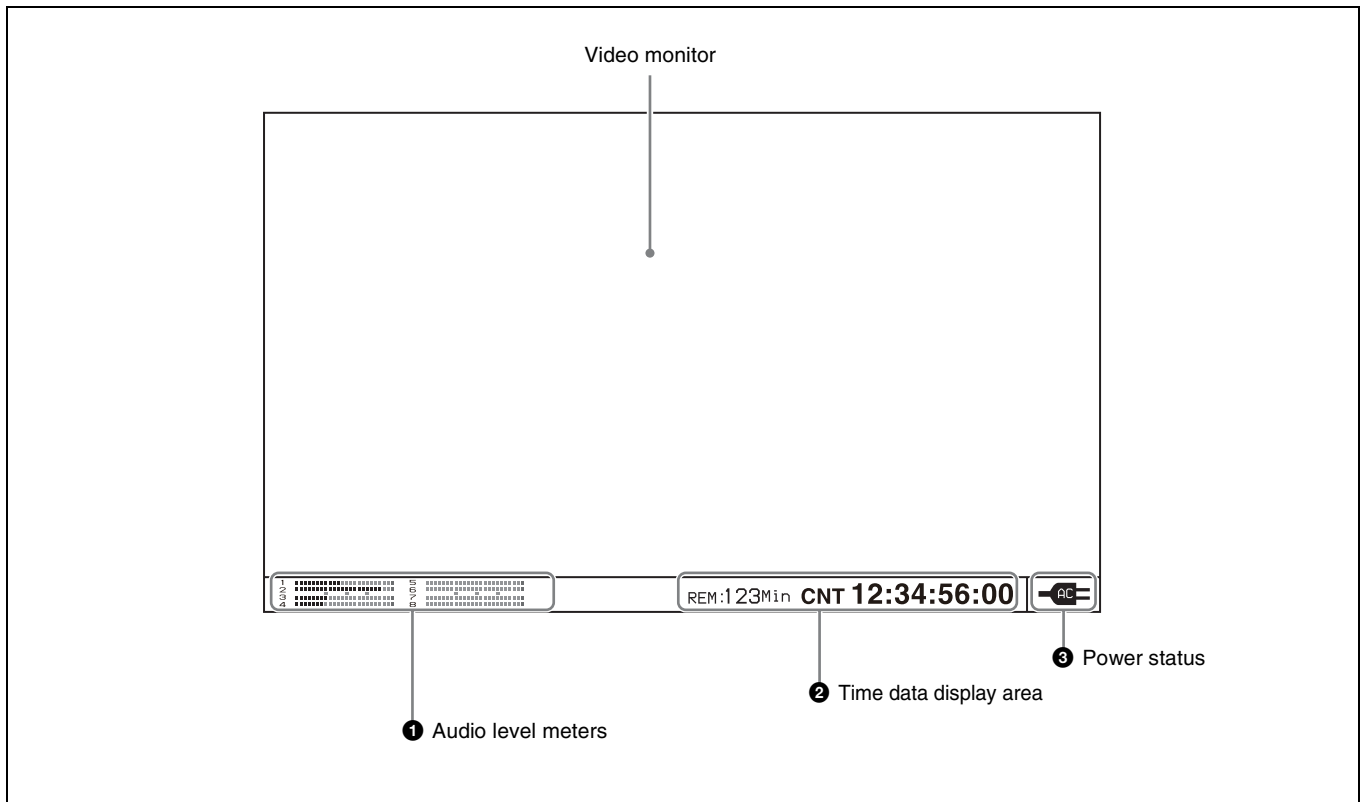

1 Audio level meters

Displays basic audio level meters.


2 Time data display area

Displays the remaining recording capacity on the disc and time data (*see page 30*).

3 Power status

Displays the status of power supply to the unit (*see page 27*).

Connector Panel

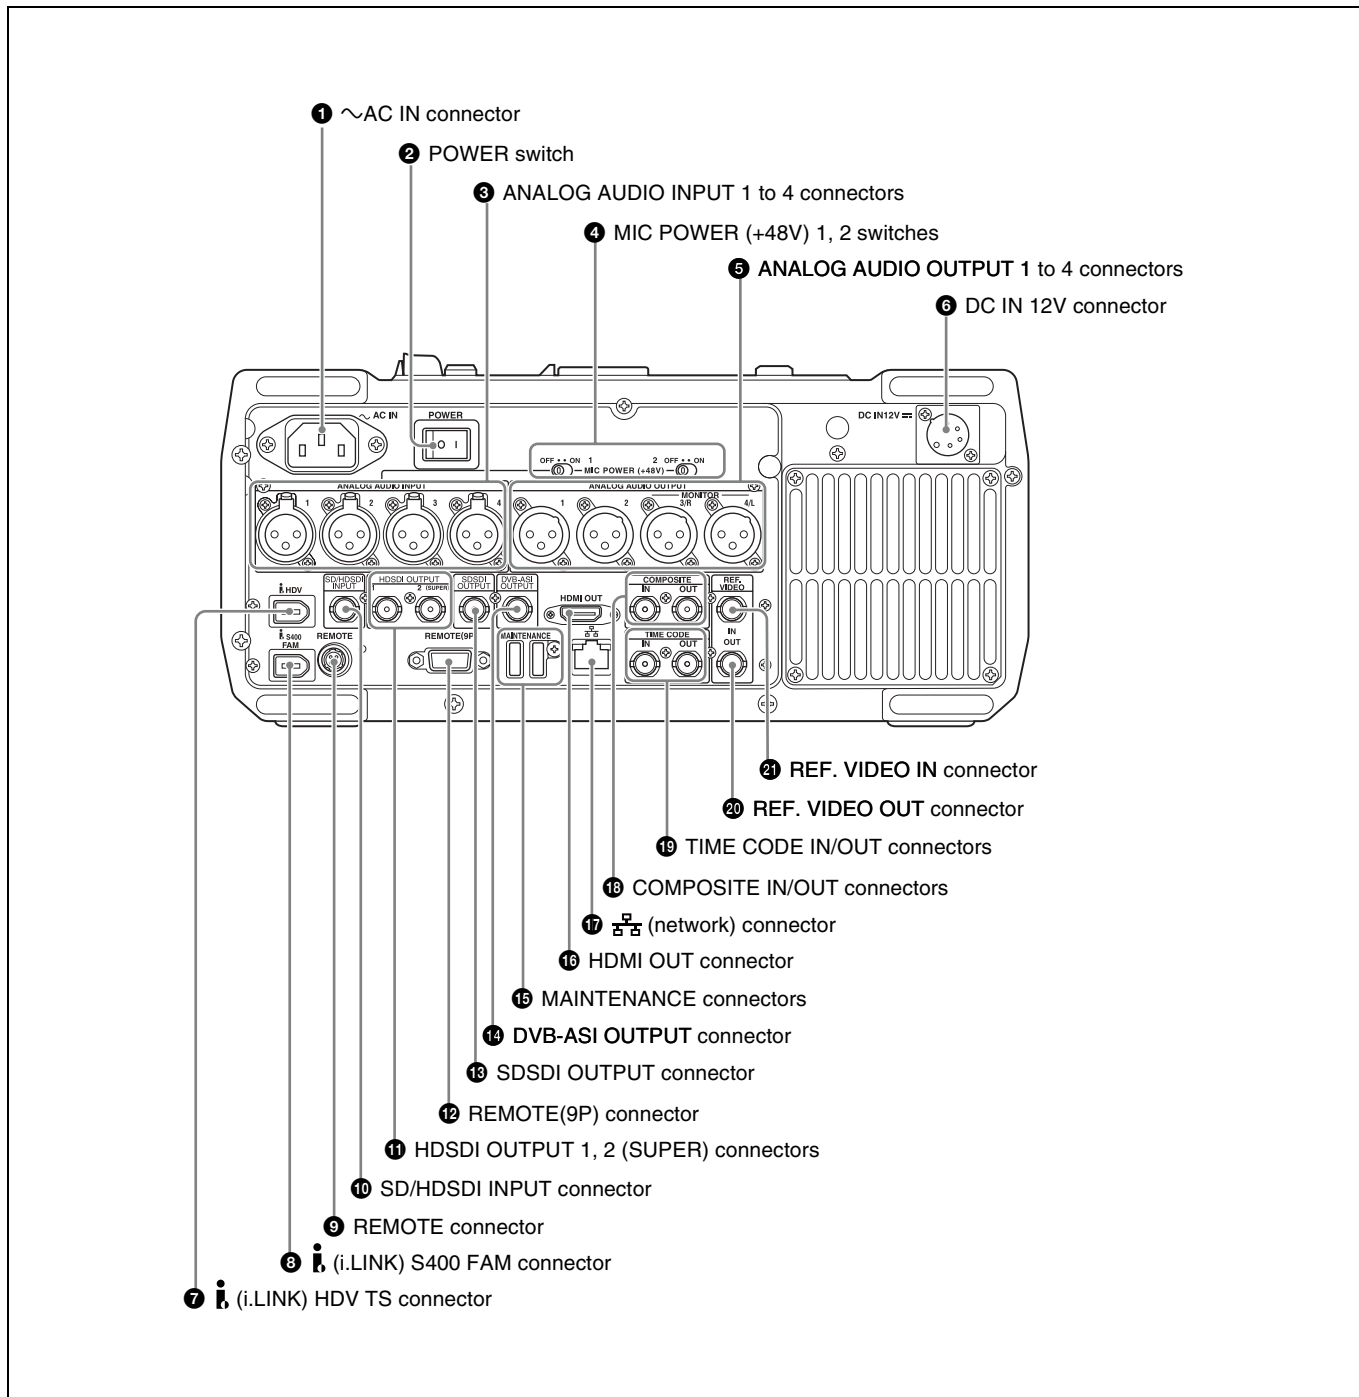

1 ~AC IN connector
Connect to an AC power supply with the specified power cord (not supplied).

2 POWER (main power) switch
Press the **I** side to power on the unit. Press the **O** side to power off.

When using the unit, normally leave the POWER switch in the **I** (on) position, and use the on/standby switch on the control panel to switch the unit between the operating state and standby state.

Note

Before turning the main power off, always check to make sure that the indicator of the on/standby (I/⏻) switch on the control panel is not lit, and then press the main power switch to the ○ side.

③ ANALOG AUDIO INPUT 1 to 4 connectors (XLR 3-pin, female)

These input analog audio signals.

You can set the reference input level with the maintenance menu item M37: AUDIO CONFIG (see page 140). (Factory default setting: +4 dB)

Microphone settings

If you have connected a microphone to this unit, you can set input level, AGC, and limiter values for the microphone with setup menu items 834, 839, 840, and 841 (see page 134).

Note

An unpleasant sound may be output if you have connected a microphone to the ANALOG AUDIO INPUT 1 to 4 connector and power the microphone on with the input level too high. Check the input level setting before connecting a microphone.

④ MIC POWER (+48 V) (microphone power (+48 V)) 1 and 2 switches

When you connect microphones to the ANALOG AUDIO INPUT 1 and 2 connectors, set these switches as follows, according to the microphone power supply type.

ON: External power supply type microphone

OFF: Internal power supply type microphone

⑤ ANALOG AUDIO OUTPUT 1 to 4 connectors (XLR 3-pin, male)

These output analog audio signals.

When the unit is shipped from the factory, connectors 1 to 4 are set to audio channels 1 to 4. You can change these settings with setup menu item 824 ANALOG LINE OUTPUT SELECT (see page 133).

You can set the output level with the maintenance menu item M37: AUDIO CONFIG (see page 140). (Factory default setting: +4 dB)

Non-audio signals are muted.

By setting setup menu item 820 AUDIO OUTPUT CH3/CH4 SELECT to “monitor out”, you can output the signals of the audio channels selected with the AUDIO MONITOR SELECT buttons from connectors 3 and 4.

⑥ DC IN 12V connector (XLR 4-pin, male)

Connect to a DC power source of 12 V.

For details, see “Supplying power” on page 35.

⑦ i.LINK HDV TS connector

When the PDBK-202 option board is installed, i.LINK TS (HDV) signals can be input and output via this connector.

⑧ i.LINK S400 FAM connector (6-pin, IEEE1394 compliant)

Connect a computer or other device, using an i.LINK cable.

Notes

- When this unit is connected to a device with a 6-pin i.LINK connector by an i.LINK cable, before unplugging the i.LINK cable, first power off the device and disconnect the power plug from the outlet. If the i.LINK cable is unplugged with the device power plug still connected, a current from an excessive voltage (8 to 40 V) output from the i.LINK connector of the device flows into this unit. This may cause a failure of the unit.
- When connecting this unit to a device with a 6-pin i.LINK connector, connect to the 6-pin i.LINK connector of the other device first.

⑨ REMOTE connector (4-pin)

Supplies power to the RM-280 Editing Controller.

⑩ SD/HDSDI INPUT (SDSDI/HDSDI signal input) connector (BNC type)

This inputs an SDSDI or HDSDI format video/audio signal.

⑪ HDSDI OUTPUT 1, 2 (SUPER) (HDSDI signal output 1, 2 (superimpose)) connectors (BNC type)

These output HDSDI format video/audio signals.

When editing with two PDW-HR1 units, connect a cable between these connectors on the player unit and the SD/HDSDI INPUT connector on the recorder unit.

You can superimpose timecodes, menu settings, error messages, or other information on the output of the HDSDI OUTPUT 2 (SUPER) connector with the setting for CHAR SEL on the HOME page of the function menu or with the setting for setup menu item 028 HD CHARACTER. You can always disable to superimpose the data independent of the setting for CHAR SEL with the setting for setup menu item 028.

See “Basic Function Menu Operations” (page 50) for more information about the CHAR SEL settings.

See page 119 for more information about the setup menu item 028 HD CHARACTER.

To treat the input and output signals of these connectors as non-audio signals, set the maintenance menu item M37: AUDIO CONFIG >M372: NON-AUDIO INPUT (recording) (see page 140) and setup menu item 823 NON-AUDIO FLAG PB (playback).

12 REMOTE(9P) (remote control 9-pin) connector (D-sub 9-pin)

To control this unit from a controller or VTR supporting the RS-422A Sony 9-pin VTR protocol, connect the device to this connector.

13 SDSDI OUTPUT (SDI signal output) connector (BNC type)

Output SDSDI format video/audio signals.

When the unit is shipped from the factory, audio signal output is eight channels with no switching, and RP188 timecode output is set to on. You can change these settings with setup menu item 828 SDI AUDIO OUTPUT SELECT and setup menu item 920 SD-SDI H-ANC CONTROL.

See page 121 for more information about setup menu operations.

14 DVB-ASI OUTPUT connector

When the PDBK-202 option board is installed, outputs DVB-ASI TS signals.

15 MAINTENANCE connectors

These are the USB connectors for maintenance.

Connect a Windows USB keyboard or mouse (see page 75), or a USB flash drive to access planning metadata stored on the drive (see page 86).

16 HDMI OUT connector

Outputs digital signals (video, audio, control signals). Use a HDMI cable to connect a high-definition projector, a high-definition television, or another consumer electronics product.

Signals of the audio channels selected with the AUDIO MONITOR SELECT buttons (see page 21) are output.

17  (network) connector (RJ-45 type)

This is a 10BASE-T/100BASE-TX/1000BASE-T connector for network connection.

CAUTION

- For safety, do not connect the connector for peripheral device wiring that might have excessive voltage to this port. Follow the instructions for this port.
- When you connect the network cable of the unit to peripheral device, use a shielded-type cable to prevent malfunction due to radiation noise.

ATTENTION

- Par mesure de sécurité, ne raccordez pas le connecteur pour le câblage de périphériques pouvant avoir une tension excessive à ce port. Suivez les instructions pour ce port.

- Lors de la connexion du câble réseau de l'appareil au périphérique, utilisez un câble blindé afin d'empêcher tout dysfonctionnement dû au bruit de rayonnement.

VORSICHT

- Aus Sicherheitsgründen nicht mit einem Peripheriegerät-Anschluss verbinden, der zu starke Spannung für diese Buchse haben könnte. Folgen Sie den Anweisungen für diese Buchse.
- Verwenden Sie beim Anschließen des Netzkabels des Geräts an ein Peripheriegerät ein abgeschirmtes Kabel, um Fehlfunktionen aufgrund von Störungen zu vermeiden.

18 COMPOSITE IN/OUT (analog composite video input and output) connectors (BNC type)

Input and output analog composite video signals.

19 TIME CODE IN/OUT (timecode input and output) connectors (BNC type)

Input SMPTE timecode generated by an external device to the IN connector.

The timecode output from the OUT connector depends on the operating status of this unit, as follows.

During playback: Playback timecode

During recording: The timecode from the internal timecode generator or the timecode input to the TIME CODE IN connector

20 REF.VIDEO OUT (reference video signal output) connector (BNC type)

When this unit is running, outputs the reference video signal that is input to the REF VIDEO IN connector.

21 REF.VIDEO IN (reference video signal input) connector (BNC type)

Inputs the system frequency reference video signal selected with setup menu item 013 SYSTEM FREQUENCY SELECT MENU. This connector is terminated with an impedance of 75 ohms.

Preparing Power Sources

This unit can be powered by AC power, DC power, or a battery pack.

For safety, use only the Sony battery packs listed below.
Lithium-ion battery pack: BP-L80S, BP-GL95

Note

If you load or remove a battery pack incorrectly, it may fall and cause bodily injury. Follow the procedures described below to load or remove them.

Supplying power

AC power supply

Connect the AC IN connector to an AC power source using the specified AC power cord. To supply AC power to the unit, set the on/standby switch on the control panel to **I** (ON) and the POWER switch on the connector panel to **I** (ON).

DC power supply

Connect the DC IN 12V connector to a DC power source. To supply DC power to the unit, set the on/standby switch on the control panel to **I** (ON) and the POWER switch on the connector panel to OFF. If the POWER switch on the connector panel is set to **I** (ON), AC power is supplied.

Battery power supply

Battery packs that can be used with this unit are as follows.

- BP-L80S
- BP-GL95

Continuous recording time at room temperature

BP-GL95 lithium-ion battery pack: 95 minutes

For details on charging battery packs, refer to the operation manual for the battery charger.


Notes about battery usage

- Before using the batteries, be sure to charge them fully with the special battery charger. Refer to the operating instructions for your battery charger for more information about how to charge the batteries.
- Batteries may not be completely charged if you charge them immediately after use when they are still warm. You should wait until the batteries cool before charging them.


Attaching a battery pack

Proceed as follows.

- 1 Remove the cover of the battery pack shoe.

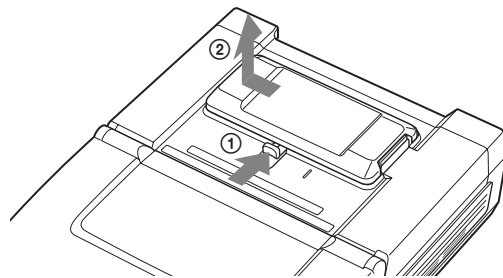

- 2 Fit the battery pack.

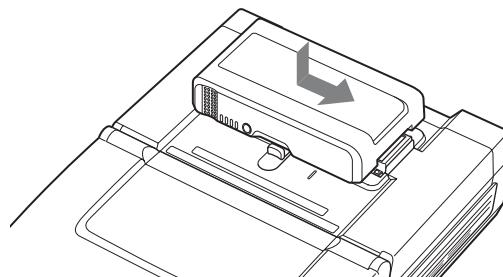

To remove the battery pack

Follow the above procedure in the reverse flow. After the battery pack is removed, replace the cover of the battery pack shoe.

Checking the remaining battery power


You can use the LEDs on the side panel of the battery to check the remaining power of the battery.

Initial Setup

This unit is shipped with the area of use, system frequency, recording format, and current date and time still unset. Therefore, you need to make initial setup settings before using the unit. (You cannot use the unit without setting it up.)


Once the unit has been set up, the settings are retained even when the unit is powered off.

Use the following procedures.

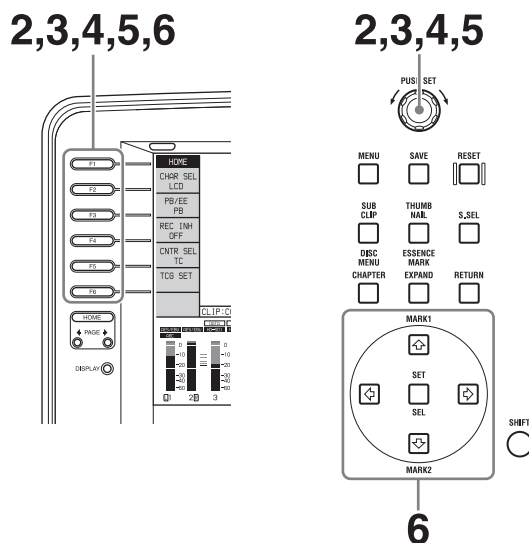


- 1 Power the unit on (*see page 35*).

The INITIAL SETUP screen appears on the display.

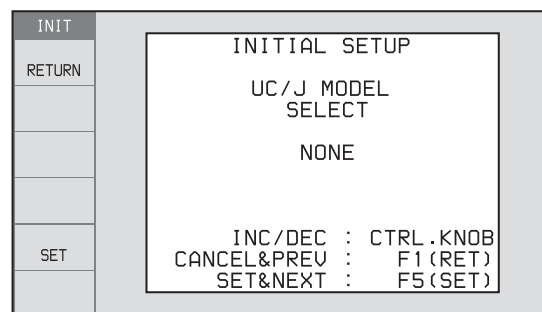


- 2 Turn the PUSH SET knob to select the area of use.
Display UC (for regions outside Japan) or J (for Japan), and then press the SET function button (F5). The system frequency screen appears.
- 3 Turn the PUSH SET knob to select the system frequency.

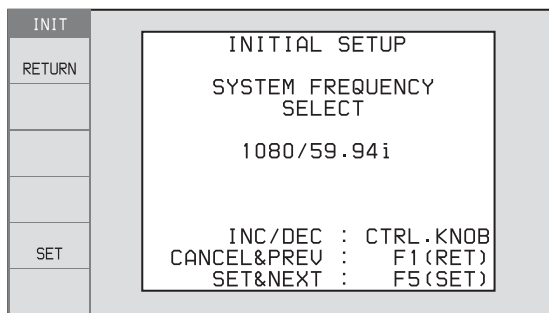


Display the system frequency that you want to use, and then press the SET function button (F5).
The recording format selection screen appears.

- 4** Turn the PUSH SET knob to select the recording format to use.

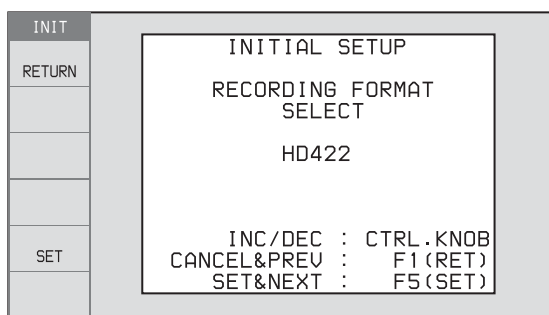

Display the recording format to use, and then press the SET function button (F5).
The DATE/TIME PRESET screen appears.

- 5** In the DATE/TIME PRESET screen, set the current date and time by setting the following items.

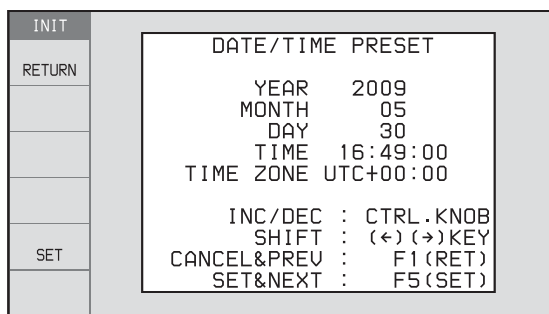

YEAR: Year

MONTH: Month

DAY: Day

TIME: Time

TIME ZONE: Time zone (as a difference in hours with respect to Coordinated Universal Time (UTC))

In the setting screen, you can change the value of the flashing digit.


Press the ◀ or ▶ button to make the previous digit or next digit start flashing.

Press the ▲/MARK1 or ▼/MARK2 button (or turn the PUSH SET knob) to increment or decrement the value of the flashing digit.

When you have finished making settings, press the SET function button (F5).

The date, time, and time zone settings are saved, and the message “NOW SAVING...” appears.

- 6** If you want to save the settings made up to this point, press the SET function button (F5) again.

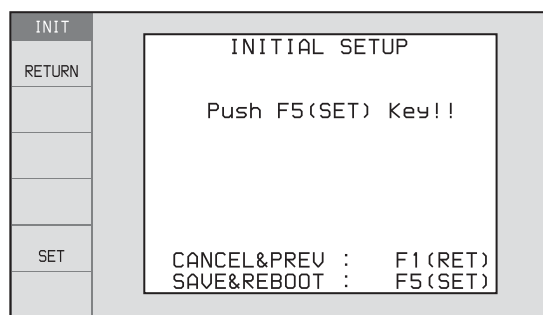

The message “NOW SAVING...” appears again, and the setting screen disappears. Then the unit powers itself off and on again.

To return to the original screen without saving settings

Press the RETURN function button (F1).

Note

The time zone is reset to the factory default when you execute the maintenance menu item M49: RESET ALL SETUP. You will need to set it again. The date and time are not reset.

Connections and Settings

Note

Production of some of the peripherals and related devices described in this chapter has been discontinued. For advice about choosing devices, please contact your Sony dealer or a Sony sales representative.

Connections for using PDZ-1 Proxy Browsing Software

You can use the PDZ-1 Proxy Browsing Software on the supplied XDCAM Application Software CD-ROM to carry out simple editing with proxy AV data.

For an overview of PDZ-1 and how to install the software, see “Using PDZ-1 Proxy Browsing Software” on page 162. For information about how to use the software, refer to the Help provided in the software.

Using the (network) connector (FTP connection)


The following shows an example of an FTP (File Transfer Protocol) connection.

Note

To use PDZ-1 requires the PDW-HR1 IP address and other network-related settings to be made beforehand.


For details of the network-related settings, see “To change network settings” (page 144).

Connecting this unit directly to a laptop computer

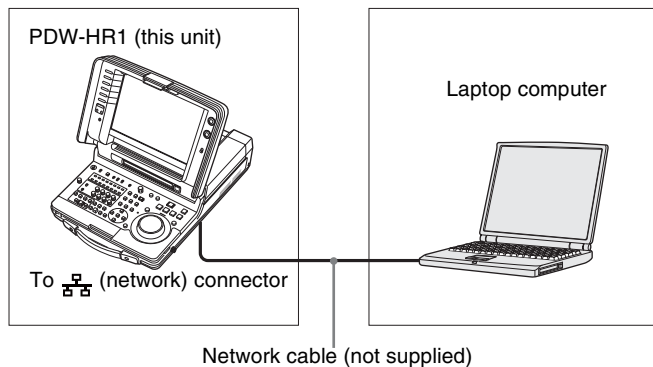

Settings on this unit
Remote control switch: NET (see page 18)
Setup menu item 257 NETWORK ENABLE: net

Connecting three PDW-HR1 units to a laptop computer via a LAN

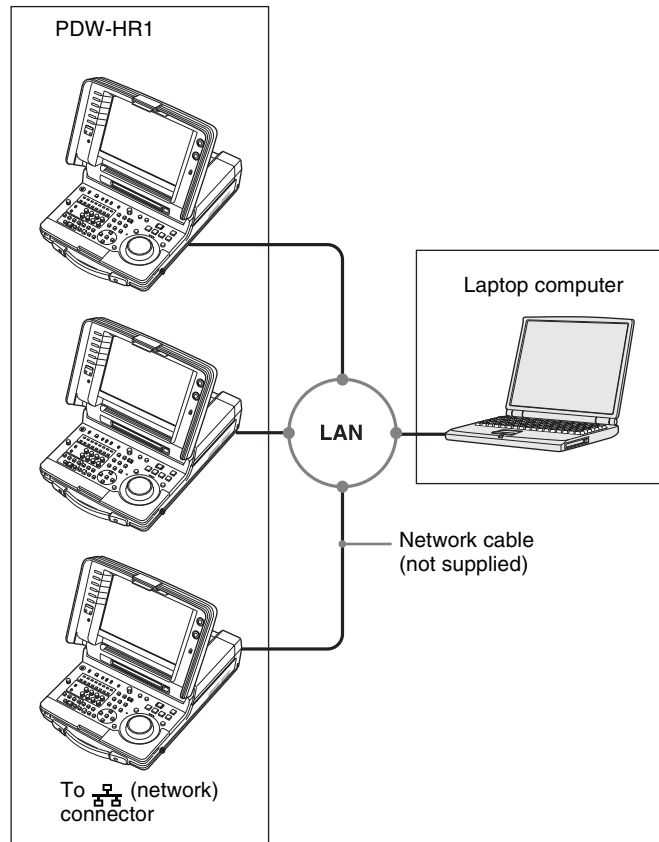

Settings on all PDW-HR1
Remote control switch: NET (see page 18)
Setup menu item 257 NETWORK ENABLE: net

Using the (i.LINK) S400 FAM connector (FAM connection)


The following shows an example of a FAM (file access mode) connection.

Note

The PDZ-1 Proxy Browsing Software must be installed in advance. The required FAM driver is also installed when you install the PDZ-1 software.

See “Using PDZ-1 Proxy Browsing Software” (page 162) for more information about installing the PDZ-1 software.

Some limitations apply to FAM connections. For details, see “File Operations in File Access Mode (for Windows)” (page 106).

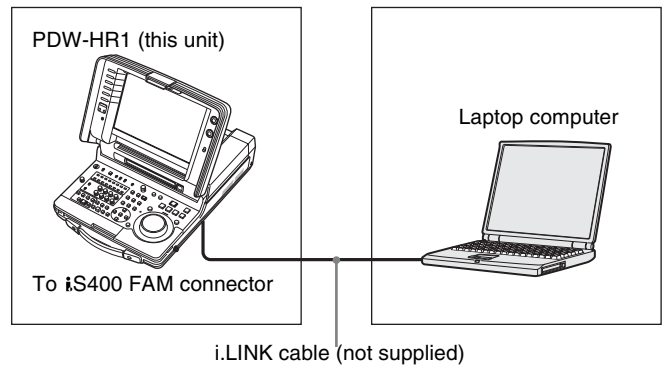

Use of a shielded cable is recommended.

Connections for cut editing

The following figure shows a cut editing system with this unit as the player.


When making the connections, also refer to the manuals provided with the equipment to be connected.

See page 41 for more information about editing control unit settings.

When using an editing control unit

Using the BVE-700/700A

The following figure shows a cut editing system comprising this unit as the player, an HDW-M2000/M2000P unit as the recorder, and a BVE-700/700A as the editing control unit.

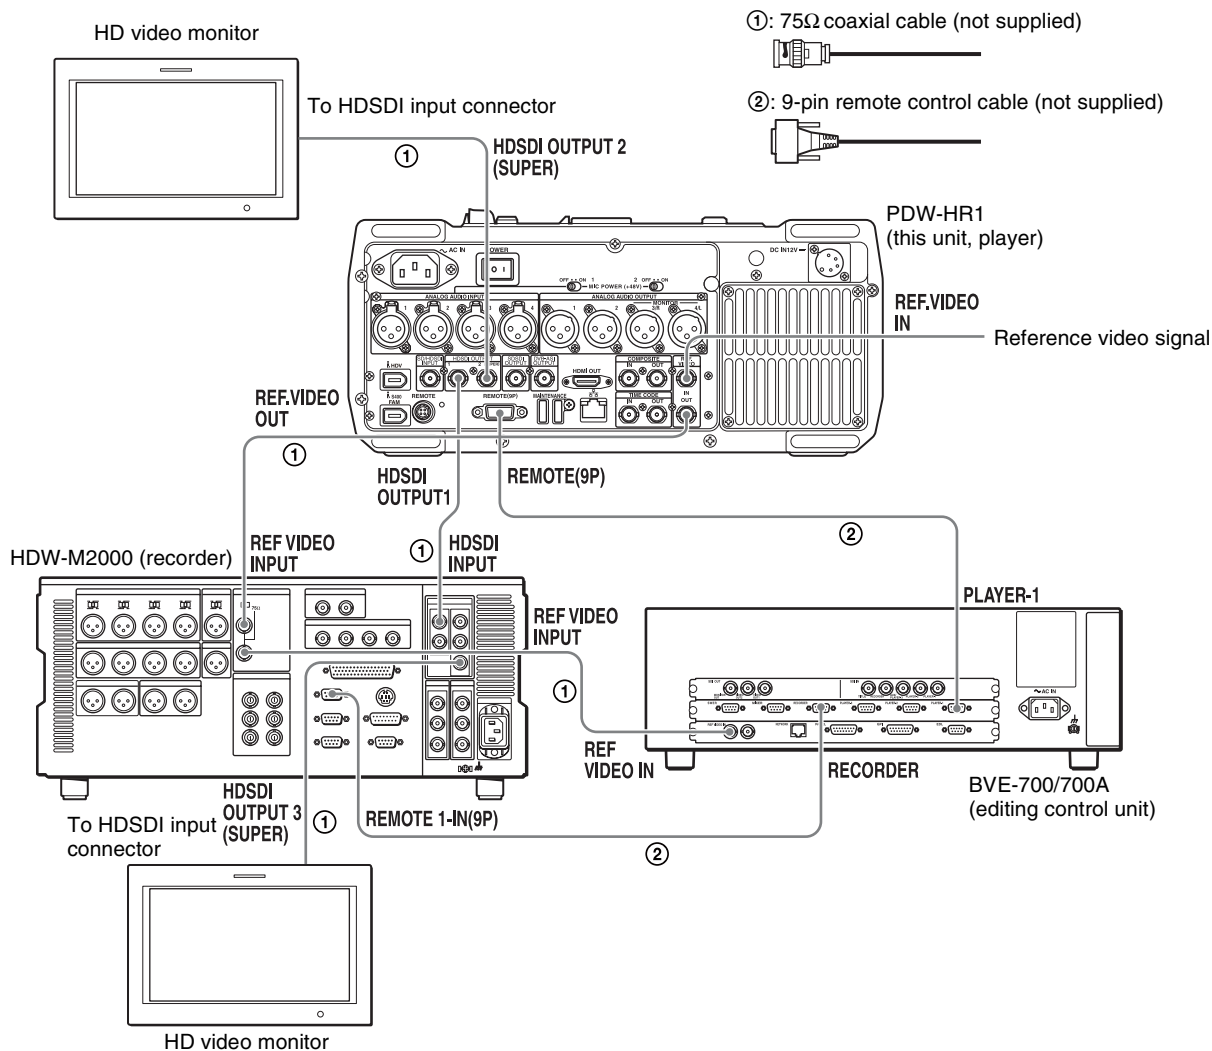

HDW-M2000 (recorder) settings	BVE-700/700A (editing control unit) setting	Settings on this unit
REMOTE 1 (9P) button: Lit	SYNCHRONIZE menu: OFF	Remote control switch: REMOTE (see page 18)
REF.VIDEO INPUT connector 75 Ω termination switch: OFF		Setup menu item 214 REMOTE INTERFACE: 9PIN
Audio selection function switching button INPUT button: HDSDI		
Function menu HOME >F1 (VID. IN): SDI		
Function menu page 1 >F1 (TCG): INT		
Function menu page 1 >F2 (PR/RGN): PRESET		
Function menu page 1 >F3 (RUN): FREE		

Editing Control Unit Settings


When connecting an editing control unit (BVE-700/700A/2000/9100) to use with this unit, set VTR constants as follows.

System frequency	VTR CONSTANT															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
59.94i/ 59.94P/ 29.97P	A0	9A	00	96	--	--	03	80	0A	07	FE	00	80	5A	FF	5A
50i/50P/25P	A1	9A	00	7D	--	--	03	80	0A	07	FE	00	80	4C	FF	4B
23.98P	A2	9A	00	78	--	--	03	80	0A	07	FE	00	80	48	FF	48

Using the RM-280

The following figure shows a cut editing system comprising this unit as the player, an HDW-M2000/

M2000P unit as the recorder, and an RM-280 as the editing controller.

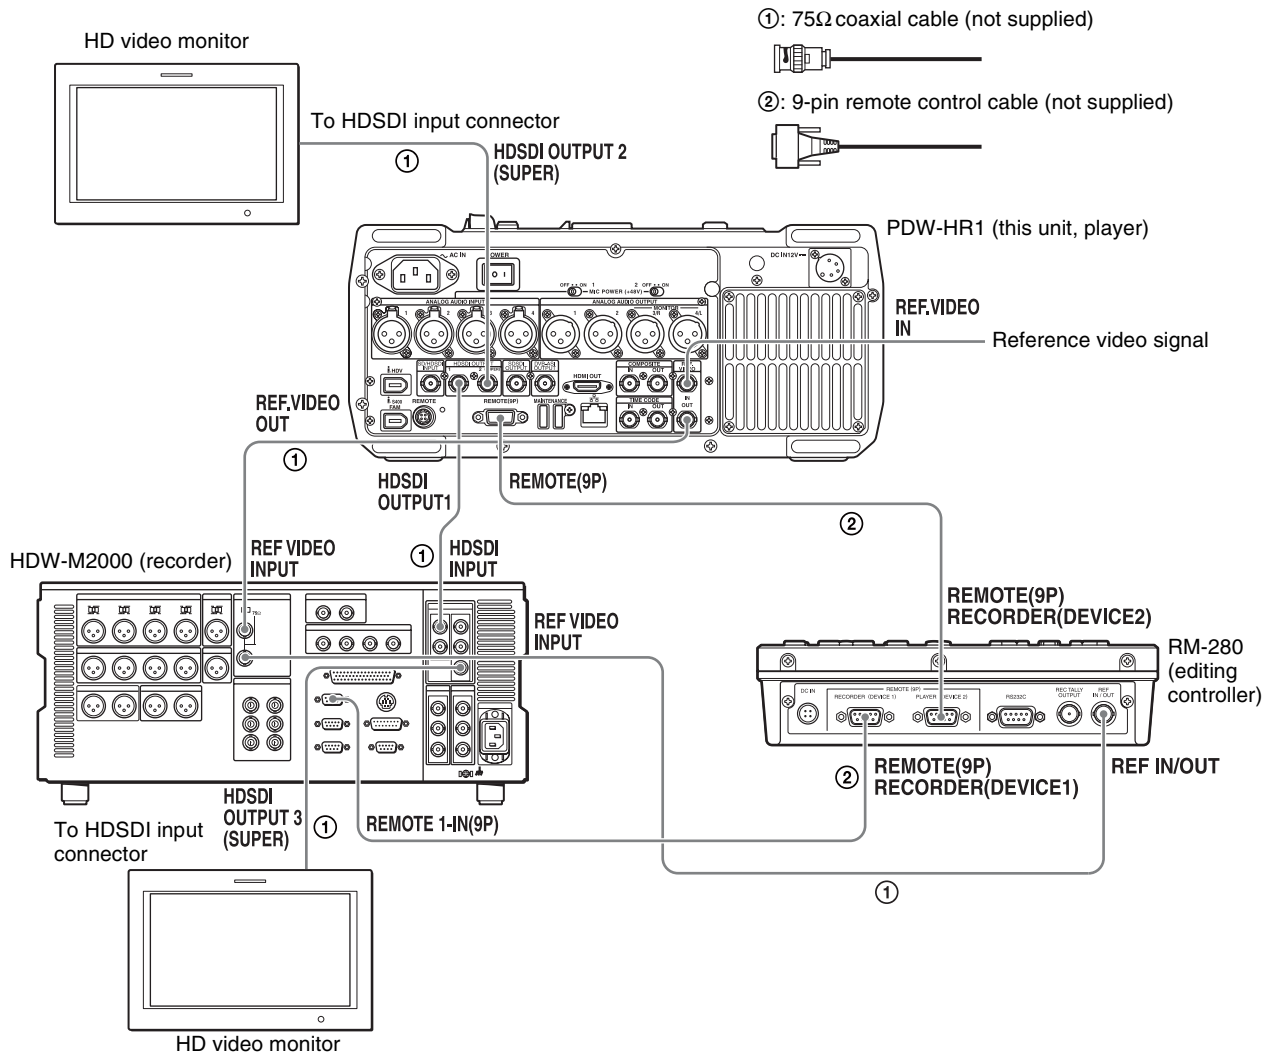


HDW-M2000 (recorder) settings	RM-280 (editing controller) settings	Settings on this unit
REMOTE 1 (9P) button: Lit	EDITOR/REMOTE CONTROL selector switch: EDITOR	Remote control switch: REMOTE (see page 18)

HDW-M2000 (recorder) settings	RM-280 (editing controller) settings	Settings on this unit
REF.VIDEO INPUT connector 75 Ω termination switch: OFF	Setup menu 01 PREROLL: 5s	Setup menu item 214 REMOTE INTERFACE: 9PIN
Audio selection function switching button INPUT button: HDSDI	Setup menu 05 SYNC SEL: ON	
Function menu HOME >F1 (VID. IN): SDI	Setup menu 06 SYNC VTR: RECORDER	
Function menu page 1 >F1 (TCG): INT	Setup menu 09 EDIT DLY: AUTO	
Function menu page 1 >F2 (PR/RGN): PRESET	Setup menu 10 R ST DLY: AUTO	
Function menu page 1 >F3 (RUN): FREE	Setup menu 11 P ST DLY: AUTO	

Using in an edit list editing system

The following figure shows an edit list editing system comprising this unit as the recorder, and an HDW-M2000/M2000P unit as the player.

See page 90 for more information about edit list editing.

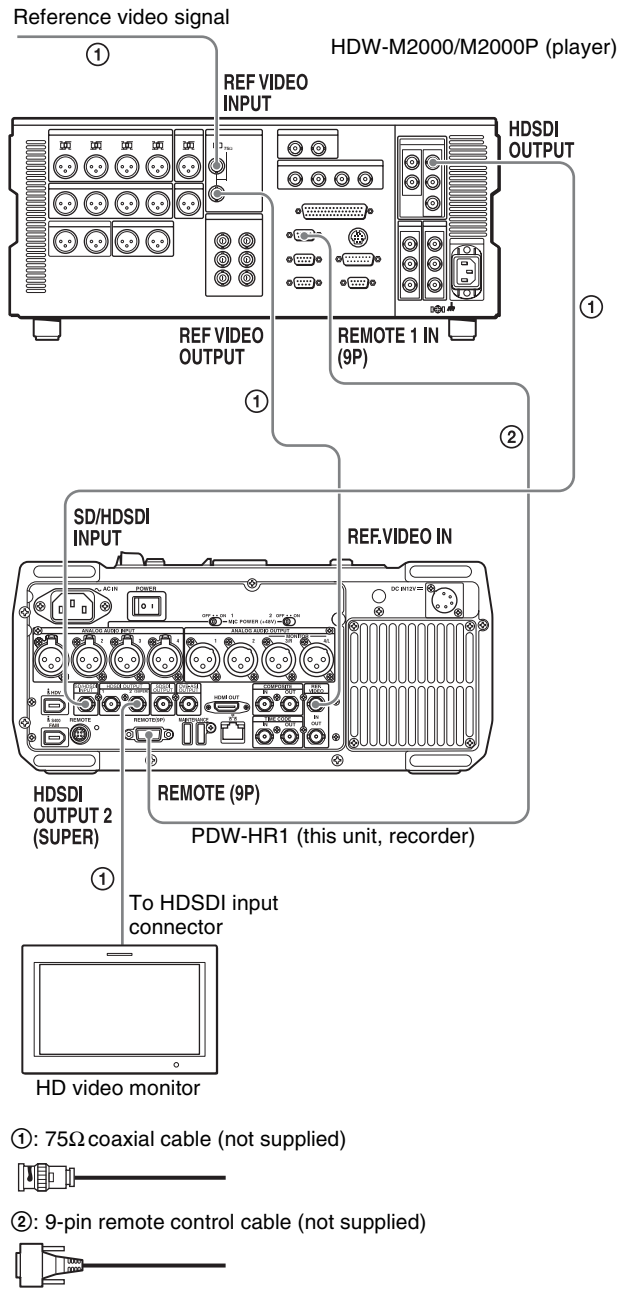


HDW-M2000 (recorder) setting	Settings on this unit
REMOTE 1 (9P) button: Lit	Remote control switch: REMOTE (see page 18)
	Setup menu item 214 REMOTE INTERFACE: 9PIN

For details of HDW-M2000/M2000P settings, refer to the HDW-M2000/M2000P Operation Manual.

Connections for pool coverage

The following figure shows an example of connections for pool coverage, with the PDW-700 Professional Disc Camcorder connected.

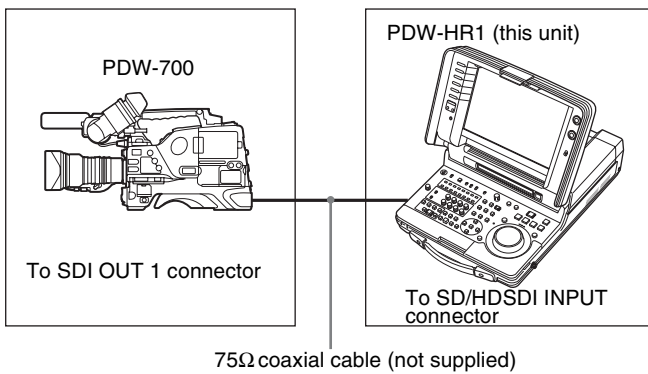

PDW-700 (camcorder) setting	Settings on this unit
HDSDI REMOTE I/F on page CAM CONFIG 1 of the MAINTENANCE menu: other than OFF	Remote control switch: REMOTE (see page 18)
	Setup menu item 214 REMOTE INTERFACE: SDI

Synchronization Reference Signals

The synchronization reference signal generator of this unit synchronizes to a reference signal input to the REF. VIDEO IN connector or to a video input signal. External synchronization is as follows, depending on the setting of

OUT REF on page P1 VIDEO of the function menu, and on the type of the selected input signal. Video output signals are always synchronized to the internal synchronization signal.

Input to SD/HDSI INPUT connector ^{a)}	Input to REF. VIDEO IN connector	Setting of OUT REF on page P1 VIDEO ^{b)}	
		REF	INPUT
Yes	Yes	Synchronize to the signal input to the REF. VIDEO IN connector	Synchronize to the signal input to the SD/HDSI INPUT connector
Yes	No	Synchronize to the signal input to the SD/HDSI INPUT connector	
No	Yes	Synchronize to the signal input to the REF. VIDEO IN connector	
No	No	No external synchronization is made	

a) When V INPUT on page P1 VIDEO of the function menu is set to "SG" and OUT REF is set to "INPUT", synchronize to the internal reference signal of this unit.

b) During FAM or FTP connections, always synchronize to the internal synchronization reference signal, regardless of the setting of OUT REF.


Setting System Frequency

This unit can record and play back video at the system frequencies of 59.94i, 50i, 29.97P, 25P, and 23.98P (1080) or 59.94P and 50P (720).


Selecting the system frequency

- 1 Set setup menu item 013 SYSTEM FREQUENCY SELECT MENU to “on” and press the PUSH SET knob.

The system frequency selection screen appears.

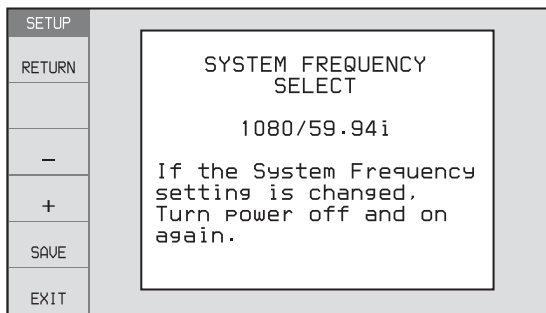

- 2 Turn the PUSH SET knob to select the system frequency to be used.

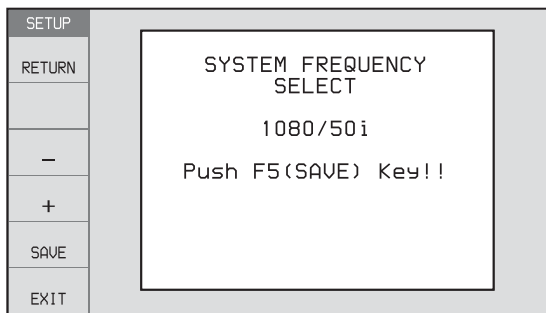

- 3 Press the PUSH SET knob, the SAVE function button (F5), or the save button.

The message “Turn off/on POWER!!” appears.

- 4 Move the on/standby (I/O) switch to the O position to power the unit off, and then power it on again.

Setting Timecode

There are the following four ways of recording timecode:

Internal Preset mode: This records the output of the internal timecode generator, set beforehand to an initial value. The following run modes can be selected.

- Free Run: Timecode advances continually.
- Rec Run: Timecode advances only during recording.

Internal Regen mode: This records the output of the internal timecode generator, initialized to timecode following continuously upon the timecode of the last frame of the last clip on the disc.


External Regen mode: This records the output of the internal timecode generator, synchronized to an external timecode generator. As the external input, the timecode input to any of the following connectors can be selected.

- TIME CODE IN connector: LTC
- SD/HDSDI INPUT connector: VITC and LTC
- i.LINK) HDV TS connector: TC

External Preset mode: This directly records the input of an external timecode generator. As the external input, the timecode input to any of the TIME CODE IN connector can be selected.

To record timecode after setting an initial value (Internal Preset)

Proceed as follows with the function menu. To set the timecode, set the INT/EXT/SDI switch to INT and the PRESET/REGEN switch to PRESET.

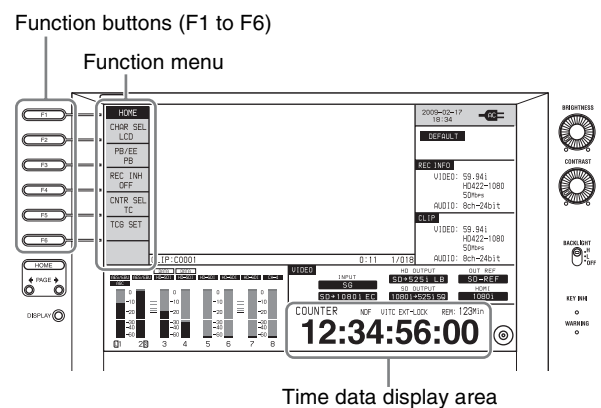


Setting an initial timecode value

- 1 Press the CNTR SEL function button on the HOME page of the function menu, and select TC.

- 2 Press the TCG SET function button (F5).

The first digit of the time data display starts flashing.

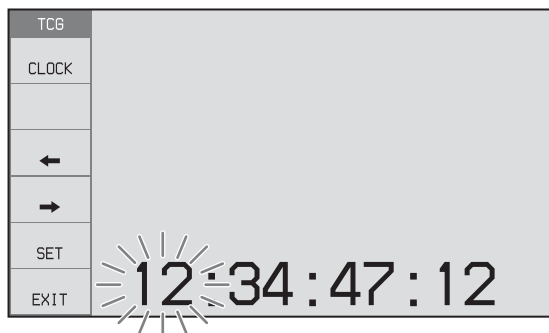

- 3** Press the ← or → function button (F3 or F4) to select a digit to be set.

The selected digit starts flashing.

- 4** Use the PUSH SET knob to set the value for the selected digit.

To set the next-most significant digit (10s place)

Turn the PUSH SET knob while holding down the SHIFT button.

Repeat steps **3** and **4** to set all digits that should be set.

To set to 00:00:00:00

Press the RESET button.

- 5** Press the SET function button (F5) or the SAVE button.

If the F-RUN/R-RUN switch is set to F-RUN, the timecode starts running.

To cancel a setting

Press the EXIT function button (F6). Any new settings to that point are canceled, and the setting operation is terminated.

Setting the timecode to the current time

- 1** Set the F-RUN/R-RUN switch to F-RUN and DF/NDF on page P3 TC to DF (in 59.94i/59.94P/29.97P mode only).
- 2** Perform steps **1** to **4** of “Setting an initial timecode value” to set the timecode to a time slightly ahead of the current time.
- 3** Press the SET function button (F5) or the SAVE button at the instant when the current time matches the displayed timecode.

Setting user bits

You can record up to 8 hexadecimal digits of information (date, time, event number, etc.) on the timecode track.

Select UB by pressing the CNTR SEL function button (F4) in step **1** of “Setting an initial timecode value” and carry out steps **2** to **5**. Settings are made in hexadecimal (0-9, A-F).

You can record ID codes in user bits.

To record timecode that follows sequentially upon the last recorded timecode (Internal Regen)

You can record timecode so that it is continuous from one clip to the next on the disc.

Set the INT/EXT/SDI switch to INT and the PRESET/REGEN switch to REGEN TC or REGEN VITC. When this setting is in force, the unit reads the timecode of the last frame of the last recorded clip on the disc before starting to record, and internally generates timecode that follows upon the recorded timecode.

The frame count mode (for system frequency 59.94i/59.94P/29.97P only) is set to the same mode as the last recorded timecode on the disc (drop-frame or non-drop-frame).

To record with the internal timecode generator synchronized to external timecode (External Regen)

Use this method to synchronize the timecode generators of a number of recorders, to record the playback timecode of external VTRs, or to record while maintaining synchronization between the source video and timecode. Use either of the following procedures according to the type of external timecode.

Synchronizing with timecode input to the TIME CODE IN connector

- 1** Connect the timecode output of an external device to the TIME CODE IN connector, and input a reference video signal to the REF. VIDEO IN connector.
- 2** Set the INT/EXT/SDI switch to EXT and the PRESET/REGEN switch to REGEN TC.

Synchronizing with embedded LTC input to the SD/HDSDI INPUT connector

- 1** Input an HDSDI signal containing embedded LTC to the SD/HDSDI INPUT connector, and input a reference video signal to the REF. VIDEO IN connector.
- 2** Set the INT/EXT/SDI switch to SDI and the PRESET/REGEN switch to REGEN TC.

Executing either of these procedures starts the internal timecode generator running in synchronization with the external timecode generator.

Once the internal timecode generator is synchronized with the external timecode generator, the internal timecode generator continues to run even if the external timecode generator connection is removed.

The timecode advance mode is set automatically to Free Run. The frame count mode (for system frequency 59.94i/59.94P/29.97P only) is set to the same mode as the external timecode signal (drop-frame or non-drop-frame).

To check the synchronization to the external signal

Press the STOP button to stop this unit, then press the REC button.

Check that the timecode value shown in the time data display coincides with the external timecode value.

To record external timecode directly (External Preset)

When you use this method, the internal timecode generator advances without being affected by the external timecode.

To directly record timecode input to the TIME CODE IN connector

Input the timecode output of an external device to the TIME CODE IN connector, and then set the INT/EXT/SDI switch to EXT and the PRESET/REGEN switch to PRESET.

Superimposed Text Information


The video signal output from the COMPOSITE OUT connector, SDDS I OUTPUT connector, or the HDSDI OUTPUT 2 (SUPER) connector contains superimposed text information, including timecode, menu settings, and alarm messages.

Adjusting the text display

You can adjust the position, size and type of the superimposed text using setup menu items 002, 003, 005, 009, 011, and 012.

For details, see “Items in the basic menu” (page 117).

Information displayed

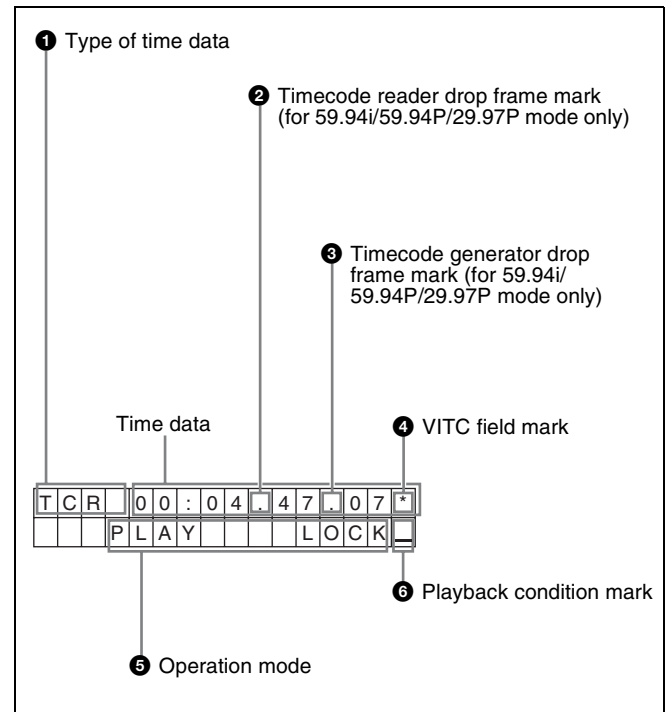

Note

The display shown above corresponds to the factory default settings of the unit. You can change the type of information to be displayed in the lower line of the display by changing the setting of setup menu item 005 DISPLAY INFORMATION SELECT.

For details, see “Items in the basic menu” (page 117).

1 Type of time data

Display	Meaning
CNT	Counter data
TCR	TC reader timecode
UBR	TC reader user bits data
TCR.	VITC reader timecode
UBR.	VITC reader user bits data
TCG	TC generator timecode
UBG	TC generator user bits data
IN	In point time data
OUT	Out point time data
DUR	Duration between In point and Out point

Note

If the time data or user bits data cannot be read correctly, they will be displayed with an asterisk. For example, “T*R”, “U*R”, “T*R.” or “U*R.”.

2 Timecode reader drop-frame mark (for 59.94i/59.94P/29.97P mode only)

“.”: Indicates drop-frame mode.

“:”: Indicates non-drop-frame mode.

3 Timecode generator drop-frame mark (for 59.94i/59.94P/29.97P mode only)

“.”: Indicates drop-frame mode (factory default setting).

“:”: Indicates non-drop-frame mode.

4 VITC field mark


“ ” (blank): Fields 1 and 3 (for 59.94i/59.94P/29.97P mode) or fields 1, 3, 5 and 7 (for 50i/50P/25P mode)

“*”: Fields 2 and 4 (for 59.94i/59.94P/29.97P mode) or fields 2, 4, 6 and 8 (for 50i/50P/25P mode)

5 Operation mode

The field is divided into two blocks as shown below.

- Block A displays the operation mode.
- Block B displays the servo lock status or playback speed.

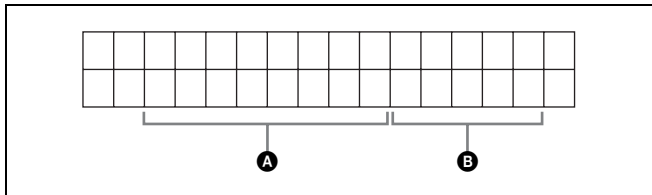

Display		Operation mode
Block A	Block B	
DISC OUT		Disc is not loaded.
LOADING		Disc is being loaded.
UNLOADING		Disc is being unloaded.
STANDBY OFF		Standby off mode
STOP		Stop mode

Display		Operation mode
Block A	Block B	
NEXT xxx		Cuing up to the first frame of the next clip.
PREV xxx		Cuing up to the first frame of the current clip.
F.FWD		Fast forward search
F.REV		Fast reverse search
PLAY		Playback mode (servo unlocked)
PLAY	LOCK	Playback mode (servo locked)
REC		Record mode (servo unlocked)
REC	LOCK	Record mode (servo locked)
JOG	STILL	A still picture in jog mode
JOG	FWD	Jog mode in forward direction
JOG	REV	Jog mode in reverse direction
SHUTTLE	STILL	A still picture in shuttle mode
SHUTTLE	(Speed)	Shuttle mode
VAR	STILL	A still picture in variable mode
VAR	(Speed)	Variable speed mode
TOP 0001/xxxx		Cuing up to the first frame of the first clip.
END xxxx/xxxx		Cuing up to the last frame of the last clip.
PREROLL		Cuing up during thumbnail search

6 Playback condition mark

One of three channel condition marks is displayed when the ACCESS indicator is lit during any mode except recording.

Display	Name	Description
—	Green condition	There is no problem with the playback condition. This unit and the disc can be used just as they are. This corresponds to the “green” channel condition indicator of a VTR.
=	Yellow condition	The playback condition has deteriorated to some degree. There are no read errors, but you should take the action described in the next section. This corresponds to the “yellow” channel condition indicator of a VTR.
≡	Red condition	The playback condition has deteriorated. There are no read errors, ^{a)} but you should take the action described in the next section. This corresponds to the “red” channel condition indicator of a VTR.

a) Read errors will occur if the playback condition continues to deteriorate. If a read error occurs, a “Disc Error!” alarm appears in the time data display, the picture freezes, and audio is muted.

To display playback condition marks, set setup menu item 012 CONDITION DISPLAY ON VIDEO MONITOR to “ena”, and set setup menu item 005 DISPLAY INFORMATION SELECT to “T&sta”.

For details about operation, see “Basic menu operations” (page 121).

Playback condition displays

You can be alerted in advance to deteriorating playback conditions and to error correction rates which are approaching their limits.

Deteriorating playback may be due to the following causes.

- Scratches and dust on the disc surface
This includes fingerprints, dust from the air, tar from cigarette smoke, and so on.
Scratches and soiling which occur before recording are not a problem because they are registered in advance as defects, and recording avoids them. However, scratches and soiling which occur after recording can lead to deteriorating playback conditions.
- Aging of disc recording layers
Over several decades, the recording layers of optical discs can age and cause deteriorating playback conditions.
You can use this function to check archival discs and other discs which have been stored for extended periods, so that you can take action before the deterioration progresses further.
- Deteriorating laser diodes performance
The performance of the laser diodes used in optical heads can worsen with age, leading to deteriorating playback conditions.

For details, see “Digital hours meter” (page 149) about this setting.

Refer to the Maintenance Manual for an approximate guide to when it is time to replace optical heads.

To prevent playback conditions from deteriorating

Pay attention to the following points when handling discs.

- Do not open disc cartridges and touch discs directly with your hands.
- Do not store for long periods in locations which are dusty or exposed to air circulated by fans.
- Do not store for long periods under high temperatures or in locations exposed to direct sunlight.

If playback conditions have deteriorated

If a yellow or red playback condition mark appears, check the following points.

Whether the disc displays the same playback condition on other XDCAM devices: If so, the surface of the disc may be dirty or scratched, or the performance of

the recording layers on the disc may have worsened due to age. Do not use discs with these symptoms.

Whether every disc inserted into an XDCAM device displays the same playback conditions: If so, the performance of the laser diodes may have deteriorated. Check the total optical output time.


Basic Function Menu Operations

The function menu provides access to frequently used settings, such as input video signal selection and timecode settings.

Menu settings are stored in nonvolatile memory and are preserved even after the unit is powered off.

Function menu operations

The function menu appears on the color LCD of this unit. The following figure shows the buttons used in function menu operations.

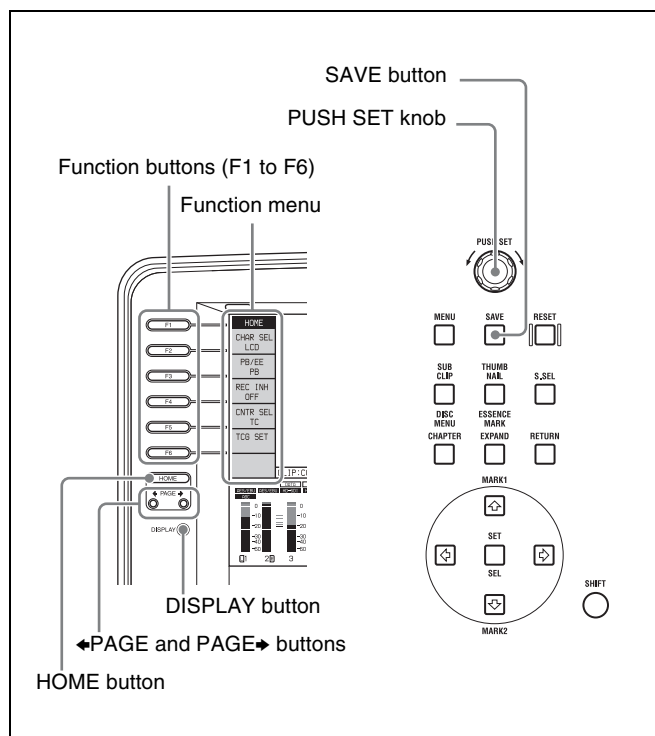

To display the function menu

The function menu is made up of the HOME page and pages P1 to P4, (P5)¹⁾, (HOME2)¹⁾.

If the function menu is not already visible, press the ◀PAGE, PAGE▶, or HOME button to display it. (The most recently accessed function menu page appears.)

1) If a menu item is assigned using maintenance menu item M38: F-KEY CONFIG

To display a different page

Each press of the ◀PAGE or PAGE▶ button displays the next function menu page in the order: HOME ↔ P1 ↔ P2 ↔ P3 ↔ P4 ↔ (P5)¹⁾ ↔ (HOME2)¹⁾ ↔ HOME...

1) If a menu item is assigned using maintenance menu item M38: F-KEY CONFIG

To clear the function menu from the screen

Press the DISPLAY button to switch to the video monitor display.

To change the setting of a function menu item

Use the function buttons.

To select the value of the setting item

Press the button to the left of each setting item to change the value of the item. Keep pressing the button until the value you want appears.

To set the value of the setting item

- Press the button to the left of each setting item so that the setting value flashes to enable adjustment of the value and then turn the PUSH SET knob to increase or decrease the value.
- Turning the PUSH SET knob while holding down the SHIFT button increases the increment of adjustment.
- Pressing the button to the left of each setting item while the setting value is flashing causes the value to stop flashing and completes the adjustment.

Function menu settings

The following tables list the setting items on each page and describe their setting values. Underlined values are the factory defaults.

HOME page

Item	Setting
F1: CHAR SEL	Turns the display of character information on the color LCD and on an external monitor on and off. <u>ON</u> : Character information on <u>OFF</u> : Character information off <u>LCD</u> : Character information on for the color LCD only
F2: PB/EE	Selects the type of video and audio signals to output during fast forward, fast reverse, stop, and standby. <u>PB</u> : Playback signal <u>EE</u> : E-E signal
F3: REC INH	Specifies whether to inhibit recording to the disc. <u>OFF</u> : Do not inhibit recording. <u>ON</u> : Inhibit recording to the disc.
F4: CNTR SEL	Selects the type of time data to display in the time data display area. <u>TC</u> : Timecode <u>UB</u> : User bits <u>COUNTER</u> : Elapsed recording or playback time

Item	Setting
F5: TCG SET	<ul style="list-style-type: none"> When CNTR SEL is set to “TC”, displays a screen where you can set the initial value of the timecode generated by the internal timecode generator ^{a)} (see page 45). When CNTR SEL is set to “UB”, displays a screen where you can set timecode user bits ^{a)} (see page 46).
F6:	(Unassigned function button)

a) This is displayed only when the INT/EXT/SDI switch is set to “INT”, and the PRESET/REGEN switch is set to “PRESET”.

P1 VIDEO page

Item	Setting
F1: V INPUT	Selects the video input signal. HSDSI: HSDSI signal SDSDI: SDSDI signal CMPST: Composite signal i.LINK: i.LINK signal (when the PDBK-202 option board is installed) SG: Test signal from internal signal generator ^{a)}
F2:	(Unassigned function button)
F3:	(Unassigned function button)
F4: OUT REF	Selects the reference signal for the output signals of this unit. REF: Use the signal input to the REF.VIDEO INPUT connector as the output reference signal. INPUT: Use the input video signal as the output reference signal.
F5: SYNC	Sets the sync phase of HD output signals. While the setting value is flashing, turn the PUSH SET knob to adjust the sync phase of output signals with respect to the input reference signal, over the range $\pm 15 \mu\text{s}$. (The display shows -128 to $+127$.)
F6: FINE	Makes fine adjustment to the sync phase of HD output signals. While the setting value is flashing, turn the PUSH SET knob to adjust the sync phase of output signals with respect to the input reference signal, over the range ± 200 ns. (The display shows 0 to 1023.)

a) When V INPUT is set to “SG”, “SDI” cannot be selected for AU INPUT on the P2 AUDIO page.

P2 AUDIO page

Item	Setting
F1: AU INPUT	Selects the audio input signal to assign to audio channels 1 to 8. SDI: Audio signal embedded into SDI signal ANALOG1: Analog 1 audio signal SG: Test signal from internal signal generator i.LINK: i.LINK signal (when the PDBK-202 option board is installed)
Sub-item	
F1: A1 INPUT (A5 INPUT)	Input signal of audio channel 1 (5)
F2: A2 INPUT (A6 INPUT)	Input signal of audio channel 2 (6)
F3: A3 INPUT (A7 INPUT)	Input signal of audio channel 3 (7)
F4: A4 INPUT (A8 INPUT)	Input signal of audio channel 4 (8)
F5: A5-A8 (A1-A4)	Switches to the sub menu for setting channels 5 to 8 (1 to 4).
F6: EXIT	Exit the audio input signal selection sub-menu.
F2: REC VOL	Sets the recording audio level of audio channels 5 to 8. ^{a)} The recording audio level can be adjusted within the range from -200 to $+200$ ($-\infty$ to $+12$ dB) by turning the PUSH SET knob.
Sub-item	
F1: A5 VOL	Recording audio level of audio channel 5
F2: A6 VOL	Recording audio level of audio channel 6
F3: A7 VOL	Recording audio level of audio channel 7
F4: A8 VOL	Recording audio level of audio channel 8
F5:	–
F6: EXIT	Exit the recording audio level setting sub-menu.

Item	Setting
F3: PB VOL	Sets the playback audio level of audio channels 5 to 8. ^{a)} The playback audio level can be adjusted within the range from -200 to +200 (-∞ to +12 dB) by turning the PUSH SET knob.
Sub-item	
F1: A5 VOL	Playback audio level of audio channel 5
F2: A6 VOL	Playback audio level of audio channel 6
F3: A7 VOL	Playback audio level of audio channel 7
F4: A8 VOL	Playback audio level of audio channel 8
F5:	–
F6: EXIT	Exit the playback audio level setting sub-menu.
F4:	(Unassigned function button)
F5: SPEAKER	Enables or disables output from this unit's speaker. OFF: Do not output ON: Output
F6: AU METER	Selects the display mode of the audio level meters. FULL: Display the range from -60 dB to 0 dB. FINE: Display a magnified section with 0.25 dB step marks.

- a) To enable this setting, the following settings are also required, in the same way as for volume operations for channels 1 to 4.
- On the control panel, set the VARIABLE/PRESET switch for playback to "VARIABLE".
 - Set setup menu item 131 AUDIO VOLUME to "EACH".

P3 TC page

Item	Setting
F1: TC UB	When the PRESET/REGEN switch is set to "PRESET", selects whether the user bits of the timecode generator are synchronized to the internal clock. FIX: Do not synchronize user bits. TIME: Synchronize user bits to the internal clock.
F2:	(Unassigned function button)
F3:	(Unassigned function button)
F4: DF/NDF	Selects the drop-frame mode for the internal timecode generator and the counter in 59.94i/59.94P/29.97P mode. DF: Drop-frame mode NDF: Non-drop-frame mode
F5:	(Unassigned function button)
F6: TCR	Selects the type of timecode to display in the time data display area. TC: Display TC. VITC: Display VITC.

P4 OTHER page

Item	Setting
F1: ALRM LOG	Displays an alarm log screen.
F2: ERR LOG	Displays an error log screen.
F3: CLIP FLG	Sets a clip flag for the clip being recorded or played back using the function button. If a clip flag is already set for the clip, "Marked" is displayed in the function menu item corresponding to one of the F1 to F3 buttons depending on the type of flag that has been set. <i>A clip flag can also be set or deleted using the GUI screen. See page 76 for details.</i>
Sub-item	
F1: OK	Set an OK flag.
F2: NG	Set an NG flag.
F3: KEEP	Set a KEEP flag.
F4:	–
F5: DELETE	Delete the clip flag.
F6: EXIT	Exit the clip flag sub-menu.
F4: LIGHT	Turns the control panel illumination LED on and off. OFF: Off ON: On
F5:	(Unassigned function button)
F6:	(Unassigned function button)

Handling Discs

Discs used for recording and playback

This unit can record and play back the following Professional Disc ¹⁾ formats.

- PFD23A (capacity 23.3 GB)
- PFD50DLA (capacity 50.0 GB)

1) Professional Disc is a trademark of Sony Corporation.

Notes

- It is not possible to use the following discs for recording or playback:
 - Blu-ray Disc
 - Professional Disc for Data
- PFD50DLA discs can be used only by XDCAM devices with the DL mark (see the following illustration). They cannot be used by XDCAM devices without this mark.



Notes on handling

Handling

The Professional Disc is housed in a cartridge, and is designed to allow handling free of risk from dust or fingerprints. However, if the cartridge is subjected to a severe shock, for example by dropping it, this can result in damage or scratching of the disc. If the disc is scratched, it may be impossible to record video/audio, or to play back the content recorded on the disc. The discs should be handled and stored carefully.

- Do not touch the surface of the disc itself within the cartridge.
- Deliberately opening the shutter may cause damage.
- Do not disassemble the cartridge.
- The supplied adhesive labels are recommended for indexing discs. Apply the label in the correct position.

Storage

- Do not store discs where they may be subjected to direct sunlight, or in other places where the temperature or humidity is high.
- Do not leave cartridges where dust may get inside.
- Store cartridges in their cases.


Care of the discs

- Remove dust and dirt on the outside of a cartridge using a soft dry cloth.


- If condensation forms, allow ample time to dry before use.

Write-protecting discs

To protect the content recorded on the disc from accidental erasure, move the Write Inhibit tab on the lower surface of the disc in the direction of the arrow, as shown in the following figure.

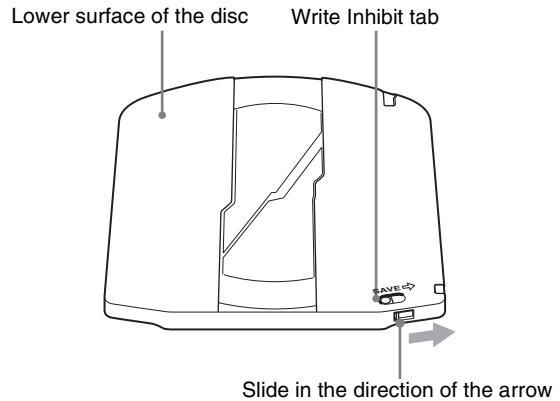


Write Inhibit tab settings

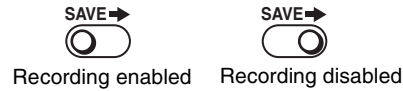 

You can also write protect individual clips. For details, see "Locking (write-protecting) clips" (page 76).

Loading and unloading a disc

When the indicator of the on/standby (I/O) switch is lit green, you can load and unload a disc as shown in the following figure.

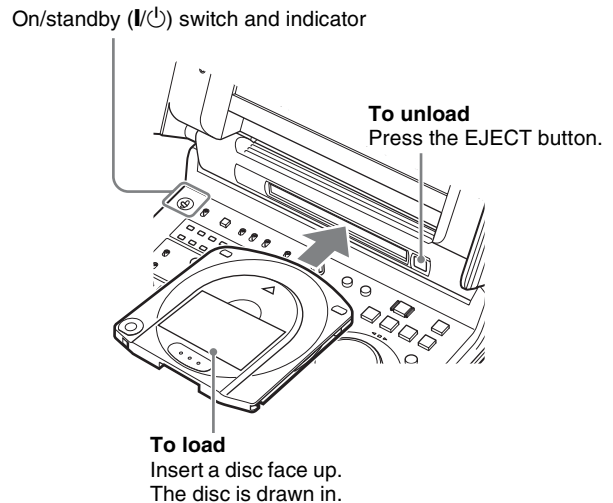

When the EJECT button is pressed during recording, recording stops and the disc is ejected. If you do not want to eject the disc and stop recording when the EJECT button is pressed during recording, set setup menu item 145 MODE KEY ENABLE DURING RECORDING to “stop”.

Formatting a disc

Unused discs are formatted automatically when they are loaded into this unit.

To format a recorded disc, use the GUI screen.

For details, see “Formatting discs” (page 87).

Recording

This section describes video and audio recording on the unit.

See page 50 “Basic Function Menu Operations” in Chapter 3 for more information.

See page 116 “Menus” in Chapter 8 for more information about setup menu operations.

Note

It is not possible to combine material recorded in different system frequencies and audio recording formats on a single disc. If you attempt to record material in a system frequency or audio recording format that differs from that of existing recorded material on the disc, REC INHI indicator lights and recording is inhibited.

Make the following settings and adjustments before starting to record.

Video input signal selection: Select with V INPUT on page P1 VIDEO of the function menu.

Audio input signal selection: Select with A1 INPUT to A8 INPUT of sub-item AU INPUT on page P2 AUDIO of the function menu.

Timecode and user bits settings: See “Setting Timecode” (page 45).

Selection of time data to display: Select with CNTR SEL on HOME page of the function menu.

Selection of audio channels to monitor: Select with AUDIO MONITOR SELECT buttons.

Volume adjustment of the monitor audio: Adjust with the LEVEL knob.

Remote/local setting: Set the remote control switch. If you set it to REMOTE, also set setup menu item 214 REMOTE INTERFACE (“RM-” and the connector used appear on the system information of the display) (see page 126).

SD up convert function

You can input SD signals to the SD/HDSDI INPUT connector and record them as HD signals.

User data recording


You can record user data (files other than XDCAM AV files) on Professional Discs as PC data via the i.LINK or FTP interface.

This allows Professional Discs to be used as data recording media, with a data storage capacity of 46.4 GB (when dual-layer PFD50DLA discs are used).

Carrying out recording

One recording segment (from the start to the end of recording) is called a “clip”.

See “Clips” (page 78) for more information about clips.

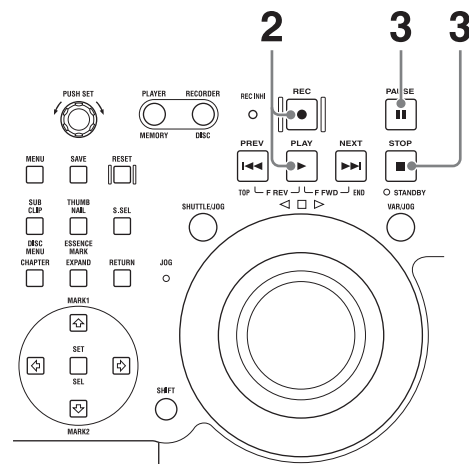

1 Insert a disc (see page 53).

2 Hold down the REC button, and press the PLAY button.

Recording starts.

- 3** To stop recording, press the STOP button.
To pause recording, press the PAUSE button.

During pause, press the PAUSE button again to resume recording.

If the disc becomes full

Recording stops and the message “Disc Full!” appears on the monitor.

Notes

- The shortest clip that can be recorded is 2 seconds long. Even if recording start and stop operations are performed within 2 seconds, a 2-second clip is recorded.
- The maximum number of clips that can be recorded is 300. If the loaded disc already contains 300 clips, recording operation is not possible. (The message “MAX # Clips” appears in the time data display area.)
- This unit can record video input signals that are not synchronized to a reference signal. However, in that case, video breakup and audio noise may occur in E-E playback.
- During recording, do not turn off the POWER switch on the connector panel or disconnect the power cord. This could cause the clip being recorded to be lost.

For details, see “Handling of discs when recording does not end normally (salvage functions)” (page 57).

To adjust the audio recording levels

When carrying out audio recording at a reference level

Set the VARIABLE/PRESET switch for recording to PRESET.

The audio signals will be recorded at a preset reference level.

You can change the reference level and the input levels with maintenance menu item M37: AUDIO CONFIG.

See page 143 for more information about how to make maintenance menu settings.

Manually adjusting the audio recording levels

Set the VARIABLE/PRESET switch for recording to VARIABLE and adjust the ALL/CH-1 and CH-2 to CH-4 knobs so that the audio level indications on the audio level meters do not exceed 0 dB for a maximum volume. Carry out the adjustment in E-E mode.

See setup menu item 108 AUTO EE SELECT (page 124) for more information about the signal output settings in E-E mode.

To set shot marks

A Shot Mark1 essence mark or Shot Mark2 essence mark is set if you hold down the ▲/MARK1 or ▼/MARK2 button and press the PUSH SET knob or the SET button during recording.

If the unit is set up to display superimposed text information (see page 47), “SHOTMARK1” or “SHOTMARK2” appears every time you set an essence mark.

When Shot Mark1 or Shot Mark2 essence marks are set, you can search for the shot marks by displaying thumbnails of the frames at those positions (see page 72). You can also use shot mark positions as edit points during scene selection operations (see page 78).

You can also set shot marks during playback. See page 60 for the procedure.

To set a clip flag

You can set one of the three types of flag (OK, NG or KEEP) for the clip while it is being recorded by viewing its video image and using the function menu (see page 52).

You can also set a clip flag during playback. See page 60 for details.

You can also set a clip flag on the GUI screen. See page 76 for details.

Recording with the HDSDI remote control function

This section explains the settings required for recording in HDSDI remote control mode, and how the unit operates in this mode.

Note

The unit (camcorder) that controls this unit must also support HDSDI remote output.

Settings

Set setup menu item 214 REMOTE INTERFACE to “SDI”, and set the remote control switch on the control panel to “REMOTE”.

This unit enters HDSDI remote control mode, in which it is controlled by command packets received via the SD/HDSDI INPUT connector.

Note

The following limitations apply in HDSDI remote control mode.

- Commands received via the REMOTE(9P) connector are ignored.

- Recording and playback operations on the control panel are disabled, except for the EJECT button.

Monitor display in HDSDI remote control mode

“RM-SDI” appears in the remote interface display area (see page 27) of the monitor. This display lights if command packets are embedded into HDSDI signals, and flashes if they are not. However, the “RM-SDI” continues to flash until the time the controlling camcorder is powered on and the time that the REC button is pressed on the camcorder.

Recording operation

When a recordable disc is inserted, recording (or stop) is executed according to the REC (or STOP) command embedded into the HDSDI signals.

Recording stops automatically when the end of the disc is reached.

When HDSDI signals are interrupted during recording

Recording stops if HDSDI signals are interrupted during recording, for example because the HDSDI cable is disconnected or the controlling camcorder is powered off. When HDSDI signal input is restored, the unit resumes operation according to the embedded REC or STOP command.

Exchanging discs

Even during recording, it is possible to eject discs by pressing the EJECT button. After a disc is exchanged, the unit resumes operation according to the embedded REC or STOP command.

Note

This unit begins recording operation about one second after the camcorder.

Handling of discs when recording does not end normally (salvage functions)

Recording processing does not end normally if, for example, the POWER switch on the connector panel is turned off during recording, or if the power cord is disconnected during recording. Because the file system is not updated, video and audio data recorded in real time is not recognized as files and clip contents recorded up to that point are lost.

However, this unit has salvage functions which can hold losses to the minimum by reconstructing clips on such discs. There is a quick salvage function which executes automatically and a full salvage function which you can execute as required.

Quick salvage: Clips are reconstructed on the basis of backup data stored in nonvolatile memory and markers recorded on the disc. Processing time is about 5 seconds.

Quick salvage executes automatically if the unit is powered on with a disc still loaded after recording was interrupted by power off.

Full salvage: Clips are reconstructed on the basis of markers recorded on the disc. Nonvolatile memory cannot be used, so processing takes longer than for a quick salvage (about 30 seconds, although it depends on the state of the disc).

You are prompted to execute a full salvage whenever you insert a disc that was removed manually from a powered off device after interruption of recording by power off.

Note that no recorded clip contents are lost when the on/standby (I/O) switch on the control panel is set to standby (O) during recording, because the unit does not enter standby mode until after the end of recording processing.

Notes

- Even after recording finishes, do not set the POWER switch on the connector panel to off until the ACCESS indicator has gone out.
- These functions salvage as much recorded material as possible after an unforeseen accident, but 100% restoration cannot be guaranteed.
- When recording on the PDW-HR1 does not end successfully, you can use another XDCAM system to perform a full salvage of the disc. As the other system, use the PDW-F1600, PDW-HD1500, PDW-F800, or PDW-700.
- The following alarm message (see page 152) may appear when you insert a disc:
“DISC CANNOT BE RECORDED. FORMAT DISC OR CONTACT SERVICE TO RUN CLIP SALVAGE PROGRAM. (XXXX)”

This message means that recording on that disc did not end normally. The “XXXX” in the message is a code for XDCAM devices that can salvage the disc. Refer to the following table and use one of the indicated devices to salvage the disc.

Code (XXXX)	Model
0002	PDW-1500/530/510/R1 PDW-F70/F350/F330
0200	PDW-F70/F350/F330 (Version 1.9 or higher) PDW-F75/F355/F335
0300 a)	PDW-HR1/HD1500/700
0301	PDW-HD1500/700/740 (Version 1.5 or higher) PDW-F1600/F800

a) Does not appear on this unit.

- Even when these functions are used, it is not possible to recover data from immediately before the interruption of recording. The amount of data lost is as follows.

Quick salvage: From 2 to 4 seconds of data before the interruption of recording.

Full salvage: From 4 to 6 seconds of data before the interruption of recording.

(More data may be lost when the unit is subject to vibrations, and when you switch frequently between recording and paused.)

- You are prompted to execute a full salvage every time you insert a disc that has not been salvaged, or power the unit on with such as disc loaded.
- No recording is possible on discs containing clips that have not been salvaged, although it is possible to play back the normally recorded sections. Recording becomes possible if you perform a quick format, but this erases all of the original recorded content.

To restore clips with a full salvage

- 1 Insert the disc on which recording did not end normally.

The message “Salvage ?” appears on the display.

To cancel the clip salvage

Press the RETURN button.

Notes

- The message “EJECT?” appears when “REC INHI” is displayed. If the disc is write protected, eject the disc, set the Write Inhibit tab to enable recording, and then insert the disc again. If REC INH on HOME page of the function menu is set to “ON”, set it to “OFF” (see page 50).
- This operation cannot be cancelled once it begins.

- 2 Press the PUSH SET knob.

Processing begins and the message “Executing.” appears.

When processing finishes, a message appears to display the results.

If the message reads “Incomplete!”, the clips that failed were lost.

Playback

This section describes playback of video and audio on the unit.

Before starting playback, make the following settings and adjustments.

Selection of time data to display: Select with CNTR SEL on HOME page of the function menu.

Selection of audio channels to monitor: Select with AUDIO MONITOR SELECT buttons.

Volume adjustment of the monitor audio: Adjust with the LEVEL knob.

Remote/local setting: Set the remote control switch. If you set it to REMOTE, also set setup menu item 214 REMOTE INTERFACE (“RM-” and the connector used appear on the display (see page 27)).

Disc playback start position

Although this unit uses optical discs, it is designed to offer the most convenient features of tape playback by VTRs. One of these is the playback start position, which works in the same way as tape, as described below.

After playback stop

The unit stops at the position where the STOP button was pressed.

Press the PLAY button to resume playback at the stop position.

After recording

The unit stops at the position where recording ended.

To play back a clip, press the PREV button to move to the start frame of any clip or press the PREV button with the PLAY button held down to move to any position.

After disc insertion

The unit stops at the position of the disc when it was most recently ejected.

Press the PLAY button to resume playback at the most recent position.

The playback position is saved to the disc when the disc is ejected, which allows playback to start at that position whenever it is loaded into any XDCAM player.

Note

This function is not available when the Write Inhibit tab of the disc is set to the recording disabled position, and when REC INH on HOME page of the function menu is set to “ON”.

The REC INHI indicator may light when neither of the above is true if the format of recorded sections on the disc is not the same as the recording settings of this unit. In this case, the playback position can be saved to the disc.

1080/720 cross convert function

You can output 720 while playing discs recorded as 1080, and output 1080 while playing discs recorded as 720. When the system frequency of the loaded disc (59.94i/59.94P/29.97P or 50i/50P/25P) matches the system frequency of the unit, but the system line settings (1080 or 720) do not match, then an “FC” mark appears and disc playback is cross converted automatically. E-E output is not cross converted.

SD up convert function

You can output HD while playing discs recorded as SD.

HD down convert function

You can always output SD while playing discs recorded as HD.

To specify the frame to use as the thumbnail image

You can display a list of thumbnails of all clips on a disc, and use it to check the recorded content (*see page 70*). When the unit is shipped from the factory, it is set up to display the first frame of each clip as the thumbnail. As required, you can select another frame to display as the thumbnail.

For example, if there are several seconds of color bars recorded at the start of the clip, selecting a frame several seconds after the end of the recording of color bars can make it easier to identify the clip.

The GUI screen allows you to select thumbnail frames while viewing the video.

For details, see “Changing clip index pictures” (page 73).

You can also use setup menu item 143 INDEX PICTURE POSITION to specify a different default frame. You can specify the initial frame in any of the first few seconds after the initial frame. The setting range is 0 seconds to 10 seconds.

Playback operation

This section describes the following types of playback:

Normal playback: Playback at normal speed

Playback in jog mode: Variable-speed playback, with the speed determined by the speed of turning the shuttle/jog dial


Playback in shuttle mode: Variable-speed playback, with the speed determined by the angular position of the shuttle/jog dial

Playback in variable-speed mode: Variable-speed playback, with the speed finely determined by the angular position of the shuttle/jog dial

Normal playback

First insert a disc.

For details of how to insert a disc, see “Loading and unloading a disc” (page 53).

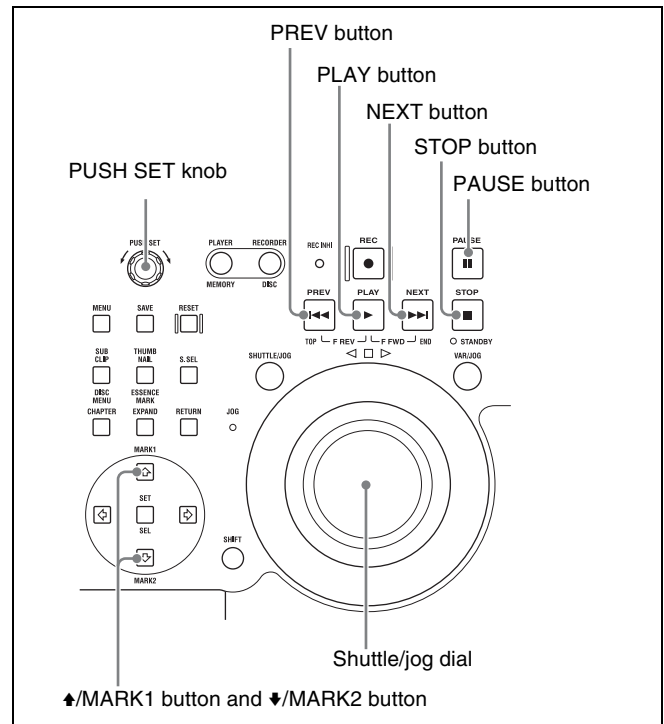

To start playback

Press the PLAY button.

Playback starts.

When two or more clips are recorded on the disc, they are played back continuously.

Note

No audio is output when non-audio signals are played back.

To jump to the next or previous clip, then start playback

Use the PREV button, NEXT button, or shuttle/jog dial.

To pause playback

Press the PAUSE button.

Press it again to resume playback.

To stop playback

Press the STOP button.

If you play back to the end of the last clip, playback automatically stops.

If, in this state, you press the PLAY button, the message “Disc End!” appears on the display.

To carry out playback again, move back to the desired clip using the PREV button, or shuttle/jog dial.

To set shot marks

While playing back a disc, you can set essence marks such as Shot Mark1 and Shot Mark2 in desired frames.

To set a Shot Mark1 or Shot Mark2, hold down the \blacktriangle /MARK1 or \blacktriangledown /MARK2 button and press the PUSH SET knob or the SET button.

Use the PDZ-1 Proxy Browsing Software on the supplied XDCAM Application Software CD-ROM to delete and modify essence marks.

See page 162 for an overview of the PDZ-1 software and information about how to install it.

You can also delete and modify essence marks from the Thumbnail Menu of the chapter thumbnail screen (see page 71).


To set a clip flag

You can set one of the three types of flag (OK, NG or KEEP) for the clip while it is being played back by viewing its video image and using the function menu (see page 52).

Playback in jog mode

In jog mode, you can control the speed of playback by the speed of turning the shuttle/jog dial. The playback speed range is -1 to $+1$ times normal speed.

To carry out playback in jog mode, proceed as follows.

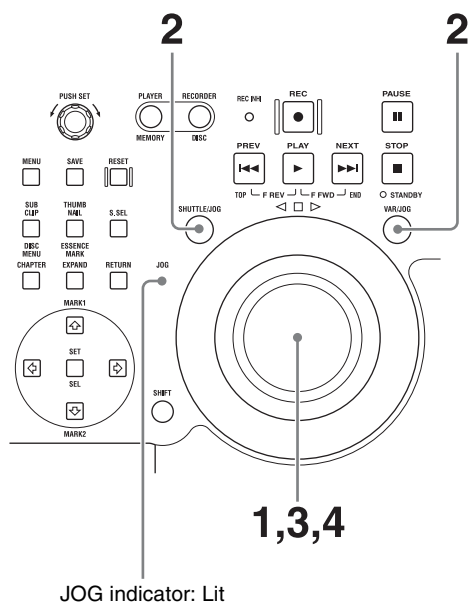

- 1 Press the shuttle/jog dial to light the JOG indicator.

The shuttle/jog dial enters jog mode.

- 2 Press the SHUTTLE/JOG button or VAR/JOG button, turning it on.

- 3 Turn the shuttle/jog dial in the desired direction, at the speed corresponding to the desired playback speed.

Playback in jog mode starts.


- 4 To stop playback in jog mode, stop turning the shuttle/jog dial.

When setup menu item 101 SELECTION FOR SEARCH DIAL ENABLE is set to “dial” (factory default setting), you can start jog playback by simply rotating the shuttle/jog dial, even when the SHUTTLE/JOG and VAR/JOG buttons are not lit.

Playback in shuttle mode

In shuttle mode, you can control the speed of playback by the angular position of the shuttle/jog dial. The range of playback speed is ± 20 times normal speed.

To carry out playback in shuttle mode, proceed as follows.

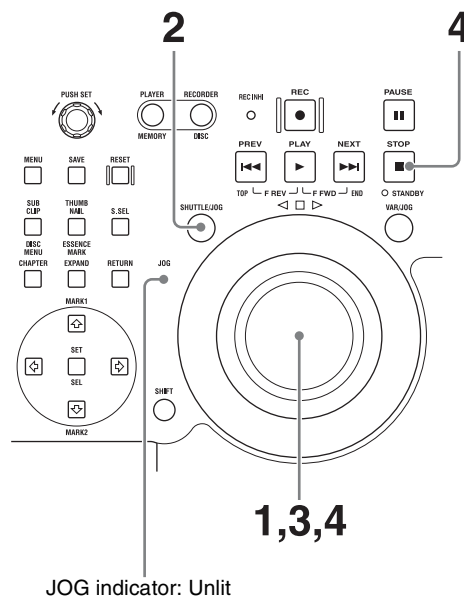

- 1 Press the shuttle/jog dial to turn off the JOG indicator.

The shuttle/jog dial enters shuttle mode.

- 2 Press the SHUTTLE/JOG button, turning it on.

- 3 Turn the shuttle/jog dial to the desired angle corresponding to the desired playback speed.

Playback in shuttle mode starts.

- 4 To stop playback in shuttle mode, return the shuttle/jog dial to the center position, or press the STOP button.

When setup menu item 101 SELECTION FOR SEARCH DIAL ENABLE is set to “dial” (factory default setting), you can start shuttle playback by


simply rotating the shuttle/jog dial, even when the SHUTTLE/JOG button is not lit.

To alternate between normal-speed playback and shuttle mode playback

Set the shuttle/jog dial to the position corresponding to the desired shuttle playback speed, then switch between normal-speed playback and shuttle playback by pressing the PLAY and SHUTTLE/JOG buttons alternately.

Playback in variable-speed mode

In variable-speed mode, you can control the speed of playback in the range of -1 to +1 times normal speed. (You can use setup menu item 119 VARIABLE SPEED LIMIT IN KEY to specify the speed range of variable playback.) To carry out playback in variable-speed mode, proceed as follows.

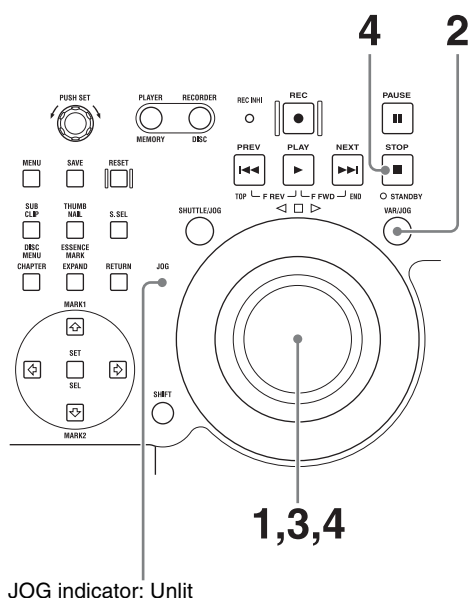

- 1** Press the shuttle/jog dial to turn off the JOG indicator.
The shuttle/jog dial enters shuttle mode.
- 2** Press the VAR/JOG button, turning it on.
- 3** Turn the shuttle/jog dial to the desired angle corresponding to the desired playback speed.
Playback in variable-speed mode starts.
- 4** To stop playback in variable-speed mode, return the shuttle/jog dial to the center position, or press the STOP button.

To alternate between normal-speed playback and variable-speed mode playback

Set the shuttle/jog dial to the position corresponding to the desired variable playback speed, then switch between

normal-speed playback and variable-speed mode playback by pressing the PLAY and VAR/JOG buttons alternately.

Playback operations using thumbnails

Playback operations that you can perform with thumbnails include searching for clips, displaying clip information, playing clip lists created with the scene selection function, and locking and deleting clip. This allows you to check the actual video as you work.

See “Thumbnail Operations” (page 70) for more information about thumbnail operations, and “Scene Selection (Clip List Editing)” (page 78) for more information about the scene selection function.

Overview

You can perform scene searches, play the searched scenes, and select scenes (edit clip list) in Graphical User Interface

(GUI) screens. The GUI screens are your gateways to discs and the data saved on discs.

Switching between GUI screens

The most important GUI screens are:

Clip thumbnail screen: displays thumbnails of clips on the disc. “Clip” is displayed as the title at the upper left of the screen (*see page 63*).

Clip list thumbnail screen: displays thumbnails of sub clips in a clip list. “Clip List” is displayed as the title at the upper left of the screen (*see page 63*).

There are also two playback screens:


Clip playback screen: playback screen for normal video

Clip list playback screen: playback screen for clip list video

You will use the THUMBNAIL/ESSENCE MARK button **1** and the SUB CLIP/DISC MENU button **2** to switch between these four screens. Each press of these buttons switches between the screens as shown in the following figure. The THUMBNAIL and SUB CLIP/DISC MENU buttons light as follows, according to the type of screen that is currently displayed.

Notes

- To switch between these four screens, a disc with recorded clips must be loaded in the unit.
- The GUI screens can display Japanese and European languages for clip names and titles, but they cannot display Chinese.

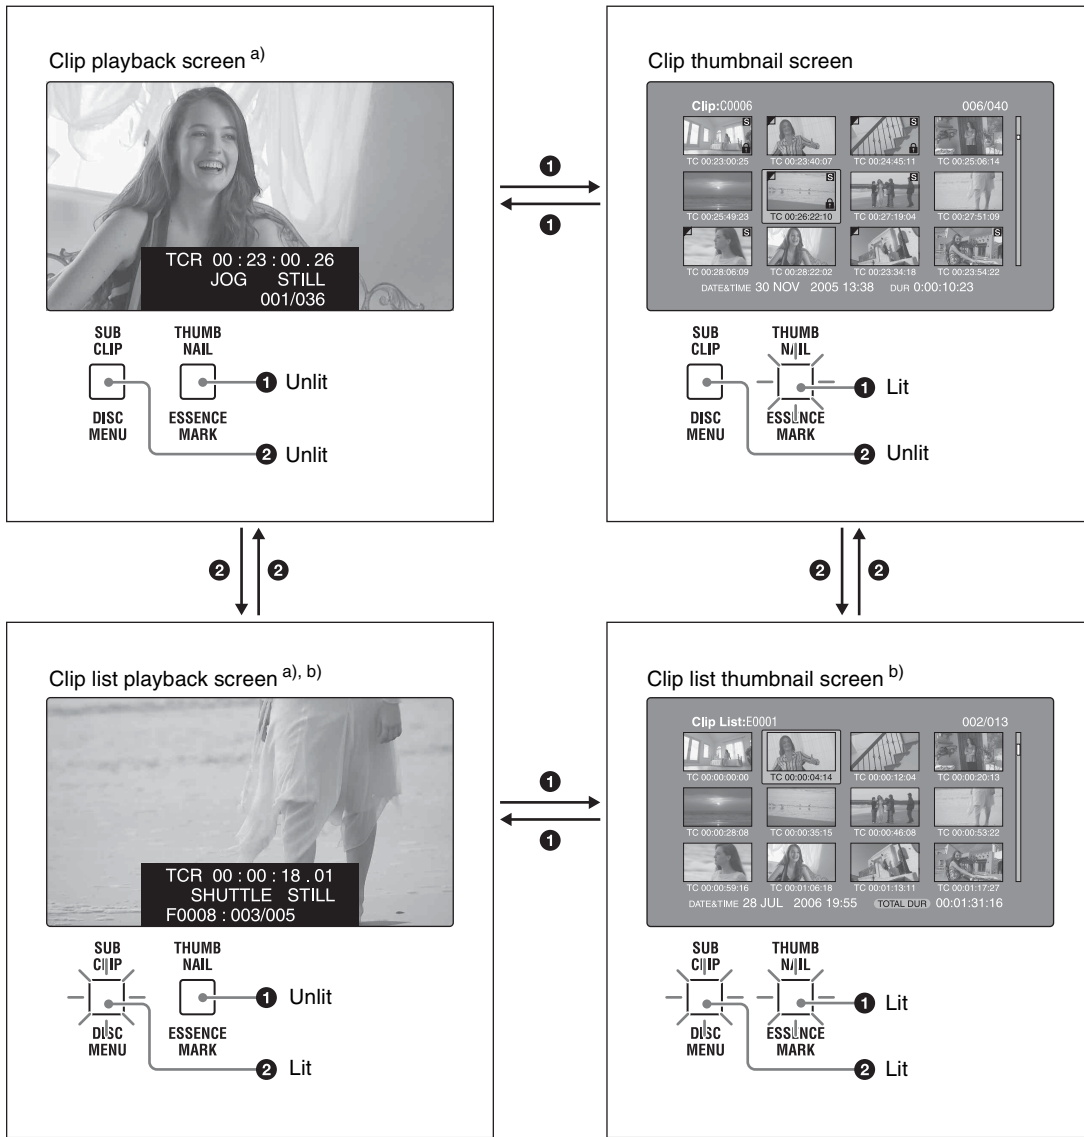

a) Playback screens appear when you switch to video monitor display. Use the DISPLAY button to switch from the basic monitor display to video monitor display (see page 26).
 b) The clip list playback screen appears when a clip list is loaded into the unit's memory (see page 84).


The other thumbnail screens are:

- Expand thumbnail screen
- Chapter thumbnail screen
- Essence mark thumbnail screen

Information and controls in thumbnail screens

Clip thumbnail screen

This screen displays thumbnails of clips on the disc in the order that they were recorded. You can use this screen to work with clips – deleting or locking them, selecting their index pictures, adding them to clip lists, and so on.

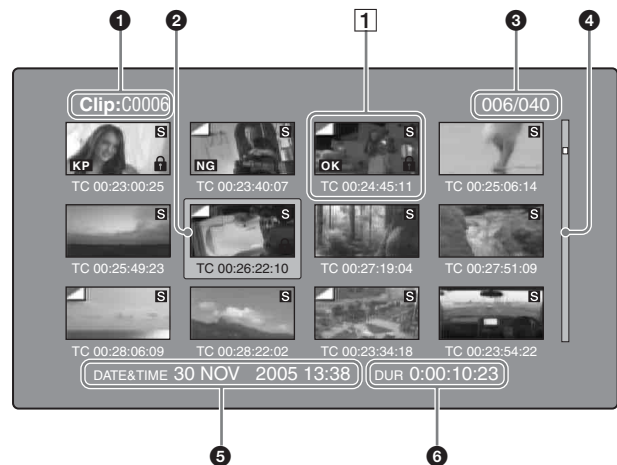

1 Clip name

Displays the name of the selected clip. When the clip has a title, the title is displayed as “TITLE00001” (see page 102). When the unit’s area of use (UC/J MODEL SELECT) (see page 36) is set to “UC”, clip names can be displayed in European languages.

Note

To display the clip title, Settings > Display Title in the Disc Menu needs to be set to On.

2 Selection frame

Indicates that the thumbnail is selected. To select another thumbnail, move the frame (see page 69). Multiple selection frames appear when multiple thumbnails are selected (see page 69).

3 Clip number/total number of clips

Displays the total number of clips on the disc, and the number of the selected clip.

4 Scrollbar

When not all of the thumbnails can be displayed in the thumbnail display area, the position of the slider shows the relative position of the currently displayed clips, and the length of the slider shows the relative length of currently displayed clips within all of the clips.


When you have a large number of thumbnails, you can save time by using the Skip Scroll function to jump directly to the thumbnail you want (see page 70).

5 Clip date and time

Displays the date and time when the selected clip was shot and recorded.

6 Duration

Displays the duration (recording time) of the selected clip.

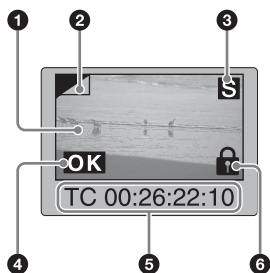1 Thumbnail display items**1 Index picture**

Displays an image to stand for the content of the clip. The index picture is normally the first frame of the clip.

2 Index picture changed mark

This mark, like the folded-over corner of a page that you want to remember, appears when the index picture has

been changed to any frame other than the first frame of a clip (see page 73).

Note

When you cue up a clip, the unit always cues up the first frame, even when the index picture has been changed to a different frame.

3 S mark

This mark appears when shot marks or multiple Rec Start essence marks have been set in the clip (see page 56).

The chapter thumbnail screen can be displayed for clips that show this mark (see page 65).

4 Clip flag icon

Displays the corresponding icon when a clip flag (OK/NG/KP (KEEP)) is set in the clip.

5 Clip and frame information


Displays the clip or frame information selected with the Clip Information item in the Thumbnail Menu (see page 73). The factory default selection is the timecode of the first frame or the timecode of the thumbnail frame.

6 Lock icon

This icon appears when the clip is locked (protected) (see page 76). Clips cannot be deleted and their clip information cannot be changed when this mark is displayed.

Clip list thumbnail screen

This screen displays thumbnails of the clips in the current clip list. You can use this screen to create and edit clip lists.

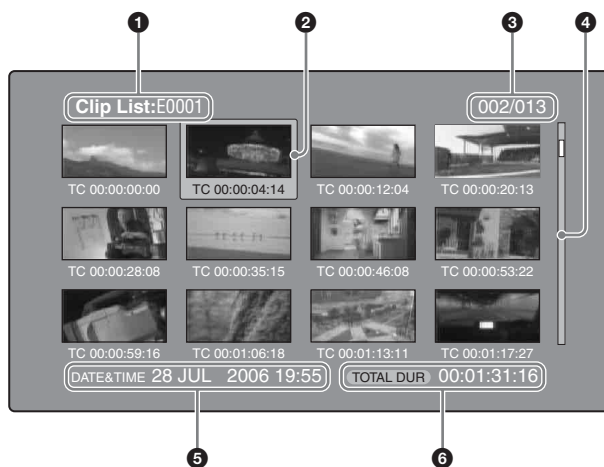**1 Clip list name**

Displays the name of the clip list. When the clip list has a title, it is displayed as “TITLE00001” (see page 102).

When the unit’s area of use (UC/J MODEL SELECT) (see page 36) is set to “UC”, clip names can be displayed in European languages.

Note

To display the clip title, Settings >Display Title in the Disc Menu needs to be set to On.

2 Selection frame

See the description in “Clip thumbnail screen” (page 63).

3 Sub clip number/number of sub clips

Displays the total number of sub clips in the clip list, and the number of the selected sub clip.

4 Scrollbar

See the description in “Clip thumbnail screen” (page 63).

5 Clip list date and time

Displays the date and time when the clip list was created, or the date and time of its most recent modification. An asterisk (*) appears after the date and time of creation when the current clip list has not been saved to the disc.

Note


“New File” appears when no clip list has been loaded into the unit’s memory, and when a clip list has been cleared from the unit’s memory.

6 Total duration

Displays the total duration of all sub clips in the clip list.

Expand thumbnail screen

This screen displays thumbnails of equally sized divisions of the selected clip.

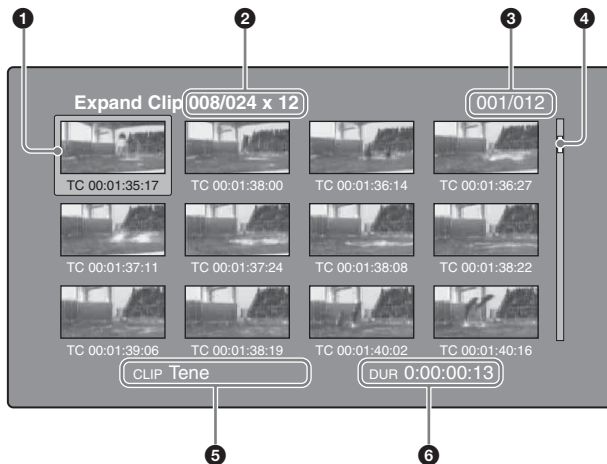

1 Selection frame

See the description in “Clip thumbnail screen” (page 63).

2 Clip number/total clips × number of divisions

Displays the number of the selected clip, the total number of clips on the disc, and the number of times that the selected clip has been divided to display the expansion thumbnails.

3 Thumbnail number/total thumbnails

Displays the total number of expanded thumbnails and the number of the selected thumbnail.

4 Scrollbar

See the description in “Clip thumbnail screen” (page 63).

5 Clip name

Displays the name of the expanded clip. When the clip has a title, it is displayed as “TITLE00001” (see page 102). When the unit’s area of use (UC/J MODEL SELECT) (see page 36) is set to “UC”, clip names can be displayed in European languages.

Note

To display the clip title, Settings >Display Title in the Disc Menu needs to be set to On.

6 Duration

Displays the time from the selected thumbnail to the next one.


Chapter thumbnail screen

The sections between shot mark and Rec Start essence marks in clips are called chapters. This screen allows you to display thumbnails of the chapters in the selected clip.

Note

Shot marks can be set during recording and playback. They can be deleted and moved.

Rec Start essence marks are set automatically at the start of recording. They cannot be deleted or moved.

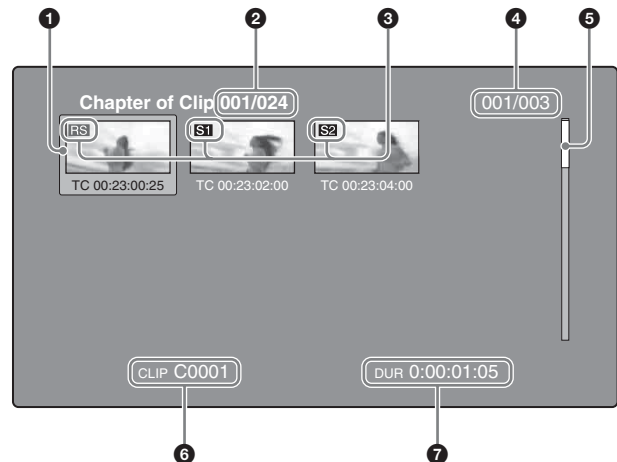

1 Selection frame

See the description in “Clip thumbnail screen” (page 63).

2 Clip number/total clips

Displays the total number of clips on the disc and the number of the clip that contains the displayed chapters.

3 S1/S2/RS marks

The “S1”, “S2”, and “RS” marks on the thumbnails indicate frames where Shot Mark1, Shot Mark2, and Rec Start essence marks are set.

4 Chapter number/total chapters

Displays the total number of chapters and the number of the selected chapter.

Note

The total number of chapters is the total number of chapters in the specified clip only.

5 Scrollbar

See the description in “Clip thumbnail screen” (page 63).

6 Clip name

Displays the name of the clip whose chapter is displayed. When the clip has a title, it is displayed as “TITLE00001” (see page 102). When the unit’s area of use (UC/J MODEL SELECT) (see page 36) is set to “UC”, clip names can be displayed in European languages.

Note


To display the clip title, Settings > Display Title in the Disc Menu needs to be set to On.

7 Duration

Displays the time from the first frame of the selected chapter to the first frame of the next chapter.

Essence mark thumbnail screen

This screen displays thumbnails of the specified essence mark, found by searching all clips on the disc.

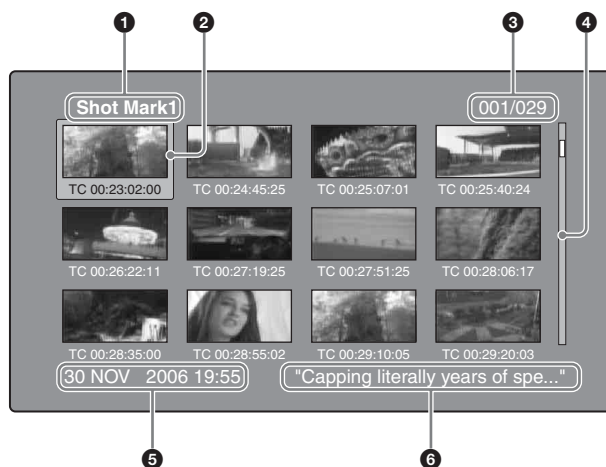**1 Essence mark name**

Displays the name of the essence mark (Shot Mark1 here).

2 Selection frame

See the description in “Clip thumbnail screen” (page 63).

3 Essence mark number/total essence marks

Displays the total number of essence marks and the number of the selected essence mark.

Note

The total number of essence marks is the total number of essence marks that have been set in all clips on the disc.

4 Scrollbar

See the description in “Clip thumbnail screen” (page 63).

5 Clip date and time

Displays the date and time when the clip that contains the selected thumbnail was recorded or last modified.

6 Clip name

Displays the name of the clip that contains the selected frame. When the clip has a title, it is displayed as “TITLE00001” (see page 102). When the unit’s area of use (UC/J MODEL SELECT) (see page 36) is set to “UC”, clip names can be displayed in European languages.

Note

To display the clip title, Settings > Display Title in the Disc Menu needs to be set to On.


Displaying menus

Thumbnail Menu


The Thumbnail Menu displays menu items that are valid for the currently displayed thumbnail screen.

To display the Thumbnail Menu

To display the Thumbnail Menu, press the MENU button with a thumbnail screen displayed. To return to the original screen, press the MENU button again, or press the RETURN button.

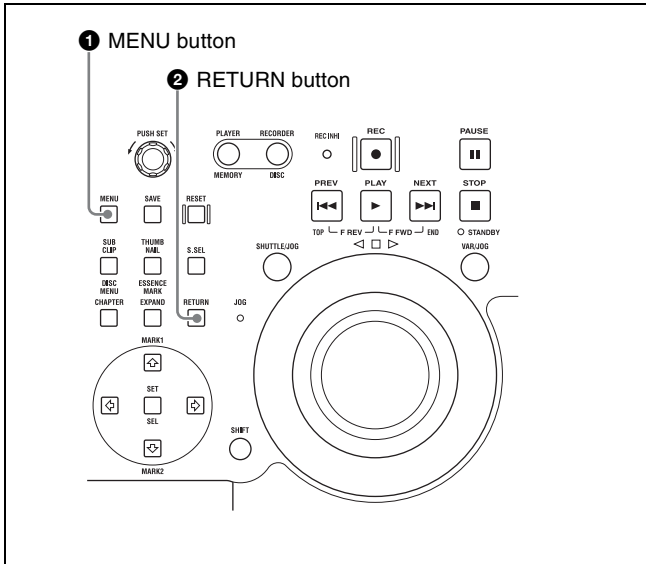

Clip thumbnail screen

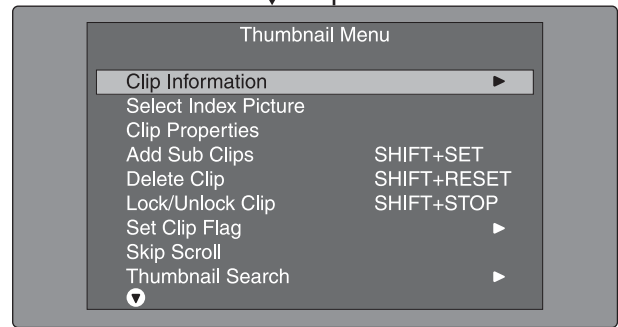

Thumbnail Menu of the clip thumbnail screen

Shortcut operations

Shortcut button names are displayed next to the menu items of commands that have shortcuts (see page 89).

Note

Shortcuts displayed within parentheses should be used with all menus closed.

Thumbnail Menu submenus

- The Thumbnail Search Menu contains the basic commands for thumbnail searches.
- The Thumbnail View Menu contains the basic commands for moving to other menus.

Disc Menu

The Disc Menu allows you to do the following.

Item	Operation/Setting
Load Clip List	Load clip list into this unit's memory.
Save Clip List	Save a clip list on the disc under its current name, overwriting the old contents.
Save Clip List as...	Save a clip list on the disc under a new name.
Delete Clip List	Delete a clip list from the disc.
Clear Clip List	Clear the current clip list from the unit's memory.
Load Planning Metadata/Select Drive	Select a media disc or drive and load planning metadata into this unit's memory.
Planning Metadata Properties	Display the properties of the currently loaded planning metadata.
Clear Planning Metadata	Clear the currently loaded planning metadata from the unit's memory.


Item	Sub-item	Operation/Setting
Lock or Delete All Clips	Sub-item	
	Lock All Clips	Lock all clips.
	Unlock All Clips	Unlock all clips.
	Delete All Clips	Delete all clips.
Disc Properties		Display the properties of the currently loaded disc. Or edit the user disc ID, title, and title 2.
Format Disc		Format (initialize) the currently loaded disc.
Settings	Sub-item	
	SET Key on Thumbnail	Selects the behavior of the unit when the PUSH SET knob is pressed with one thumbnail selected. Cue up & Still: Cue up the selected thumbnail. Cue up & Play: Cue up and play the selected thumbnail.
	Sort Clip List by...	Selects a method to sort the clip list. Name (A-Z): Sort in ascending alphabetic order. Date (Newest First): Sort by date and time of creation, newest clip list first.
	Sort Planning Metadata by...	Selects a method to sort the planning metadata. Name (A-Z): Sort in ascending alphabetic order. Date (Newest First): Sort by date and time of creation, newest planning metadata first.
	Display Title	Selects whether to display clip and clip list titles. On: Display the title, if it has been set. Otherwise display the clip name or clip list name. Off: Do not display the title. Always display the clip name or clip list name.
	Planning Clip Name in Clip Info. Area	Selects whether to display in the video monitor screen the title contained in a planning metadata file that is loaded into this unit. Off: Do not display title. ASCII Clip Name: Display title in ASCII format. Clip Name: Display title in UTF-8 format.
	Disable "Format Disc"	Selects whether to disable the Format Disc command. Disable: Disable the command. Enable: Enable the command.
	Select Mouse Pointer Speed	Selects the speed of the USB mouse pointer used on the software keyboard from the following values. 5 Fast/4/3 Middle/2/1 Slow
Select USB Keyboard Language	Selects a language of the USB keyboard used on the software keyboard.	

To display the Disc Menu


To display the Disc Menu, press the SUB CLIP/DISC MENU button with the SHIFT button held down in one of the following screens.

- Clip thumbnail screen
- Clip list thumbnail screen
- Clip playback screen
- Clip list playback screen

To return to the original screen, press the RETURN button.

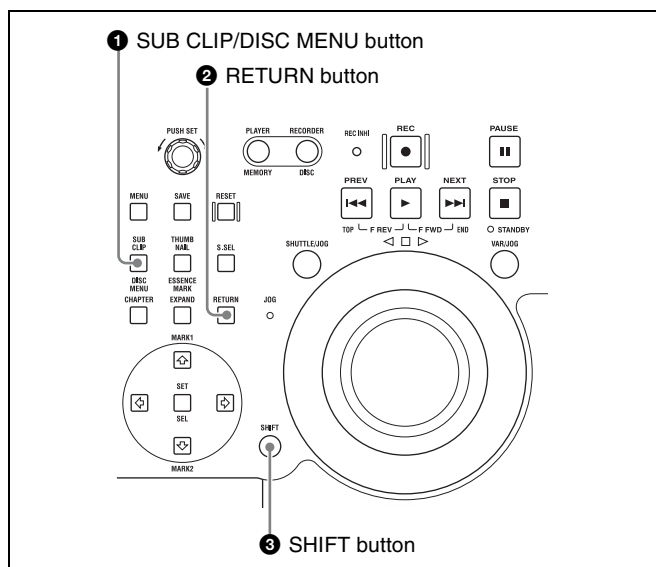


Clip list thumbnail screen

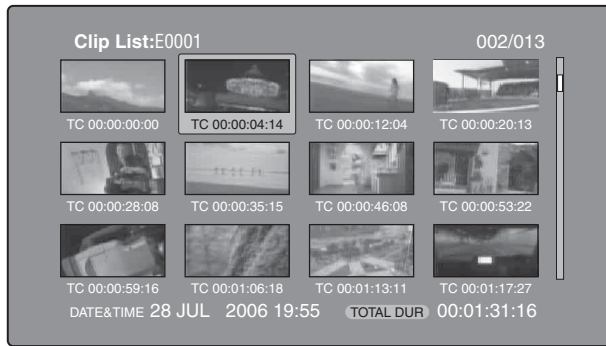

3+1
2



GUI screen operations

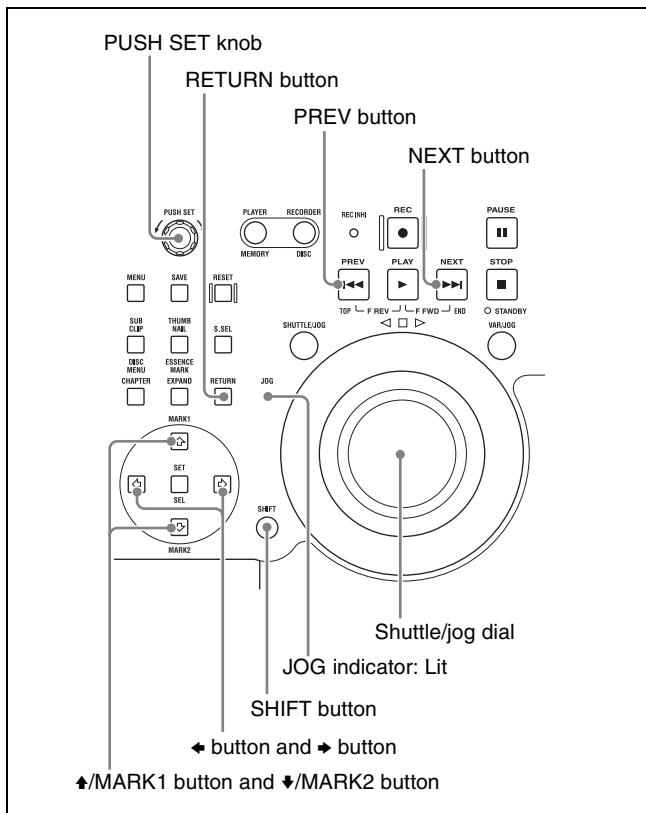

To select items

Do one of the following to select thumbnails, menu items, timecode digits, and other items.

- Turn the PUSH SET knob.
- Put the shuttle/jog dial into jog mode (JOG indicator: lit), and then turn the dial.
- Press the \uparrow /MARK1, \downarrow /MARK2, \leftarrow or \rightarrow button.
- Press the PREV or NEXT button.
- With the SHIFT button held down, press the PREV or NEXT button (to move to the first or last item).
- With the SHIFT button held down, press the \uparrow /MARK1 or \downarrow /MARK2 button (to move to the previous or next page).

To select multiple thumbnails

Do one of the following

- Turn the PUSH SET knob with the SHIFT button held down.
- With the SHIFT button held down, press the \leftarrow or \rightarrow button.

To return to the previous screen

Press the RETURN button.

To move from a menu level to the next lower or higher menu level

For a menu item displayed together with \leftarrow or \rightarrow , you can move to the next lower or higher menu level by pressing the \leftarrow or \rightarrow button.

To scroll hidden parts of the string into view

When a \leftarrow or \rightarrow mark is displayed for an item, you can press the \leftarrow or \rightarrow button to scroll the display by one character for each press.

The \uparrow /MARK1 and \downarrow /MARK2 buttons scroll the beginning and end of the string into view.

To increment and decrement numbers

Do one of the following.

- Press the \uparrow /MARK1 or \downarrow /MARK2 button.
- Turn the PUSH SET knob.
- Put the shuttle/jog dial into jog mode (JOG indicator: lit), and then turn the dial.

To confirm selections

Press the PUSH SET knob.

Thumbnail Operations

You can use thumbnail screens to display clip information and to find, protect, and delete clips. The thumbnails provide visual confirmation of these and other operations.

Selecting thumbnails

The thumbnail selection frame (*see page 64*) indicates the currently selected thumbnail.

To move the thumbnail selection frame

Turn the PUSH SET knob.

To skip quickly through thumbnails (Skip Scroll function)

When you have a large number of thumbnails, like in expand thumbnail screen, you can use the Skip Scroll function to skip through them quickly.

See page 69 for more information about operations in thumbnail screens.

- 1 In the screens like clip thumbnail screen or expand thumbnail screen, display the Thumbnail Menu.
- 2 Select Skip Scroll, and then press the PUSH SET knob.

A small popup window appears on the scrollbar to indicate the position of the currently selected thumbnail within the set of all thumbnails.




- 3 Turn the PUSH SET knob.

The current position moves by an amount equal to $1/10$ of the total number of thumbnails.

When you reach a point that is close to the thumbnail you want, put the shuttle/jog dial into jog mode (JOG indicator: lit), and then turn the dial to move the selection frame in units of 1 thumbnail.

- 4 Press the PUSH SET knob at the new position.

The thumbnail at the position indicated in the small popup window appears in a thumbnail screen like the following ¹⁾.

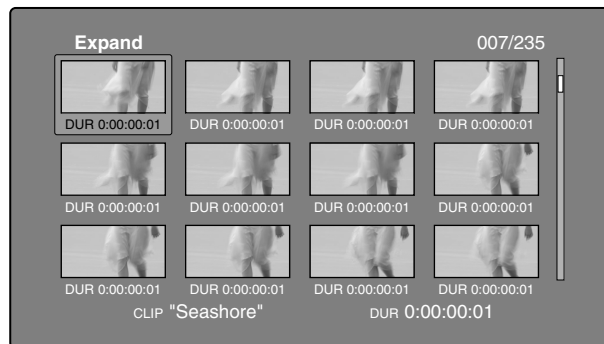

1) Expand thumbnail screen

To select multiple thumbnails

Move the selection frame to the first thumbnail that you want to select. Then, with the SHIFT button held down, turn the PUSH SET knob.

To cancel the multiple selection, move the selection frame without the SHIFT button held down.



Searching with thumbnails

By using the thumbnails that appear in the various thumbnail screens, you can easily cue up and play clips and sub clips.

Using thumbnails to find clips

The clip thumbnail screen displays thumbnails of all clips recorded on the disc. You can use this screen to cue up the selected clip and to carry out playback (*see page 72*).

See "Selecting thumbnails" (page 70) for more information.

Using the expand function to find scenes

The expand function allows you to divide a selected clip into equally sized blocks, and to display thumbnails of the

first frame in each block. This is a quick and efficient way to review the selected clip and search for target scenes. You can specify 12, 144, or 1728 divisions.



Note

The maximum number of blocks may be other than 1728 when the recorded duration of the clip is short. In this case, the frame interval of expanded thumbnails is fixed at 1 frame. This allows you to view expanded thumbnails at equal intervals.

See page 69 for more information about thumbnail screen operations.

- 1 In the clip thumbnail screen, select the thumbnail of the clip that contains the scene you want to find.
- 2 Press the EXPAND button.

The selected clip is divided into 12 blocks, and a list appears in the expand thumbnail screen (see page 65) with the first frame of each block displayed as a thumbnail.
- 3 Select the thumbnail that you want to expand further.
- 4 Repeat steps 2 and 3 up to 2 times, as required.

Note

Thumbnails cannot be further expanded when they already have the minimum duration (1 frame).

To return to the previous expansion level

Press the EXPAND button with the SHIFT button held down.

To display the expand thumbnail screen of the previous or next clip

With the expand thumbnail screen still active, press the PREV button or the NEXT button.

Using the chapter function to find scenes

Sections between shot marks and Rec Start are called chapters.

Rec Start essence marks are set automatically at the start of recording, but shot marks can be set at any scene during recording or playback.

The chapter function allows you to display thumbnails of the chapters in a clip.

See “To set shot marks” (page 56) for more information.

See page 69 for more information about thumbnail screen operations.

- 1 In the clip thumbnail screen, select the thumbnail of a clip with chapters set.

The “S” mark appears on the thumbnails of clips with chapters set.

- 2 Press the CHAPTER button.

The chapter thumbnail screen (see page 65) appears, with thumbnails of the frames where chapters are set.


The “S1”, “S2”, and “RS” marks on the thumbnails indicate frames where Shot Mark1, Shot Mark2, and Rec Start essence marks are set.

To delete the shot mark at a chapter position

You can delete the shot mark (Shot Mark1 or Shot Mark2) at the chapter position in the chapter thumbnail screen. (Rec Start cannot be deleted.)

- 1 In the chapter thumbnail screen, select the thumbnail for the frame whose shot mark you want to delete.
- 2 Display the Thumbnail Menu.
- 3 Select Delete Shot Mark.

A message appears asking if you are sure that you want to delete the shot mark.

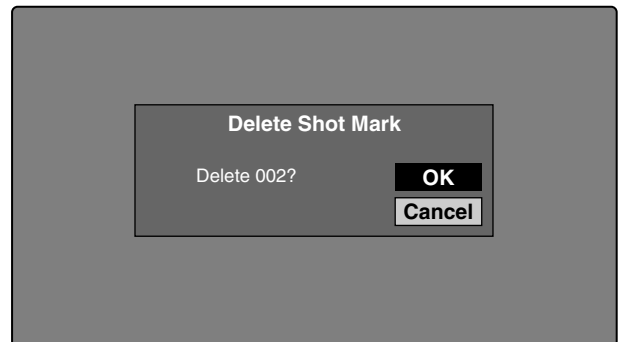

- 4 Select OK to delete the mark, or Cancel to cancel the deletion, and then press the PUSH SET knob.

To adjust the position of shot marks at chapter positions


You can use the chapter thumbnail screen to adjust the position of shot marks (Shot Mark1 and Shot Mark2) at chapter positions. (The positions of Rec Start essence marks cannot be adjusted.)

- 1 In the chapter thumbnail screen, select the thumbnail of the shot mark whose position you want to adjust.

2 Display the Thumbnail Menu.

3 Select Move Shot Mark.

The Move Shot Mark screen is displayed.

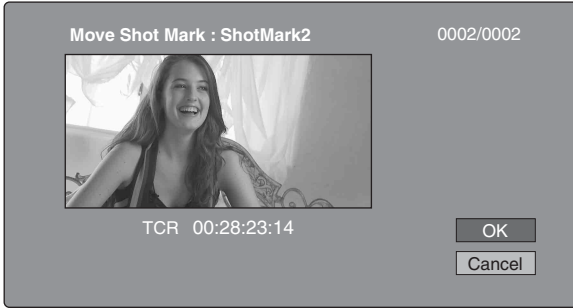

You can perform playback and searches in this screen.

4 Use the PLAY button or the shuttle/jog dial in jog mode (JOG indicator: lit) to display the frame you want.

5 Select OK, and then press the PUSH SET knob.

To display the chapter thumbnail screen of the previous or next clip with chapters

With the chapter thumbnail screen still active, press the PREV button or the NEXT button.

The unit searches in the reverse or forward direction for the next clip with chapters, beginning with the previous or next clip.


Using essence marks to find scenes

See page 69 for more information about thumbnail screen operations.

1 In the clip playback screen or the clip thumbnail screen, press the THUMBNAIL/ESSENCE MARK button with the SHIFT button held down.

The Select Essence Mark screen appears.

The names of essence marks that are not recorded on the disc are displayed in gray.

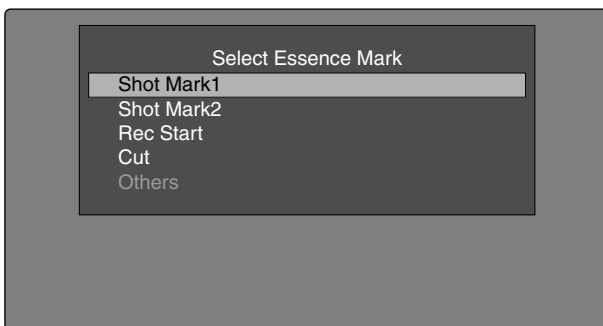

2 Select the essence mark that you want, and then press the PUSH SET knob.

The essence mark thumbnail screen displays a list of frames where the selected essence mark is set.


Playing the scene you have found

After finding a clip with one of the methods explained in the previous section, “Searching with thumbnails” (see page 70), you can cue up and play the clip that you have found.

To search for a thumbnail position and cue it up

See page 69 for more information about GUI screen operations.

1 Select the thumbnail that you want to cue up.

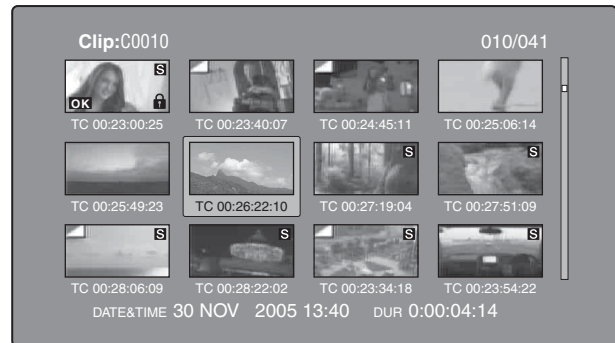

2 Press the PUSH SET knob.

To play clips with the PUSH SET knob


In the Disc Menu, set Settings >SET Key on Thumbnail to “Cue up & Play”. Playback begins from the selected frame when you press the PUSH SET knob, in the same way as when you press the PLAY button.

To search for a thumbnail position and play from there

See page 69 for more information about GUI screen operations.

1 Select the thumbnail that you want to play.

2 Press the PUSH SET button.

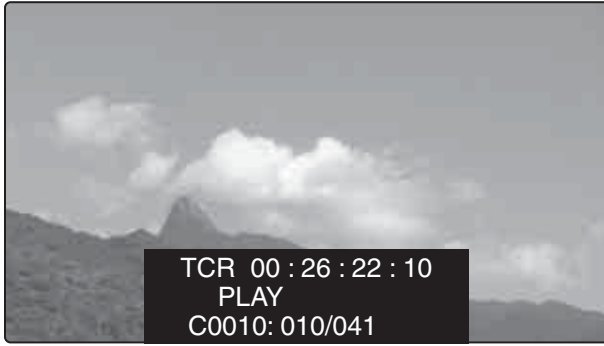


Selecting the information displayed on thumbnails

You can select the information to be displayed at the bottom of the thumbnails in thumbnail screens.

See page 69 for more information about thumbnail screen operations.

- 1 Display the Thumbnail Menu in the clip thumbnail screen.
- 2 Select Clip Information.

A window appears in which you can select the information to display.

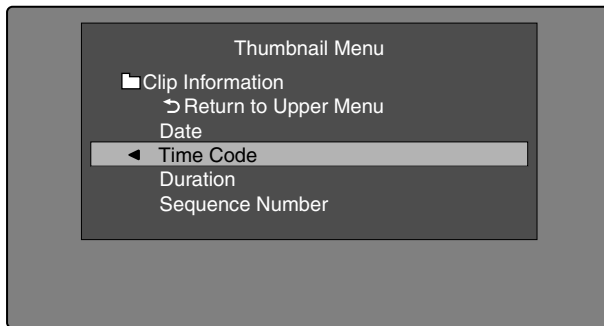

- 3 Select the items that you want to display.

Date: Date and time of creation, or date and time of the more recent modification

Time Code: Timecode of first frame

Duration: Playback time

Sequence Number: Thumbnail sequence number

Return to Upper Menu: Returns to the Thumbnail Menu

The selected information will appear at the bottom of the thumbnails when you display a thumbnail screen.

Changing clip index pictures

The clip thumbnail screen displays thumbnails as index pictures for clips. Normally the index picture is the first frame in a clip, but you can set any frame in the clip as the index picture.

Note

You can only change index pictures from the clip thumbnail screen. The thumbnails shown in the clip list thumbnail screen, the expand thumbnail screen, and the chapter thumbnail screen cannot be changed.

To select a clip index picture while viewing the video

See page 69 for more information about thumbnail screen operations.

- 1 In the clip thumbnail screen, select the thumbnail of the clip whose index picture you want to change.
- 2 Display the Thumbnail Menu.
- 3 Select Select Index Picture.
Select Index screen appears.



You can play and search with this screen.

- 4 Select a frame with the PLAY button or the shuttle/jog dial in jog mode (JOG indicator: lit).
- 5 Select OK, and then press the PUSH SET knob.

To select index pictures by using the expand and chapter functions


After using the expand function (*see page 70*) or chapter function (*see page 71*) to find a frame, you can set that frame as the index picture of the clip.

The following example explains how to do so from the expand thumbnail screen.

See page 69 for more information about thumbnail screen operations.

- 1 In the expand thumbnail screen, select the thumbnail to set as the index picture.
- 2 Display the Thumbnail Menu.
- 3 Select Set Index Picture.

A message appears asking you to confirm that you want to set the current frame as the index picture.

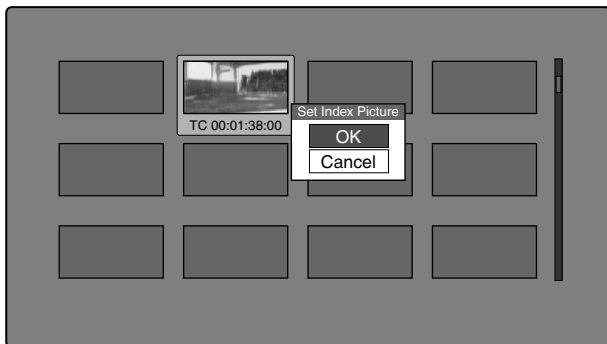

- 4 Select OK, and then press the PUSH SET knob.

After pressing the RETURN button to return to the clip thumbnail screen, check to make sure that the newly selected frame is displayed as the index picture.


Checking clip properties

You can check clip properties such as the title, timecode, duration, date and time of creation, and date and time of the more recent modification.

See page 69 for more information about thumbnail screen operations.

- 1 Display the Thumbnail Menu in the clip thumbnail screen.
- 2 Select Clip Properties.

The Clip Properties screen appears.

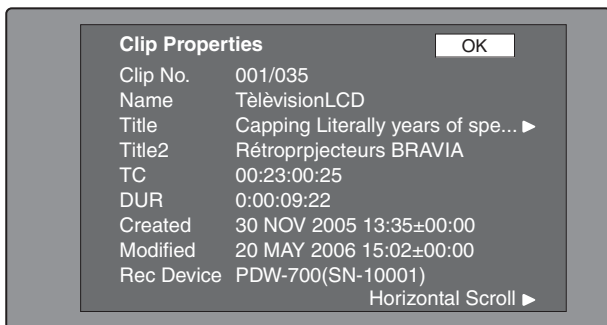

Clip No.: Clip number/total number of clips
Name: Clip name ¹⁾

Title: Title
Title2: Title 2 ¹⁾
TC: Timecode of first frame
DUR: Recording time
Created: Date and time of creation
Modified: Date and time of most recent modification
Rec Device: Name of device that created clip (product number)

¹⁾ When the unit's area of use (UC/J MODEL SELECT) (see page 36) is set to "UC", titles can be displayed in European languages.

To scroll hidden parts of the string into view

When a ◀ or ▶ mark is displayed for an item, you can press the ◀ or ▶ button to scroll the display by one character for each press.

The ▲/MARK1 and ▼/MARK2 buttons scroll the beginning and end of the string into view.

To display the properties of the previous or the next clip

Press the PREV button or the NEXT button.

To return to the clip thumbnail screen

Press the PUSH SET knob.

To edit clip information

You can edit the name ¹⁾, title, and title 2 of a clip by using a software keyboard.

¹⁾ The "NAMING FORM" sub-item on setup menu item 036 must be set to "free" (see page 120).

Notes

- The only characters that can be entered are the alphanumeric characters and symbols that appear on the software keyboard, and European language characters displayed on the keyboards illustrated in "List of Supported USB Keyboards" (page 166). Japanese kanji cannot be entered.
- Names and titles must be within the specified character length limits.
- Some symbols cannot be used in clip names. The keys for those symbols are disabled when you are editing a clip name.

See page 69 for more information about GUI screen operations.

- 1 In the Clip Properties screen, turn the PUSH SET knob to select the item you want to edit (Name, Title ¹⁾, or Title2).

¹⁾ Only ASCII characters can be used for Title.

- 2 Press PUSH SET knob.

An input screen appears for the selected item.

(An English keyboard appears if the area of use setting “UC” (for regions outside Japan). A Japanese keyboard appears if the area of use setting is “J” (for Japan).)



3 Edit the string in the edit box.

To enter characters

Use the \blacktriangleleft /MARK1, \blacktriangleright /MARK2, \blacktriangleleft or \blacktriangleright buttons or turn the PUSH SET knob to select a key, and then press the PUSH SET knob.

Functions of special keys

Key	Function
\blacktriangleleft , \blacktriangleright	Move the cursor one character forward or back.
\blacktriangleleft , \blacktriangleright	Move the cursor to Home or End position.
Back Space	Deletes the character in front of the cursor.
CapsLock	Turns the Shift key on permanently (until pressed again), and enables input of capital letters and symbols.
\blacktriangleleft Shift	Enables input of capital letters and symbols. Turns off after entry of one character.
Enter	Confirms the edit and enables the OK and Cancel buttons.

4 Select OK, and then press the PUSH SET knob.

You return to the Clip Properties screen, and the results of the editing are reflected in the clip information.

To enter text using a USB keyboard or USB mouse

You can connect a Windows USB keyboard or a Windows USB mouse ¹⁾ to the MAINTENANCE connector (see page 34), and use them together with the software keyboard to enter text.

Connect a Japanese keyboard if you have set the area of use to “J” (for Japan).

Connect a European language keyboard if you have set the area of use to “UC” (for regions outside Japan).

1) Some USB keyboards or USB mice may not be used. In this case, the message “Unknown USB” appears.

To change the keyboard language: Select the desired language from the following values using Settings > Select USB Keyboard Language in the Disc Menu.


- English [United Kingdom]
- English [United States]
- French [France]
- German [Germany]
- Italian [Italy]
- Polish (Programmers) [Poland]
- Russian [Russia]
- Spanish [Spain]

See “List of Supported USB Keyboards” (page 166) for the characters that can be input in each language.

Note

The keyboard language cannot be changed when the area of use is set to “J” (for Japan).

The keyboard icon on the software keyboard is highlighted when a USB keyboard has been recognized and enabled for use with this unit, and the mouse icon is highlighted and a mouse pointer appears when a USB mouse has been enabled.

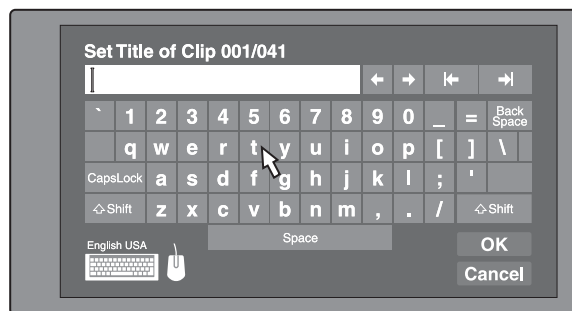

Notes

- Use the proper keyboard for the area of use. Some characters may not be entered correctly if you use a keyboard designed for use in another area.
- It is not possible to enter Japanese, even on a Japanese keyboard.

USB keyboard special functions keys

In addition to the special function keys of the software keyboard, you can use the following special function keys on a USB keyboard.

Key	Function
\blacktriangleleft , \blacktriangleright	When the cursor is in an edit box: Move the cursor to the start or end. When “OK” or “Cancel” has the focus: Moves the focus between “OK” and “Cancel”.
Delete	Deletes the character after the cursor.

Key	Function
Shift + ←, Shift + →	Selects the string before or after the cursor.
Ctrl + C, X, V, A	Ctrl + C: Copies the selected string. Ctrl + X: Cuts the selected string. Ctrl + V: Pastes a copied or cut string. Ctrl + A: Selects the entire string.
Enter	When the cursor is in an edit box: Moves the focus to Cancel. When OK or Cancel has the focus: Exits the software keyboard.
Esc	When the cursor is in an edit box, moves the focus to Cancel.
Tab	Moves the focus between OK and Cancel.

USB mouse functions

You can use the mouse to move the cursor on the software keyboard. You can also left click on a key to enter the character for that key.

To change the speed of the mouse pointer: Select the desired speed using Settings >Select Mouse Pointer Speed in the Disc Menu. Select the speed that works best with the connected mouse.

To exit the software keyboard from a USB keyboard

- 1 With the cursor in an edit box, press the Enter key or the Esc key to move the focus to Cancel.
- 2 Do one of the following.
 - To confirm the edit and then exit the software keyboard:** Press the Tab key to move to OK, and then press the Enter key.
 - To discard the edit and then exit the software keyboard:** While Cancel is selected, press the Enter key.
 - To continue editing:** Press any key except the Enter key, the Esc key, and the Tab key.

Setting clip flags


You can set three types of clip flags (OK/NG/KP (KEEP)) during recording or playback. Setting these flags in each clip that you record makes it easy for editors and other colleagues to find and select the clips that they need.

See page 69 for more information about thumbnail screen operations.

- 1 In the clip thumbnail screen, select the thumbnail of the clip where you want to set a flag.
- 2 Display the Thumbnail Menu.

3 Select Set Clip Flag.

The clip flag setting screen appears.

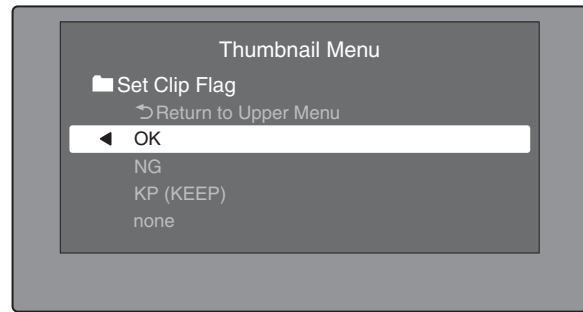

4 Select the clip flag that you want to set (OK/NG/KP (KEEP)).

A clip flag icon (see page 64) appears for clips that have clip flags set.

To clear clip flags

Carry out steps 1 to 3, selecting a clip that has a flag set, and then select "none" in step 4.

You can also use CLIP FLG on page P4 OTHER of the function menu to set and clear clip flags (see page 52).

Locking (write-protecting) clips

In a clip thumbnail screen, you can lock the selected clips so that they cannot be deleted or altered.

Locking prevents the following operations on clips.

- Deletion
- Changing the index picture
- Adding and deleting shot marks
- Setting and clearing clip flags

Notes

- Locked clips are deleted along with other clips when a disc is formatted.
- Clips cannot be locked or unlocked when the write inhibit tab of the disc is set to the recording disabled position, or when REC INH in the HOME page of the function menu is set to ON.

To lock clips

See page 69 for more information about thumbnail screen operations.

- 1 In the clip thumbnail screen, select the thumbnails of the clips that you want to lock.
- 2 Display the Thumbnail Menu.
- 3 Select Lock/Unlock Clip.

4 Press the PUSH SET knob.

A lock icon (*see page 64*) appears on the thumbnail of the locked clips.

In step **1**, you can also perform a shortcut operation by pressing the STOP button with the SHIFT button held down.

To lock all clips

- 1** Display the Disc Menu.
- 2** Select Lock or Delete All Clips, and then select Lock All Clips.
A message appears asking you to confirm locking all clips.
- 3** Select OK to lock all clips or Cancel to cancel it, and then press the PUSH SET knob.

To unlock a specific clip

See page 69 for more information about thumbnail screen operations.

- 1** In the clip thumbnail screen, select the thumbnail of the clip that you want to unlock.
- 2** Display the Thumbnail Menu.
- 3** Select Lock/Unlock Clip.

A message appears asking you to confirm the unlocking.



- 4** Select OK, and then press the PUSH SET knob.

In step **1**, you can also perform a shortcut operation by pressing the STOP button with the SHIFT button held down.

To unlock all clips

- 1** Display the Disc Menu.

- 2** Select Lock or Delete All Clips, and then select Unlock All Clips.

A message appears asking you to confirm that you want to unlock all clips.

- 3** Select OK to execute the unlock, or Cancel to cancel it, and then press the PUSH SET knob.

Deleting clips

You can delete clips while checking their contents.

Notes


- Clips cannot be deleted when the write inhibit tab of the disc is set to the recording disabled position, or when REC INH in HOME page of the function menu is set to ON.
- Locked clips cannot be deleted.
- If a deletion target clips is referenced by clip lists on the disc, all of those clip lists are deleted as well.
- If a deletion target clip is referenced in the current clip list, only those referencing sub clips are deleted at the same time as the deletion target clip.

See page 69 for more information about thumbnail screen operations.

- 1** In the clip thumbnail screen, select the thumbnail of the clip that you want to delete.
- 2** Display the Thumbnail Menu.
- 3** Select Delete Clip.

A window appears asking you to confirm the deletion. The window displays thumbnails of four frames from the target clip (the first frame, two intermediate frames, and the last frame), along with the name, title, date of creation, and duration of the clip. One of the following messages also appears, depending on whether the clip is referenced in a clip list.

- **When the clip is not referenced in a clip list:** “Delete Clip”
- **When the clip is referenced in a clip list:** “Delete Clip & Clip List” (All clip lists that reference the target clip are deleted along with the clip.)

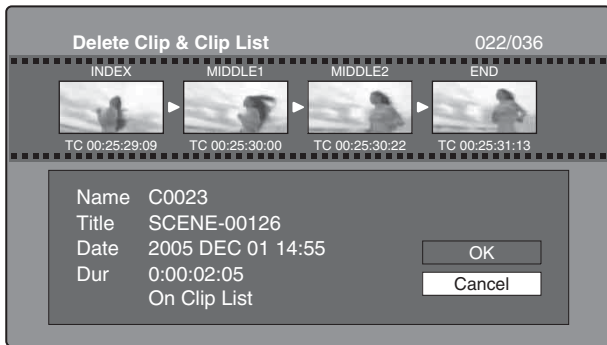

- 4 Select OK, and then press the PUSH SET knob.

The selected clip is deleted, and you return to the clip thumbnail screen.

In step 1, you can also perform a shortcut operation by pressing the DELETE button.

To delete all clips

- 1 Display the Disc Menu.
- 2 Select Lock or Delete All Clips, and then select Delete All Clips.

A message appears asking you to confirm that you want to delete all clips.

- 3 Select OK to execute the deletion, or Cancel to cancel it, and then press the PUSH SET knob.

Note

Locked clips cannot be deleted.

Scene Selection (Clip List Editing)

What is scene selection?

Scene selection is a function which allows you to select material (clips) from the material recorded on a disc and perform cut editing. You can do this by operating on this unit only.


- Scene selection is a convenient way to perform cut editing in the field and in other offline situations.
- In scene selection you create a clip list (editing data). Since the material itself is not affected, you can repeat this any number of times.
- You can play back the edit list created by scene selection on this unit.
- In scene selection you can add whole clips or add parts of a clip. You can add scenes using chapters, change the playback sequence, and amend or delete In and Out points. All of these operations can be carried out easily on this unit.
- Clip lists (editing data) created with the scene selection function can be used on XPRI and other full-feature nonlinear editing systems.

You can perform insert editing and overlay editing with the edit list editing function. For details, see page 90.

Clips

Material recorded with this unit is managed in units called clips. A clip contains the material from a recording start point to a recording end point.

Clips have numbers beginning with C, for example C0001.

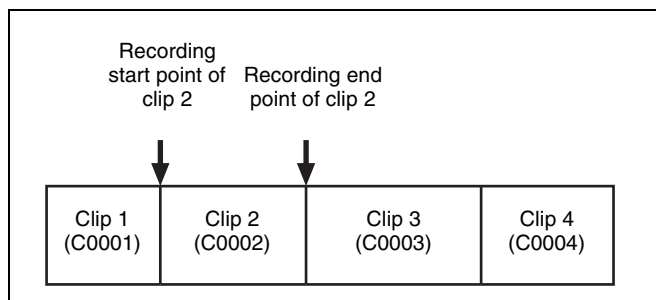

You can also assign titles to your clips and use the titles to manage them, instead of the clip numbers. For more information, “Assigning user-defined clip titles” (page 102).

Clip lists


You can use the scene selection function to select clips from the clips saved on a disc and create a cut edit list called a “clip list”.

Clip lists have numbers beginning with E, for example E0001. Up to 99 clip lists can be saved on a disc.

Sub clips (clips in clip lists)

Clips (or parts of clips) that have been added to a clip list are called “sub clips”. Sub clips are virtual editing data that specify ranges in the original clips. You can use them without modifying the original data.

The following figure illustrates the relation between clips and sub clips.

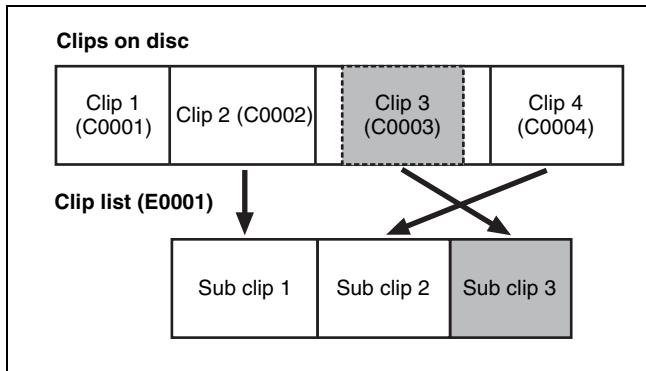

In the above example, the whole of clip 2 has been added as sub clip 1, and the whole of clip 4 has been added as sub clip 2.

Sub clip 3 is part of clip 3. Therefore, when clip list E0001 is played back, clip 4 is played after clip 2, and then the part of clip 3 shown in gray color is played.


Clip list editing (current clip list)

To edit a clip list, you need to load the clip list from the disc into the unit’s internal memory.

The clip list which is currently loaded into the unit memory is called the “current clip list”.

The current clip list is always the target of sub clip creation and editing. Clip list playback also uses the current clip list.

After creating and editing a clip list, you need to save it to disc.

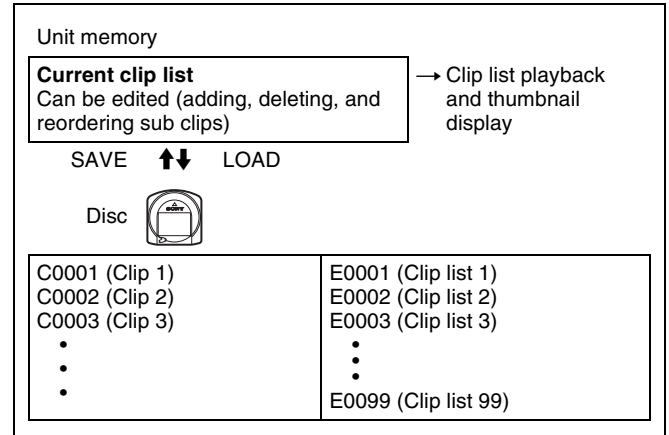

Clip list playback

Clips and clip lists are saved together on a disc.

To play a clip list, insert a disc into the unit, load the clip list that you want to play, and press the PLAY button.

Clips are played according to the data in the clip list.

Creating and editing clip lists

The following table lists the steps in the creation and editing of clip lists with the scene selection function. To create a clip list, you always need to carry out the steps inside the heavy lines. Other steps can be carried out as required.

1	<p>Add sub clips: Use the Add Sub Clips command to add the clips you want to use to a clip list. You can add up to 300 sub clips to one clip list. This operation can be carried out in the following thumbnail screens.</p> <ul style="list-style-type: none"> • Clip thumbnail screen • Expand thumbnail screen • Chapter thumbnail screen • Clip list thumbnail screen
2	<p>Change the sub clip order: Use the Move Sub Clips command to change the order of sub clips in a clip list.</p> <p>Delete sub clips: Use the Delete Sub Clips command to delete specified sub clips from a clip list.</p> <p>Trim sub clips: Use the Trim Sub Clip command to adjust the In and Out points of a sub clip. This function can also be used to adjust the overall duration of the clip list.</p> <p>Set the start timecode: Use the Set Start Time Code command to set the timecode at the start of a clip list.</p>
3	<p>Play the clip list: Use the PLAY button and other playback controls to play the current clip list and check its contents.</p>
4	<p>Save the clip list: Use the Save Clip List or Save Clip List as... command to save the newly created clip list to the disc.</p>

To reedit clip lists on the disc

Use the Load Clip List command to load the clip lists you want to edit, and perform the steps **2** to **4** in the previous section.

You can also delete clip lists on the disc.

For details, see “Managing clip lists” (page 84).

Note

Clip lists can be created and edited even when the write inhibit tab of the disc is set to recording disabled, and when REC INH on the HOME page of the function menu is set to ON. However, if you need to save the clip list, set write inhibit tab and REC INH to enable recording before you create or edit the clip list.

To add sub clips

You can add sub clips to clip lists from with the clip thumbnail screen or the clip list thumbnail screen. However, you must use the clip list thumbnail screen to edit clip lists.

Adding sub clips from the clip thumbnail screen

The following procedure explains operations in the clip thumbnail screen. You can proceed in the same way in the expand thumbnail screen and the chapter thumbnail screen. Expanded blocks are added as sub clips in the expand thumbnail screen, and chapters are added as sub clips in the chapter thumbnail screen.

See page 69 for more information about thumbnail screen operations.

- 1** In the clip thumbnail screen, select the clip that you want to add as a sub clip (multiple selections possible).
- 2** Display the Thumbnail Menu.
- 3** Select Add Sub Clips, and then press the PUSH SET knob or the S.SEL button.

The Add Sub Clip screen appears.

The clip(s) selected in step **1** appear in the upper part of this screen, and the clip list appears in the lower Scene Selection window. The I cursor in the Scene Selection window indicates the location where the currently selected sub clip(s) will be inserted.



To display the total duration after addition of the selected clip

Press the SHIFT button.

- 4** In the Scene Selection window, move the I cursor to the location where you want to insert the clip. (The existing thumbnails arrange themselves to the left and right of the I cursor.)

- 5** Press the PUSH SET knob.

The selected clip is inserted as a sub clip and a “+” mark appears on the thumbnail in the Scene Selection window.

To check the addition results

Move the cursor.

- 6** Press the RETURN button.
This returns you to the Clip thumbnail screen.
- 7** Repeat steps **1** to **6** as required to add more clips.
- 8** Save the clip list (see page 83).

In step **1**, you can press the S.SEL button. This is a shortcut that displays the Add Sub Clip screen immediately. You can also save the clip list immediately in step **5** by executing the Save Clip List command in the Disc Menu.

Adding sub clips from the clip list thumbnail screen

See page 69 for more information about thumbnail screen operations.

- 1** Display the Thumbnail Menu.
- 2** Select Add Sub Clips, and then press the PUSH SET knob.

The Clip List (Add) screen appears.



- 3** Select the sub clips that you want to add from the upper part of the screen (the part where 8 thumbnails are displayed, multiple selections possible).

To select from expanded thumbnails

Press the EXPAND button to display the expand thumbnail screen.

To select from chapter thumbnails

Press the CHAPTER button to display the chapter thumbnail screen.

- 4** Press the PUSH SET knob.

The thumbnail selection is confirmed, and an I cursor appears at the bottom of the Clip List (Add) screen (in the Scene Selection window). The I cursor indicates the location where the currently selected sub clips will be inserted.

To display the total duration after addition of the selected clips

Press the SHIFT button.

- 5** In the Scene Selection window, move the I cursor to the location where you want to insert the clip. (The existing thumbnails arrange themselves to the left and right of the I cursor.)
- 6** Press the PUSH SET knob.
The sub clips are added at the I cursor position, and you return to the clip list thumbnail screen. You can check the results of the addition in that screen.
- 7** Repeat steps **1** to **6** as required to add more clips.
- 8** Save the clip list (*see page 83*).

In step **1**, you can also perform a shortcut operation by pressing the S.SEL button.

To add clips from the clip playback screen (quick insertion)

This method allows you to decide the range to use and add that range as a sub clip while viewing the video in the clip playback screen. It does not use GUI screens. You can do this during recording, playback (including pauses), and searches.

- 1** Find the point that you want to make the start point of the sub clip, and then press the ENTRY button with the ◀ button held down.

An In point is set and the IN button lights.

- 2** Find the point that you want to make the end point of the sub clip, and then press the ENTRY button knob with the ▶ button held down.

An Out point is set and the OUT button lights. (This determines the range of the sub clip to be added.)

To check the timecode of the In point or Out point

Press the ◀ button or the ▶ button.

To cue up the In point or Out point

Press the GOTO button with the ◀ button or ▶ button held down.

To check the duration (time from In point to Out point)

Press the ◀ and ▶ buttons at the same time.

To delete the In point or Out point

Press the DELETE button with the ◀ or ▶ button held down.

To recall a deleted In point or Out point

Press the RECALL button with the IN button or OUT button held down.

- 3** Press the S.SEL button.

A sub clip with the range specified in steps **1** and **2** is added to the end of the clip list.

When you specify a range that spans several clips

Sub clips are generated for each of the clips in the range.

To check the newly added sub clips

You can check the newly added sub clips by displaying the clip list thumbnail screen.

- 4** Repeat steps **1** to **3** as required to add more sub clips.
- 5** Save the clip list (*see page 83*).

To reorder sub clips

See page 69 for more information about thumbnail screen operations.

- 1 In the clip list thumbnail screen, select the thumbnails of the sub clips that you want to move (multiple selections possible).
- 2 Display the Thumbnail Menu.
- 3 Select Move Sub Clips, and then press the PUSH SET knob or the SET button.

The Clip List (Move) screen appears.



- 4 Move the I cursor to the point where you want to move the selected thumbnails.
- 5 Press the PUSH SET knob or the SET button.
The sub clips are moved to the I cursor position.
- 6 Repeat steps 1 to 5 as required.
- 7 Save the clip list (*see page 83*).


To adjust the In and Out points of sub clips (trim)

Proceed as follows to define the range of a scene by changing the positions of the In and Out points.

See page 69 for more information about thumbnail screen operations.

- 1 In the clip list thumbnail screen, select a thumbnail.
- 2 Display the Thumbnail Menu.
- 3 Select Trim Sub Clip, and then press the PUSH SET knob.

The Clip List (Trim) screen appears.

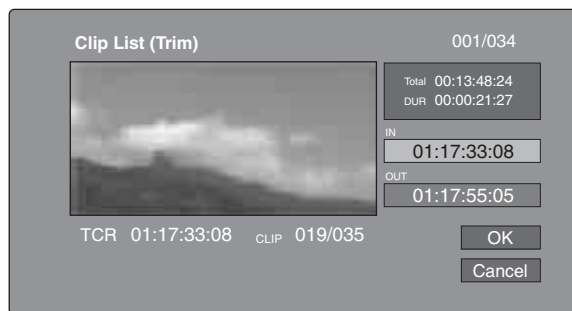

Like the clip playback screen, this screen allows you to play and search all clips on the disc.

To display a list of In and Out point operations that you can perform

Press the MENU button.

- 4 When you find the point that you want to make the start point, select “IN” and then press the PUSH SET knob.

The timecode of the new In point appears in the timecode display, and the Total (total duration) and DUR (clip duration) displays are updated.

- 5 When you find the point that you want to make the end point, select “OUT” and then press the PUSH SET knob.

The timecode of the new Out point appears in the timecode display, and the Total (total duration) and DUR (clip duration) displays are updated.

To cue up the In point or Out point

Display the Thumbnail Menu, select Cue up Inpoint or Cue up Outpoint, and then press the PUSH SET knob.

To cancel the In point or Out point setting

Display the Thumbnail Menu, select Reset Inpoint or Reset Outpoint, and then press the PUSH SET knob.

The In point or Out point setting returns to the previous value.

- 6 Select OK, and then press the PUSH SET knob.
- 7 Repeat steps 1 to 6 as required.
- 8 Save the clip list (*see page 83*).

To delete sub clips

See page 69 for more information about thumbnail screen operations.

- 1 Select the clips to delete in the clip list thumbnail screen (multiple selections possible).

- 2** Display the Thumbnail Menu.
- 3** Select Delete Sub Clips, and then press the PUSH SET knob.
A message appears asking you to confirm the deletion.
- 4** Select OK, and then press the PUSH SET knob.
- 5** Repeat steps **1** to **4** as required.
- 6** Save the clip list (*see page 83*).

To play the clip list

See page 69 for more information about GUI screen operations.

To play using GUI screens

- 1** In the clip list thumbnail screen, select the thumbnail of the sub clip where you want to start play.

To start play from the start of the clip list
Select the thumbnail of the first sub clip.

- 2** Press the PUSH SET knob.

To play using the clip list playback screen

- 1** Display the clip list playback screen.
- 2** Press the PREV button or the NEXT button to display the sub clip that you want to play.

To start play from the first sub clip
Press the SHIFT + PREV buttons to move to the start of the clip list.

- 3** Press the PUSH SET knob.


To change the starting timecode of clip lists

The timecode of clip lists is continuous timecode, unrelated to the timecode of the original clips. By default the timecode (LTC) of the start of the clip list is 00:00:00:00, but it can be set to any value.

See page 69 for more information about thumbnail screen operations.

- 1** In the clip list thumbnail screen, display the Thumbnail Menu.
- 2** Select Set Start Time Code, and then press the PUSH SET knob.

The Set Start Time Code screen appears.

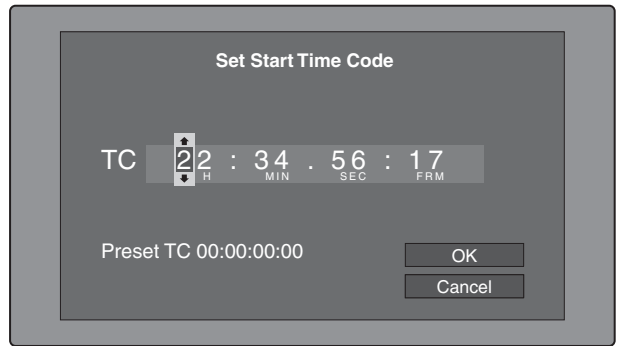

- 3** Press the ◀ or ▶ button to select the digit that you want to change.
- 4** Turn the PUSH SET knob or the shuttle/jog dial to change the value of the digit.
- 5** Repeat steps **3** and **4** as required.

To reset the timecode to 00:00:00:00

Select Reset to Zero in the Thumbnail Menu, and then press the PUSH SET knob.

To preset the frequently used timecode

Select Save Preset TC in the Thumbnail Menu, and then press the PUSH SET knob. The timecode set in steps **4** and **5** is saved as a preset value.

To recall the preset timecode

Select Recall Preset TC in the Thumbnail Menu, and then press the PUSH SET knob.


- 6** Press the PUSH SET knob.
OK is selected.
- 7** Press the PUSH SET knob again.
- 8** Save the clip list (*see page 83*).

To save clip lists

To save under a specified name

See page 69 for more information about thumbnail screen operations.

- 1** In the clip list thumbnail screen, display the Disc Menu.
- 2** Select Save Clip List as..., and then press the PUSH SET knob.
A list of clip lists appears.

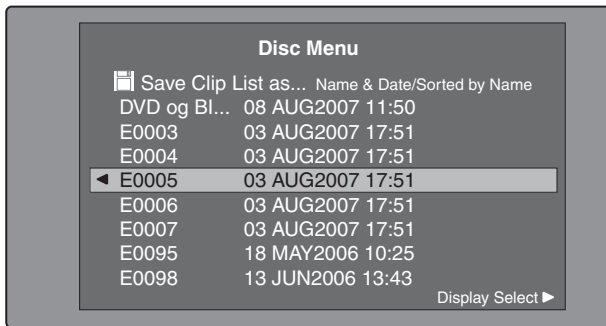

To switch the information displayed for clip lists

Press the ► button.

With each press, the display changes in the order: “Name & Date” > “Name & Title” > “Name & Sort Date” >...

To sort clip lists

Select one of the following orders by selecting Settings > Sort Clip List by... in the Disc Menu.

Name(A-Z): Sort in ascending order by clip list name.

Date(Newest First): Sort by date and time of clip list creation, newest first.

- 3 Select the desired clip list name, and then press the PUSH SET knob.

To save under the same name

The following procedure saves the current clip list under its current name (the name that appears in the clip list thumbnail screen).

See page 69 for more information about thumbnail screen operations.

- 1 In the clip list thumbnail screen, display the Disc Menu (see page 68).
- 2 Select Save Clip List, and then press the PUSH SET knob.

The clip list is saved. However, Save Clip List as... is executed when the name displayed in the clip list thumbnail screen is “no name”.

Note

If you press the EJECT button or move the on/standby switch to the ⏻ position before saving a new or edited clip list, a message appears asking if you want to discard your changes and continue. Follow the instructions in the message to continue or cancel the operation.

Managing clip lists


To load clip lists

The following procedure loads a clip list stored on the disc into the unit’s internal memory as the current clip list.

See page 69 for more information about thumbnail screen operations.

- 1 In the clip list thumbnail screen, display the Disc Menu.
- 2 Select Load Clip List, and then press the PUSH SET knob.

A list of clip lists stored on the disc appears.

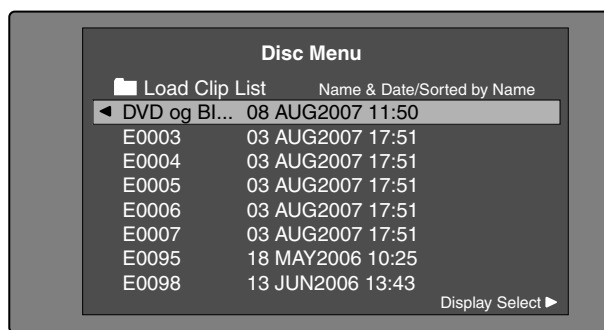

- 3 Select the desired clip list, and then press the PUSH SET knob.

The name of the clip list selected here appears in the clip list thumbnail screen. When you execute the Save Clip List command in the Disc Menu, the clip list will be saved under that name.

To create a new clip list

Select New File and then press the PUSH SET knob.

To clear clip lists

The following procedure clears the current clip list from the unit’s internal memory.

See page 69 for more information about thumbnail screen operations.

- 1 In the clip list thumbnail screen, display the Disc Menu.
- 2 Select Clear Clip List, and then press the PUSH SET knob.

A message appears asking you to confirm that you want to clear the clip list.

- 3 Select OK, and then press the PUSH SET knob.

The current clip list returns to the unnamed state “(no name)”.

Clip lists will be displayed in the specified order the next time that you carry out an operation such as loading a clip list.

To delete clip lists

The following procedure deletes a clip list from the disc.


See page 69 for more information about thumbnail screen operations.

- 1 In the clip list thumbnail screen, display the Disc Menu.
- 2 Select Delete Clip List, and then press the PUSH SET knob.

A list of clip lists appears.

- 3 Select the clip list that you want to delete, and then press the PUSH SET knob.

A message appears asking you to confirm the deletion.

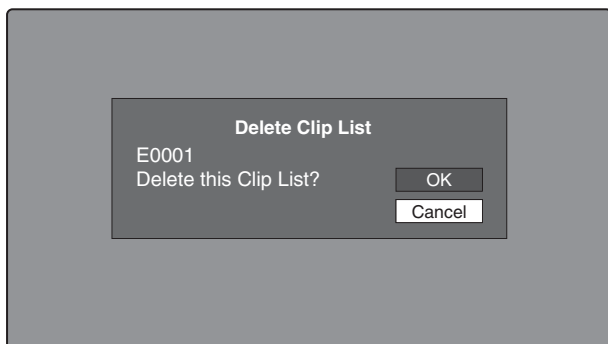

- 4 Select OK, and then press the PUSH SET knob.

To sort clip lists

See page 69 for more information about thumbnail screen operations.

- 1 In the clip list thumbnail screen, display the Disc Menu.
- 2 Select Settings, and then press the PUSH SET knob.
- 3 Select Sort Clip List by..., and then press the PUSH SET knob.
- 4 Select one of the following sort methods, and then press the PUSH SET knob.

Name(A-Z): Sort in ascending order by clip list name.

Date(Newest First): Sort by date and time of clip list creation, newest first.


Disc Operations

Checking disc properties

See page 69 for more information about GUI screen operations.

- 1 Display the Disc Menu.
- 2 Select Disc Properties, and then press the PUSH SET knob.

The Disc Properties screen appears.

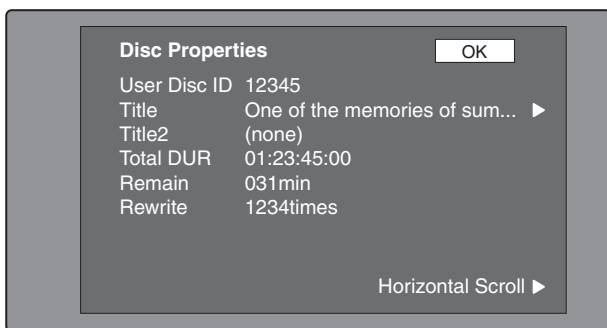

User Disc ID: User disc ID ^{1), 2)}

Title: Title ¹⁾

Title2: Title2 ^{1), 2)}

Total DUR: Total recording time

Remain: Remaining recording time

Rewrite: Number of times rewritten

- 1) This can be specified with the PDZ-1 Proxy Browsing Software on the supplied XDCAM Application Software CD-ROM.
- 2) When the unit's area of use (UC/J MODEL SELECT) (see page 36) is set to "UC", titles can be displayed in European languages.

To scroll hidden parts of the string into view

When a ◀ or ▶ mark is displayed for an item, you can press the ◀ or ▶ button to scroll the display by one character for each press.

The ▲/MARK1 and ▼/MARK2 buttons scroll the beginning and end of the string into view.

To return to the previous screen

Press the PUSH SET knob.

To edit disc information

You can edit the user disc ID, title ¹⁾, and title2 by using a software keyboard.

- 1) Only ASCII characters can be used for the title.

See "To edit clip information" (page 74) for more information about operations.

Using planning metadata

Planning metadata is a file that contains metadata about the clips to be shot and recorded.

To use planning metadata, you will need to save a file in advance in the specified location of a media, and insert the media into this unit.


See "To set clip names by using planning metadata" (page 146) for details.

To load planning metadata files

See page 69 for more information about GUI screen operations.


- 1 Display the Disc Menu.
- 2 Select Load Planning Metadata/Select Drive, and then press the PUSH SET knob.

A media selection screen appears.

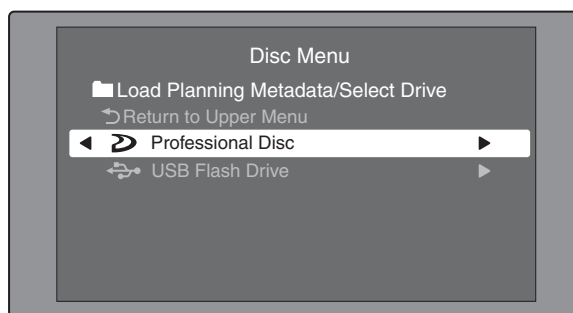

- 3 Select the media where your planning metadata file is stored, and then press the PUSH SET knob.

A list of the planning metadata files stored on the media appears.

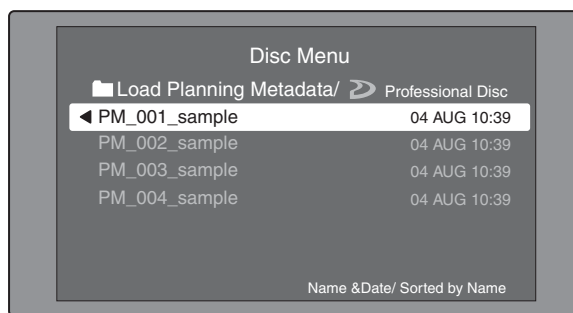

- 4 Select the desired planning metadata file, and then press the PUSH SET knob.

The selected planning metadata file is loaded into the unit's memory, and the Planning Metadata Properties screen appears.

- 5 Check the information that appears, and press the PUSH SET knob.

To sort planning metadata

You can sort planning metadata by operating in the same way as in “*To sort clip lists*” (page 85)). However, in step 3, select Sort Planning Metadata by....

The planning metadata will be displayed in the specified order the next time you load planning metadata.


To check planning metadata properties

You can check the properties of the planning metadata that is loaded into this unit’s memory, including the date and time of creation and the clip titles.

See page 69 for more information about GUI screen operations.

- 1 Display the Disc Menu.
- 2 Select Planning Metadata Properties, and then press the PUSH SET knob.

The Planning Metadata Properties screen appears.

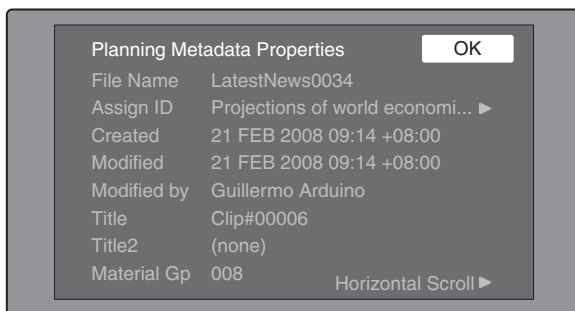

File Name: Planning metadata file name

Assign ID: Assign ID

Created: Date and time of creation

Modified: Date and time of most recent modification

Modified by: Name of person who modified the file

Title: Title ¹⁾

Title2: Title 2

Material Gp: Material group name

1) This can be set as the clip name (*see page 146*).

To scroll hidden parts of the string into view

When a ◀ or ▶ mark is displayed for an item, you can press the ◀ or ▶ button to scroll the display by one character for each press.

The ▲/MARK1 and ▼/MARK2 buttons scroll the beginning and end of the string into view.

To return to the previous screen

Press the PUSH SET knob.

To clear planning metadata

See page 69 for more information about GUI screen operations.

- 1 Display the Disc Menu.
- 2 Select Clear Planning Metadata, and then press the PUSH SET knob.

A message appears asking if you are sure that you want to clear the planning metadata.

- 3 Select OK, and then press the PUSH SET knob.

The planning metadata is cleared from this unit’s memory.

To switch the title display in the display screen

When planning metadata is loaded into this unit, you can select the format of the title to display in the display screen.

See page 69 for more information about GUI information.

- 1 Display the Disc Menu.
- 2 Select Settings, and then press the PUSH SET knob.
- 3 Select Planning Clip Name in Clip Info. Area and then press the PUSH SET knob.

See page 27 for more information about the clip information area.

- 4 Select one of the following, and then press the PUSH SET knob.

Off: Do not display a title.

ASCII Clip Name: Display the ASCII format title (*see page 146*)


Clip Name: Display the UTF-8 format title (*see page 146*)

Formatting discs

See page 69 for more information about GUI screen operations.

- 1 Display the Disc Menu.
- 2 Select Format Disc, and then press the PUSH SET knob.

A message appears asking you to confirm the format.

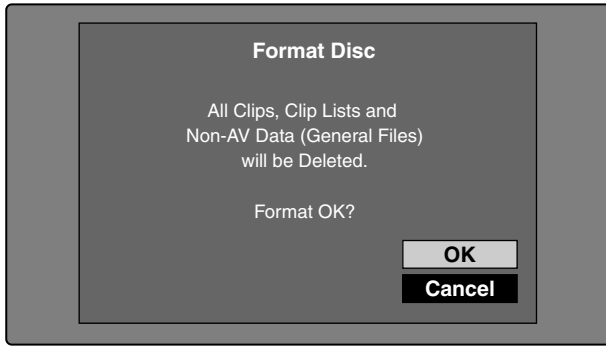

- 3 Select OK, and then press the PUSH SET knob.

To cancel the format

Select Cancel, and then press the PUSH SET knob.

To continue by formatting another disc

Exchange the disc, select OK, and then press the PUSH SET knob.

To exit the formatting screen

Press the PUSH SET knob with Exit selected.

To disable the Format Disc command

To prevent inadvertent disc formatting, resulting in the loss of recorded data, you can disable the Format Disc command.

See page 69 for more information about GUI information.

- 1 Display the Disc Menu.
- 2 Select Settings, and then press the PUSH SET knob.
- 3 Select Disable “Format Disc”, and then press the PUSH SET knob.
- 4 Select Disable, and then press the PUSH SET knob.

Shortcut List

You can access many functions from the buttons, without displaying a menu (shortcut operations). Shortcuts are available for the following functions. The plus sign (+) indicates that one button is held down while another is pressed, for example “SHIFT + STOP”.

Note

The same shortcut may access different functions, depending on the screen that is active when it is executed.


Function	Operation
Clip List Thumbnail (display the clip list thumbnail screen)	SUB CLIP
Expand Thumbnail (display expand thumbnail screen)	EXPAND
Chapter Thumbnail (display chapter thumbnail screen)	CHAPTER
Essence Mark Thumbnail (display essence mark thumbnail screen)	SHIFT + THUMBNAIL
Add Sub Clip (add sub clip)	S.SEL
Delete Clip (delete clip)	DELETE
Lock/Unlock Clip (lock or unlock clip)	SHIFT + STOP
Set Inpoint (set In point)	IN + ENTRY
Set Outpoint (set Out point)	OUT + ENTRY
Cue up Inpoint (cue up In point)	IN + GOTO
Cue up Outpoint (cue up Out point)	OUT + GOTO
Reset Inpoint (reset In point)	IN + DELETE
Reset Outpoint (reset Out point)	OUT + DELETE
Recall Inpoint (Recall a deleted In point)	IN + RECALL
Recall Outpoint (Recall a deleted Out point)	OUT + RECALL
Cue up (cue up)	PUSH SET knob ^{a)}
Cue up & Play (cue up and play)	PLAY ^{b)}
Page Down (switch to next page)	SHIFT + ↓/MARK2
Page Up (switch to previous page)	SHIFT + ↑/MARK1
Go To End (go to the last item)	SHIFT + NEXT
Go To Top (go to the first item)	SHIFT + PREV
Select Multi Clip (select multiple clips)	SHIFT + → or SHIFT + ←
Exit (exit the current thumbnail screen)	THUMBNAIL

a) If Settings >SET Key on Thumbnail in the Disc Menu is set to “Cue up & Play”, then playback starts as soon as cueup is ready.

b) If Settings >SET Key on Thumbnail in the Disc Menu is set to “Cue up & Play”, then pressing the PUSH SET knob has the same effect.


When a sub clip is selected in the EDIT LIST screen, you can switch to the Clip List (Trim) screen by pressing the

RECALL button. (To return to the EDIT LIST screen, press the RETURN button.)

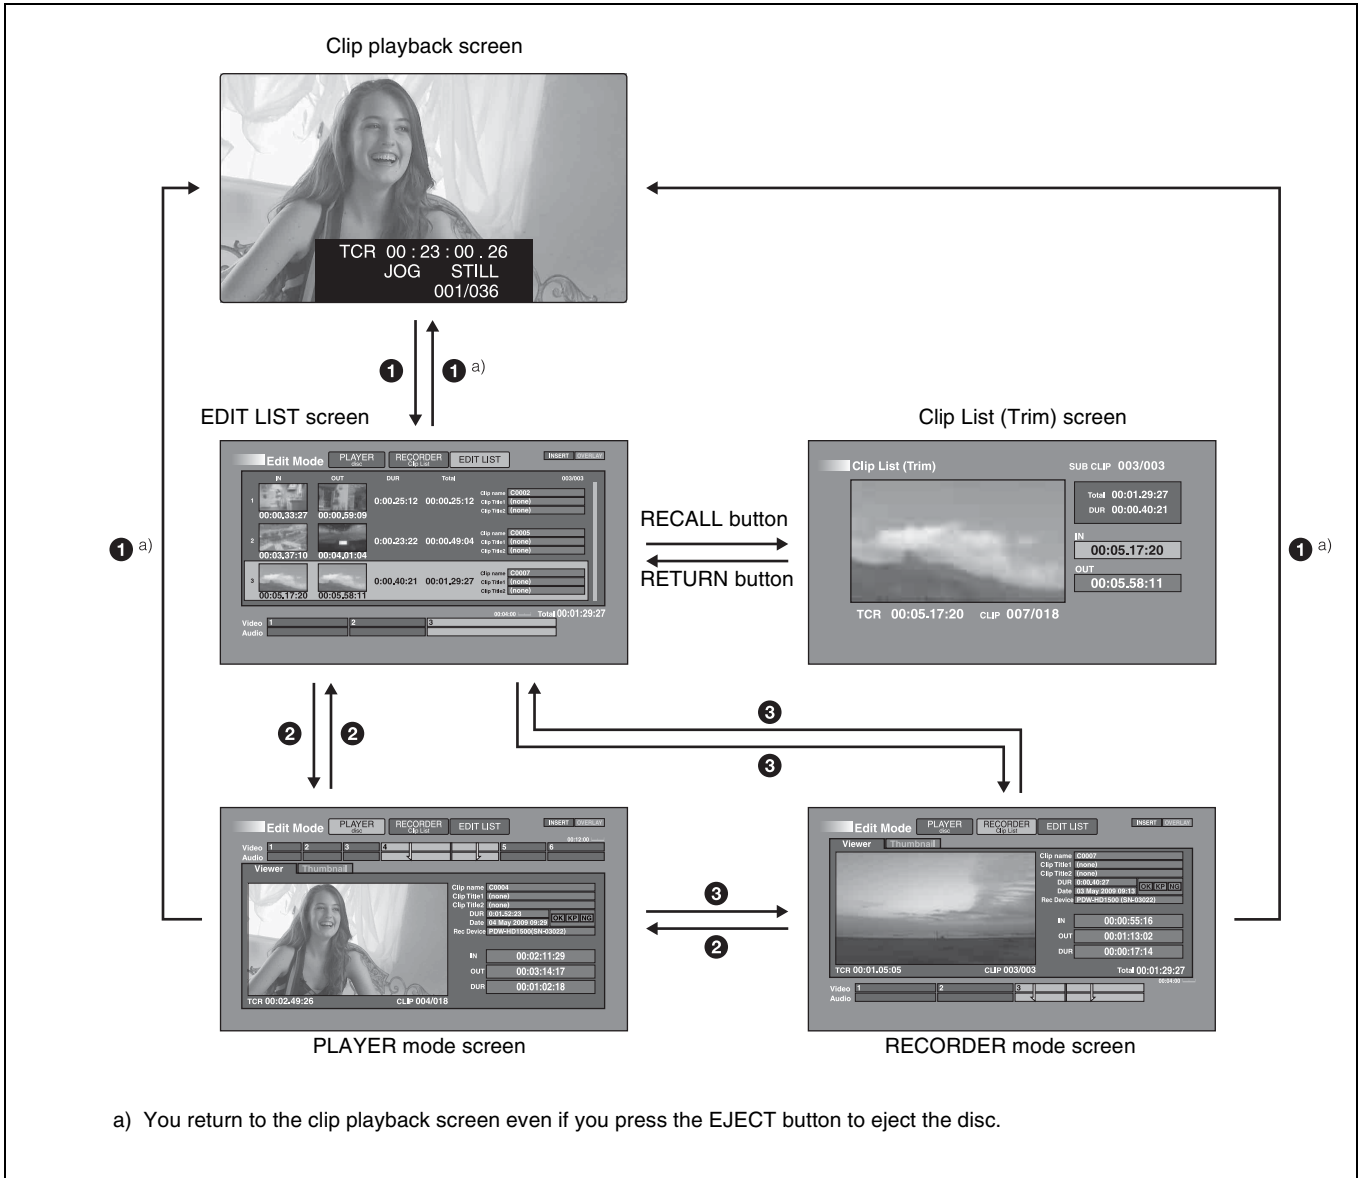

Parts of the editing screens

EDIT LIST screen

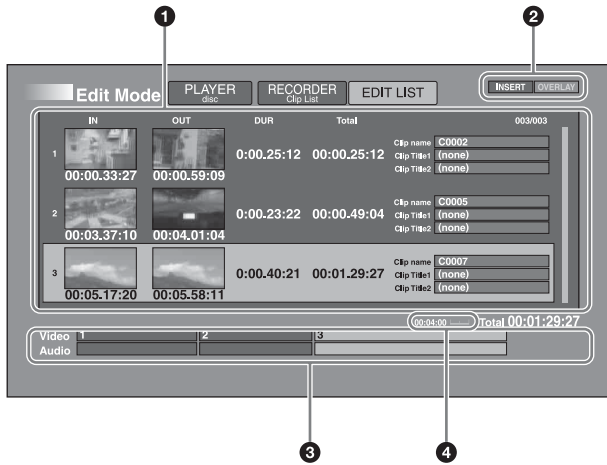

1 Clip list

Displays a list of the sub clips on the specified editing device. The selected sub clip is highlighted.

The following clip properties are shown for each sub clip.

IN: In point

OUT: Out point

DUR: Duration (from In to Out point)

Total: Total duration of all sub clips on the timeline.

Clip name: Clip name

Clip Title1: Clip title 1

Clip Title2: Clip title 2

2 Editing mode

Displays the editing mode selected with EDIT MODE in the Edit Menu.

INSERT: Insert mode

OVERLAY: Overlay mode


3 Timeline

Displays sub clips along the temporal axis. The total duration of all sub clips is displayed in the Total field. The sub clip that is selected in the clip list is highlighted.

You can enlarge or reduce the time scale of the timeline by pressing the + TRIM or – TRIM button.

4 Timeline reduced scale display

PLAYER mode screen (When PLAYER SEL is set to “disc”) 1)

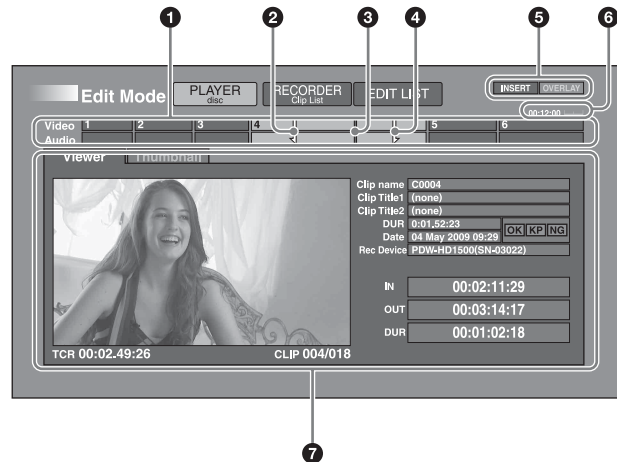

1) When PLAYER SEL in the Edit Menu is set to “external”, the PLAYER mode screen is always full-screen display.

1 Timeline

Displays along a temporal axis the clips on a disc. The currently selected clip is highlighted.

You can enlarge or reduce the time scale of the timeline by pressing the + TRIM or – TRIM button.

2 In point mark

Displays on the timeline the position of the In point of the currently selected clip.

3 Playline

Displays on the timeline the current position of the frame in the viewer.

4 Out point mark

Displays on the timeline the position of the Out point of the currently selected clip.

5 Editing mode

Displays the editing mode selected with EDIT MODE in the Edit Menu.

INSERT: Insert mode

OVERLAY: Overlay mode

6 Timeline reduced scale display

7 Viewer/thumbnail display

Displays a thumbnail list of clips on a disc. You can use the expand and chapter functions to expand or search inside the thumbnails in the thumbnail list.

The following clip properties are displayed for the currently selected clip.

Clip name: Clip name

Clip Title1: Clip title 1


Clip Title2: Clip title 2

DUR: Duration (from the start point to the end point)

Date: Date and time of recording

Rec Device: Device that recorded the clip
OK/NG/KP (KEEP): Clip flag (if set, the corresponding indicator lights)
IN: In point
OUT: Out point
DUR: Duration (from In point to Out point)

RECORDER mode screen

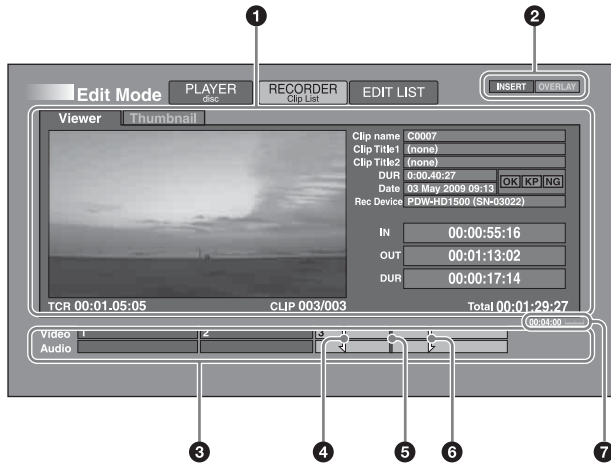

1 Viewer/thumbnail display

Displays the video of the currently selected sub clip, or a thumbnail list of the sub clips on the specified editing media or device. You can use the expand and chapter functions to expand or search inside the thumbnails in the thumbnail list.

The following clip properties are displayed for the currently selected clip.

Clip name: Clip name
Clip Title1: Clip title 1
Clip Title2: Clip title 2

DUR: Duration (from the start point to the end point)
Date: Date and time of recording
Rec Device: Device that recorded the clip
OK/NG/KP (KEEP): Clip flag (if set, the corresponding indicator lights)
IN: In point
OUT: Out point
DUR: Duration (from In point to Out point)

2 Editing mode

Displays the editing mode selected with EDIT MODE in the Edit Menu.

INSERT: Insert mode
OVERLAY: Overlay mode

3 Timeline

Displays along a temporal axis the editing target sub clips. The currently selected sub clip is highlighted. You can enlarge or reduce the time scale of the timeline by pressing the + TRIM or – TRIM button.

4 In point mark

Displays on the timeline the position of the In point of the currently selected sub clip.

5 Playline

Displays on the timeline the current position of the frame in the viewer.

6 Out point mark

Displays on the timeline the position of the Out point of the currently selected sub clip.

7 Timeline reduced scale display

Displaying the Edit Menu

With one of the editing screens displayed, press the MENU button.

To return to the original screen, press the RETURN button.

Edit Menu

The Edit Menu enables the following operations and settings. (The factory default setting is underlined in the Operation/setting column.)

Item	Operation/setting
Load Clip List	Loads an edit list into the unit's memory.
Save Clip List as...	Saves an edit list to the disc under a specified name.
PLAYER SEL	Selects the player (the device where the material clips are saved). <u>disc</u> : The disc loaded in the recorder <u>external</u> : External device
EDIT MODE	Selects the edit mode. <u>insert</u> : Insert mode <u>overlay</u> : Overlay mode

Item	Operation/setting
EDIT POINT	Selects the handling of audio playback at edit points. (The options are the same as those of setup menu item 320.) cut: Carry out a cut edit (possibly resulting in audio discontinuities at the edit point). fade: Fade out and fade in.
Set Start Time Code	Sets the start timecode.
P-ROLL TIME	Sets the preroll time. (The options are the same as those of setup menu item 001.) 0 Sec... 5 Sec... 30 Sec: Set the preroll time within the range from 0 and 30 seconds in steps of 1 second. (A preroll time of at least 5 seconds is recommended.)

Editing screen operations

To select a clip or sub clip in the EDIT LIST screen

Do one of the following.

- Turn the PUSH SEL knob.
- Press the ▲/MARK1 or ▼/MARK2 button.

To switch between the viewer and thumbnail display in the PLAYER and RECORDER mode screens

Press the THUMBNAIL/ESSENCE MARK button. With each press, the screen switches between the viewer and thumbnail display.

See page 69 for more information about screen operations when thumbnails are displayed.

Note

When PLAYER SEL in the Edit Menu is set to “external”, the PLAYER mode screen is always full-screen display.

To enlarge or reduce the time scale of the timeline

To enlarge the scale, press the + TRIM button. To reduce it, press the – TRIM button.

Editing Operations


Editing modes

This section explains how player materials are added to the recorder timeline, which is editing target, in the various editing modes.

Insert mode editing

In insert mode editing, player material is added as sub clips at specified positions on the recorder timeline. Sub clips (or parts of sub clips) at and after the insertion position are pushed back toward the end of the timeline.


The following figure shows a typical example of 3-point editing.

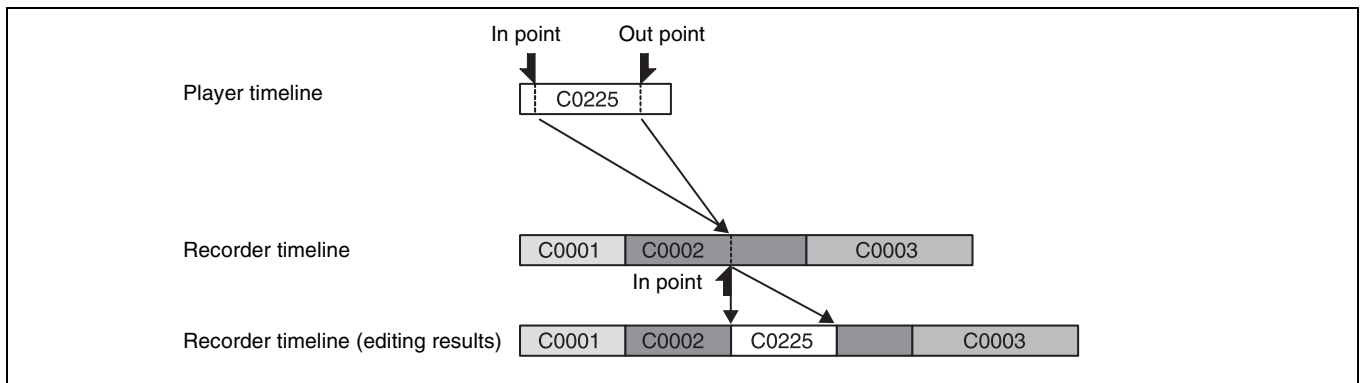

Overlay mode editing


In overlay mode editing, player material is added as sub clips at specified positions on the recorder timeline, overwriting the material already there.

The following figure shows a typical example of 3-point editing.

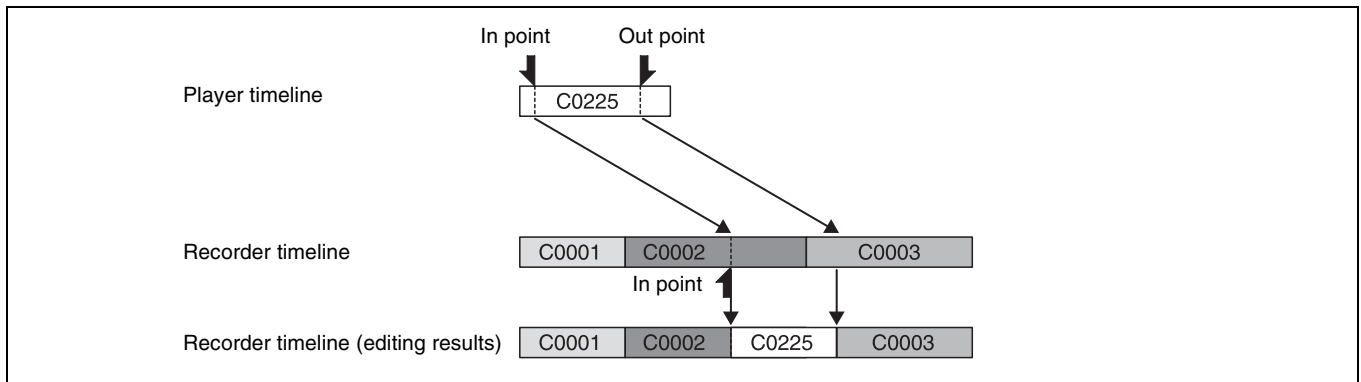

Replace editing

In insert editing, if you specify all four of the edit points, then the specified range on the recorder timeline is replaced with the player material.

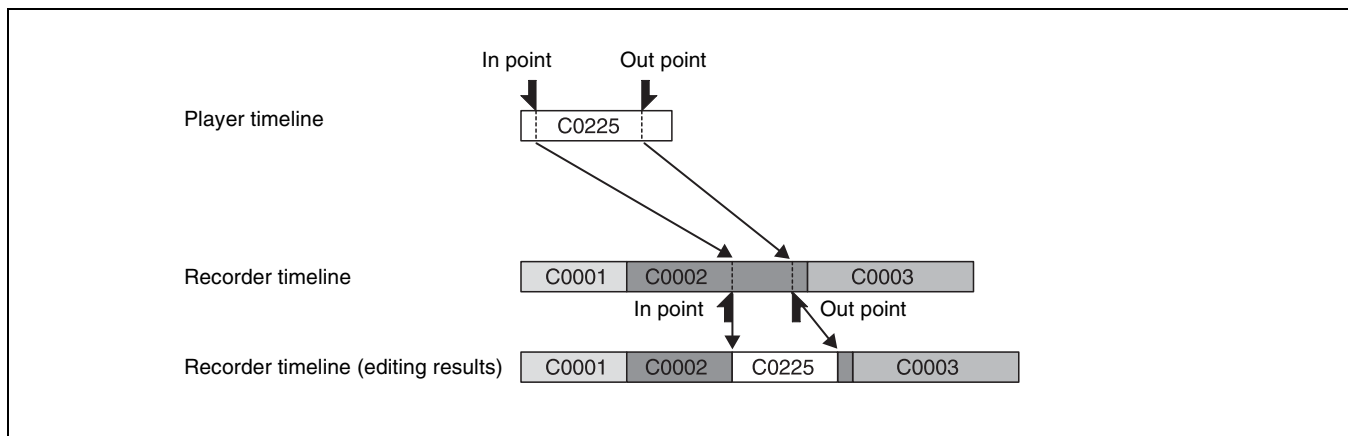

Executing edits

Before starting, insert a writable disc containing recorded clips into this unit. If you will be using a two-unit system with an external player, insert a tape or disc containing the recorded material into the player.

See page 42 for information about connections in a two-unit editing system.

- 1 In the clip playback screen, press the EDIT button.

The screen changes to the EDIT LIST screen.

- 2 Select Load Clip List in the Edit Menu, and then load the editing target edit list by selecting it from the list that appears.

If you continue editing without loading an edit list here, then later (when you executed the AUTO EDIT operation in step **10**) save an editing result.

- 3 Select PLAYER SEL in the Edit Menu, and select the media or device that contains the editing target material by selecting one of the following.

- disc
- external (only in a two-unit editing system configuration)

- 4 Press the PLAYER button.

The screen changes to the PLAYER mode screen and a list of the clips appears, showing the clips in the media or device selected in step **3**.

To select clips from a thumbnail list

You can select clips from a thumbnail list when you have set PLAYER SEL in the Edit Menu to “disc”. Switch to thumbnail display by pressing the THUMBNAIL button, and then select a clip. Next, press the PUSH SET knob or the SET button to return to the viewer display.

- 5 Use the PLAY, PAUSE, and STOP buttons and the shuttle/jog dial to play the clip, and set edit points in the clip.

To enlarge or reduce the scale of the timeline
Press the + TRIM or – TRIM button.

To set In or Out points

With the IN or OUT button held down, press the ENTRY button.

To jump to In or Out points

With the IN or OUT button held down, press the GOTO button.

To adjust the positions of In or Out points

With the IN or OUT button held down, press the – TRIM or + TRIM button.

To delete In or Out points

With the IN or OUT button held down, press the DELETE button.

To recall a deleted In point or Out point

Press the RECALL button with the IN button or OUT button held down.

- 6 Press the RECORDER button.

The screen changes to the RECORDER mode screen, and sub clips in the edit list that was loaded in step **2** appear.

When there are no sub clips

Sub clips are not displayed when a new edit list is loaded and when no edit list is loaded.

- 7 Select EDIT MODE in the Edit Menu to select the editing mode (see page 95).

- 8** Use the PLAY, PAUSE, and STOP buttons and the shuttle/jog dial to play the edit list, and set edit points in the edit list (see step 5).

When there are no sub clips

This operation is not needed, because edit points cannot be set.

If you skip setting edit points

The material is added at the playline position.

To enlarge or reduce the scale of the timeline

Press the + TRIM or – TRIM button.

To modify audio transitions at edit points

Select EDIT POINT in the Edit Menu, and then select “cut” or “fade” (fade out and fade in).

Note

Depending on the combination of edit mode and edit point settings, it may not be possible to execute the edit. In this case, the DELETE button flashes. Delete one of the edit points, and check that the DELETE button is not lit.


- 9** Press the PREVIEW button,

The editing screen changes to a full-screen viewer, which plays the edit section, including the preroll and postroll sections.

To reset edit points, repeat steps 5 to 9.

Preview execution range

The following figure shows the preview execution range for an example in which In and Out points were set in material C0225, and then material C0225 was inserted into sub clip C0002.

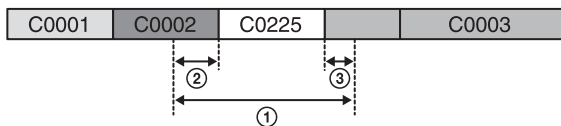

- ① Preview execution range
- ② Preroll time ¹⁾
- ③ Postroll time

- 1) When PLAYER SEL in the Edit Menu is set to “disc”: 3 seconds
When PLAYER SEL in the Edit Menu is set to “external”: The time specified by P-ROLL TIME in the Edit Menu.

Note

When PLAYER SEL in the Edit Menu is set to “external” and EDIT MODE is set to “insert”, the postroll section is not played.

- 10** Press the AUTO EDIT button.

The clip range specified in step 7 is added to the edit list in the edit mode specified in step 9, and the updated edit list is saved automatically.

If you did not load an edit list in step 2, use the Save Clip List as... command in the Edit Menu to save the edit list (see page 83).

When two edit points or less have been set, the editing screen changes into full-screen playback of a section until the edit section is confirmed, including the preroll and postroll sections.

Note

The preroll and postroll sections are not played when PLAYER SEL in the Edit Menu is set to “external”.

If you started an open-end edit


If you started an open-end edit (by setting the material and edit list In points only), then view the playback on the video monitor, watching for a frame to use as the end of the material. When the frame appears, press the ENTRY button while holding down the OUT button, or press the STOP button.

- 11** To add more material, repeat steps 3 to 10.

To adjust the In and Out points of sub clips (trim)

- 1** In the EDIT LIST screen, select a sub clip.
- 2** Press the RECALL button.

The Clip List (Trim) screen appears.

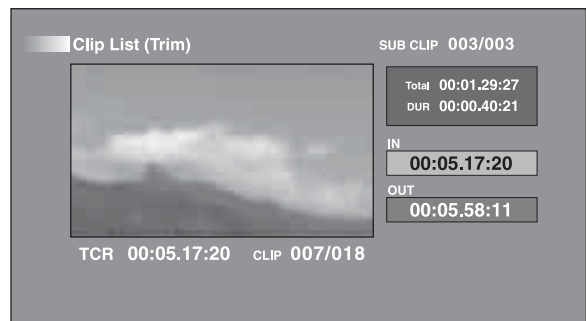

To display a list of In and Out point operations that you can perform

Press the MENU button.

- 3** When you find the point that you want to make the start point, select “IN” and then press the PUSH SET knob.

The timecode of the new In point appears in the timecode display, and the Total (total duration) and DUR (clip duration) displays are updated.

- 4 When you find the point that you want to make the end point, select “OUT” and then press the PUSH SET knob.

The timecode of the new Out point appears in the timecode display, and the Total (total duration) and DUR (clip duration) displays are updated.

To cue up the In point or Out point

Display the Edit Menu, select Cue up Inpoint or Cue up Outpoint, and then press the PUSH SET knob.

To cancel the In point or Out point setting

Display the Edit Menu, select Reset Inpoint or Reset Outpoint, and then press the PUSH SET knob.

The In point or Out point setting returns to the previous value.

- 5 Press the AUTO EDIT button.

The original sub clip is replaced with the range specified in steps **3** and **4**, and the updated edit list is saved automatically.

If an edit list has not been loaded, use the Save Clip List as... command in the Edit Menu to save the edit list (*see page 83*).

- 6 Repeat steps **1** to **5** as required.

Overview

A remote computer can be connected to this unit and used to operate on recorded data which has been saved in data files, such as video and audio data files.

There are two ways to connect a remote computer.


- **FAM connection**
Connect the **i** (i.LINK) S400 FAM connector on this unit to the i.LINK (IEEE1394) connector on the remote computer, using an i.LINK cable (see page 38).
- **FTP connection**
Connect the network connectors on this unit and the remote computer, using a network cable (see page 38).

Directory structure

The following figure shows the directory structure of discs visible to a remote computer.

Note


This structure is not the same as the actual structure recorded on the disc.

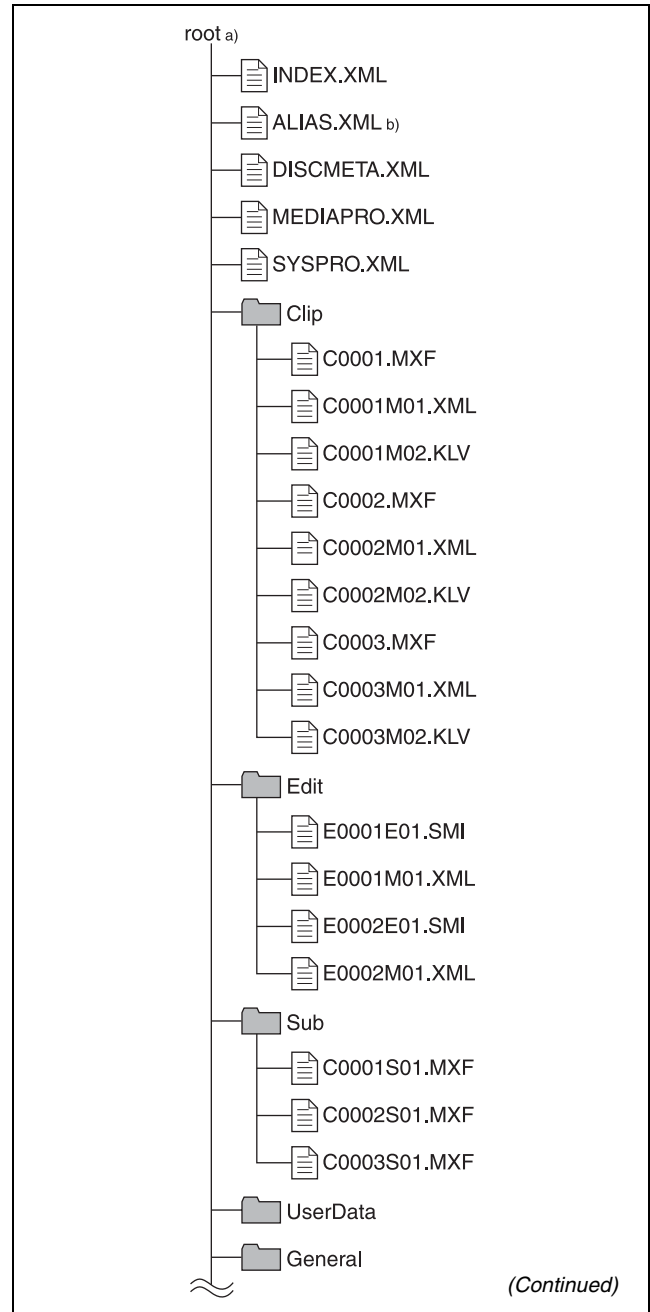

a) Root directory

b) Only when sub item NAMING FORM of setup menu item 036 is set to "free"

(Continued)

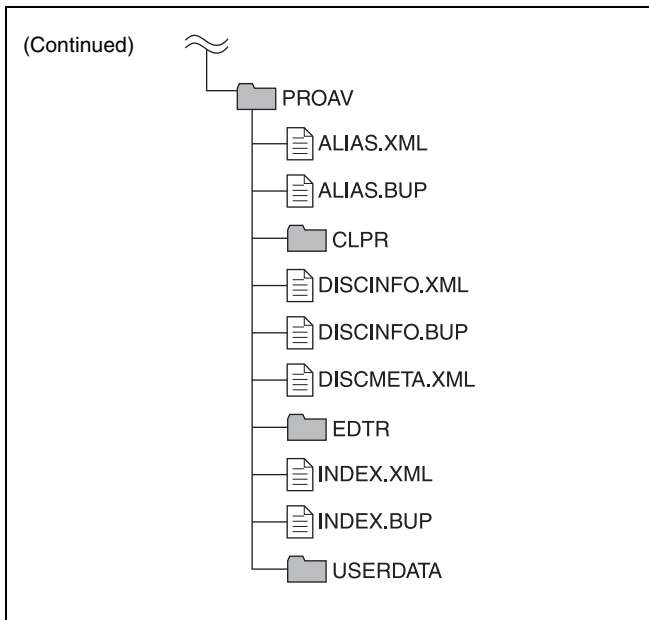

File operation restrictions

This section explains which operations are possible on files stored in each directory.

When required, the following operation tables distinguish reading and writing from partial reading and writing.

Read: Read data sequentially from the start to the end of the file.

Partial read: Read only a part of the data in the file.

Write: Write data sequentially from the start to the end of the file.

Partial write: Write data to a part of the file only.

Note

Operations other than Read and Partial read are possible only when the Write Inhibit tab of the disc is set to recording enabled.

Root directory

File name	Content	Operations				
		Read/Partial read	Write/Partial write	Rename	Create	Delete
INDEX.XML	Contains data for management of the material on the disc.	Yes	No	No	No	No
ALIAS.XML ^{a)}	Contains conversion tables for assigning user-defined names to clips and clip lists.	Yes	No	No	No	No
DISCMETA.XML	Contains metadata to indicate the disc properties.	Yes	Yes ^{b)}	No	No	No
MEDIAPRO.XML	Contains a list of material on the disc, basic properties, related information, and information about access methods.	Yes	No	No	No	No
SYSPRO.XML	Contains information about device system settings and menu settings.	Yes	No	No	No	No
Other files	Files other than the above	–	No	–	No	–

a) Only when sub item NAMING FORM of setup menu item 036 is set to “free”

b) Only files which can be written by XDCAM

Notes

- Directories cannot be created in the root directory.

- The directories in the root directory (Clip, Edit, Sub, UserData, General, and PROAV) cannot be deleted or renamed.

Clip directory

File name	Content	Operations				
		Read/Partial read	Write/Partial write	Rename	Create	Delete
C*.MXF ^{a)}	Clip file created by recording (MXF file) *: 0001 to 9999	Yes	Yes ^{b), c)}	Yes ^{d)}	Yes ^{b)}	Yes ^{e)}
C*M01.XML ^{a)}	Metadata file generated automatically when C*.MXF file is created. *: 0001 to 9999	Yes	Yes ^{f)}	No ^{g)}	No ^{h)}	No ⁱ⁾
C*M02.KLV ^{a)}	User metadata file. This type of file is generated automatically during recording via an FTP or FAM connection when the unit recognizes that an MXF file contains metadata that was generated by a non-XDCAM device. *: 0001 to 9999	Yes	Yes ^{e)}	No ^{g)}	Yes ^{f)}	Yes ⁱ⁾
Other files	Files other than the above	–	No	–	No	–

- a) The unit can handle files with user-defined names in the “C*” part.
b) Only files which are 2 seconds or longer in length, in a format matching the format (system frequency) and recording format (MPEG HD and number of audio channels) of the recorded sections of the disc, and which can be overwritten by XDCAM.
c) Overwriting is not possible.
d) Only when sub item NAMING FORM of setup menu item 036 is set to “free”.
e) Any clip may be selected and deleted.
f) Only files which can be written by XDCAM

- g) When the “C*” part of a C*.MXF file name is changed, a C*M01.XML file and a C*M02.KLV file with the same name in the “C*” part is also changed automatically.
h) When a C*.MXF file is created, a C*M01.XML file with the same name in the “C*” part is created automatically.
i) When a C*.MXF file is deleted, a C*M01.XML file and a C*M02.KLV file with the same name in the “C*” part is also deleted automatically.

Note

Directories cannot be created in the Clip directory.

Edit directory

File name	Content	Operations				
		Read/Partial read	Write/Partial write	Rename	Create	Delete
E*E01.SMI ^{a)}	Clip list file *: 0001 to 0099	Yes	Yes ^{b)}	Yes ^{c)}	Yes ^{d)}	Yes
E*M01.XML ^{a)}	Metadata file generated automatically when E*E01.SMI file is created. *: 0001 to 0099	Yes	Yes ^{b)}	No ^{e)}	No ^{f)}	No ^{g)}
Other files	Files other than the above	–	No	–	No	–

- a) The “E*” part can be changed to a user-defined name.
b) Only files which can be written by XDCAM. Partial writing is not possible.
c) Only when sub item NAMING FORM of setup menu item 036 is set to “free”.
d) Only files which can be written by XDCAM
e) When the “E*” part of an “E*01.SMI” file name is changed, an E*M01.XML file with the same name in the “E*” part is also changed automatically.
f) When an E*E01.SMI file is created, an E*M01.XML file with the same name in the “E*” part is also generated automatically.
g) When an E*E01.SMI file is deleted, an E*M01.XML file with the same name in the “E*” part is also deleted automatically.

Note

Directories cannot be created in the Edit directory.

Sub directory

File name	Content	Operations				
		Read/Partial read	Write/Partial write	Rename	Create	Delete
C*S01.MXF ^{a)}	Proxy AV data (MXF) file generated automatically when a C*.MXF file is created. *: 0001 to 9999	Yes	No	No ^{b)}	No ^{c)}	No ^{d)}
Other files	Files other than the above	–	No	–	No	–

- a) The “C*” part can be changed to a user-defined name.
 b) When the “C*” part of a C*.MXF file name is changed, a C*S01.MXF file with the same name in the “C*” part is generated automatically.
 c) When a C*.MXF file is created, a C*S01.XML file with the same name in the “C*” part is generated automatically.
 d) When a C*.MXF file is deleted, the C*S01.XML file with the same name in the “C*” part is also deleted automatically.

Note

Directories cannot be created in the Sub directory.

UserData directory

File name	Content	Operations				
		Read/Partial read	Write/Partial write	Rename	Create	Delete
Any file		Yes	Yes	Yes ^{a)}	Yes	Yes

- a) UTF-8 file names can be up to 63 bytes in length. (Depending on the character type, file names (including extension) may be limited to 21 characters.)

The following directory operations are possible in the UserData directory.

- Directory creation (up to 62 levels, including the UserData directory)
- Deletion and renaming of directories

General directory

File name	Content	Operations				
		Read/Partial read	Write/Partial write	Rename	Create	Delete
Any file		Yes	Yes	Yes ^{a)}	Yes	Yes

- a) UTF-8 file names can be up to 63 bytes in length. (Depending on the character type, file names (including extension) may be limited to 21 characters.)

The following directory operations are possible in the General directory.

- Directory creation (up to 63 levels, including the General directory)
- Deletion and renaming of directories

Notes

- The maximum number of files that can be created on a disc is 5,000 for single-layer discs and 6,000 for dual-layer discs (both including directories).
- File names and directory names can use letters, numbers, and symbols from the Unicode 2.0 (UTF-8) character set.

However, the following control characters and symbols¹⁾ cannot be used.

- Control characters: U+0000 to U+001F, U+007F

- Symbols: ", *, /, :, <, >, ?, \, |

- 1) The following character codes cannot be used by FAM connections.
 U+010000, U+020000, U+030000, U+040000, U+050000, U+060000,
 U+070000, U+080000, U+090000, U+0A0000, U+0B0000, U+0C0000,
 U+0D0000, U+0E0000, U+0F0000, U+100000

PROAV directory


This directory contains individual files recorded on the disc.

To display the PROAV directory, set maintenance menu item M33: FILE I/F CONFIG > PROAV DISPLAY to “ENABLE”.

Assigning user-defined clip titles

By default, clips on each disc are assigned names in the range C0001.MXF to C9999.MXF. For this reason, two discs can contain clips with the same names. The


automatic title generation function allows you to assign titles to all of the clips on several discs, which facilitates clip management. For example, if the titles TITLE00001 to TITLE00020 are assigned to clips C0001.MXF to C0020.MXF on disc 1, then the titles TITLE00021 to TITLE00037 are assigned to clips C0001.MXF to C0017.MXF on disc 2.

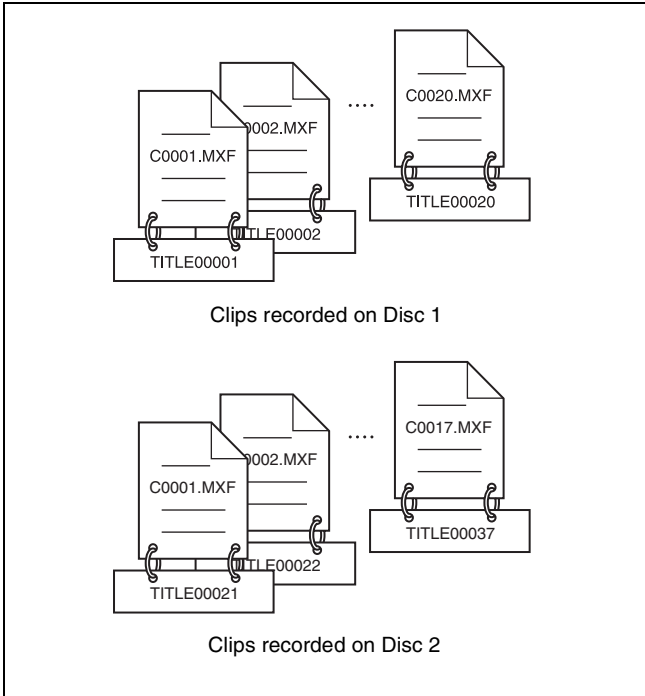

Proceed as follows to specify a title and assign it to recorded clips.

- 1 Press the MENU button.
- 2 Turn the PUSH SET knob to select setup menu item 035, and press the knob.
- 3 Turn the PUSH SET knob to select “on”, and press the knob.

The clip title naming screen appears.

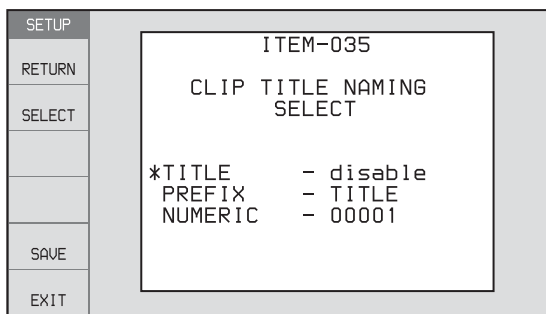

- 4 Turn the PUSH SET knob to move the asterisk (*) on the left of the menu items to “TITLE”, and press the knob.

The asterisk indicates the selected item.

- 5 Turn the PUSH SET knob to select “enable”, and press the knob.

The automatic title generation function is enabled.

- 6 Turn the PUSH SET knob to move the asterisk (*) on the left of the menu items to the item you want to select, and press the knob.

PREFIX: A string of up to 10 characters. The allowable characters are alphanumeric characters, symbols (! # \$ % & ' () + , - . ; = @ [] ^ _ { } ~), and the space character.

NUMERIC: A five-digit number (00001 to 99999) to serve as the initial value of the serial number.

- 7 Turn the PUSH SET knob to select the character position to set, and press the knob.

- 8 Turn the PUSH SET knob to select the character to set.

- 9 Repeat steps 7 and 8 as required.

When you are setting the “NUMERIC” item, you can press the RESET button to return the initial value of the serial number to 00001 (factory default setting).

- 10 Carry out steps 7 to 9 to set the other item.

- 11 Press the SAVE function (F5) button.

The title is saved.

To check the titles of recorded clips

Press the THUMBNAIL/ESSENCE MARK button to display the thumbnail screen, and select the clip whose title you want to check.

The title of the selected clip appears at the upper left of the screen.

See “Thumbnail Operations” (page 70) for more information about the thumbnail screen.

Notes

- The value of the serial number is incremented by 1 every time a title is generated. When the value reaches 99999, the next number restarts from 00001.
- Duplicate clip titles can be generated if you reset the serial number after recording several clips or the same is true depending on the value setting. Care should be taken when setting the serial number.
- The “PREFIX” setting is saved in memory banks, but the “NUMERIC” setting is not saved (see page 120).

Assigning user-defined clip and clip list names

The following standard format names are assigned automatically to clips and clip lists that are created or recorded by XDCAM devices.

Clips: C0001.MXF to C9999.MXF

Clip lists: E0001E01.SMI to E0099E01.SMI

This unit can handle clips and clip lists with user-defined names as well as names in the standard format.

Limitations

- Letters, numbers and symbols from the Unicode 2.0 character set can be used. However, the following control characters and symbols cannot be used.
 - Control characters: U+0000 to U+001F, U+007F
 - Symbols: ", *, /, :, <, >, ?, \, |
- Depending on the character type, the length of user-defined names (the "C*" or "E*E01" part) may be limited to 14 characters. (The limit for ASCII characters is 56 characters.)
- All file name extensions are converted automatically to uppercase.
- Titles are used as user-defined clip names on this unit. Therefore, the available characters are limited to those supported by the title function.
- Files generated along with clips and clip lists use the same names (the "C*" or "E*" part of the following file names).
 - Clips: Metadata files (C*M01.XML), user metadata files (C*M02.KLV), proxy AV data files (C*S01.MXF)
 - Clip lists: Metadata files (E*M01.XML)
- The following names cannot be assigned.
 - Clips: C0000.MXF
 - Clip lists: E0000E01.SMI, E0100E01.SMI to E9999E01.SMI, E0000.SMI, E0100.SMI to E9999.SMI
- The following names should be avoided.
 - Clips: C5000.MXF to C9999.MXF
 - Clip lists: E0001.SMI to E0099.SMI


To assign clip names on this unit

The title assigned to clip becomes its clip name (file name).

Notes


- When the first letter of the title setting with setup menu item 035 CLIP TITLE NAMING SELECT is a space or period (.), the clip name is the title string minus the first letter.
- An FTP client that supports UTF-8 is required to use Unicode characters other than ASCII characters.

Command prompt FTP commands do not support UTF-8.

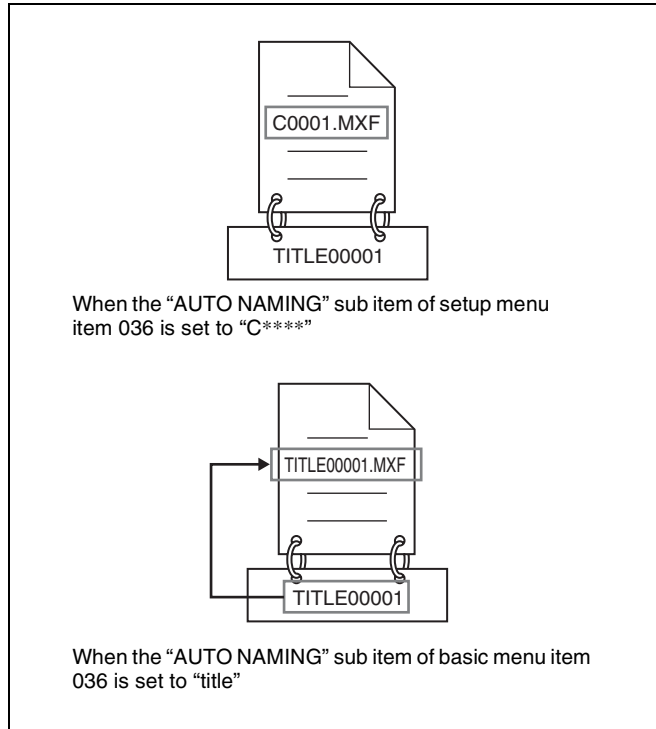

- Before you start, set the "TITLE" sub item of setup menu item 035 CLIP TITLE NAMING SELECT to "enable", and set a title (see the previous section).
- Press the MENU button.
- Turn the PUSH SET knob to select setup menu item 036.
- Turn the PUSH SET knob to move the "*" to the left of the item names to "NAMING FORM".

The "*" indicates the selected item.

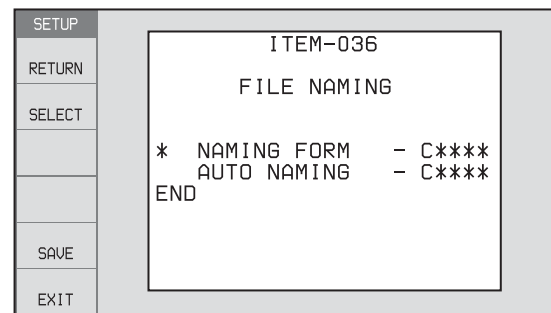

- Turn the PUSH SET knob to select "free", and press the knob.

You are now able to use clips and clip lists with user-defined names.


- 6 Turn the PUSH SET knob to move the “*” to the left of “AUTO NAMING”, and press the knob.
- 7 Turn the PUSH SET knob to select “title”, and press the knob.
- 8 Press the SAVE function (F5) button.

- The user-defined name or standard format name is displayed for clips without a title.

The same name will now be given to newly recorded clips.

To use clips and clip lists with user-defined names over FAM and FTP connections

Carry out steps 2 to 5 of “To assign clip names on this unit”, and then press the SAVE function (F5) button. It is now possible to write, transfer, and rename clips and clip lists with user-defined names over file access mode (FAM) connections (page 106) and FTP connections (page 109).

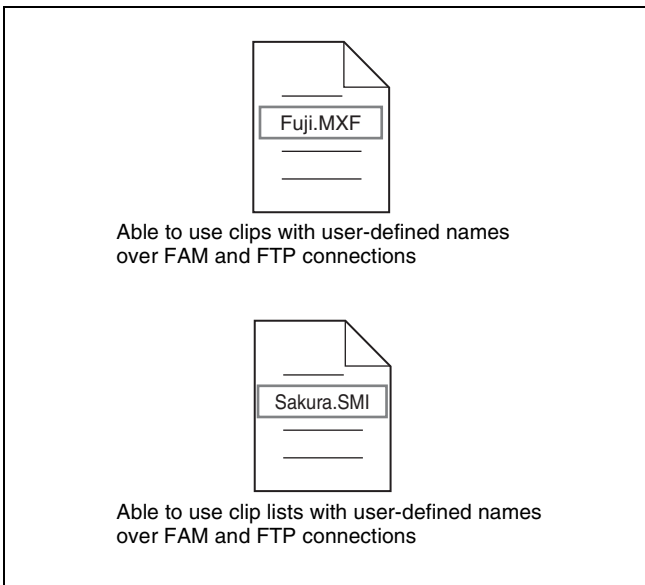

To check clip names

Press the THUMBNAIL/ESSENCE MARK button to display the thumbnail screen, and select the clip whose name you want to check. The name of the selected clip appears at the upper left of the screen.

See “Thumbnail Operations” (page 70) for more information about the thumbnail screen.

Note

The item at the upper left of the screen is displayed according to the following order of priority.
 Title > User-defined clip name > Standard format clip name
 Therefore, the display of this item changes as following, depending on whether there is a title.
 - When a title has been set as a clip name on this unit, for clips recorded on this unit, the title is displayed.

File Operations in File Access Mode (for Windows)

File access mode operating environment

Operating system requirements for file operations by file access mode (called FAM below) are as follows.

- Computer operating system: Microsoft Windows XP Professional SP2 or later, or Microsoft Windows Vista Ultimate/Business (32-bit)

Note

64-bit editions of Windows Vista are not supported.

Preparations

Install the FAM driver on the remote computer (*see the next section*).

To install the FAM driver

Insert the supplied CD-ROM (XDCAM Application Software) into the CD-ROM drive of your computer, navigate to the FAM Driver directory, and run the installer in the directory for your operating system, then follow the installation instructions.

For details, refer to the ReadMe file contained on the CD-ROM disc.

Note

Use Version 2.10 or higher of the FAM driver. The FAM driver on the supplied CD-ROM is Version 2.10 or higher. If a FAM driver is already installed on your computer, check the version.

To check the version

On Windows XP


Select “ProDisc” from “Add or Remove Programs” in the control panel, and then click “Click here for support information”.

On Windows Vista



(1) Open “Programs” > “Programs and Functions” in the control panel, and then right click the header (where “Name” and “Supplier” are displayed) and select “Other...”.

(2) In the Advanced Settings dialog, check “Version” and click “OK”. The version column appears. Check the version of “ProDisc”.

Making FAM connections

- 1 If there is a disc loaded in this unit, put the unit into the following state.
 - Recording, playback, search and other disc operations (*see page 55*): Stopped
 - THUMBNAIL/ESSENCE MARK button (*see page 19*): Off
 - Disc access by Lock or Delecte All Clips, Format Disc, and so on in the Disc Menu (*see page 68*): Stopped
 - Unsaved current clip list: Save or clear
- 2 If this unit is connected to a remote computer by FTP, log out from the FTP session (*see page 110*).
- 3 Connect the  (i.LINK) S400 FAM connector on this unit to the i.LINK (IEEE1394) connector on the remote computer, using an i.LINK cable (*see connections illustration on page 38*).
- 4 Press the PC REMOTE button, lighting it. (This enables remote access (*see page 18*).

Windows recognizes this unit as a removable disc, and displays one of the following icons on the remote computer’s task bar:

- Windows XP: 
- Windows Vista: 

The remote computer is now able to perform file operations when a disc is inserted into this unit.


Note

You will not be able to log in if you put the unit into the state described in step 1 after connecting the cable. To log in, press the PC REMOTE button, turning it off, put the unit into the state described in step 1, and connect it again.

When you make your first FAM connection

The Found New Hardware Wizard dialog appears when you connect this unit to your computer. Select “Install the software automatically (Recommended)”, and then click the Next button. Click the Finish button when the software installation finishes.

Operation limitations during FAM connections

- Control panel operations are disabled, except for operations with the EJECT button.
- This unit cannot be controlled from devices connected to the REMOTE(9P) connector (D-sub 9-pin) and  (i.LINK) S400 FAM connector.
- Signal input to this unit and signal output from this unit are stopped.

Operating on files

1 Start Explorer.

Check that a drive letter has been assigned to this unit. (The drive letter will differ depending on the number of other peripherals connected to the remote computer.)

2 Use Explorer to perform file operations on the disc loaded in this unit.

You can operate in the same way that you operate on local drives and files on network computers.

Notes

- If you power this unit off during an FAM connection, the data transferred thus far is discarded.
- All file operations are not possible for some types of files.

For details, see “File operation restrictions” (page 100).

To eject discs from a remote computer

Right click the icon representing this unit in Explorer, and select “Eject” from the menu which appears.

- **Windows Vista:** A message appears to inform you that you can now safely remove the device from your computer.

This unit can now resume normal operations. (The limitations described in “Operation limitations during FAM connections” no longer apply.)

4 Press the PC REMOTE button, turning it off. (This disables remote access (*see page 18*).

To reconnect

Press the PC REMOTE button, lighting it. This makes it possible to access this unit from a computer.

Exiting file operations

Note

Do not disconnect the cable before performing steps **1** to **3**.

1 Do one of the following on the or icon displayed in the remote computer’s taskbar.

- Double click.
- Right click, and select the “Safely Remove Hardware”.

The “Safely Remove Hardware” dialog appears.

2 Select “Sony XDCAM PDW-HR1 IEEE 1394 SBP2 Device” and click “Stop”.

The “Stop a Hardware device” dialog appears.

3 Select “Sony XDCAM PDW-HR1 IEEE 1394 SBP2 Device” and click “OK”.

- **Windows XP:** “Sony XDCAM PDW-HR1 IEEE 1394 SBP2 Device” is deleted from the “Hardware devices” list.

File Operations in File Access Mode (for Macintosh)

File access mode operating environment

Operating system requirements for file operations by file access mode are as follows.

- Computer operating system: Mac OS X v10.4.11 or higher

Preparations

Do the following on the remote computer and this unit.

- Install the FAM driver on the remote computer (*see the next item*).

To install the FAM driver

Insert the supplied CD-ROM (XDCAM Application Software) into the CD-ROM drive of your computer, and execute the dmg file in FAM Driver >Mac >FAM Driver, then follow the installation instructions.

For details, refer to the ReadMe file contained on the CD-ROM disc.

To check the FAM driver version

Connect this unit to your computer with an i.LINK cable, and then, with a disc loaded, start the system profiler utility of the application. The version appears to the right of “prodisk_fs” when you select “Advanced Functions” under “Software”.

Making FAM connections

1 If there is a disc loaded in this unit, put the unit into the following state.

- Recording, playback, search and other disc operations (*see page 55*): Stopped
- THUMBNAIL/ESSENCE MARK button (*see page 19*): Off
- Disc access by clip deletion, disc formatting, etc.: Stopped
- MENU button (*see page 19*): Off
- Unsaved current clip list: Save or clear

2 Connect the **i** (i.LINK) S400 FAM connector on this unit to the i.LINK (IEEE1394) connector on the remote computer, using an i.LINK cable (*see page 38*).

3 Press the PC REMOTE button, lighting it. (This enables remote access (*see page 18*).

When a disc is inserted into this unit, the remote computer recognizes this unit as a removable disc. The following icon appears in the Finder on the remote computer, indicating that the computer is now able to perform file operations.



Untitled

Operation limitations during FAM connections

- With the exception of the EJECT button, recording buttons and playback control buttons are disabled.
- Do not use the EJECT button to eject discs. Always eject discs from the computer.
- Do not disconnect the i.LINK cable during a FAM connection. Doing so may result in unstable operation. Always eject any loaded disc before disconnecting the i.LINK cable.

Operating on files

Proceed as follows.

1 Start the Finder.

Check to be sure that a drive has been assigned to this unit.

2 Operate from the Finder on the files on the disc in this unit.

You can operate in the same way that you operate on local drives and files on network computers.

Notes

- If you power this unit off during a FAM connection, the data transferred thus far is discarded.
- All file operations are not possible for some types of files.

For details, see “File operation restrictions” (page 100).

To eject discs from a remote computer

Click the eject button to the right of the icon for this unit in the Finder, or drag the icon for this unit from the Finder to the Trash.

Exiting file operations

Proceed as follows.

Note

Do not disconnect the cable before performing steps **1** and **2**.

- 1** Eject the disc by clicking the eject button to the right of the icon for this unit in the Finder, or by dragging the icon for this unit from the Finder to the Trash.
- 2** Press the PC REMOTE button, turning it off. (This disables remote access (*see page 18*).

To make a reconnection

Press the PC REMOTE button, lighting it.
This makes it possible to access this unit from a computer.

FTP File Operations

File operations between this unit and a remote computer can be carried out by the File Transfer Protocol (called FTP below).

Preparations

- 1** Connect the network connectors of this unit and a remote computer with a network cable (*see connections illustration on page 38*). Or connect this unit to the network to which the remote computer is connected (*see connections illustration on page 38*).
- 2** Set the IP address and other network setting items for this unit.¹⁾

For details, see “To change network settings” (page 144).

If network settings have already been made

Check the IP address of this unit.

For details, see “To check the assigned IP address” (page 144).

1) This unit is able to acquire an IP address automatically from a DHCP server. It also supports an Auto-IP function to assign an IP address automatically when access from this unit to the DHCP server times out. You can check DHCP settings and the assigned IP address on page M5:NETWORK of the maintenance menu.

Note

If this unit is directly connected to a computer running Windows Vista with a network cable, change the setting as follows:

(1) Open “Network and Sharing Center” > “Manage network connections” > “Local Area Connection” in the control panel. (2) In the “Local Area Connection Properties”, uncheck the “Internet Protocol Version 6 (TCP/IPv6)”, and then click the OK button.

- 3** Set the remote control switch to “NET” (*see page 18*).

Making FTP connections

FTP connections between this unit and a remote computer can be made with either of the following.

- The command prompt
- FTP client software

This section explains how to use the command prompt. For more information about using FTP client software, refer to the documentation of the FTP client software on your system.

Note

An FTP client that supports UTF-8 is required to use Unicode characters other than ASCII characters. Command prompt FTP commands do not support UTF-8.

To log in

If this unit is connected to a remote computer with a FAM connection, first exit file operations on the FAM connection (*see page 107*).

- 1 Load a disc into this unit and put the unit into the following state.
 - Recording, playback, search and other disc operations (*see page 55*): Stopped
 - THUMBNAIL/ESSENCE MARK button (*see page 19*): Off
 - Disc access by Lock or Delete All Clips, Format Disc, and so on in the Disc Menu (*see page 68*): Stopped

Note

Login is not possible unless a disc is loaded and the unit is in the state described above.

- 2 Start the command prompt.
- 3 Enter “ftp <SP> <IP address>”, and press the Enter key. (<SP> refers to a space.)

For example, if the IP address of this unit is set to “192.168.001.010”, enter “ftp 192.168.1.10”.

Refer to the Windows help for more information about the FTP command.

If the connection succeeds, you are prompted to enter a user name.
- 4 Enter the user name “admin” and press the Enter key.

When the user name is verified, you are prompted to enter a password.
- 5 Enter the password and press the Enter key.

The password is set to “pdw-hr1” when the unit is shipped from the factory. The login is complete when the password is verified.

See page 110 for the FTP protocol commands supported by this unit.

If the connection times out

This unit terminates FTP connections if no command is received within 90 seconds of the last command. If this occurs, log out (see the next section) and repeat steps **2** to **4**.

Note

If you power this unit off during an FTP connection, the data transferred thus far is discarded.

To log out

To log out after finishing file operations, enter “QUIT” at the command prompt and press the Enter key.

Command list

The FTP protocol commands supported by this unit include standard commands (see the next section) and extended commands (*see page 113*).

Notes

- To execute FTP commands, you must install application software such as PDZ-1 on your computer.
- The commands supported by application software vary.
- In the command syntax, <SP> means a space, entered by pressing the space bar, and <CRLF> means a new line, entered by pressing the Enter key.

Standard commands

USER

Send this command to begin the login process.

Command syntax: USER <SP> <user name> <CRLF>

Input example: USER admin

PASS

After sending the USER command, send this command to complete the login process.

Command syntax: PASS <SP> <password> <CRLF>

Input example: PASS pdw-hr1

QUIT

Terminates the FTP connection. If a file is being transferred, terminates after completion of the transfer.

Command syntax: QUIT <CRLF>

PORT

Specifies the IP address and port to which this unit should connect for the next file transfer (for data transfer from this unit).

Command syntax: PORT <SP> <h1,h2,h3,h4,p1,p2> <CRLF>

- h1 (most significant byte) to h4 (least significant byte): IP address

- p1 (most significant byte), p2 (least significant byte): Port address

Input example: PORT 10,0,0,1,242,48
(IP address: 10.0.0.1, Port number: 62000)

PASV

This command requests this unit to “listen” on a data port (which is not its default data port). (It puts this unit into passive mode, waiting for the remote computer to make a data connection.)

Command syntax: PASV <CRLF>

TYPE

Specifies the type of data to be transferred.

Command syntax: TYPE <SP> <type-code (options delimited by <SP>)> <CRLF>

<type-code> can be any of the following. However, for XDCAM, data is always transferred as “I”, regardless of the type-code specification.

- A: ASCII
 - N: Non-print
 - T: Telnet format
 - C: ASA Carriage Control
- E: EBCDIC
 - N: Non-print
 - T: Telnet format
 - C: ASA Carriage Control
- I: IMAGE (Binary) (default)
- L: LOCAL BYTE
 - SIZE: byte size

Input example: TYPE I

STRU

Specifies the data structure.

Command syntax: STRU <SP> <structure-code> <CRLF>

<structure-code> can be any of the following. However, for XDCAM, the structure is always “F”, regardless of the structure-code specification.

- F: File structure (default)
- R: Record structure
- P: Page structure

Input example: STRU F

MODE

Specifies the transfer mode.

Command syntax: MODE <SP> <mode-code> <CRLF>

<mode-code> can be any of the following. However, for XDCAM, the mode is always “S”, regardless of the mode-code specification.

- S: Stream mode (default)
- B: Block mode
- C: Compressed mode

Input example: MODE S

LIST

Sends a list of files from this unit to the remote computer.

Command syntax: LIST <SP> <options> <SP> <path-name> <CRLF>

<options> can be any of the following.

- -a: Also display file names that begin with “.”
- -F: Append “/” to directory names.

The following data is transferred, depending on whether <path-name> specifies a directory or file.

- Directory specified: A list of the files in the specified directory
- File specified: Information about the specified file
- No specification: A list of the files in the current directory

The wildcard characters “*” (any string) and “?” (any character) may be used in <path-name>.

Input example 1: LIST-a Clip

Input example 2: LIST Clip/*.MXF

NLST

Sends a list of file names from this unit to the remote computer, with no other information.

Command syntax: NLST <SP> <options or path-name> <CRLF>

The following options may be specified when no path-name is specified.

- -a: Also display file names that begin with “.”
- -l: Display information other than file name (gives the same result as the LIST command).
- -F: Append “/” to directory names.

The following data is transferred, depending on whether <path-name> specifies a directory or file.

- Directory specified: A list of the file names only in the specified directory
- No specification: A list of the file names only in the current directory.

The wildcard characters “*” (any string) and “?” (any character) may be used in <path-name>.

Input example 1: NLST-l

Input example 2: NLST Clip/*.MXF

RETR

Begins transfer of a copy of a file in the specified path on this unit to the current directory on the remote computer.

Command syntax: RETR <SP> <path-name> <CRLF>

Input example: RETR Clip/C0001.MXF

STOR

Begins transfer of a copy of a file in the specified path on the remote computer to the current directory on this unit. Depending on the type of file transferred, the following files are created.

- C*.MXF file ¹⁾
 - C*M01.XML file (metadata)
 - C*M02.KLV file (user metadata)
 - C*S01.MXF file (proxy AV data)
- E*E01.SMI file ²⁾
 - E*M01.XML file (metadata)

1) *: 0001 to 9999

2) *: 0001 to 0099

Notes

- For C*.MXF files, the UMID of the copy source file is not saved. However, it is saved if an immediately preceding SITE UMMD extended command has been issued.
- For C*.MXF files, some data, such as file header metadata, may be missing.
- Depending on the transfer destination directory and the file type, transfer may not be possible.

For details, see “File operation restrictions” (page 100).

Command syntax: STOR <SP> <path-name> <CRLF>

Input example: STOR Edit/E0001E01.SMI

RNFR**RNTO**

Rename a file.

Specify the file to be renamed with the RNFR command, and specify the new name with the RNTO command. (Always follow a RNFR command with a RNTO command.)

For details, see “File operation restrictions” (page 100).

Command syntax: RNFR <SP> <path-name (before change)> <CRLF>

RNTO <SP> <path-name (after change)> <CRLF>

Input example: RNFR General/info.txt

RNTO General/clip_info.txt

DELE

Deletes the specified file on this unit.

Note

Depending on the directory and file type, deletion may not be possible.

For details, see “File operation restrictions” (page 100).

Command syntax: DELE <SP> <path-name> <CRLF>

Input example: DELE Clip/C0099.MXF

STAT

Sends information about properties of the specified file, or about data transfer status, from this unit to the remote computer.

The following property information is sent, depending on the file type.

- MXF file
 - File name
 - File type
 - CODEC type
 - Frame rate
 - Number of audio channels
 - Duration
 - UMID
- non-MXF file
 - File name

Command syntax: STAT <SP> <path-name> <CRLF>

The following data is transferred, depending on whether a file is specified with <path-name>.

- File specified: The properties of the specified file
- No specification: The size of the data transferred thus far (unit: bytes)

Input example: STAT Clip/C0001.MXF

ABOR

Requests this unit to abort a file transfer currently in progress.

Command syntax: ABOR <CRLF>

SYST

Displays the system name of this unit.

Command syntax: SYST <CRLF>

HELP

Displays a list of the commands supported by this unit, or an explanation of the specified command.

Command syntax: HELP <SP> <command-name> <CRLF>

The following data is transferred, depending on whether a command name is specified with <command-name>.

- Command name specified: Explanation of the specified command.
- No specification: Command list

Input example: HELP RETR

NOOP

Does nothing except return a response. (Used to check whether this unit is running.)

Command syntax: NOOP <CRLF>

PWD

Displays the current directory (“/” if the directory is the root directory).

Command syntax: PWD <CRLF>

CWD

Changes the current directory (moves from the current directory to another directory).

Command syntax: CWD <SP> <path-name> <CRLF>

Moves to a directory as follows, depending on whether a directory is specified with <path-name>.

- Directory specified: To the specified directory
- No specification: To the root directory

Input example: CWD General

CDUP

Moves one level up in the directory structure (makes the parent of the current directory be the current directory).

Command syntax: CDUP <CRLF>

MKD

Creates a new directory.

Note

Directories can be created only in the General directory.

For details, see “File operation restrictions” (page 100).

Command syntax: MKD <SP> <path-name> <CRLF>

RMD

Deletes a directory.

Note

Directories can be deleted only in the General directory.

For details, see “File operation restrictions” (page 100).

Command syntax: RMD <SP> <path-name> <CRLF>

Extended commands

The following table shows the extended FTP commands supported by this unit.

Note

In the Command syntax, <SP> means a space, entered by pressing the space bar, and <CRLF> means a new line, entered by pressing the Enter key.

SITE REPF

Sends an MXF file from the specified path on this unit to the remote computer. This command allows you to specify a segment in the body of the MXF file (composed of video and audio data), for transfer of the required segment only.

Notes

- A segment greater than the file size cannot be specified.
- This command cannot be used when the path names contains a space. Use the SITE REPFL command instead.

Command syntax: SITE REPF <SP> <path-name> <SP> <start-frame> <SP> <transfer-size> <CRLF>

<start-frame> specifies an offset from the start of the file. Data is transferred from the video frame at the offset (the first frame is 0).

<transfer-size> specifies the number of video frames to transfer (specify 0 to transfer to the end of the file).

Input example: SITE REPF Clip/C0001.MXF 5 150

(Transfer C0001.MXF. Body data is transferred only from frame 6 to frame 150.)

SITE REPFL

Sends an MXF file from the specified path on this unit to the remote computer. This command allows you to specify a segment in the body of the MXF file (composed of video and audio data), for transfer of the required segment only.

Note

A segment greater than the file size cannot be specified.

Command syntax: SITE REPFL <SP> “<path-name>” <SP> <start-frame> <SP> <transfer-size> <CRLF>

<path-name> specifies the path name of the file to transfer. Enclose the path name in double quotation marks.

<start-frame> specifies an offset from the start of the file. Data is transferred from the video frame at the offset (the first frame is 0).

<transfer-size> specifies the number of video frames to transfer (specify 0 to transfer to the end of the file).

Input example: SITE REPFL "Clip/sakura 0001.MXF" 5 150
(Transfer sakura 0001.MXF. Body data is transferred only from frame 6 to frame 150.)

SITE FSTS

Acquires the system status of this unit.
One of the following status codes is sent.

- 0: Initial state, or no disc is loaded.
- 1: File system mount is OK.
- 3: File system mount is not OK.

Command syntax: SITE FSTS <CRLF>

SITE MEID

Acquires the media ID of the disc loaded in this unit.

Command syntax: SITE MEID <CRLF>

SITE FUNC

Acquires the function and version of the extended commands.

Information is sent in the following format.

Command syntax: <main function> <SP> <branch function> <SP> <branch function version>

For XDCAM, sent in a format like "200 MXF DISK 1"
("200" is a response code).

Command syntax: SITE FUNC <CRLF>

SITE UMMD

When a C*.MXF file is sent with the STOR command, the copy source UMID is saved if this command is invoked immediately before the STOR command.

Command syntax: SITE UMMD <CRLF>

SITE DF

Acquires the amount of free disc space.

Command syntax: SITE DF <CRLF>

SITE CHMOD

Locks and unlocks clips. Also sets permissions for directories and files in the General directory.

Command syntax: SITE CHMOD <SP> <flag> <SP>
<path-name> <CRLF>

Specify one of the following values in <flag>, according to the specification in <path-name>.

- When a clip is specified in <path-name>
 - 444: Lock.
 - 666: Unlock.
- When a directory in the General directory is specified in <path-name>
 - 555: Forbid writing to the directory.
 - 777: Allow writing to the directory.

- When a file in the General directory is specified in <path-name>
 - 444: Forbid writing to and execution of the file.
 - 555: Forbid writing to the file, but allow execution.
 - 666: Allow writing to the file, but forbid execution.
 - 777: Allow writing to and execution of the file.

Input example: SITE CHMOD 444 Clip/C0001.MXF
(Lock clip C0001.MXF)

Recording Continuous Timecode with FAM and FTP Connections

When you are connected to the unit by FAM or FTP, you can create new clips with timecode that is continuous with the timecode of the last frame of the last clip on the disc. To record continuous timecode, set the INT/EXT/SDI switch to “INT”, and set the PRESET/REGEN switch to “REGEN TC”. Then proceed as follows.

Note

Continuous timecode cannot be recorded if the PRESET/REGEN switch to “REGEN VITC”.

See page 121 for more information about setup menu operations.

FAM connection

Write clip files to the unit from the computer or other device that is connected to this unit.

FTP connection

Use the “STOR” command to transfer clip files from the computer that is connected to this unit.

If you issue the “SITE UMMD” command immediately before the “STOR” command, the original timecode of the transferred file is recorded, regardless of the setting of the INT/EXT/SDI switch.

Menu System Configuration

The settings for this unit use the following menus.

Setup menu

The setup menu system of this unit comprises the basic setup menu and extended setup menu.

Maintenance menu

This provides audio control, and network and setup menu settings, and also shows version information.

For details, see “Maintenance Menu” (page 139).

Function menu

For details, see “Basic Function Menu Operations” (page 50).

Disc Menu

For details, see “Disc Operations” (page 86).

Setup Menu

The setup menu system of this unit comprises the basic setup menu and extended setup menu.

Basic menu

This menu is used to make settings relating, for example, to the following.

- the digital hours meter
- the preroll time
- the text information superimposed on the video output to the monitor
- the menu banks for retaining menu settings

Extended menu

This menu is used to make a wide range of settings relating to the functions of this unit, for example, the control panel functions, video and audio control, and digital data processing.

Configuration of the basic menu

The basic menu comprises the following groups of items.

Item group	Function	Refer to
Items H01 to H17	Display of the total number of hours the unit has been powered on, and other information collected by the digital hours meter	<i>page 149</i>
Items 001 to 099	Settings relating to the preroll time, superimposed text information, switching between 59.94i/59.94P/29.97P and 50i/50P/25P/23.98P modes, etc.	<i>page 117</i>
Items B01 to B20	Settings relating to the menu banks for saving menu settings	<i>page 120</i>

Configuration of the extended menu

The extended menu comprises the following groups of items.

Item group	Function	Refer to
Items 100 to 199	Settings relating to control panels	page 124
Items 200 to 299	Settings relating to the remote control interface	page 125
Items 300 to 399	Settings relating to editing operations	page 126
Items 400 to 499	Settings relating to preroll	page 126
Items 500 to 599	Settings relating to disc protection	page 127

Item group	Function	Refer to
Items 600 to 650	Settings relating to the timecode generator	page 127
Items 651 to 699	Settings relating to the metadata and UMID	page 128
Items 700 to 799	Settings relating to video control	page 130
Items 800 to 899	Settings relating to audio control	page 132
Items 900 to 999	Settings relating to digital processing	page 135

Items in the basic menu

The basic menu items (excluding the items related to the digital hours meter) are listed in the following table.

- Item names are the names which appear on the video monitor screen of this unit and an external monitor, when the input signals to the monitor are the video signals output from the COMPOSITE OUT connector,

the SDDS I OUTPUT connector, or the HDS DI OUTPUT 2 (SUPER) connector.

- The values in the Settings column are the values which appear in the time data display area. (The values may appear in a different format on an external monitor. In this case, the external monitor values are shown in parentheses.) Underlined values are the factory defaults.

Item number	Item name	Settings
001	PREROLL TIME	0 s (0 sec)... <u>5 s (5 sec)</u> ... 30 s (30 sec) : Set the preroll time to between 0 and 30 seconds in steps of 1 second. A preroll time of at least 5 seconds is recommended when using this unit for editing.
002	CHARACTER H-POSITION	Adjust the horizontal screen position (as a hexadecimal value) of the text information output from the COMPOSITE OUT connector, the SDDS I OUTPUT connector, or the HDS DI OUTPUT 2 (SUPER) connector for superimposed display on the monitor. 00... <u>0C</u> ...28 : The hexadecimal value 00 is for the far left of the screen. Increasing the value moves the position of the characters to the right. Set this item by adjusting to the required position while viewing the monitor.
003	CHARACTER V-POSITION	Adjust the vertical screen position (as a hexadecimal value) of the text information output from the COMPOSITE OUT connector, the SDDS I OUTPUT connector, or the HDS DI OUTPUT 2 (SUPER) connector for superimposed display on the monitor. 00... <u>2A</u> ...32 : The hexadecimal value 00 is for the top of the screen. Increasing the value lowers the position of the characters. Set this item by adjusting to the required position while viewing the monitor.

Item number	Item name	Settings
005	DISPLAY INFORMATION SELECT	<p>Determine the kind of text information to be output from the COMPOSITE OUT connector, the SDDSI OUTPUT connector, or the HDSDI OUTPUT 2 (SUPER) connector.</p> <p>T&sta (time data & status): Time data and the units status.</p> <p>T&UB (time data & UB): Time data and user bits data. (When UB (user bits data) is selected with CNTR SEL on the HOME page of the function menu, the user bits data and time data arranged in that order are displayed.)</p> <p>T&CNT (time data & CNT): Time data and counter count. (When COUNTER is selected with CNTR SEL on the HOME page of the function menu, the counter count and time data arranged in that order are displayed.)</p> <p>T&T (time data & timecode): Time data and timecode (TC or VITC)</p> <p>T&clp (time data & clip no): Time data and clip number</p> <p>time (time data only): Time data only</p>
006	LOCAL FUNCTION ENABLE	<p>Determine which recording and playback control buttons on the control panel are enabled when this unit is controlled from external equipment.</p> <p>dis (all disable): All buttons and switches are disabled.</p> <p>st&ej (stop & eject): Only the STOP button and EJECT button are enabled.</p> <p>ena (all enable): All buttons and switches are enabled.</p>
007	DISC TIMER DISPLAY	<p>Determine whether to display the counter in 12-hour mode or 24-hour mode.</p> <p>±-12H (±/-12H): 12-hour mode</p> <p>24H: 24-hour mode</p>
009	CHARACTER TYPE	<p>Determine the type of characters such as timecode output from the COMPOSITE OUT connector, the SDDSI OUTPUT connector, or the HDSDI OUTPUT 2 (SUPER) connector for superimposed display on the monitor.</p> <p>white: White letters on a black background</p> <p>black: Black letters on a white background</p> <p>W/out: White letters with black outline</p> <p>B/out: Black letters with white outline</p> <p>Set this item by selecting the required type while viewing the monitor.</p>
011	CHARACTER V-SIZE	<p>Determine the vertical size of characters such as timecode output from the COMPOSITE OUT connector, the SDDSI OUTPUT connector, or the HDSDI OUTPUT 2 (SUPER) connector for superimposed display on the monitor.</p> <p>×1: Standard size</p> <p>×2: 2 times standard size</p> <p>Set this item by selecting the required size while viewing the monitor.</p>
012	CONDITION DISPLAY ON VIDEO MONITOR	<p>Select whether to display disc condition marks in external monitor output (output from the COMPOSITE OUT connector, the SDDSI OUTPUT connector, or the HDSDI OUTPUT 2 (SUPER) connector).</p> <p>dis (disable): Do not display.</p> <p>ena (enable): Display.</p>



Item number	Item name	Settings
013	SYSTEM FREQUENCY SELECT MENU	<p>Specify whether to enable switching the system frequencies (59.94i, 59.94P, 29.97P, 50i, 50P, 25P, 23.98P).</p> <p>off: Do not enable switching the system frequencies. on: Enable switching the system frequencies.</p> <p><i>For details about switching the system frequencies, see page 45.</i></p> <p>Note Settings for both basic and extended menu items are saved separately for different system frequencies.</p> <ul style="list-style-type: none"> • 1080 59.94i/29.97P • 1080 50i/25P • 1080 23.98P • 720 59.94P • 720 50P <p>Therefore, when you switch system frequencies, all menu items are reset to the current settings for the new mode. (They are different from the setting for the previous mode.)</p>
016	ALARM DISPLAY	<p>Select whether to display alarm messages.</p> <p>off: Do not display alarm messages. (However, certain important alarms are displayed.) limit (on (limited)): Display only a minimum number of alarm messages. on: Display all alarm messages.</p> <p><i>For details about alarm message display conditions, see “Alarms” (page 151).</i></p>
017	SUB STATUS DISPLAY SELECT	<p>Determine the kind of sub status information to be output from the COMPOSITE OUT connector, the SDDSI OUTPUT connector, or the HSDSI OUTPUT 2 (SUPER) connector.</p> <p>off: Do not output sub status information.</p> <p>rmain (disc remain): Available disc space (unit: minute) clip (clip no): Order of playback of the selected clip/total number of clips pbr (playback remain): The remaining playback time of the selected clip from the current playback position (hours:minutes:seconds:frames).</p> <p>Note When menu item 005 is set to “off”, sub status information is not displayed when this item is set to anything other than “off”.</p>
024	MENU CHARACTER TYPE	<p>Determine the type of characters in menu text output from the COMPOSITE OUT connector, the SDDSI OUTPUT connector, or the HSDSI OUTPUT 2 (SUPER) connector for superimposed display on the monitor.</p> <p>white: White letters on a black background. black: Black letters on a white background. W/out: White letters with black outline. B/out: Black letters with white outline.</p> <p>Set this item by selecting the required type while viewing the monitor.</p>
027	SD CHARACTER ^{a)}	<p>Specifies whether to superimpose text information on the video signals output from the COMPOSITE OUT and SDDSI OUTPUT connectors.</p> <p>off: Do not superimpose. all: Superimpose on the output of both the COMPOSITE OUT and SDDSI OUTPUT connectors. comp (composite): Superimpose on the output of the COMPOSITE OUT connector. sdi: Superimpose on the output of the SDDSI OUTPUT connector.</p>
028	HD CHARACTER ^{a)}	<p>Specify whether to superimpose text information on the video signal output from the HSDSI OUTPUT 2 (SUPER) connector.</p> <p>off: Do not superimpose. sdi2 (hd-sdi2): Superimpose.</p>

Item number	Item name	Settings	
029	STORED OWNERSHIP	Specify whether to enable changing UMID ownership information settings (COUNTRY, ORGANIZATION and USER). off: Do not enable. on: Enable. <i>See “Using UMID Data” (page 163) for more information about UMID.</i>	
031	RECORDING FORMAT	Set the recording format. HD422: HD422 420HQ (HD420 HQ): HD420HQ 420SP (HD420 SP): HD420SP IMX50 (IMX 50Mbps): MPEG IMX 50 Mbps IMX40 (IMX 40Mbps): MPEG IMX 40 Mbps IMX30 (IMX 30Mbps): MPEG IMX 30 Mbps DVCAM: DVCAM	
034	MENU STATUS DISPLAY ON VIDEO MONITOR ^{a)}	Specify whether to display the setup menu status at the left edge of the status display line when setup menu item 005 “DISPLAY INFORMATION SELECT” is set to “T&sta”. dis (disable): Do not display. ena (enable): Display. (The display is visible only when no disc is loaded, and during insertion and ejection of a disc.)	
035	CLIP TITLE NAMING SELECT	Specify whether to allow user definition of the titles assigned to clips. off: Do not allow assignment. on: Allow assignment.	
	Sub-item	<i>See “Assigning user-defined clip titles” (page 102) for more information about assigning titles.</i>	
	1	TITLE	Specify whether to assign titles to recorded clips. disable: Do not assign titles to clips. enable: Assign titles to clips.
	2	PREFIX	Set the prefix of the title (up to 10 characters). The allowable characters are alphanumeric characters, symbols (! # \$ % & ' () + , - . ; = @ [] ^ _ { } ~), and the space character. TITLE
	3	NUMERIC	Set the initial value of the numeric part of the title (00001 to 99999, five-digit number). 00001
036	FILE NAMING	Specify whether to allow use of clip and clip list files with user-defined names.	
	Sub-item	<i>See “Alarms relating to audio and video signals” (page 157) for details about how to make the settings.</i>	
	1	NAMING FORM	Specify the clip and clip list naming format. (Specify whether to allow use of files with user-defined names.) C****: Standard format (Do not allow use of files with user-defined names) free: Free format (Allow use of files with user-defined names)
	2	AUTO NAMING	When “free” is selected under the sub-item “NAMING FORM”, specify the format of the names of clips recorded on this unit. Specify the standard name format, or the same name as the title listed below, or the name specified in planning metadata. C****: Use the standard format for clip names. title: Use the title set in setup menu item 035 “CLIP TITLE NAMING SELECT” for clip names. plan: Use the name specified in planning metadata.
B01	RECALL SETUP BANK-1	Set to “on” to recall menu settings from menu bank 1.	
B02	RECALL SETUP BANK-2	Set to “on” to recall menu settings from menu bank 2.	
B03	RECALL SETUP BANK-3	Set to “on” to recall menu settings from menu bank 3.	
B11	SAVE SETUP BANK-1	Set to “on” to save current menu settings to menu bank 1.	
B12	SAVE SETUP BANK-2	Set to “on” to save current menu settings to menu bank 2.	
B13	SAVE SETUP BANK-3	Set to “on” to save current menu settings to menu bank 3.	




Item number	Item name	Settings
B20	RESET SETUP MENU	Set to "on" to return the settings of the current menu to the factory default settings. Set to "bank-4" to set the current menu to the settings saved in menu bank 4. off on: Return the current menu to the factory default settings. bank-4: Set the current menu to the settings saved in menu bank 4.

a) The setting of this item is enabled only when CHAR SEL on the HOME page of the function menu is set to "ON".
The setting of CHAR SEL determines whether or not to superimpose character information on the output from the HDMI OUT connector.

Basic menu operations


The setup menu is displayed in the time data display area of the basic operation display and in the video monitor display. If you have connected an external monitor, it is also superimposed over the picture shown on the external monitor.

To display the setup menu

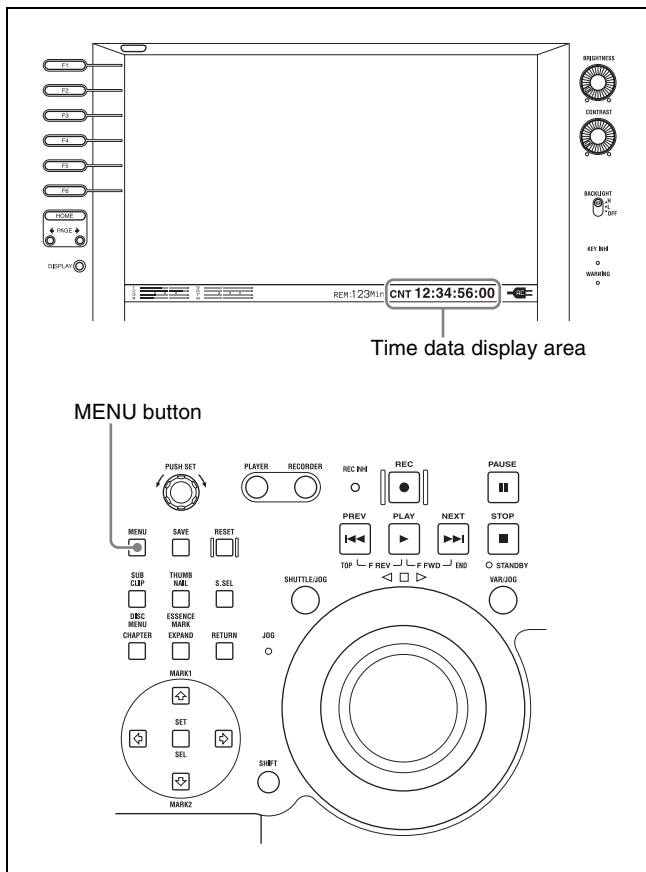


Press the MENU button.

The setup menu appears on the video monitor display, with a cursor "*" indicating the currently selected menu item. (If you are in the basic operation display, the display switches to the video monitor display.)

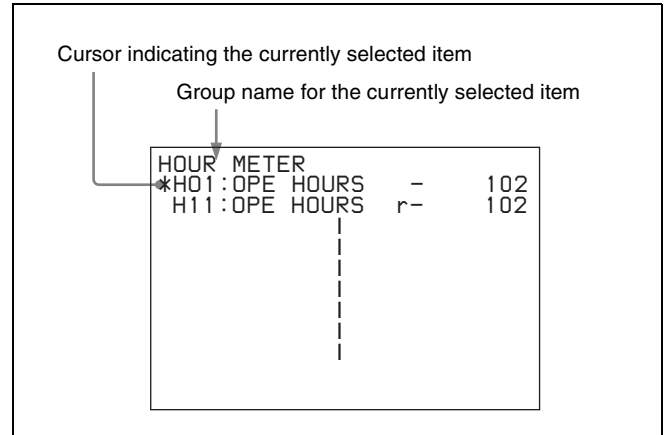

The number and setting of the currently selected menu item also appear in the time data display area.

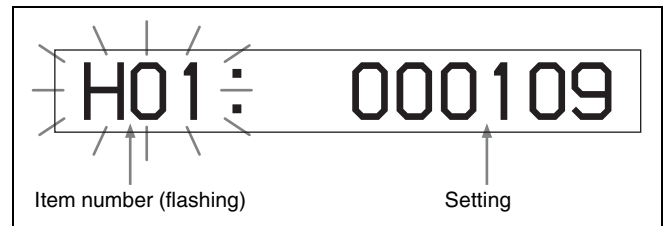

To display menus on an external monitor

Connect the monitor to the COMPOSITE OUT connector, SDDS I OUTPUT connector, or HDS I OUTPUT 2 (SUPER) connector on this unit, and press the MENU button.

Buttons used to change settings

Use the following buttons to change setup menu settings.

Menu control buttons	Functions
MENU button	<ul style="list-style-type: none"> Displays and hides the setup and user interface menus. Returns to the menu from a setting screen.
PUSH SET knob	<ul style="list-style-type: none"> When turned clockwise or counterclockwise, moves the "*" mark up or down in the list of menu items to select the item to change. When turned clockwise or counterclockwise, changes a menu item setting. When pressed, answers "Yes" to a question.

Menu control buttons	Functions
Function buttons F1 to F6 (The function to be displayed varies depending on the situations.)	RETURN: Goes up one level. SELECT: Selects an item. UP: Skips back 100 or 50 items in the list of menu items. DOWN: Skips forward 100 or 50 items in the list of menu items. SAVE: Saves a new setting to memory. EXIT: Exits the current menu. -: Changes a setting. +: Changes a setting.
RESET button	<ul style="list-style-type: none"> Returns the current setting to the factory default. Answers "No" to a question.

To change the settings of menu items

Proceed as follows to change the settings of menu items.

- Use the PUSH SET knob to select the required item.

Example: Screen display when item 005 DISPLAY INFORMATION SELECT is selected

KEY PARAMETER	Current setting
001:P-ROLL TIME	- 5 s
002:CHARA H-POS	- 0A
003:CHARA V-POS	- 2E
*005:DISPLAY SEL	- T&CNT
006:LOCAL ENA	- st&ej
007:DISC TIMER	- +-12H
009:CHARA TYPE	- white
011:CHARA SIZE	- x1
012:COND DISPLY	- dis
013:SYSTEM FREQ	- off
016:ALARM	- on

- Press the PUSH SET knob or the SELECT function button (F2).

This displays the setting screen 2 for the menu item selected in step 1.

Example: Setting screen display when item 005 DISPLAY INFORMATION SELECT is selected

ITEM-005
DISPLAY INFORMATION SELECT
time data & CNT
Current setting

- Use the PUSH SET knob or the +/- function button (F3 or F4) to change the setting.

- To change other settings, press the PUSH SET knob or the SELECT function button (F2) to return to the previous screen, then repeat steps 1 to 3.

- When you have completed the settings, press the SAVE function button (F5).

The message "NOW SAVING..." appears on the video monitor display, and "Saving..." appears in the time data display area, while the new settings are saved in memory. When the saving operation is completed, the video monitor display and the time data display area return to their normal indications.

Notes

- If you power off the unit before a save operation is completed, settings may be lost. Wait until the save is completed before powering off the unit.
- If, instead of pressing the SAVE function button (F5), you press the MENU button, the new settings are not saved. The message "ABORT !" appears on the video monitor display and "Abort !" in the time data display area for about 0.5 seconds, and the system exits the menus. To change more than one setting, be sure to press the SAVE function button (F5) after making the settings.

To return menu settings to their factory default settings

After changing menu settings, use the following procedure to return the settings to their factory default settings (setting initialization).

To return all settings to their factory default settings

- Press the MENU button to display the setup menu.

- Press the RESET button.

A message appears, to confirm whether you wish to return all settings to their factory default settings.

Message on the video monitor display	Initialize all items to factory preset values?
Message in the time data display area	Init setup?

- Press the SAVE function button (F5).

The message "NOW SAVING..." appears on the video monitor display, and "Saving..." appears in the time data display area, while the settings of all items are returned to their factory default settings. These factory default settings are saved in memory.

Note

If you power off the unit while settings are being saved, settings may not be correctly returned to their factory default settings. Wait until the saving is completed before powering off the unit.

To abandon the resetting operation

Instead of pressing the SAVE function button (F5), press the RESET button. The display returns to the top level of the setup menu, leaving the settings unchanged.

To customize the display of setup menu items

You can select the menu items displayed in the setup menu.

- 1 Set maintenance menu item M41: CUSTOMIZE to "ENABLE".

See page 143 for information about how to use the maintenance menu.

- 2 Hold down the MENU button for about three seconds.

The SETUP CUSTOMIZE screen appears.

SETUP	SETUP CUSTOMIZE
ON	*H01:OPE HOURS - on
	H02:LASERO - on
OFF	H03:LASER1 - on
	H11:OPE HOURS r- on
UP	H13:SEEK HOURS0r- off
	H14:SPDL HOURS r- off
DOWN	H15:LOAD COUNT r- off
	H17:SEEK HOURS1r- off
SAVE	001:P-ROLL TIME - off
	002:CHARA H-POS - off
EXIT	003:CHARA U-POS - off

- 3 Turn the PUSH SET knob so that the "*" mark appears next to the item you want to hide or display in the setup menu.

SETUP	SETUP CUSTOMIZE
ON	H01:OPE HOURS - on
	H02:LASERO - on
OFF	H03:LASER1 - on
	H11:OPE HOURS r- on
UP	*H13:SEEK HOURS0r- off
	H14:SPDL HOURS r- off
DOWN	H15:LOAD COUNT r- off
	H17:SEEK HOURS1r- off
SAVE	001:P-ROLL TIME - off
	002:CHARA H-POS - off
EXIT	003:CHARA U-POS - off

You can press the ▲/MARK1 button or the ▼/MARK2 button to move the "*" mark by 100 menu items.

- 4 Press the PUSH SET knob.

A setting screen for the currently selected item appears.

SETUP	CUSTOM ITEM-H13
RETURN	SEEK RUNNING HOURS 0 (resettable)
	on
-	
+	
SAVE	
EXIT	

- 5 Turn the PUSH SET knob to select "on" or "off".

on: Display the item in the setup menu.

off: Do not display the item in the setup menu.

- 6 Press the PUSH SET knob.

To continue selecting items

Repeat steps 3 to 6.

To set items more quickly

In step 3, turn the PUSH SET knob to move the "*" mark, and then press the ON function button (F1) or OFF function button (F2) to set items continuously.

- 7 Press the SAVE function button (F5).

Customization indication in the setup menu

When you open the setup menu after customizing the displayed menu item, a "[C]" mark appears at the upper right of the screen to indicate that the menu has been customized.

Items in the extended menu

The following tables show the items in the extended menu.

- Item names are the names which appear on an external monitor to which the output of the COMPOSITE OUT connector, the SDSDI OUTPUT connector, or the HDSDI OUTPUT 2 (SUPER) connector is input.
- An abbreviated name appears in the time data display area when you press the NEXT button.
- The values in the Settings columns are the values which appear in the time data display area. (The values may appear in a different format on an external monitor. In this case, the external monitor values are shown in parentheses.) Underlined values are the factory defaults.

Menu items in the 100s, relating to the control panels (OPERATIONAL PARAMETER)

Item number	Item name	Settings
101	SELECTION FOR SEARCH DIAL ENABLE	Select how the unit enters shuttle, jog, or variable speed mode. dial (dial direct) : Press the SHUTTLE/JOG or VAR/JOG button or, except during recording/editing, turn the shuttle/jog dial. key (via search key) : Press the SHUTTLE/JOG or VAR/JOG button.
105	REFERENCE SYSTEM ALARM	Select whether to display a warning when the reference video signal is not being supplied, or when it differs from this unit's system frequency. off : No warning. on : Flash the STOP button as a warning.
107	REC INHIBIT LAMP FLASHING	Select whether to flash the REC INHI indicator when recording is prevented (see "REC INHI (recording inhibit) indicator" (page 20)). off : Light the REC INHI indicator. on : Flash the REC INHI indicator.
108	AUTO EE SELECT	When a disc is inserted and PB/EE on the HOME page of the function menu is set to "EE", select the operation modes in which input video and audio signals are automatically handled in E-E mode. S/F/R (stop/f.fwd/f.rev) : In stop/fast-forward/fast-reverse modes stop : In stop mode
109	FORCED EE WHEN DISC UNLOAD	During disc loading/unloading and when no disc is inserted, select whether to control the output signal PB/EE setting. on : Do not control (the signal is always an E-E signal). off : Control.
114	AUDIO MONITOR OUTPUT LEVEL	Select whether to control the level of the audio signal output from the AUDIO MONITOR R, L connectors with the LEVEL knob for the PHONES jack. var (variable) : Control. fixed : Do not control.
118	KEY INHIBIT	Select which buttons can be operated when the KEY INHI switch is set to "ON". The following sub-items control different sets of buttons independently.
	Sub-item	
	1 AUDIO/F-KEY	Select whether function buttons on the display panel are enabled. dis : Disabled. ena : Enabled.
2 CONTROL PANEL	Select whether operation buttons on the control panel are enabled. dis : Disabled. ena : Enabled.	
119	VARIABLE SPEED LIMIT IN KEY PANEL CONTROL	Select the playback speed range when carrying out playback in variable speed mode from the control panel of this unit. off (off (-1 to +1)) : -1 to +1 times normal speed. on (on (0 to +1)) : 0 to +1 times normal speed.
121	FRAME PB MODE	Select the variable playback field/frame mode. auto : Field playback frame : Frame playback. Compared to field playback, frame playback gives more detail during playback of still pictures.



Menu items in the 100s, relating to the control panels (OPERATIONAL PARAMETER)

Item number	Item name	Settings	
131	AUDIO VOLUME	Select whether each of the ALL/CH-1 and CH-2 to CH-4 adjustment knobs on the control panel is enabled, allowing you to adjust the audio recording and playback levels of each channel individually, or whether the ALL/CH-1 adjustment knob alone functions as a master control to control the audio levels of all channels at once.	
	Sub-item		
	1	REC	Make settings for the recording ALL/CH-1 and CH-2 to CH-4 adjustment knobs. each: Each of the ALL/CH-1 and CH-2 to CH-4 adjustment knobs is enabled, allowing you to adjust each channel individually. all: The ALL/CH-1 adjustment knob alone functions as a master control. When you select "all", the ALL indicator to the left of the ALL/CH-1 adjustment knob lights.
	2	PB	Make settings for the playback ALL/CH-1 and CH-2 to CH-4 adjustment knobs. each: Each of the ALL/CH-1 and CH-2 to CH-4 adjustment knobs is enabled, allowing you to adjust each channel individually. all: The ALL/CH-1 adjustment knob alone functions as a master control. When you select "all", the ALL indicator to the left of the ALL/CH-1 adjustment knob lights.
140	AREA MARKER	Select whether to display the display area of SD output on the color LCD. off: Do not display. on: Display.	
143	INDEX PICTURE POSITION	Select the frame of the clip to use as the thumbnail image (index picture) when recording. 0sec to 10sec: Can be set in the range from 0 seconds (first frame of the clip) to 10 seconds, in units of 1 second.	
145	MODE KEY ENABLE DURING RECORDING	Select whether the STOP button and PAUSE button are the only buttons that stop recording. ena (all enable): Recording stops when the EJECT button ^{a)} , PLAY button, STOP button, PAUSE button, SHUTTLE/JOG button, and VAR/JOG button ^{b)} are pressed. s&p (stop & pause): Recording stops only when the STOP button or PAUSE button is pressed.	
146	POWER SAVE MODE	Select whether to put the unit into power saving mode when it enters stop mode, by turning power supply on or off for each of the components in the sub-items.	
	Sub-item		
	1	DRIVE	Select whether to supply power to the drive. stby: Supply power (do not put this unit into power saving mode). save: Do not supply power (put this unit into power saving mode).
151	GUI OPERATION	Select whether to disable the display of the Thumbnail Menu and Disc Menu when this unit is in any mode other than stop mode. ena(enable): Do not disable. stop(via stop): Enable the display of menus in the stop mode. dis(disable): Disable.	

a) The disc is ejected after recording stops.

b) The unit enters stop mode when the PLAY button is pressed. It enters freeze picture mode (jog, shuttle, or variable mode) when the SHUTTLE/JOG button or VAR/JOG button is pressed.

Menu items in the 200s, relating to the remote control interface (REMOTE INTERFACE)

Item number	Item name	Settings
201	PARA RUN	Select whether to use synchronized operation for two or more VTRs. dis (disable): No synchronized operation ena (enable): Use synchronized operation Note To use synchronized operation for two or more VTRs, set item 201 to ena on all of the VTRs.

Menu items in the 200s, relating to the remote control interface (REMOTE INTERFACE)

Item number	Item name	Settings
214	REMOTE INTERFACE	When the remote control switch is set to REMOTE, select the device from which to remote-control this unit. 9PIN: Device connected to the REMOTE(9P) connector. SDI: Device connected to the SD/HDSDI INPUT connector. i.LINK: Device connected to the i (i.LINK) HDV TS connector. ^{a)}
257	NETWORK ENABLE	Select the remote control switch positions which enable network connections. net (network): Only when the switch is set to "NET". n&9P (network & remote(9PIN)): When the switch is set to "NET", and when the switch is set to "REMOTE" and setup menu item 214 is set to "9PIN". ^{b)}

a) When the PDBK-202 option board is installed

b) FTP connections can be made only when the device connected to the REMOTE(9P) connector (D-sub 9 pin) is in stop mode. During FTP connections, the device connected to the REMOTE(9P) connector cannot be used to control this unit.

Menu items in the 300s, relating to editing operations (EDITING)

Item number	Item name	Settings
301	VAR SPEED RANGE FOR SYNCHRONIZATION	Select the playback speed range when carrying out playback in variable speed mode from a remote control unit connected to the REMOTE(9P) connector. -1~+1: -1 to +1 times normal speed. wide: -1.20 to +1.20 times normal speed.
307	AUTO-DELETION FOR INCONSISTENT DATA	Select what to do when an inconsistent edit point has been set. manu (manual): Flash the DELETE button on the control panel and display a warning. neg&E (neg & excess): Delete the inconsistent edit point automatically when an Out point is set before an In point, and when more edit points than necessary have been set. neg: Delete the inconsistent edit point automatically when an Out point is set before an In point. Flash the DELETE button on the control panel and display a warning when more edit points than necessary have been set.
320	DIGITAL AUDIO PB PROCESS ON EDIT POINT	Select the treatment of audio playback at edit points. cut: Carry out a cut (possibly resulting in audio discontinuities at the edit point). fade: Fade out and fade in.
345	EDITING MODE	Selects the edit mode in edit list editing. ovl (overlay): Overlay mode ins (insert): Insert mode
346	PLAYER SELECT	Selects the player (the device where the material clips are saved). disc: The disc loaded in the recorder ext (external): External device

Menu items in the 400s, relating to preroll (PREROLL)

Item number	Item name	Settings
401	FUNCTION MODE AFTER CUE-UP	Select the state that the unit goes into after a cuing-up operation. stop: Stops (the stop mode). still: Still playback (in jog and shuttle mode).



Menu items in the 500s, relating to disc protection (DISC PROTECTION)

Item number	Item name	Settings
501	STILL TIMER	To protect the disc against shock and vibrations, and to lengthen the life of the laser diodes, the unit automatically enters standby off mode whenever a specified time elapses in a disc stop mode (stop mode or the still picture mode of search mode). This allows you to set the time after which the unit exits a disc stop mode and enters standby off mode. 0.5 s (0.5 sec)... 8 m (8 min)... 30 m (30 min): Can be set in the range from 0.5 seconds to 30 minutes. off: Do not put into standby off mode.

Menu items in the 600s, relating to the timecode, metadata, and UMID (TIME CODE GENERATOR/META DATA)

Item number	Item name	Settings
601	VITC POSITION SEL-1	In 59.94i/59.94P/29.97P mode Select the line into which to insert VITC signals (SD output) 12H (12 line) ... 16H (16 line) ... 20H (20 line): Any line from line 12 through line 20. Notes <ul style="list-style-type: none"> You can insert VITC signals in two places. To insert in two places, set both item 601 and item 602. In 59.94i/59.94P/29.97P mode (J), output of wide picture information is given priority if OUTPUT in setup menu item 731 is set to "auto" and the VITC insertion line is set to line 16. In 59.94i/59.94P/29.97P mode (UC), output of wide picture information is given priority if OUTPUT in setup menu item 731 is set to "auto" and the VITC insertion line is set to line 20.
		In 50i/50P/25P mode Select the line into which to insert VITC signals (SD output) 9H (9 line) ... 19H (19 line) ... 22H (22 line): Any line from line 9 through line 22. Note You can insert VITC signals in two places. To insert in two places, set both item 601 and item 602.
602	VITC POSITION SEL-2	In 59.94i/59.94P/29.97P mode Select the line into which to insert VITC signals (SD output) 12H (12 line) ... 18H (18 line) ... 20H (20 line): Any line from line 12 through line 20. Notes <ul style="list-style-type: none"> You can insert VITC signals in two places. To insert in two places, set both item 601 and item 602. In 59.94i/59.94P/29.97P mode (J), output of wide picture information is given priority if OUTPUT in setup menu item 731 is set to "auto" and the VITC insertion line is set to line 16. In 59.94i/59.94P/29.97P mode (UC), output of wide picture information is given priority if OUTPUT in setup menu item 731 is set to "auto" and the VITC insertion line is set to line 20.
		In 50i/50P/25P mode Select the line into which to insert VITC signals (SD output) 9H ... 21H ... 22H: Any line from line 9 through line 22. Note You can insert VITC signals in two places. To insert in two places, set both item 601 and item 602.
605	TCG REGEN MODE	Select the signal to be regenerated when the timecode generator is in the regeneration mode. TC&UB: Both the timecode and user bits are regenerated. TC: Only the timecode is regenerated. UB: Only the user bits are regenerated.

Menu items in the 600s, relating to the timecode, metadata, and UMID (TIME CODE GENERATOR/META DATA)

Item number	Item name	Settings
607	U-BIT BINARY GROUP FLAG	Select the user bits to be used in the timecode generated by the timecode generator. 000 (000:not specified): Character set not specified. 001 (001:iso character): 8-bit characters compliant with ISO 646 and ISO 2022. 010 (010:unassigned-1): Undefined. 011 (011:unassigned-2): Undefined. 100 (100:unassigned-3): Undefined. 101 (101:page / line): SMPTE-262M page/line multiplex system. 110 (110:unassigned-4): Undefined. 111 (111:unassigned-5): Undefined.
611	TC OUTPUT PHASE IN EE MODE	Select the timecode output mode for output from the TIME CODE OUT connector in E-E mode. thru (through): Output the timecode input to the TIME CODE IN connector as it is. v-in (video input phase): Output the timecode with the same phase as the input video signal phase. v-out (video output phase): Output the timecode with the same phase as the output video signal phase.
612	TC OUTPUT MUTING IN SEARCH MODE	Select whether to suppress the output from the TIME CODE OUT connector in jog/shuttle mode. on: Suppress. off: Do not suppress.
618	UPCONV EMBEDDED VITC	Select the source of the VITC embedded into output HDSDI when up converting during playback of SD discs. VITC: Select the VITC of the SD disc. LTC: Select the LTC of the SD disc.
619	VITC	Select whether to record the VITC generated by the internal timecode generator during IMX recording. off: Do not record the internally generated VITC. on: Record the internally generated VITC. Note Even if this item is set to “off”, VITC is recorded if the input video signal contains VITC and the VITC line is set to “thru” in menu item 723.
634	WATCH AUTO ADJUST	Select whether to adjust the unit’s internal clock to time data embedded in user bits, when time data is embedded in the LTC user bits input to the TIME CODE IN connector. off: Do not adjust the time. on: Adjust the time.
651	UMID SDI OUTPUT	Select whether to output UMID in the VANC of the SDI output. off: Do not output. on: Output. <i>See “Using UMID Data” (page 163) for more information about UMID.</i>
652	UMID SD VANC LINE	Select the line in which UMID is output when menu item 651 is set to “on”. 12 H (12 line), 13 H (13 line), 15 H (15 line), 16 H (16 line), 17 H (17 line), 18 H (18 line), 19 H (19 line) (59.94i/59.94P/29.97P mode) 9 H (9 line), 10 H (10 line), 12 H (12 line), 13 H (13 line), 14 H (14 line), 15 H (15 line), 16 H (16 line), 17 H (17 line), 18 H (18 line) (50i/50P/25P mode) <i>See “Using UMID Data” (page 163) for more information about UMID.</i>



Menu items in the 600s, relating to the timecode, metadata, and UMID (TIME CODE GENERATOR/META DATA)

Item number	Item name	Settings
653	UMID HD VANC LINE	Specify the HDSDI signal VANC line into which the UMID should be inserted. 9H (9 line) ... 17H (17 line) ... 20H (20 line) (59.94i, 50i, 29.97P, 25P, 23.98P mode) 9H (9 line) ... 17H (17 line) ... 25H (25 line) (59.94P, 50P mode) Note The output VANC line during playback follows the setting for recording. <i>See "Using UMID Data" (page 163) for more information about UMID.</i>
657	ESSENCE MARK SDI OUTPUT	Select whether to output essence marks in the SDI output VANC. off: Do not output. on: Output.
660	ESSENCE MARK SD VANC LINE	When menu item 657 is set to "on", select the line to which to output essence marks. 12 H (12 line), 13 H (13 line), 15 H (15 line), 16 H (16 line), 17 H (17 line), 18 H (18 line), 19 H (19 line) (59.94i/59.94P/29.97P mode) 9 H (9 line), 10 H (10 line), 12 H (12 line), 13 H (13 line), 14 H (14 line), 15 H (15 line), 16 H (16 line), 17 H (17 line), 18 H (18 line) (50i/50P/25P mode)
665	ESSENCE MARK HD VANC LINE	When item 657 is set to "on", select the line to which to output essence marks. 9H (9 line) ... 17H (17 line) ... 20H (20 line) (59.94i, 50i, 29.97P, 25P, 23.98P mode) 9H (9 line) ... 17H (17 line) ... 25H (25 line) (59.94P, 50P mode) Note The output VANC line during playback follows the setting for recording.
666	META DATA ITEM OUT	Specify whether to include the information from recorded VANC packets in data items in the DATA ITEM section of MXF files. off: Do not include VANC packet information in data items. on: Include VANC packet information in data items.
668	USER META DATA OUTPUT IN MXF	Select whether to output user metadata to MXF files. off: Do not output. on: Output.

Menu items in the 700s, relating to video control (VIDEO CONTROL)

Item number	Item name	Settings	
703	BLANK LINE SELECT	Switch blanking of the video output signal on or off for individual lines in the vertical blanking interval.	
	Sub-item	The Y/C signal and odd/even fields are blanked simultaneously.	
	ALL LINE	--: Specify the blanking for each line separately. blnk: Regardless of the setting of other sub-items, blank all lines which can be specified in this menu item. thru: Regardless of the setting of other sub-items, switch off blanking for all lines which can be specified in this menu item.	
	In 59.94i/ 59.94P/29.97P mode (UC)	LINE 12 ... LINE 19	Specify blanking for lines 12 to 19. blnk: Carry out blanking. thru: Switch off blanking.
		LINE 20	Specify blanking for line 20. blnk: Carry out blanking. half: Carry out half-blanking. thru: Switch off blanking.
	In 59.94i/ 59.94P/29.97P mode (J)	LINE 12 ... LINE 20	Specify blanking for lines 12 to 20. blnk: Carry out blanking. thru: Switch off blanking.
		LINE 21	Specify blanking for line 21. blnk: Carry out blanking. half: Carry out half-blanking. thru: Switch off blanking.
	In 50i/50P/25P mode	LINE 9 ... LINE 22	Specify blanking for lines 9 to 22. blnk: Carry out blanking. thru: Switch off blanking.
LINE 23		Specify blanking for line 23. half: Carry out half-blanking. thru: Switch off blanking.	
705	EDGE SUBCARRIER REDUCER MODE	Select whether to enable the edge subcarrier reducer (ESR). on: Enable. off: Do not enable. When playing back a composite signal, set this to "on".	
707	FORCED VERTICAL INTERPOLATION OFF	The "Y-add" function is normally switched on automatically during jog or variable speed playback. This item selects whether to force the "Y-add" function off. ^{a)} auto: Automatically switch the "Y-add" function on. off (forced YADD off): Force the "Y-add" function off. The "Y-add" function is off while a disc image is displayed in stop mode (menu item 108 AUTO EE SELECT is "off").	
710	INTERNAL VIDEO SIGNAL GENERATOR	Select the test signal to be output from the internal test signal generator. When V INPUT on the P1 VIDEO page of the function menu is set to "SG", the internal test signal generator operates to output the selected test signal. This signal can also be recorded. off: Prevent "SG" from being selected for V INPUT on the P1 VIDEO page of the function menu. CB75 (75% Color Bars): 75% color bar signal CB100 (100% Color Bars): 100% color bar signal MLTBS (Multi Burst): Multi-burst signal 10STP (10 steps): 10-step signal PLSBR (Pulse and Bar): Pulse and bar signal RAMP (Ramp): Ramp signal BLACK (Black): Black signal ARIBCB (ARIB Color Bars): ARIB color bar signal, modify width, 100% Note ARIB CB cannot be specified when SD recording is selected. If ARIB CB is selected, the selection is changed to CB75 (75% Color Bars).	



Menu items in the 700s, relating to video control (VIDEO CONTROL)

Item number	Item name	Settings	
713	VIDEO SETUP REFERENCE	Set the video setup amount to be added to the composite input and output signal (in 59.94i/59.94P/29.97P mode only).	
	Sub-item		
	INPUT LEVEL	59.94i/59.94P/29.97P mode (UC)	Remove the setup level selected by this item from the input signal. 0.0%, 7.5%
		59.94i/59.94P/29.97P mode (J)	Remove the setup level selected by this item from the input signal. 0.0%, 7.5%
	OUTPUT LEVEL	In 59.94i/59.94P/29.97P mode (UC)	Add the setup level selected by this item to the output signal. 0.0%, 7.5%
In 59.94i/59.94P/29.97P mode (J)		Add the setup level selected by this item to the output signal. 0.0%, 7.5%	
715	VIDEO GAIN CONTROL	Adjust the video output level. -2048 (-2048 (DEC)) to 0 (0 (DEC)) to 848 (848 (DEC))	
716	CHROMA GAIN CONTROL	Adjust the chroma output level. -2048 (-2048 (DEC)) to 0 (0 (DEC)) to 848 (848 (DEC))	
717	CHROMA PHASE CONTROL	Adjust the chroma phase. -128 (-128 (DEC)) to 0 (0 (DEC)) to 127 (127 (DEC))	
718	SETUP LEVEL (59.94i/59.94P/29.97P mode)/BLACK LEVEL (50i/50P/25P mode)	Adjust the setup level (black level). -272 (-272 (DEC)) to 0 (0 (DEC)) to 272 (272 (DEC))	
719	SYSTEM PHASE SYNC	Adjust the output signal sync phase. -128 (-128 (DEC)) to 0 (0 (DEC)) to 127 (127 (DEC))	
720	SYSTEM PHASE SC	Adjust the output signal subcarrier phase. 0 (0 (DEC)) to 511 (511 (DEC))	
723	INPUT VIDEO BLANK	Switch blanking on or off for lines in the vertical blanking interval of input video signals. Lines can be specified individually. Y/C signals and odd/even fields are blanked simultaneously.	
	Sub-item		
	1	ALL LINE	- - -: Specify the blanking for each line separately. blink: Regardless of the settings of other sub-items, blank all lines which can be specified in this menu item. thru: Regardless of the settings of other sub-items, switch blanking off for all lines which can be specified in this menu item.
	2...10	LINE 12 ... LINE 20	In 59.94i/59.94P/29.97P mode Specify blanking for lines 12 to 20. blink: Switch blanking on. thru: Switch blanking off.
	2...15	LINE 9 ... LINE 22	In 50i/50P/25P mode Specify blanking for lines 9, 322 to 22, and 335. blink: Switch blanking on. thru: Switch blanking off.
726	H BLANKING WIDTH	Select the horizontal blanking width of the output analog video signal. narrow (narrow): Digital blanking (narrow) wide: Analog blanking (wide) When "wide" is selected, the horizontal blanking width complies with SMPTE170M, and normally the blanking is widened and the image becomes narrower. It is recommended to select "narrow" at the editing stage, then later, for broadcast transmission to select "wide", to output a signal conforming to the standard. Note, however, that "narrow" has to be always selected for SDI signals.	
728	OUTPUT SCH PHASE	Set the subcarrier H phase. -512 (-512 (DEC))... 0 (0 (DEC))... 511 (511 (DEC))	

Menu items in the 700s, relating to video control (VIDEO CONTROL)

Item number	Item name	Settings
731	WIDE MODE	Specify whether to record and play back with the addition of wide picture information.
	Sub-item	
	1 INPUT	Select whether to save wide picture information to the disc when recording. auto: Automatically save wide picture information when it is detected in the selected input video signal. on: Always save wide picture information. off: Never save wide picture information.
2 OUTPUT	Select whether to add wide picture information to the signal output when down-converter output is set to squeeze mode. thru: Do not add. auto: Add. Notes <ul style="list-style-type: none"> To add wide picture information to the output signal, another setting is required in addition to this item. In setup menu item 703, set line 16 (59.94i/59.94P/29.97P mode (J)), line 20 (59.94i/59.94P/29.97P mode (UC)), or line 23(50i/50P/25P mode) to “thru”. In 59.94i/59.94P/29.97P mode (J), output of wide picture information is given priority if the VITC insertion line is set to line 16 in setup menu item 601 or 602. In 59.94i/59.94P/29.97P mode (UC), output of wide picture information is given priority if the VITC insertion line is set to line 20 in setup menu item 601 or 602. 	
740	MASTER LEVEL (HD)	Adjust the high-definition video signal output from the HDSi OUTPUT 1, 2 (SUPER) connectors. This adjusts the Y, PB, and PR levels simultaneously. -2048 (-2048 (DEC)) to 0 (0 (DEC)) to 846 (846 (DEC))
741	Y LEVEL (HD)	Adjust the Y level of the high-definition video signal output from the HDSi OUTPUT 1, 2 (SUPER) connectors. -2048 (-2048 (DEC)) to 0 (0 (DEC)) to 846 (846 (DEC))
742	PB LEVEL (HD)	Adjust the PB level of the high-definition video signal output from the HDSi OUTPUT 1, 2 (SUPER) connectors. -2048 (-2048 (DEC)) to 0 (0 (DEC)) to 846 (846 (DEC))
743	PR LEVEL (HD)	Adjust the PR level of the high-definition video signal output from the HDSi OUTPUT 1, 2 (SUPER) connectors. -2048 (-2048 (DEC)) to 0 (0 (DEC)) to 846 (846 (DEC))
745	SETUP LEVEL (HD)	Adjust the setup level of the high-definition video signal output from the HDSi OUTPUT 1, 2 (SUPER) connectors. -272 (-272 (DEC)) to 0 (0 (DEC)) to 272 (272 (DEC))
746	SYNC PHASE (HD)	Control the H sync phase of the high-definition video signal output from the HDSi OUTPUT 1, 2 (SUPER) connectors. -128 (-128 (DEC)) to 0 (0 (DEC)) to 127 (127 (DEC))
747	FINE (HD)	Fine control the H sync phase of the high-definition video signal output from the HDSi OUTPUT 1, 2 (SUPER) connectors. 0 (0 (DEC)) to 1023 (1023 (DEC))

a) The “Y-add” function is a circuit operation to interpolate the video signal vertically during jog or variable speed playback for the purpose of reducing the vertical movement of the playback picture.

Menu items in the 800s, relating to audio control (AUDIO CONTROL)

Item number	Item name	Settings
802	DIGITAL AUDIO MUTING IN SHUTTLE MODE	Set the audio muting conditions during shuttle playback. off: Not muted. on: Muted.

Menu items in the 800s, relating to audio control (AUDIO CONTROL)

Item number	Item name	Settings	
807	AUDIO OUTPUT PHASE	Set the output timing of digital audio playback signals (HDS/SDI, SDI only), with 80H as a reference position. Output timing is earlier for values smaller than 80H and later for values greater than 80H. (80H, 128 samples = approx. 2.7 ms, 80H, 1 sample = approx. 20 μs) 0 (0 (HEX))... 80 (80 (HEX))... FF (FF (HEX)) : Values can be set in this range.	
808	INTERNAL AUDIO SIGNAL GENERATOR	Select the operation of the internal audio test signal generator. off : Prevent "SG" from being selected for sub-item AU INPUT of items A1 INPUT to A8 INPUT on the P2 AUDIO page of the function menu. silnc (silence) : Silent signal. 1kHz (1kHz sine) : 1 kHz, -20 dB FS sine wave signal. When you set the AU INPUT item on page P2 AUDIO of the function menu to "SG", the internal signal generator operates and outputs simultaneous test signals to channels 1 to 8 (see page 51).	
820	AUDIO OUTPUT CH3/CH4 SELECT	Select the signals output from the ANALOG AUDIO OUTPUT 3 and 4 connectors. line (line out) : Output the signals of the audio channels selected with item 824 from the ANALOG AUDIO OUTPUT 3 and 4 connectors. moni (monitor out) : Output the left channel of the monitor audio (CH-1) from the ANALOG AUDIO OUTPUT 3 connector, and output the right channel (CH-2) from the ANALOG AUDIO OUTPUT 4 connector.	
823	NON-AUDIO FLAG PB	Control non-audio flags in digital audio output.	
	Sub-item		
	1	CH1/CH2	During playback (except E-E mode), set non-audio flags in digital audio output to the following states. on : Set to on (data is non-audio.) auto : Set as follows. <ul style="list-style-type: none"> • When data is read from disc and confirmed: Follow the data. • When data from disc is not confirmed: Maintain current state.
	2	CH3/CH4	
	3	CH5/CH6	
4	CH7/CH8		
824	ANALOG LINE OUTPUT SELECT	Select the analog audio signals (tracks 1 to 8) to be assigned to audio output channels.	
	Sub-item		
	1	CH1/CH2	tr1/2 : Tracks 1 and 2 assigned to audio output channels 1 and 2. tr3/4 : Tracks 3 and 4 assigned to audio output channels 1 and 2. tr5/6 : Tracks 5 and 6 assigned to audio output channels 1 and 2. tr7/8 : Tracks 7 and 8 assigned to audio output channels 1 and 2.
	2	CH3/CH4	tr1/2 : Tracks 1 and 2 assigned to audio output channels 3 and 4. tr3/4 : Tracks 3 and 4 assigned to audio output channels 3 and 4. tr5/6 : Tracks 5 and 6 assigned to audio output channels 3 and 4. tr7/8 : Tracks 7 and 8 assigned to audio output channels 3 and 4.
828	SDI AUDIO OUTPUT SELECT	Select the audio signals to assign to SDI audio output channels.	
	Sub-item		
	1	CH1/CH2	tr1/2 : Tracks 1 and 2 assigned to audio output channels 1 and 2. tr3/4 : Tracks 3 and 4 assigned to audio output channels 1 and 2. tr5/6 : Tracks 5 and 6 assigned to audio output channels 1 and 2. tr7/8 : Tracks 7 and 8 assigned to audio output channels 1 and 2.
	2	CH3/CH4	tr1/2 : Tracks 1 and 2 assigned to audio output channels 3 and 4. tr3/4 : Tracks 3 and 4 assigned to audio output channels 3 and 4. tr5/6 : Tracks 5 and 6 assigned to audio output channels 3 and 4. tr7/8 : Tracks 7 and 8 assigned to audio output channels 3 and 4.

Menu items in the 800s, relating to audio control (AUDIO CONTROL)

Item number	Item name	Settings
834	AUDIO INPUT LEVEL	Select the analog audio input source.
	Sub-item	
	1 CH1	line: Line input mic: Microphone input
	2 CH2	line: Line input mic: Microphone input
	3 CH3	line: Line input mic: Microphone input
839	AUDIO AGC/LIMITER MODE	Select whether to adjust channels 1 and 2, or 3 and 4, independently or in stereo mode. These settings apply to automatic adjustments of the input levels of analog audio signals recorded on channels 1 and 2, or 3 and 4.
	Sub-item	
	1 CH1/CH2	mono: Automatically adjust channels 1 and 2 independently. stereo: Automatically adjust in stereo mode.
840	AUDIO AGC SELECT	Set the AGC saturation level property. Note This setting affects only channels with “mic” (microphone input) selected in setup menu item 834. Regardless of this setting, it is handled as “off” for channels with “line” (line input) selected.
	Sub-item	
	1 CH1/CH2	off: Do not activate AGC for CH1/CH2. on: Activate AGC for CH1/CH2.
	2 CH3/CH4	off: Do not activate AGC for CH3/CH4. on: Activate AGC for CH3/CH4.
	3 AGC SPEC	-6dB, -9dB, -12dB, -15dB, -17dB: Select the AGC settings of CH1/CH2 and CH3/CH4, to be applied when the VARIABLE/PRESET switch is set to “PRESET”.
841	AUDIO LIMITER SELECT	Set the limiter saturation level property, which limits large input signals during manual adjustment of audio input levels. Note This setting affects only channels with “mic” (microphone input) selected in setup menu item 834. Regardless of this setting, it is handled as “off” for channels with “line” (line input) selected.
	Sub-item	
	1 CH1/CH2	off: Do not activate the limiter for CH1/CH2. on: Activate the limiter for CH1/CH2.
	2 CH3/CH4	off: Do not activate the limiter for CH3/CH4. on: Activate the limiter for CH3/CH4.
	3 LIMITER SPEC	-6dB, -9dB, -12dB, -15dB, -17dB: Select the limiter settings of CH1/CH2 and CH3/CH4, to be applied when the VARIABLE/PRESET switch is set to “VARIABLE”.
842	MIC REFERENCE SELECT	Select the microphone input reference level.
	Sub-item	
	1 CH1/CH2	-60dB, -50dB, -40dB
2 CH3/CH4	-60dB, -50dB, -40dB	



Menu items in the 900s, relating to digital process (DIGITAL PROCESS)

Item number	Item name	Settings
920	SD-SDI H-ANC CONTROL	Select whether to add information to the SDI output.
	Sub-item	
	1 AUDIO 5CH-8CH	off: Do not add digital audio data channels 5 to 8. on: Add digital audio data channels 5 to 8.
	2 RP188 ATC	off: Do not add RP188 timecode data. on: Add RP188 timecode data.
923	AUTO SQUEEZE	Select whether to use auto squeeze mode. off: Do not use. on: Use.
925	HDMI OUTPUT SELECT	Select the resolution of the video output from the HDMI OUT connector. hd (1080i/720P) sd-l (480i (576i)) sd-p (480P (576P))
930	DOWN CONVERTER MODE	Select the down-converter mode. CROP (EDGE CROP): Select the edge-crop mode. L-BOX (LETTER BOX): Select the letter box mode. SQUEZ (SQUEEZE): Select the squeeze mode.
931	DOWN CONVERTER LETTER BOX MODE	Select the aspect ratio of the down-converter output when menu item 930 is set to "l-box". 16:9: Set the aspect ratio of the HD-SD converter output to 16:9. 14:9: Set the aspect ratio of the HD-SD converter output to 14:9. 13:9: Set the aspect ratio of the HD-SD converter output to 13:9.
932	H CROP POSITION (DC)	Adjust the H-crop (the horizontal position when cropping in the edge crop mode) of the down converter output when menu item 930 is set to "crop". -120 (-120 (DEC)) to 0 (0 (DEC)) to 120 (120 (DEC))
934	CROSS COLOR (DC)	Adjust the down-converter cross color. 0 (0 (DEC)) to 8 (8 (DEC)) to 15 (15 (DEC))
935	DETAIL GAIN (DC)	Adjust the down-converter image enhancer, the sharpness of edge enhancement. 0 (0 (HEX)) to 7F (7F (HEX))
936	LIMITER (DC)	Adjust the down-converter image enhancer, the maximum detail level added to emphasize the original signal. 0 (0 (HEX)) to 20 (20 (HEX)) to 3F (3F (HEX))
937	CRISP (DC)	Adjust the down-converter image enhancer, the threshold amplitude at which low amplitude signals are not emphasized. 0 (0 (HEX)) to F (F (HEX))
938	LEVEL DEPEND THRESHOLD (DC)	Adjust the down-converter image enhancer. Set the luminance range for edge enhancement. 0 (0 (HEX)) to 8 (8 (HEX)) to F (F (HEX))
939	H DETAIL FREQUENCY (DC)	Adjust the down-converter image enhancer. Set the central frequency for edge enhancement. 2.6M (2.6 (MHz)), 3.4M (3.4 (MHz)), 3.9M (3.9 (MHz)), 4.6M (4.6 (MHz))
940	H/V RATIO (DC)	Adjust the down-converter image enhancer. Set the horizontal/vertical ratio for edge enhancement. 0 (0 (DEC)) to 3 (3 (DEC)) to 7 (7 (DEC))
942	V-FILTER SELECT (DC)	Set the vertical interpolation filter coefficient for down-converter output (in 1080 mode only). 1 (1 (DEC)) to 3 (3 (DEC))
943	CROSS COLOR CRISP (DC)	Set the cross color crisp level for down-converter output. 0 (0 (HEX)) to 4 (4 (HEX)) to F (F (HEX))
950	UP CONVERTER MODE	Select the up-converter mode. CROP (EDGE CROP): Select the edge-crop mode. L-BOX (LETTER BOX): Select the letter box mode. SQUEZ (SQUEEZE): Select the squeeze mode.

Menu items in the 900s, relating to digital process (DIGITAL PROCESS)

Item number	Item name	Settings
951	H CROP POSITION (UC)	Adjust the H-crop (the horizontal position when cropping in the edge crop mode) of the up converter output when menu item 950 is set to "crop". -120 (-120 (DEC)) to 0 (0 (DEC)) to 120 (120 (DEC))
952	LETTER BOX POSITION (UC)	When menu item 950 is set to "l-box", adjust the vertical location of the position where the picture is cut out for up converter output in letter box mode. -120 (-120 (DEC)) to 0 (0 (DEC)) to 120 (120 (DEC))
953	UP CONVERTER PROCESS	Select the source picture to use in converting SD to HD. FIELD: Use field pictures. ADAPT (ADAPTIVE): Frame or field is selected automatically.
954	DETAIL GAIN (UC)	Adjust the up-converter image enhancer, the sharpness of edge enhancement. 0 (0 (HEX)) to 40 (40 (HEX)) to 7F (7F (HEX))
955	LIMITER (UC)	Adjust the up-converter image enhancer, the maximum detail level added to emphasize the original signal. 0 (0 (HEX)) to 20 (20 (HEX)) to 3F (3F (HEX))
956	CRISP THRESHOLD (UC)	Adjust the up-converter image enhancer, the threshold amplitude at which low amplitude signals are not emphasized. 0 (0 (HEX)) to 8 (8 (HEX)) to F (F (HEX))
957	LEVEL DEPEND THRESHOLD (UC)	Adjust the up-converter image enhancer. Set the luminance range for edge enhancement. 0 (0 (HEX)) to 8 (8 (HEX)) to F (F (HEX))
958	H DETAIL FREQUENCY (UC)	Adjust the up converter image enhancer. Set the center frequency and frequency properties for edge enhancement. 3.2M (3.2 (MHz)): 3.2 MHz ±1.1 MHz 4.5M (4.5 (MHz)): 4.5 MHz ±1.4 MHz 5.0M (5.0 (MHz)): 5.0 MHz ±0.7 MHz 4.0M (4.0 (MHz)): 4.0 MHz ±2.0 MHz
959	H/V RATIO (UC)	Adjust the up-converter image enhancer. Set the horizontal/vertical ratio for edge enhancement. 0 (0 (DEC)) to 3 (3 (DEC)) to 7 (7 (DEC))



Menu items in the 900s, relating to digital process (DIGITAL PROCESS)

Item number	Item name	Settings	
965	IMAGE ENHANCER (INPUT UP CONVERTER)	Set up the operation of the up converter image enhancer for SD input, separately from the settings for playback (menu items 950 to 959).	
	Sub-item		
	1	ENH SETTING	pb: While SD signals are input, make the behavior of the image enhancer of the up-converter follow the settings for playback (menu items 950 to 959) (Settings for sub-items 2 to 11 under menu item 965 become invalid). input: While SD signals are input, make the behavior of the image enhancer of the up-converter follow the settings for sub-items 2 to 11 under menu item 965 (separate settings during input of SD signals from those during playback).
	2	CONVERT	Select the up-converter mode. CROP: Select the edge-crop mode. L-BOX: Select the letter box mode. SQUE (SQUEZ): Select the squeeze mode.
	3	H CROP P	When sub-item UP CONVERTER MODE of menu item 965 is set to “crop”, adjust the H-crop (horizontal crop) position for up converter output in edge crop mode. -120 to 0 to 120
	4	L BOX P	When sub-item UP CONVERTER MODE of menu item 965 is set to “l-box”, adjust the vertical location of the position where the picture is cut out for up converter output in letter box mode. -120 to 0 to 120
	5	CNV PROC	Select the source picture to use in converting SD to HD. FIEL (FIELD): Use field pictures. ADAP (ADAPT): Frame or field is selected automatically.
	6	DETAIL	Adjust the up-converter image enhancer. Set the sharpness of edge enhancement. 0 to 40 to 7F
	7	LIMITER	Adjust the up-converter image enhancer. Set the maximum detail level added to emphasize the original signal. 0 to 20 to 3F
	8	CRISP	Adjust the up-converter image enhancer. Set the threshold amplitude at which low amplitude signals are not emphasized. 0 to 8 to F
	9	DEPEND	Adjust the up-converter image enhancer. Set the luminance range for edge enhancement. 0 to 8 to F
	10	H DETL F	Adjust the up converter image enhancer. Set the center frequency and frequency properties for edge enhancement. 3.2M: 3.2 MHz ±1.1 MHz 4.5M: 4.5 MHz ±1.4 MHz 5.0M: 5.0 MHz ±0.7 MHz 4.0M: 4.0 MHz ±2.0 MHz
11	HV RATIO	Adjust the up-converter image enhancer. Set the horizontal/vertical ratio for edge enhancement. 0 to 3 to 7	

Extended menu operations

Operations in the extended menu are similar to operations in the basic menu.


When the unit is shipped from the factory, it is set up to display the extended menu. If you wish, you can hide the extended menu by changing a setting in the maintenance menu.

To hide the extended menu

Proceed as follows to use the maintenance menu.


- 1 Holding down the HOME button, press the MENU button.

The maintenance menu appears on the video monitor display.

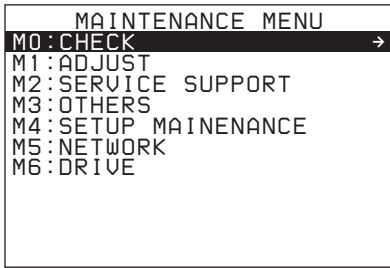


- Turn the PUSH SET knob to select “M4 SETUP MAINTENANCE”, then press the PUSH SET knob or the SELECT function button (F2).

The sub-items of M4: SETUP MAINTENANCE appears.

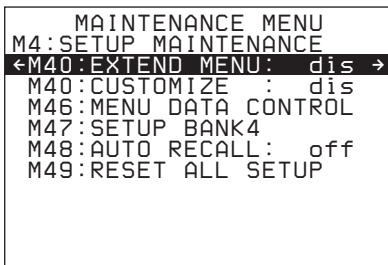

- Turn the PUSH SET knob to select “M40: EXTEND MENU”, then press the PUSH SET knob or the SELECT function button (F2).

The setting screen for M40: EXTEND MENU appears.

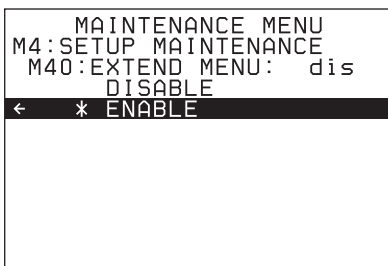

- Turn the PUSH SET knob to select “DISABLE”, and press the SAVE function button (F5).

The message “NOW SAVING...” appears on the video monitor display, and “Saving...” appears in the time data display area, while the new settings are saved in memory. When the saving operation is completed, the video monitor display and the time data display area return to their normal indications.

When you next display the menu and change the item display, only the basic menu will appear.



Maintenance Menu

Items in the maintenance menu

The following tables show the items in the maintenance menu.

- Item names are the names which appear on the video monitor of this unit and an external monitor to which the output of the COMPOSITE OUT connector, the SDDSI OUTPUT connector, or the HSDSI OUTPUT 2 (SUPER) connector is input.
- The values in the Settings columns are the values which appear in the time data display area. (The values may

appear in a different format on an external monitor. In this case, the external monitor values are shown in parentheses.) Underlined values are the factory defaults.

This manual does not explain the menu items in M0: CHECK, M1: ADJUST, M2: SERVICE SUPPORT, and M6: DRIVE. Refer to the Maintenance Manual for an explanation of these items.

M3: OTHERS: Other setting items

Item	Setting
M30: SOFTWARE VERSION	Display of the software version of this unit
M31: SERIAL NUMBER	Display of the serial number of this unit
M32: FAN MODE	<p>Selects the control method for the cooling fan. auto: Control the rotation of the fan automatically according to the temperature inside the unit. R-off (Rec-off): Stop the fan in recording mode. off: Leave the fan stopped always.</p> <p>Note Even when "R-off" or "off" is selected, the fan does not stop when temperatures inside the unit are high.</p>
M33: FILE I/F CONFIG	PROAV DISPLAY Selects whether or not to display PROAV directory. DISABLE : Do not display PROAV directory. ENABLE : Display PROAV directory.
	PC REMOTE Disables or enables a FAM connection. ENABLE : Enable a FAM connection. KEY SELECT : Enable or disable a FAM connection using the PC REMOTE button on the control panel.
M36: HOUR METER RESET	Display and reset of the hours meter and the thread counter

M3: OTHERS: Other setting items

Item	Setting			
M37: AUDIO CONFIG	M370: HEAD ROOM 	Select the audio reference level (headroom). -20dB, -18dB, -16dB, -12dB, EBUL Note EBUL can be selected only when the system frequency is 50i/50P/25P.		
	M371: DATA LEN	Select the audio channel configuration for IMX recording. 16bit x 8ch: 16-bit, 8-channel configuration 24bit x 4ch: 24-bit, 4-channel configuration		
	M372: NON-AUDIO INPUT	Select whether to handle digital audio signals as non-audio signals during recording.		
	<table border="1"> <tr> <th data-bbox="313 523 370 555">Sub-item</th> <th data-bbox="370 523 597 555"></th> </tr> </table>	Sub-item		Audio (audio): Handle as linear PCM audio signals. data: Handle as non-audio signals.
	Sub-item			
	1	tr1/tr2		
	2	tr3/tr4		
	3	tr5/tr6		
	4	tr7/tr8		
	M373: IN LEVEL	Set the upper limit for the signal level input to audio channels 1/3 or 2/4. +4dB, 0dB, -3dB, -6dB, EBUL		
<table border="1"> <tr> <th data-bbox="313 772 423 804">Sub-item</th> <th data-bbox="423 772 597 804"></th> </tr> </table>	Sub-item		Note EBUL can be selected only when the system frequency is 50i/50P/25P.	
Sub-item				
1	CH1			
2	CH2			
3	CH3			
4	CH4			
M377: OUT LEVEL	Set the reference level for audio output signals. +4dB, 0dB, -3dB, -6dB, EBUL Note EBUL can be selected only when the system frequency is 50i/50P/25P.			
M38: F-KEY CONFIG	<i>For details, refer to the Maintenance Manual.</i>			
	M380: HOME2	Assign a function menu item to page HOME2 of the function menu as a user setting.		
	M381: PAGE8 ASSIGN	Assign a setup menu item to page P8 of the function menu as a user setting.		
	M382: PAGE8 NAME	Specify the name of a setup menu item assigned with M381: PAGE8 ASSIGN.		
	M38F: NV-RAM CONTROL	Save the settings of M380 to M382.		



M3: OTHERS: Other setting items

Item		Setting	
M3B: VANC RX PARAMETER	M3B0: VANC RX PACKET	For setting HDSDI VANC data input parameters Notes <ul style="list-style-type: none"> In 59.94i, 50i, 29.97P or 25P mode, selecting the line also selects the corresponding line in the second field (for example, if line 9 is selected, line 527 is also selected for VANC packet reception). Menu item M3B0 enables recording of one VANC packet when the selected line contains any packets whose DID/SDID matches the value set with this menu item. Up to four packets are recorded per each line regardless of the DID and SDID for the VANC set with menu item M3B1 or M3B2. It is not possible to set the same line with menu items M3B0, M3B1, and M3B2. If the same line is specified, priority is given in the order of M3B0, M3B1, and M3B2 (for example, if the same line is specified with M3B0 and M3B1, the setting with M3B1 is ignored). When VANC data is output to HDSDI playback signals, the number of the output VANC line is the same as that of the input VANC line. When a UMID or essence mark line is selected with M3B1 or M3B2, UMID or essence mark output takes priority. To disable UMID or essence mark output, set setup menu item 651 or 657 to "off". 	
	Sub-item		
	1	LINE	Selects the lines for the VANC to be received. OFF, 9LINE to 20LINE (59.94i/50i/29.97P/25P/23.98P mode) OFF, 9LINE to 25LINE (59.94P/50P mode)
	2	DID	Specification of the DID of the VANC to receive 00-FF
	3	SDID	Specification of the SDID of the VANC to receive 00-FF
		M3B1: LINE1 SEL	Selects the lines to be received for the HDSDI VANC data. OFF, 9LINE to 20LINE (59.94i/50i/29.97P/25P/23.98P mode) OFF, 9LINE to 25LINE (59.94P/50P mode)
		M3B2: LINE2 SEL	Selects the lines to be received for the HDSDI VANC data. OFF, 9LINE to 20LINE (59.94i/50i/29.97P/25P/23.98P mode) OFF, 9LINE to 25LINE (59.94P/50P mode)
M3C: BATTERY CONFIG	M3C0: SETUP BATTERY END	<i>For details, refer to the Maintenance Manual.</i>	
	M3C1: STATUS DISPLAY		
	M3C2: INFORMATION		
M3D: DATE/TIME PRESET		Specification of the date and time	
M3E: USB MEMORY UTIL		For installation of software upgrade <i>For details, refer to the Maintenance Manual.</i>	
M3F: FACTORY SETUP		<i>For details, refer to the Maintenance Manual.</i>	

M4: SETUP MAINTENANCE: items relating to the setup menu

Item	Setting
M40: EXTEND MENU	Select whether to display the extended menu. DISABLE: Do not display. ENABLE: Display.
M41: CUSTOMIZE	Select whether to enable the customization function of the setup menu. DISABLE: Do not display. ENABLE: Display.

M4: SETUP MAINTENANCE: items relating to the setup menu

Item		Setting
M46: MENU DATA CONTROL	M461: MENU STATUS DISP	Displays the status of the menu bank where the current menu settings are stored.
	M462: SAVE MENU DATA	Select whether to temporarily back up (save) setup menu settings before operations such as software upgrades. PUSH SET knob: Back up (save) the settings. MENU button: Return to next highest menu level without backing up.
	M463: LOAD MENU DATA	Select whether to restore (load) setting that were backed up (saved) with the "SAVE MENU DATA" item. PUSH SET knob: Restore (load) the settings. MENU button: Return to the next highest menu level without restoring.
M47: SETUP BANK4		Select the bank to be stored in menu bank 4, or reset menu bank 4. CURRENT TO BANK4: Store the current menu settings in menu bank 4. BANK1 TO BANK4: Store the menu bank 1 settings in menu bank 4. BANK2 TO BANK4: Store the menu bank 2 settings in menu bank 4. BANK3 TO BANK4: Store the menu bank 3 settings in menu bank 4. RESET BANK4: Reset menu bank 4.
M48: AUTO RECALL		Select whether to recall settings automatically from a menu bank when the system is powered on, and if so which menu bank to recall from. off: Do not recall settings from a menu bank. from BANK1: Recall settings from menu bank 1. from BANK2: Recall settings from menu bank 2. from BANK3: Recall settings from menu bank 3. from BANK4: Recall settings from menu bank 4.
M49: RESET ALL SETUP		Reset the current menu settings to the factory settings. PUSH SET knob: Reset. MENU button: Return to the next highest menu level without resetting. Notes <ul style="list-style-type: none"> The system frequency setting is also cleared. If you execute this item, reset the system frequency (<i>see page 36</i>). Date and time settings are not cleared, but the time zone setting is cleared. After executing this item, reset the time zone (<i>see page 36</i>).

M5: NETWORK: items relating to network settings

Item		Setting
M50: DHCP		Set whether to assign an IP address automatically with the DHCP server. DISABLE: Do not assign automatically. ENABLE: Assign automatically.
M51: IP ADDRESS PRESET		Set IP address. 192.168.001.010 Note When DHCP is set to "ENABLE", it is not possible to set the IP address.
M52: SUBNET MASK PRESET		Set the subnet mask. 255.255.255.000 Note When DHCP is set to "ENABLE", it is not possible to set the subnet mask.
M53: DEFAULT GATEWAY PRESET		Set the default gateway. 000.000.000.000 Note When DHCP is set to "ENABLE", it is not possible to set the default gateway.
M54: LINK SPEED		Set the communications speed. AUTO, 10Mbps, 100Mbps, 1000Mbps



M5: NETWORK: items relating to network settings

Item	Setting
M55: DUPLEX	Set the communications method. AUTO, Full Duplex, Half Duplex <i>For how to set the communication method, see “To change network settings” (page 144).</i>
M56: JUMBO FRAME ^{a)}	Set the size of jumbo frames. 9014, 4088, OFF(1514) Note This value does not include the 4 bytes of the FCS (Frame Check Sequence).

a) A jumbo frame is a frame larger than the maximum 1514 bytes (not including FCS) of the standard Ethernet frame. Jumbo frames make it possible to deliver larger payloads per packet. Since fewer packets need to be routed, packet processing overhead is lower and network throughput is potentially improved. (Note that this item is enabled only when LINK SPEED is set to “1000Mbps”. For it to work, all other devices that handle packets on the network must also support jumbo frames.)

For information about how to change network settings see next section “To change network settings”.

Maintenance menu operations

This section describes the indications in the maintenance menu and how to change the settings.

To display the maintenance menu


Holding down the HOME button, press the MENU button. The maintenance menu appears on the video monitor display and the currently-set menu item is displayed in reverse video.

Meanings of indications on the menu screen

On-screen indication	Meaning
Right-pointing arrow (→) at the right of a menu item	Pressing the PUSH SET knob or the → button switches to the next lower menu level or to a setting selection screen.
Left-pointing arrow (←) at the left of a menu item	Pressing the PUSH SET knob or the ← button switches to the previous (higher) menu level.
Character string at the right of a menu item	Current setting of the menu item When shown with a colon (:): the current setting is the same as the factory default setting. When shown with a raised dot (·): the current setting is different from the factory default setting.
An * (asterisk) in a complete list of settings	Factory default setting

To change a menu item setting

Carry out the following operations to change the setting.

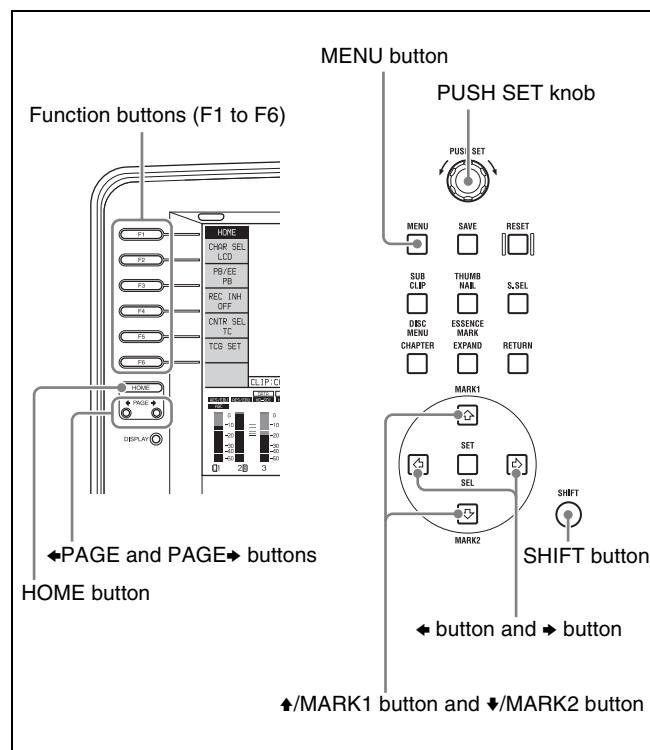

- Use the PUSH SET knob or the ↑/MARK1 and ↓/MARK2 buttons to select the required item, then press the PUSH SET knob or the SELECT function button (F2).
The sub-items of the selected item appears.
- Select a sub-item with the same operation as step 1, and use the PUSH SET knob or the ↑/MARK1 and ↓/MARK2 buttons to change the setting.
- Press the PUSH SET knob or the SELECT function button (F2) to confirm the setting change.
- Press the SAVE function button (F5).

The message “NOW SAVING...” appears on the video monitor display, and “Saving...” appears in the time data display area, while the new settings are saved in

memory. When the saving operation is completed, the video monitor display and the time data display area return to their normal indications.

To cancel changing a setting

Before pressing the SAVE function button (F5), press the MENU button.

The menu disappears from the video monitor display, without saving the new setting.

To change network settings

To change network settings, carry out the procedure described in the previous section, “To display the maintenance menu”, to display the NETWORK menu item, then carry out the following operations.

For details of the settings, consult your network administrator.

When the IP address is assigned automatically

Note

Check that the network cable is connected to this unit before carrying out the operation.

Follow the procedure as shown in previous section “To change a menu item setting” to set maintenance menu item M5: NETWORK >M50: DHCP to “ENABLE”.

To check the assigned IP address

Select maintenance menu item M5: NETWORK >M51: IP ADDRESS PRESET.

Note

If the IP address cannot be assigned, this is shown as “000.000.000.000.” In this case, consult the network administrator.

To set the IP address

First set DHCP to “DISABLE” (*see the previous section, “When the IP address is assigned automatically”*).

1 Select maintenance menu item M5: NETWORK >M51: IP ADDRESS PRESET.

2 Press the PUSH SET knob.

The IP address appears, and the digit that can be changed flashes.

3 Set the IP address.

To select a different digit to be changed

Use the ◀ and ▶ buttons.

To change the value of a digit

Turn the PUSH SET knob.

Turning clockwise increases the value, and turning counterclockwise decreases the value.

The ▲/MARK1 and ▼/MARK2 buttons can be used.

To return to the factory default setting

Press the RESET button.

4 When all digits are set, press the SAVE function button (F5).

This returns to the NETWORK menu.

5 Repeat steps **1** to **4** as required, to set the subnet mask and default gateway.

6 In the NETWORK menu, press the SAVE function button (F5).

7 When the “NOW SAVING...” message vanishes, power the unit off and then on again with the on/standby switch.

To set the communications speed and protocol

Set the communications speed (LINK SPEED) and communications method (DUPLEX) to match the network environment.

To set the communications speed and communications protocol, proceed as explained in the previous section “To display the maintenance menu” to display the NETWORK menu and then proceed as follows.

Contact your network administrator if you have any questions about the proper settings for these items.

To set the communications speed

1 Select maintenance menu item M5: NETWORK >M54: LINK SPEED.

2 Press the PUSH SET knob.

The communications speeds (AUTO, 10Mbps, 100Mbps, and 1000Mbps) appear, and the arrow flashes.

3 Press the PUSH SET knob or use the ▼/MARK1 or ▲/MARK2 button to select a communications speed.

To return to the factory default setting

Press the RESET button.

4 Press the SAVE function button (F5).

This returns to the NETWORK menu.

To set the communications protocol

1 Select maintenance menu item M5: NETWORK
>M55: DUPLEX.

2 Press the PUSH SET knob.

The communications protocols (AUTO, Full Duplex, Half Duplex) appear, and the arrow flashes.

3 Press the PUSH SET knob or use the ▲/MARK1 or ▼/MARK2 button to select a communications protocol.

To return to the factory default setting

Press the RESET button.

4 Press the SAVE function button (F5).

This returns to the NETWORK menu.



Overview

Planning metadata is a file that contains metadata about the clips to be shot and recorded.

To use planning metadata, you will need to save a file in advance in one of the locations shown below, and insert the media into this unit. (Up to 99 planning metadata files can be saved on one Professional Disc or USB Flash drive.)

Professional Disc: General/Sony/Planning directory ¹⁾

USB Flash drive: General/Sony/Planning directory

1) Created automatically when a disc is formatted.

Manipulating planning metadata

This unit allows you to perform the following operations on planning metadata using the GUI screen.

- To load planning metadata files
- To sort planning metadata
- To check planning metadata properties
- To clear planning metadata
- To switch the title display in the video monitor screen

See “Using planning metadata” (page 86) for details.

To set clip names by using planning metadata

The following two types of clip name strings can be written in a planning metadata file.

- The ASCII format name that appears in the video monitor screen ¹⁾
- The UTF-8 format name that is actually registered as the clip name ²⁾

1) It is also possible to display the UTF-8 format name, or no name (see page 87).

2) When no UTF-8 format name string is specified, the ASCII format name string is registered as the actual clip name.

By loading a file from one of the following locations into the unit’s memory before starting to record, you can register the names in the file as clip names.

To load files, use a GUI screen (see page 86).

File creation rules

File location	File name
Professional Disc: General/Sony/Planning directory ^{a)}	<ul style="list-style-type: none"> • Format that can be used in the General directory (see page 102) • Extension: XML
USB memory: General/Sony/Planning directory	<ul style="list-style-type: none"> • ASCII characters (up to 63 characters including the extension) • Extension: XML

a) General/Sony/Planning directory is created automatically when a disc is formatted. Automatically when a disc is formatted.

Clip name string format

In a text editor, modify the two fields in the <Title> tag that contain the clip name strings (the shaded fields in the example below).

Enter a name in the first field in ASCII format (up to 13 characters), and enter another name in the second field in UTF-8 format (up to 52 characters).

Clip name string example

```
<?xmlspversion="1.0"spencoding="UTF-8"?>␣
<PlanningMetadataspxmlns="http://
xmlns.sony.net/pro/metadata/
planningmetadata"spassignId="
P0001"spcreationDate="
2008-01-20T17:00:00+09:00"splastUpdate="
2008-03-28T10:30:00+09:00"spload="
false"spversion="1.00">␣
  <PropertiessppropertyId="
assignment"spupdate="2008-01-20T09:00:
00+09:00"spmodifiedBy="Chris">␣
    <TitlespusAscii="Typhoon"spxml:lang="
en">Typhoon_Strikes_Tokyo</Title>␣
  </Properties>␣
```

</PlanningMetadata>↵

In the above example, `sp` indicates a space and ↵ indicates a carriage return.

Notes

- When creating a file, write each line as a single statement, inserting carriage returns only at the indicated carriage return locations, and inserting no unspecified spaces.
- If the UTF-8 format string is longer than 52 characters, the ASCII format string is used as the clip name string.

Setting clip names

- 1** Load a planning metadata file containing clip names into the unit's memory (*see page 86*).
- 2** Carry out steps **2** to **5** of to set the “*To assign clip names on this unit*” (*page 104*).
- 3** Turn the PUSH SET knob to display “PLAN”, and then press the PUSH SET knob.

Each time that you start recording, the unit automatically creates clip names using the names specified in the planning metadata file. An underscore (`_`) and a three-digit serial number (001 to 999) is appended to each clip name.

Examples of automatically generated clip names

Clip names displayed in the video monitor screen:

Typhoon_001, Typhoon_002, ...

The actually recorded clip names:

Typhoon_Strikes_Tokyo_001,

Typhoon_Strikes_Tokyo_002, ... ¹⁾

1) When display of the ASCII format clip name has been selected (*see page 87*).

Notes

- The serial numbers return to 001 on the next recording operation if you reach number 999.
- Serial numbers are not reset when you power the unit off or exchange discs (newly generated numbers are continuous on the old ones).
- If the ASCII format clip name string is longer than 14 characters, it is displayed in the viewfinder as the first 8 characters + ■ (abbreviated) + the last 4 characters, for a total of 13 characters.

Appendix

Important Notes on Operation

Use and storage

Do not subject the unit to severe shocks

The internal mechanism may be damaged or the body warped.

Do not cover the unit while operating

Doing so will cause temperatures to rise inside the unit, possibly resulting in failure.

After use

Turn off the on/standby switch.

If you plan not to use the unit for a long time, turn off the POWER switch on the connector panel as well.

Shipping

- Remove the disc before transporting the unit.
- If sending the unit by truck, ship, air or other transportation service, pack it in the shipping carton of the unit.

Care of the unit

If the body of the unit is dirty, clean it with a soft, dry cloth. In extreme cases, use a cloth steeped in a little neutral detergent, then wipe dry. Do not use organic solvents such as alcohol or thinners, as these may cause discoloration or other damage to the finish of the unit.

In the event of operating problems

If you should experience problems with the unit, contact a Sony service representative.

Use and storage locations

Store in a level, ventilated place. Avoid using or storing the unit in the following places.

- In excessive heat or cold (operating temperature range: 5°C to 40°C (41°F to 104°F))
Remember that in summer or in warm climates the

temperature inside a car with the windows closed can easily exceed 50°C (122°F).

- In damp or dusty locations
- Locations where the unit may be exposed to rain
- Locations subject to violent vibration
- Near strong magnetic fields
- Close to radio or TV transmitters producing strong electromagnetic fields.
- In direct sunlight or close to heaters for extended periods

To prevent electromagnetic interference from portable communications devices

The use of portable telephones and other communications devices near this unit can result in malfunctions and interference with audio and video signals.

It is recommended that the portable communications devices near this unit be powered off.

Condensation

If you move the unit from a very cold place to a warm place, or use it in a damp location, condensation may form on the optical pickup. Then, if the unit is operated in this state, recording and playback may not be performed properly.

Do the following to prevent this from happening.

- When you move or operate the unit in an environment where condensation may form, be sure to insert a disc in advance.
- Whenever you turn on the on/standby switch, check that the HUMID indicator does not appear on the color LCD. If it appears, wait until it disappears before inserting a disc.

About the LCD panel

LCD panels are manufactured with extremely high precision technology that yields effective pixel rates of 99.99% or higher. However, very rarely, one or more pixels may be permanently dark or permanently lit in white, red, blue, or green.

This phenomenon is not a malfunction. Such pixels have no effect on the recorded data, and the unit may be used with confidence even if they are present.

Periodic Maintenance

Digital hours meter

The digital hours meter can provide six items of information about the operational history of the unit. The information can be displayed in the time data display area and also, by text superimposition, on the monitor connected to the unit. Use the information as a guide in scheduling periodic maintenance.

For periodic maintenance, consult a Sony service representative.

Display modes of the digital hours meter

H01: OPERATION mode

Displays the total number of hours the unit has been powered on in units of 1 hour.

H02: LASER PARAMETER mode (not resettable)

This shows a counter of the cumulative light output time by the optical head in units of hours.¹⁾

This can be used as a guide in determining when to replace the optical head.

1) The counter advances at different rates during recording and playback. It is also affected by the ambient temperature.

H11: OPERATION mode (resettable)

Same as H01 except that the count is resettable.

This can be used as a guide in determining when to replace parts.

H13: SEEK RUNNING mode (resettable)

This shows the cumulative seek operation time for the optical head in units of hours. The count is resettable.

This can be used as a guide in determining when to replace the seek motor.

H14: SPINDLE RUNNING mode (resettable)

This shows the cumulative spindle rotation time, in units of hours. The count is resettable.

This can be used as a guide in determining when to replace the spindle motor.

H15: LOADING COUNTER mode (resettable)

Displays the total number of times disc has been loaded in the unit. The count is resettable.

To display the digital hours meter

Press the MENU button to display the setup menu, then turn the PUSH SET knob to display the required item in the time data display area and on the monitor connected to the unit.

To exit from the digital hours meter

Press the RETURN function button (F1) to return to the setup menu.

Press the EXIT function button (F5) to return to the screen that was displayed before you entered the setup menu.

Note about the battery terminal

The battery terminal of this unit (the connector for battery packs and AC adaptors) is a consumable part.

Power may not be supplied to the unit properly if the pins of the battery terminal are bent or deformed by shock or vibrations, or if they become corroded due to prolonged outdoor use.

Periodic inspections are recommended to keep the unit working properly and to prolong its usable lifetime.

Contact a Sony service or sales representative for more information about inspections.



Troubleshooting

Alarms

An alarm (warning message) appears in the time data display area when an operation is attempted which is inappropriate for the settings on this unit or the state of the disc. Both the alarm message and the action to take to resolve the problem appear in the monitor video section and on the screen of the external video monitor connected to the unit.

REMOTE!

Example alarm in time data display area

ALARM
 REMOTE MODE IS SELECTED.
 SET REMOTE/LOCAL/NETWORK
 SWITCH TO LOCAL.

Example alarm in monitor video section

When an alarm is displayed, remove the alarm cause by following the action to take. If the alarm display does not disappear, contact a Sony service representative. Please note that there are some alarms which do not appear depending on the setting of setup menu item 016 ALARM DISPLAY (see page 119).

See "Setup Menu" (page 116) for more information about setup menu operations.

When the unit is powered on

Alarm message in time data display area	Alarm message in video monitor screen	Description/action
ADJ. Mode!	THE UNIT IS IN ADJUSTMENT MODE. CHECK THE SWITCHES OF S2200 ON THE HPR-31 BOARD AND S500 ON THE NET-5 BOARD.	This appears when the unit is in adjustment mode. Contact a Sony service representative.
MENU Ver.UP	THE SETUP MENU SOFTWARE HAS BEEN UPGRADED. SET THE SETUP MENU ITEMS TO THE DESIRED SETTINGS.	Reset the settings in the setup menu (see page 122).
ILL. SETUP!	INVALID SETTINGS SELECTED IN SETUP MENU. SET ITEMS IN THE SETUP MENU TO THE APPROPRIATE VALUES. CONTACT SERVICE IF THIS ALARM APPEARS AGAIN AFTER ABOVE PROCEDURE.	Reset the settings in the setup menu (see page 122). If the same message appears after you reset the settings, contact a Sony service representative.
Exchg batt!	BATTERY NEEDS REPLACING. PLEASE CONTACT SERVICE.	The NVRAM battery is exhausted. Contact a Sony service representative.
Update Err!	RUN SOFTWARE UPDATE PROGRAM.	The software version is not properly updated. Update the software version again. If the same message appears after you update the software version, contact a Sony service representative.

When a disc is inserted

Alarm message in time data display area	Alarm message in video monitor screen	Description/action
Unknown FS!	UNKNOWN FILE SYSTEM. PLEASE FORMAT DISC OR EJECT.	Format the disc, or eject it (<i>see page 87</i>).
No FS!	NO FILE SYSTEM.PLEASE EJECT DISC.	Eject the disc.
ILL. Disc!	IRREGULAR DISC IS USED. USE PROFESSIONAL DISC.	Use a Professional Disc.
	IRREGULAR DISC IS USED. PLEASE EJECT DISC.	
Salvage NG!	CLIP SALVAGE WAS NOT COMPLETED.	See “ <i>Handling of discs when recording does not end normally (salvage functions)</i> ” (<i>page 57</i>).
Salvage XXXX	DISC CANNOT BE RECORDED. FORMAT DISC OR CONTACT SERVICE TO RUN CLIP SALVAGE PROGRAM. (XXXX)	
Over DUR!	EXCESSIVE DURATION IS IN DISC. RECORDING AND PLAYBACK IS NOT POSSIBLE.	Data in excess of the rated capacity is recorded on the disc.
No Support!	FORMAT NOT SUPPORTED. RECORDING AND PLAYBACK IS NOT POSSIBLE.	A disc in an unsupported recording format is loaded. Use a disc formatted in the MPEG HD422 format.
ILL. Index!	INDEX FILE ERROR. PLEASE FORMAT DISC OR EJECT.	Format the disc, or eject it (<i>see page 87</i>).
Formatting!	AUTO FORMATTING IS EXECUTING.	Wait until the format has been completed and try again.
FORMAT NG!	AUTO FORMATTING WAS NOT COMPLETED.	Eject the disc and insert it again, or insert another disc.
DI read err	CANNOT READ DISC INFORMATION. PLEASE EJECT DISC.	
Read err		
DRV ADJ err	CANNOT PERFORM AUTO DRIVE ADJUSTMENT.	

During control panel operations

Alarm message in time data display area	Alarm message in video monitor screen	Description/action
KEY INHI.! ^{a)}	KEY INHIBIT MODE IS SELECTED. SET KEY INHIBIT SWITCH TO OFF.	This appears when the KEY INHI switch is “on”. Set the KEY INHI switch to “off”.
REMOTE! ^{a)}	REMOTE MODE IS SELECTED. SET REMOTE/LOCAL/NETWORK SWITCH TO LOCAL.	Set the remote control switch to “LOCAL”.
No Disc! ^{a)}	NO DISC.	Insert a disc and try again.

Alarm message in time data display area	Alarm message in video monitor screen	Description/action
REC INHI.!	AUTO FORMATTING WAS NOT COMPLETED. THE DISC WRITE PROTECT TAB IS SET TO SAVE. PLEASE EJECT DISC.	Set the disc's Write Inhibit tab to enable recording (<i>see page 53</i>).
	THE DISC WRITE PROTECT TAB IS SET TO SAVE.	
	AUTO FORMATTING WAS NOT COMPLETED. REC INHIBIT MODE IS SELECTED. CHECK FUNCTION MENU. PLEASE EJECT DISC.	This appears when REC INH on the HOME page of the function menu is set to "ON". Set REC INH to "OFF" (<i>see page 50</i>).
	REC INHIBIT.	This appears if you press the REC button when a disc error has occurred. Correct the disc error and try again.
No Clip! ^{b)}	NO CLIP.	This appears when a playback, search or delete operation is attempted on a disc with no clips recorded on it. Insert a disc with clips recorded on it.
Disc Top! ^{a)}	DISC TOP.	This appears if you press the PREV button or conduct a high-speed reverse search when the unit is stopped at the start of the disc. Use forward search or playback instead.
Disc End! ^{a)}	DISC END.	This appears if you press the NEXT button or conduct a forward high-speed search when the unit is stopped at the end of the disc. Use reverse search or playback instead.
MAX # Clips	DISC CANNOT BE RECORDED TO. FOR MORE RECORDING, DELETE SOME CLIPS.	Delete unneeded clips, or insert a disc with enough free space.
MAX # Files	DISC CANNOT BE RECORDED TO. FOR MORE RECORDING SPACE, DELETE CLIPS OR NON-AV DATA. (GENERAL FILES)	Delete clips or GENERAL files.
Disc Full!	DISC FULL.FOR MORE RECORDING, DELETE SOME CLIPS.	Delete unneeded clips, or insert a disc with enough free space.
MAX# SB CLP ^{b)}	NO MORE SUB CLIPS CAN BE ADDED TO CLIP LIST.	This appears when an attempt is made to add sub clips when 300 sub clips have already been registered. Limit the creation of sub clips to 300 or fewer.
CL OVER DUR ^{b)}	DURATION OF ONE CLIP LIST MUST BE LESS THAN 24 HOURS.	This appears when you try to add a sub clip when the total duration of sub clips in a clip list has already reached 24 hours. Create clip lists so that the total duration is within 24 hours.
Run Salvage	EXECUTE SALVAGE PROGRAM.	This appears when recording, E-E display, essence mark recording, or sub clip addition for quick scene selection is attempted on a disc that needs to be salvaged. Try again after salvaging the clips on the disc (<i>see page 57</i>).
CNT mode! ^{a)}	COUNTER MODE IS SELECTED. SET COUNTER SELECT MENU TO TC OR UB.	This appears when CNTR SEL on the HOME page of the function menu is set to "COUNTER", and you try to preset timecode or user bits. To use timecode or user bits, set CNTR SEL to "TC" or "UB" (<i>see page 50</i>).

Alarm message in time data display area	Alarm message in video monitor screen	Description/action
TC EXT! ^{b)}	TC EXTERNAL IS SELECTED. SET TC INTERNAL MODE IN TIME DATA SETTING AREA.	This appears when the INT/EXT/SDI switch is set to "EXT", and you try to preset timecode or user bits by setting the PRESET/REGEN switch to "PRESET". Set the INT/EXT/SDI switch to "INT" (see page 18).
REGEN mode! ^{a)}	TCG REGEN MODE IS SELECTED. SET TC PRESET MODE IN TIME DATA SETTING AREA.	This appears when the PRESET/REGEN switch is set to "REGEN TC" or "REGEN VITC", and you try to preset timecode or user bits. Set the PRESET/REGEN switch to "PRESET" (see page 18).
REC RUN! ^{a)}	TCG RUN MODE IS SET TO REC RUN. SET TC FREE RUN MODE IN TIME DATA SETTING AREA.	This appears when the F-RUN/R-RUN switch is set to "R-RUN", and you try to preset timecode or user bits. Set the F-RUN/R-RUN switch to "F-RUN" (see page 18).
REC mode! ^{b)}	THUMBNAIL(S) CANNOT BE DISPLAYED DURING RECORDING. CANNOT EXECUTE IN REC MODE. DRIVE MAINTENANCE MENU CANNOT BE EXECUTED WHILE IN REC MODE. INPUT SELECTION CANNOT BE CHANGED DURING RECORDING. AUDIO REC MODE CANNOT BE CHANGED DURING RECORDING.	Stop recording and try again.
REC-PAUSE!	TC/UB CANNOT BE PRESET IN REC-PAUSE MODE.	Stop recording and try again.
No SEL List ^{b)}	CLIP LIST IS NOT SELECTED.	This appears when you press the SUB CLIP/DISC MENU button while the clip list on the disc is not loaded into the current clip list. Load the clip list (see page 79) and try again.
SB CLP mode ^{b)}	TO ADD AN ESSENCE MARK, EXIT FROM SUB CLIP MODE FIRST.	This appears when an attempt is made to manipulate the essence mark while the SUB CLIP/DISC MENU button is lit or to set a clip flag while the clip list is being played back (SUB CLIP indicator is lit). Perform the operation after pressing the SUB CLIP/DISC MENU button to turn it off.
SUB CLIP NG ^{b)}	SUB CLIP IS INVALID. SET APPROPRIATE IN/OUT POINTS.	Set the In and Out points again.
No List! ^{b)}	NO CLIP LIST.	This appears when you try to delete a clip list when there is no clip list saved on the disc. Load the disc that contains the clip list you want to delete.
Loading List!	LOADING CLIP LIST.	This appears if the SUB CLIP/DISC MENU button is pressed while a clip list is loading. Wait for the clip list to finish loading and try again.
STOP ONCE! ^{b)}	STOP ONCE, THEN EXECUTE.	This appears when the SUB CLIP/DISC MENU button is pressed while the clip list is being played back or when an attempt is made to open the GUI screen with setup menu item 151 GUI OPERATION set to "stop". Perform the operation after stopping playback.
No EM space	ESSENCE MARK NOT RECORDED. NO SPACE AVAILABLE TO RECORD ESSENCE MARK.	Use the PDZ-1 Proxy Browsing Software to delete unneeded essence marks. Or, delete unneeded shot marks in the chapter thumbnail screen.
EM Full!	NO MORE ESSENCE MARKS CAN BE RECORDED.	
Disc Damage	DISC CANNOT BE RECORDED TO. USE ANOTHER DISC FOR RECORDING.	Use another disc.

Alarm message in time data display area	Alarm message in video monitor screen	Description/action
NON-AV Full	DISC CANNOT BE RECORDED TO. FOR MORE RECORDING SPACE, DELETE NON-AV DATA. (GENERAL FILES)	Delete unneeded GENERAL files.
Index File!	UNSUPPORT INDEX FILE. DISC CANNOT BE RECORDED TO.	Use another disc.
File System	CURRENT VERSION OF THE SOFTWARE SETS THE DISC WRITE PROTECTED.	This appears when you insert a disc that can be played back but not recorded. Exchange the disc for one with a file system supported by this unit. Or format the disc (see page 87).
	FILE SYSTEM ON THE DISC INHIBITS WRITING.	
Loading! ^{a)}	LOADING.	This appears if you press a button while a disc is loading. Wait until the disc has finished loading and try again.
Unloading! ^{a)}	UNLOADING.	This appears if you press a button while a disc is unloading. Wait until the disc has finished unloading and try again.
Clip lock!	CLIP IS LOCKED. UNLOCK CLIP IN THUMBNAIL MENU.	This appears when an operation is attempted on a locked clip. Use the Thumbnail Menu to unlock the clip (see page 77) and try again.
File Access	CANNOT CHANGE SETTINGS DURING FILE ACCESS.	This appears if you try to press the PC REMOTE button, to turn it off, during PC REMOTE file access or command processing (see page 18).
Inhibit!	PC REMOTE IS DISABLED. CHECK MAINTENANCE MENU M33.	This appears if you try to press the PC REMOTE button, to turn it off, when maintenance menu item M33: FILE I/F CONFIG >PC REMOTE is set to "ENABLE" (see page 18).
GUI Inhibit	GUI OPERATION IS INHIBITED. CHECK SETUP MENU.	This appears when the THUMBNAIL/ESSENCE MARK button or the DISC MENU (SHIFT+SUB CLIP) button is pressed while setup menu item 151 GUI OPERATION is set to "dis".

a) Displayed only when setup menu item 016 ALARM DISPLAY is set to "on".

b) Displayed only when setup menu item 016 ALARM DISPLAY is set to "on" or "limit".

During recording and editing operations

Alarm message in time data display area	Alarm message in video monitor screen	Description/action
Input Sig! ^{a)}	VIDEO INPUT SIGNAL DOES NOT MATCH SYSTEM SETUP.	This appears when the signal that does not correspond to the system frequency or the number of lines set in this unit is being input, or when HDSDI or i.LINK TS is selected as a video input signal while setting the SD signal recording. Input a signal that matches the system frequency, or change this unit's system frequency setting (see page 45).
ILL. REC! ^{a)}	ENCODING DOES NOT SYNCHRONIZE WITH REF VIDEO.	Check the signals being input to this unit.
ILL. REF! ^{a)}	INPUT VIDEO SIGNAL DOES NOT SYNCHRONIZE WITH REF VIDEO SIGNAL. USE COMMON REFERENCE SIGNAL OR CONNECT RECORDER REF OUT TO PLAYER REF IN.	Input a reference signal synchronized with this unit's system frequency.
MEM. Full! ^{a)}	MEMORY FULL !!	Check the disc being recorded by this unit.

Alarm message in time data display area	Alarm message in video monitor screen	Description/action
Verify ERR!	DISC ERROR DETECTED.	This appears when an error is found in the signal recorded on the disc while performing the recording verification function. Change the disc.
Recording	NOW RECORDING ...	Wait for recording to finish.

a) Displayed only when setup menu item 016 ALARM DISPLAY is set to "on" or "limit".

During playback

Alarm message in time data display section	Alarm message in monitor video section	Description/action
ILL. PLAY! ^{a)}	ILLEGAL PLAYBACK.	Check the disc being played by this unit.
MEM. Empty! ^{a)}	MEMORY EMPTY !!	Check the disc being played by this unit.
Disc Error!	DISC ERROR DETECTED.	Use another disc.

a) Displayed only when setup menu item 016 ALARM DISPLAY is set to "on" or "limit".

During thumbnail search, scene selection, and clip list operations

Alarm message in GUI screen	Description/action
Cannot Expand Clip any Further.	The clip cannot be expanded into more blocks. This appears when the EXPAND button is pressed when the number of block is maximum, or when the duration of an expanded thumbnail is 1 frame.
Selected Essence Mark does not Exist.	The selected essence mark does not exist. This appears in the essence mark selection screen when the specified essence mark does not exist on the disc.
Sub Clip is Invalid. Set Appropriate IN/OUT Points.	The temporal relationship between the specified In and Out points in sub clip trimming is not correct. Reset so that the value of the Out point timecode is larger than the value of the In point timecode.
Duration of One Clip List must be Less than 24 Hours.	The total duration of the current clip list is greater than 24 hours. This appears when the total duration of the current clip list exceeds the upper limit of 24 hours as the result of adding or trimming sub clips.
No More Sub Clips can be Added to the Clip List.	The upper limit of sub clips in the current clip list has been reached. This appears when the upper limit of 300 clips in a clip list has been reached as the result of adding or trimming sub clips.
Sub Clip does not Exist.	There are no sub clips in the current clip list. This appears when an attempt is made to move, trim or delete sub clips or preset timecode.
Clip List does not Exist.	There are no clip lists on the disc. This appears when an attempt is made to execute a Delete Clip List operation when there are no clip lists on the disc.
Move is Invalid.	The sub clip cannot be moved. This appear when an attempt is made to execute a Move Sub Clips operation when there are no sub clip in the current clip list, or when there is only one sub clip.
Chapter does not Exist.	The specified chapter has not been recorded. This appears when an attempt is made to display a chapter when a chapter has not been recorded for that clip.
Some Essence Mark cannot be Deleted.	The Rec Start essence mark cannot be deleted. This appears when an attempt is made to delete a Rec Start with a Delete Shot Mark operation. Delete Shot Mark can delete only Shot Mark1 and Shot Mark2 marks.
Some Essence Mark cannot be Moved.	Rec Start essence mark cannot be moved. This appears when an attempt is made to move a Rec Start with a Move Shot Mark operation. Move Shot Mark can move only Shot Mark1 and Shot Mark2 marks.

Alarm message in GUI screen	Description/action
Clip is Locked.	The clip is locked. This appears when an attempt is made to delete a clip, set the clip thumbnail, or delete a shot mark when the clip is locked.
All Clips are Locked.	All clips are locked. This appears when an attempt is made to execute a Lock All Clips operation when all clips are already locked.
All Clips are Unlocked.	All clips are unlocked. This appears when an attempt is made to execute an Unlock All Clips operation when all clips are already unlocked.
Command Disabled.	This appears when an attempt is made to perform Format Disc operation while Disable "Format Disc" is set to "Disable".
A File with the Name you Specified Already Exists. Specify a Different Name.	This appears when an attempt is made to set an existing clip name while changing the clip name using Set Clip Name.
Set NAMING FORM to "free"	This appears when an attempt is made to change the clip name using Set Clip Name even though NAMING FORM is not set to "free" (see page 104).
"No Flash Drive"	This appears when an attempt is made to select "USB Flash Drive" in the media selection screen under Load Planning Metadata/Select Drive even though the USB memory is not connected.

Alarms relating to audio and video signals

Alarm message in time data display area	Alarm message in video monitor screen	Action
No INPUT! ^{a)}	INPUT VIDEO IS NOT DETECTED. CHECK THE VIDEO INPUT MODE AND SUPPLY A VIDEO SIGNAL TO VIDEO INPUT.	<ul style="list-style-type: none"> Check the setting of V INPUT on Page P1 VIDEO of the function menu (see page 51). Input the signal selected in V INPUT on page P1 VIDEO of the function menu.
EMPHASIS! ^{a)}	INPUT AUDIO EMPHASIS IS NOT SUPPORTED. CHECK THE EMPHASIS OF THE AUDIO INPUT SIGNAL.	Check the emphasis of the audio input signal.
REF NON-STD	A NON-STANDARD REF SIGNAL IS BEING USED FOR REF VIDEO. USE A STANDARD SIGNAL.	Input a standard signal.

a) Displayed only when setup menu item 016 ALARM DISPLAY is set to "on".

Alarms relating to sensors and drives

Alarm message in time data display area	Alarm message in video monitor screen	Action
FAN Stopped	FAN MOTOR STOPPED.	Contact a Sony service representative.
DR-FAN Stop	DRIVE FAN MOTOR STOPPED.	
High TEMP!	HIGH TEMPERATURE.	Note The unit will not stop operating, but if you continue to use it in this state temperatures inside the unit or the drive will rise, possibly resulting in failure or fire.
	HIGH TEMPERATURE IN DRIVE.	
HUMID!	MOISTURE HAS BEEN DETECTED.	Stop recording or playback, power the unit off and on again, and wait until the HUMID display disappears.
BATT EMPTY!	BATTERY EMPTY!	Change the battery.
Unknown USB	UNKNOWN USB DEVICE.	The USB connector of this unit is for maintenance purposes and connection of USB devices. Connect a compatible USB device.


Alarms related to system frequency and recording format

The following alarms are displayed only when setup menu item 016 ALARM DISPLAY is set to “on” or “limit”.

Alarm message in time data display area	Alarm message in video monitor screen	Action
1080/59.94i	RECORDING AND PLAYBACK IS NOT POSSIBLE. SYSTEM FREQUENCY SELECTION DIFFER FROM IT ON DISC.	This appears when the system frequency selection of the unit differs from that of the loaded disc. Insert a disc with the same system frequency as the unit, or change the unit's system frequency.
1080/29.97P		
1080/50i		
1080/25P		
1080/23.98P		
720/59.94P		
720/50P		
525/59.94i		
625/50i		
1080/59.94i	DISC CANNOT BE RECORDED. VIDEO RESOLUTION DIFFER FROM IT ON DISC.	This appears when the number of system lines set in this unit does not correspond to the resolution for the inserted disc. Change the disc to the one corresponding to the number of system lines set in this unit or change the number of system lines of this unit.
1080/50i		
1080/29.97P		
1080/25P		
1080/23.98P		
720/59.94P		
720/50P		
HD422 1080	DISC CANNOT BE RECORDED. VIDEO REC MODE SELECTION DIFFERENT FROM VIDEO ON DISC.	This appears when the video recording format of this unit does not correspond to that of the inserted disc. Change the disc to the one corresponding to the video recording format of this unit or change the video recording format of this unit.
HD422 720		
HD420 1080		
HD420 720		
IMX50 Clip		
IMX40 Clip		
IMX30 Clip	DISC CANNOT BE RECORDED. AUDIO REC MODE SELECTION DIFFERENT FROM AUDIO ON DISC.	This appears when the audio recording format of this unit does not correspond to that of the inserted disc. Change the disc to the one corresponding to the audio recording format of this unit or change the audio recording format of this unit.
8CH×16 Clip		
4CH×24 Clip		
2CH×16 Clip		

Error messages


Error codes appear in the time data display when an error (usually a hardware problem) occurs. In addition, both error messages and error codes appear in the monitor video section and on the video monitor connected to the unit. When an error message appears, follow the instructions in the error message to resolve the problem.

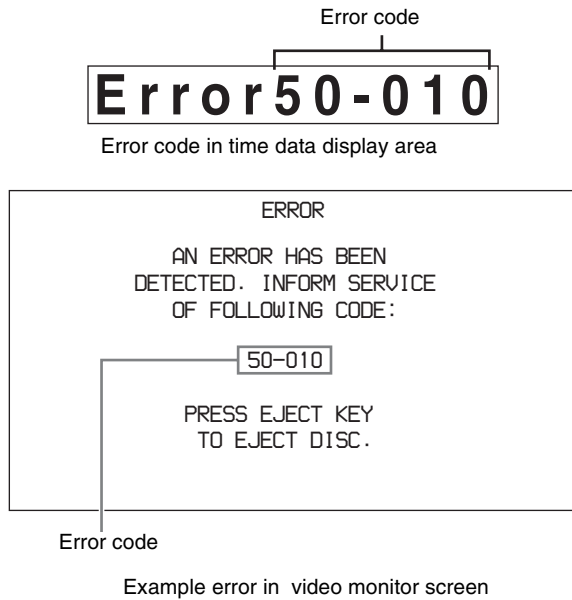

Specifications

General

External dimensions (w/h/d, including projections)
 300×146.5×420 mm
 (11 ⁷/₈×5 ⁷/₈×16 ⁵/₈ inches)

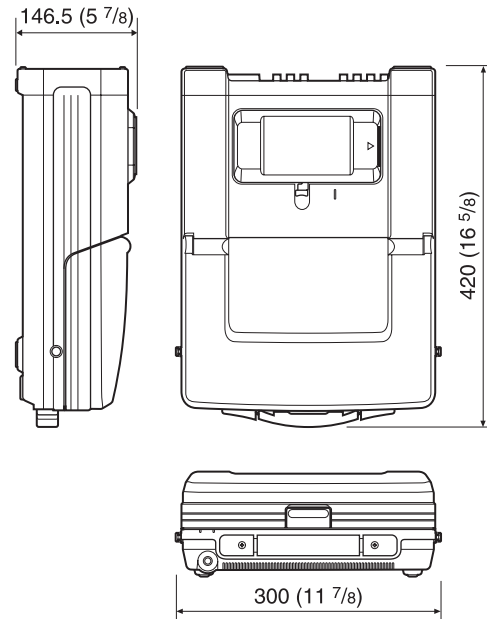

in mm (inches)

To eject discs with the unit powered off

As an emergency measure, disc cartridges can be removed with the unit powered off. This operation should always be done by a trained service technician.

Mass	7.4 kg (16 lb. 5.0 oz.)
Power requirements	100 V to 240 V AC, 50/60 Hz 12 V DC
Power consumption	AC operation: 80 W DC operation: 5.7 A
Peak inrush current	(1) Power ON, current probe method: 48 A (240 V), 18 A (100 V) (2) Hot switching inrush current, measured in accordance with European standard EN55103-1: 11 A (230 V)
Operating temperature	0°C to +40°C (32°F to +104°F)
Storage temperature	-20°C to +60°C (-4°F to +140°F)
Operating relative humidity	20 to 90%

System

Recording/playback format

MPEG HD422

Video MPEG HD 422: 50 Mbps

Proxy video MPEG-4
 Audio 24 bits, 48 kHz, 8 channels
 Proxy audio A-law 8 bits, 8 kHz, 8 channels

MPEG HD

Video MPEG HD: HQ35/SP25/LP18 Mbps¹⁾
 Proxy video MPEG-4
 Audio 16 bits, 48 kHz, 4/2 channels
 Proxy audio A-law 8 bits, 8 kHz, 4/2 channels

MPEG IMX

Video MPEG HD: 50/40/30 Mbps
 Proxy video MPEG-4
 Audio 24/16 bits, 48 kHz, 4/8 channels
 Proxy audio A-law 8 bits, 8 kHz, 4/8 channels

DVCAM

Video DVCAM: 25 Mbps
 Proxy video MPEG-4
 Audio 16 bits, 48 kHz, 4 channels
 Proxy audio A-law 8 bits, 8 kHz, 4 channels

1) Playback only supported for MPEG HD 18 Mbps.

Recording/playback times

Format	Number of audio channels	Disc	
		PFD23A	PFD50DLA
MPEG HD422	8 channels	Approx. 43 minutes	Approx. 95 minutes
MPEG HQ35	4 channels	65 minutes or more	145 minutes or more
	2 channels	68 minutes or more	150 minutes or more
MPEG SP25	4 channels	Approx. 85 minutes	Approx. 190 minutes
	2 channels	Approx. 90 minutes	Approx. 200 minutes
MPEG LP18 ^{a)}	4 channels	112 minutes or more	248 minutes or more
	2 channels	122 minutes or more	265 minutes or more
MPEG IMX 50	4/8 channels	Approx. 45 minutes	Approx. 100 minutes
MPEG IMX 40		Approx. 55 minutes	Approx. 120 minutes
MPEG IMX 30		Approx. 68 minutes	Approx. 150 minutes
DVCAM	4 channels	Approx. 85 minutes	Approx. 185 minutes

Note

The recording and playback times listed above are approximate. Maximum recording times may vary depending on recording conditions.

Search speed

Jog mode -1 to +1 times normal speed
 Variable-speed mode -1 to +1 times normal speed
 Shuttle mode -20 to +20 times normal speed
 Fast forward mode +20 times normal speed
 Fast reverse mode -20 times normal speed

Video performance

Sampling frequency Y: 74.25 MHz, R-Y/B-Y: 37.125 MHz
 Quantization 8 bits/sample
 Compression MPEG-2 422P@HL

COMPOSITE OUT

Frequency response 0.5 to 5.75 MHz+0.5/-2.0 dB
 S/N (Y) 53 dB or more
 Y/C delay ±20 ns or less
 K-factor (K2T) 1.0% or less

Processor adjustment range

Video level -∞ to +3 dB
 Chroma level -∞ to +3 dB
 Set up/black level ±30 IRE/±210 mV
 Chroma phase ±30°
 System phase SYNC: ±15 μs
 SC: 0 to +400 ns

Audio performance

Sampling frequency 48 kHz
 Quantization 24 bits
 Headroom -20/-18/-16/-12 dB (selectable)
 Frequency response 20 Hz to 20 kHz +0.5/-1.0 dB (0 dB at 1 kHz)
 Dynamic range 90 dB or more
 Distortion 0.05% or less (at 1 kHz)

Input connectors

Digital video inputs

SD/HDSI INPUT

BNC type (×1), complying with SMPTE-259M (SD)/SMPTE-292M (HD)

i(i.LINK) S400 FAM

6-pin type (×1), complying with IEEE1394

i(i.LINK) HDV TS

6-pin type (×1), complying with IEEE1394

Analog video inputs

REF.VIDEO IN

BNC type (×1),
HD Tri-level sync (0.6 Vp-p/75 Ω/sync
negative), SD black burst, or SD
composite sync (0.286 Vp-p/75 Ω/sync
negative)

COMPOSITE IN

BNC type (×1), 1.0 Vp-p, 75 Ω sync
negative, complying with SMPTE-
170M

Analog audio inputs

ANALOG AUDIO INPUT 1 to 4

XLR 3-pin, female (×4), +4 dBu, high
impedance, balanced

Timecode input

TIME CODE IN

BNC type (×1), SMPTE timecode, 0.5 to
18 Vp-p, 10 kΩ, unbalanced

Output connectors

Digital video outputs

HDSDI OUTPUT 1, 2(SUPER)

BNC type (×2), complying with SMPTE-
292M

SDSDI OUTPUT

BNC type (×1), complying with SMPTE-
259M

DVB-ASI OUTPUT

BNC type (×1)

HDMI OUT

Type A 19-pin
Video: 1080i, 720P, 480i, 480P, 576i,
576P
Audio: Linear PCM, 48 kHz/16-bit,
2 channels

Analog video outputs

REF. VIDEO OUT

BNC type (×1, active loop-through with
the REF VIDEO IN connector), HD
Tri-level sync (0.6 Vp-p/75 Ω/sync
negative), SD black burst, or SD
composite sync (0.286 Vp-p/75 Ω/sync
negative)

COMPOSITE OUT

BNC type (×1), 1.0 Vp-p, 75 Ω sync
negative, complying with SMPTE-
170M

Analog audio outputs

ANALOG AUDIO OUTPUT 1 to 4

XLR 3-pin, male (×4), +4 dBu, 600 Ω,
low impedance, balanced

AUDIO MONITOR R, L (also function as the ANALOG

AUDIO OUTPUT 3, 4 connectors, as
selected by setup menu item 820)

XLR 3-pin, male (×2), +4 dBu, 600 Ω,
low impedance, balanced

PHONES

Stereo phone jack (×1), $-\infty$ to -14 dBu,
8 Ω, unbalanced

Timecode output


TIME CODE OUT

BNC type (×1), SMPTE timecode,
1.0 Vp-p, 75 Ω, unbalanced

Remote control connectors

REMOTE(9P) D-sub 9-pin, female (×1), complying
with RS-422A

REMOTE 4-pin, female (×1)
12 V DC, 7.5 W

 Network RJ-45 type (×1)
1000BASE-T: complying with
IEEE802.3ab
100BASE-TX: complying with
IEEE802.3u
10BASE-T: complying with IEEE802.3

Other

DC IN 12V connector

XLR 4-pin, male (×1), 11 V to 17 V DC

MAINTENANCE connectors

High Speed USB (USB 2.0) Type-A (×2)

Accessories supplied

Operation manuals

English version (1)
Japanese version (1)
CD-ROM manual (1)

Installation manual (1)

XDCAM Application Software CD-ROM (1)

Connector caps

Accessories not supplied

AC power cord

- For the customers in the U.S.A and Canada
Part number 1-551-812-41 (125 V, 10 A, about 2.4 m)
- For the customers in the United Kingdom
Part number 1-777-823-12 (250 V, 10 A, about 2.0 m)
- For the customers in European countries other than the
United Kingdom
Part number 1-551-631-61 (250 V, 10 A, about 2.0 m)

RCC-G5 9-pin Remote Control Cable

RM-280 Remote Edit Controller

PFD23A Professional Disc

PFD50DLA Dual-layer Professional Disc

Design and specifications are subject to change without notice.

Notes

- Always make a test recording, and verify that it was recorded successfully. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF FAILURE OF THIS UNIT OR ITS RECORDING MEDIA, EXTERNAL STORAGE SYSTEMS OR ANY OTHER MEDIA OR STORAGE SYSTEMS TO RECORD CONTENT OF ANY TYPE.
- Always verify that the unit is operating properly before use. SONY WILL NOT BE LIABLE FOR DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION OR REIMBURSEMENT ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS DUE TO FAILURE OF THIS UNIT, EITHER DURING THE WARRANTY PERIOD OR AFTER EXPIRATION OF THE WARRANTY, OR FOR ANY OTHER REASON WHATSOEVER.

Using PDZ-1 Proxy Browsing Software

When a computer with the PDZ-1 Proxy Browsing Software installed is connected to this unit, you can transfer the proxy AV data and metadata files recorded on a disc to the computer. On the computer side, PDZ-1 enables you to browse the proxy AV data, add or modify metadata (titles, comments, essence marks, etc.), or create a clip list.

The modified metadata and the created clip list can then be written back to the disc loaded in this unit.

For more information about PDZ-1 functions and operations, refer to the PDZ-1 help.

System requirements

The following are required to use PDZ-1.

- Computer: PC with Intel Pentium M processor, at least 1 GHz (installed memory: at least 512 MB)
- Operating system: Microsoft Windows XP Professional SP2 or higher, Windows Vista Ultimate/Business (32 bit), or Mac OS X v10.4.11 or higher
- Web browser: Internet Explorer 6.0 SP1 or higher
- DirectX: DirectX 8.1b or higher

To install PDZ-1

Insert the supplied XDCAM Application Software CD-ROM into the CD-ROM drive of your computer, and then run the installer in the PDZ-1 directory of the CD-ROM.

For details, refer to the ReadMe file contained on the CD-ROM disc.

Notes

- Make sure that the hard disk drive on which the work folder to store the material transferred from this unit has adequate free space.
- To transfer files between the computer and this unit requires this unit's IP address and other network-related settings to be made.

For details of the network-related settings, see "To change network settings" (page 144).

Using UMID Data


Metadata is additional information recorded on discs along with audio-visual data. It is used to bring greater efficiency to the flow of operations from material acquisition through editing, and to make it easier to find and reuse material. As one of application of metadata, the UMID has been internationally standardized.

What is a UMID?

A UMID (Unique Material Identifier) is a unique identifier for audio-visual material defined by the SMPTE-330M-2003 standard.

A UMID may be either as a 32-byte Basic UMID or an Extended UMID, which includes an additional 32 bytes of Source Pack to make a total 64 bytes.


For details, refer to SMPTE-330M.

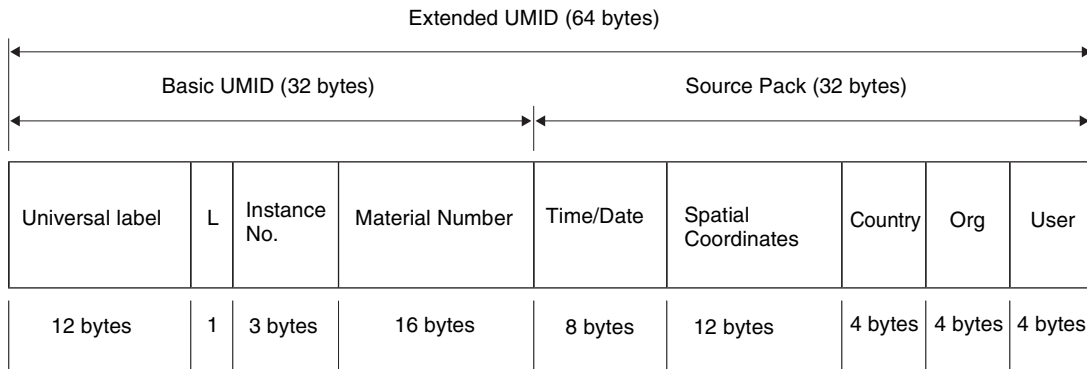

A globally unique ID is automatically recorded for every clip.

The Extended UMID is metadata that provides additional information such as location, time/date, company ID and so on.

The UMID is applied as follows.

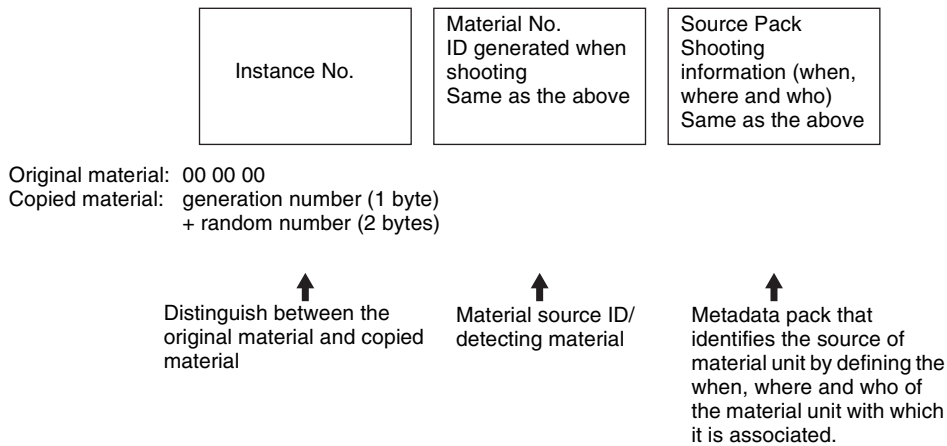

Using the Extended UMID

You have to enter a country code, organization code and user code. Set the country code referring to the table in ISO 3166, and set the organization code and user code according to the guidelines of your organization.

For details, see “Setting UMID ownership information” (page 164).

Functions of UMID data

UMID data enables the following:

- Addition of a globally unique ID to every clip of audio-visual material. The unique ID is used to detect the material source and to link it with the original source material.
- Distinguishing between original material and copied material. 00 is added to the Instance Number for original material.


- Recording with UTC time. UTC (coordinated universal time) is used when recording the UMID. Use of a universal time system enables uniform management of source material recorded all over the world.
- Calculation of date differences. Source material is recorded using modified Julian dates (MJD), which enables easy calculation of date differences between different source material items.

Setting UMID ownership information

Proceed as follows.

- 1 Set setup menu item 029 STORE OWNER to “on” (see page 120).

The STORED OWNERSHIP (UMID ownership information setting) screen appears.

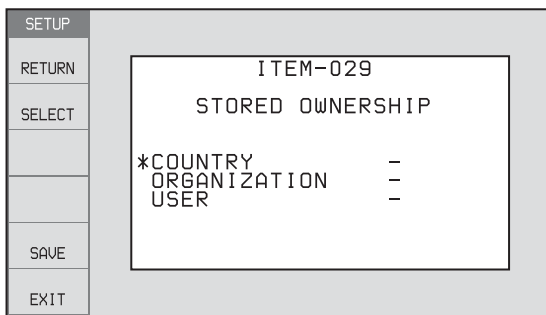

COUNTRY: Sets the country code.

ORGANIZATION: Sets the organization code.

USER: Sets the user code

See the next item “About the UMID ownership information” for more information about these codes.

- 2 Use the PUSH SET knob to select the item to set and the character input location, then press the knob.
- 3 Use the PUSH SET knob, – or + function button (F3 or F4) to select characters to input at the selected location.

To delete all input data

Press the RETURN button.

- 4 Press SAVE function button (F5).

The message “NOW SAVING...” appears, and the ownership information is saved.

See “Setup Menu” (page 116) for more information about setup menu operations.

About the UMID ownership information

COUNTRY (country code)

Set the country code by entering an abbreviated alphanumeric string (4-byte alphanumeric string) according to the values defined in ISO 3166-1.

There are about 240 country codes.

Find your own country code on the following web page.

Refer to ISO 3166-1:

http://www.iso.org/iso/country-codes/iso_3166_code_lists.htm

When the country code is less than 4 bytes, the active part of the code occupies the first part of the 4 bytes and the remainder must be filled with the space character (20h).

Example: Japan

For Japan, the country code is JP, which is 2 bytes, or JPN, which is 3 bytes.

Thus, enter the following:

JP _ _

or

JPN _

where _ represents a space.

ORGANIZATION (organization code)

Enter a 4-byte alphanumeric string for the organization code.

Notes

- There are no problems in recording or playing back audio-video signals, even if the ORGANIZATION is not set.
- Organization codes must be acquired by applying to the SMPTE registration office. When no organization code has been acquired, it is forbidden to enter an arbitrary string. As a rule, the code “00” must be entered. Freelance operators who do not belong to an organization should enter “~”.

USER (user code)

Enter a 4-byte alphanumeric string to identify the user.

The user code is registered with each organization locally. It is usually not centrally registered.

When the user code is less than 4 bytes, enter the user code at the beginning of the 4 bytes and fill the remainder of the string with the space character (20h).

This user code is determined by the organization. The methods used depend on the organization.

Note

User code cannot be entered when no organization code has been entered.

Ancillary Data

This unit can play and record ancillary data multiplexed into HDSDI signals. It can also input and output ancillary data in MXF files when transferring files via FAM or FTP connections. Transferable auxiliary data includes text data (captions and metadata) and control signals.

Ancillary data in HDSDI signals

This unit can record and play back closed captions conforming to the EIA-708-B ¹⁾ standard and text data conforming to the ARIB TRB23 ²⁾ which comprise the VANC (Vertical ancillary data) packets.

1) EIA: Electronic Industries Alliance

2) ARIB: Association of Radio Industries and Businesses

To record ancillary data

In maintenance menu item M3B: VANC RX PARAMETER, set the lines where ancillary data is inserted, the DID (Data Identifier word), and the SDID (Secondary Data Identifier word) (*see page 141*).

VANC packets

- The Japanese ARIB TR-B23 standard limits the number of packets that can be multiplexed into HDSDI to 4 packets per line.
- The number of VANC packets that can be recorded that is set using maintenance menu item M3B is limited to 9 packets per frame for 50P or 59.94P mode and 18 packets per frame for other modes.
- When VANC packets are not continuous from word 0, and there is unused area on the line, then information about the packet position is not recorded. Packets are output flush left.
- During input, if a parity error is detected in a VANC packet, the packet is discarded and recorded flush left.

Ancillary data in MXF files

VANC ancillary data recorded from a HDSDI signal can be inserted to an MXF file as an ANC Frame Element (conforming to the SMPTE436M-2006) and can be output. This data can also be input and recorded on the disc.

To insert ancillary data into MXF files to output

In setup menu item 666 METADATA ITEM OUT, select “on” (*see page 129*).

HANC/VANC packets

Detection of HANC/VANC packets

HANC/VANC packets are recorded on the disc only when the DATA ITEM of the head frame is identified as ANC Frame Elements conforming to the SMPTE436M-2006 when an MXF file is input.

General MXF metadata

This unit examines the data contained in the header metadata area ¹⁾ when an MXF file is input. If the data is identified as the data created by the device other than XDCAM at this time, one file (KLVE file) is created.

1) The header metadata area contains the metadata information about the entire file. *See SMPTE377M for details.*

For details, see “Directory structure” (page 99) and “Clip directory” (page 101).


List of Supported USB Keyboards

When the area of use is set to “UC” (for regions outside Japan)


On this unit, you can enter any of the characters and symbols supported by the keyboards listed below.

Select the corresponding language by selecting Settings > Select USB Keyboard Language in the Disc Menu (see page 75).


English [United Kingdom]

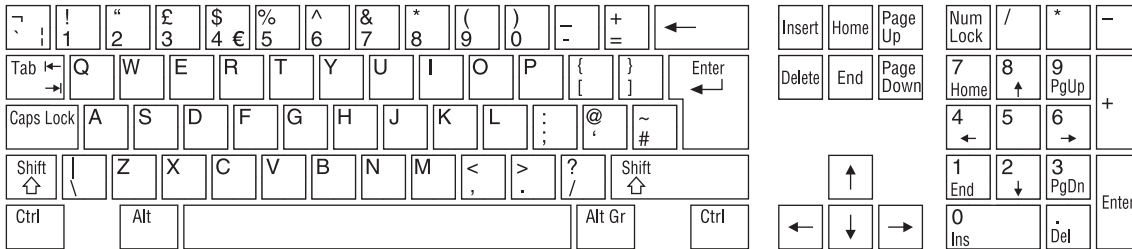


English [United States]

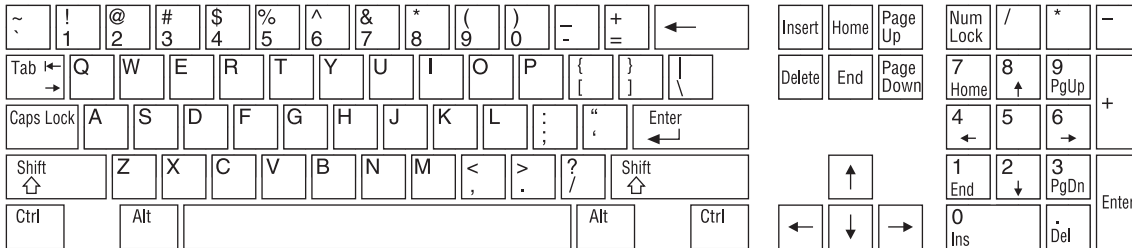

French [France]

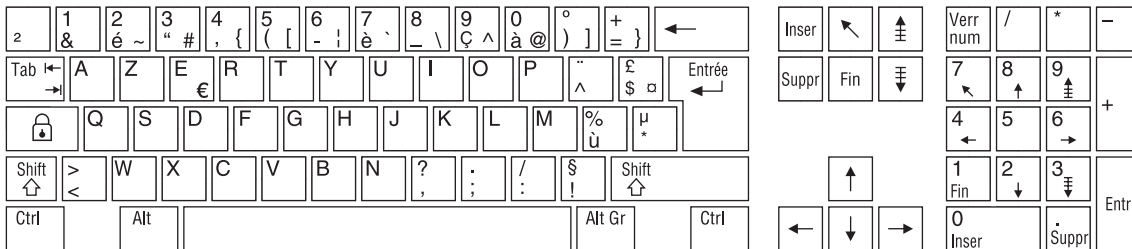

German [Germany]

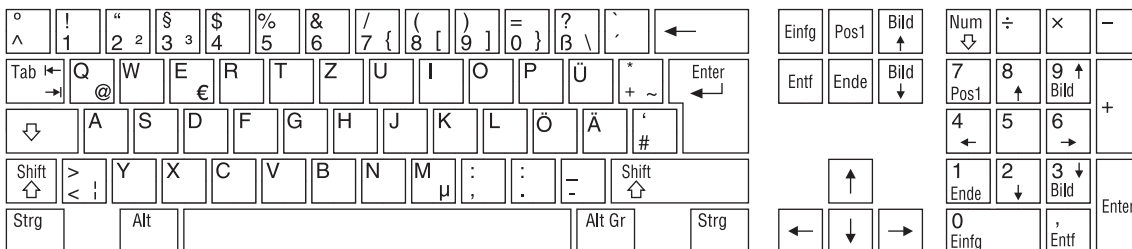

Italian [Italy]

~	! 1	“ 2	£ 3	\$ 4	% 5	& 6	/ 7	(8) 9	= 0	? ;	^ {	←
Tab ↵	Q	W	E €	R	T	Y	U	I	O	P	é {	* }	Enter ↵
Caps Lock	A	S	D	F	G	H	J	K	L	ç @	° à #	§ ù	
Shift ↵	>	Z	X	C	V	B	N	M	;	:	-	Shift ↵	
Ctrl		Alt								Alt Gr		Ctrl	

Insert	Home	Page Up	Num Lock /	*	-
Delete	End	Page Down	7 Home	8 ↑	9 PgUp
			4 ←	5	6 →
			1 End	2 ↓	3 PgDn
←	↑	→	0 Ins	.	Del
					Enter

Polish (Programmers) [Poland]

~	! 1	@ 2	# 3	\$ 4	% 5	^ 6	& 7	* 8	(9) 0	- =	←	
Tab ↵	Q	W	E	R	T	Y	U	I	O	P	{ }	\	Enter ↵
Caps Lock	A	S	D	F	G	H	J	K	L	:	“	”	Enter ↵
Shift ↵	>	Z	X	C	V	B	N	M	<	>	?	Shift ↵	
Ctrl		Alt								Alt Gr		Ctrl	

Insert	Home	Page Up	Num Lock /	*	-
Delete	End	Page Down	7 Home	8 ↑	9 PgUp
			4 ←	5	6 →
			1 End	2 ↓	3 PgDn
←	↑	→	0 Ins	.	Del
					Enter

Russian [Russia]

~	! 1	@ “	# №	\$;	% 5	^ :	& ?	* 8	(9) 0	- =	←	
Tab ↵	Q	Й	Ц	У	К	Е	Н	Г	Ш	Щ	З	[\]	Enter ↵
Caps Lock	A	Ф	Б	В	А	Г	П	Ж	О	Л	Д	;	“ ”
Shift ↵	>	З	Я	Ч	С	М	И	Т	Ь	,	Б	·	Ю
Ctrl		Alt								Alt Gr		Ctrl	

Insert	Home	Page Up	Num Lock /	*	-
Delete	End	Page Down	7 Home	8 ↑	9 PgUp
			4 ←	5	6 →
			1 End	2 ↓	3 PgDn
←	↑	→	0 Ins	.	Del
					Enter

Spanish [Spain]

~	! 1	“ 2	@ 3	# \$	% 4	& 6	/ 7	(8) 9	= 0	? ;	¿	←
Tab ↵	Q	W	E €	R	T	Y	U	I	O	P	^ {	* }	Enter ↵
Bloq Mayús	A	S	D	F	G	H	J	K	L	Ñ	“	”	Enter ↵
Shift ↵	>	Z	X	C	V	B	N	M	;	:	-	Shift ↵	
Control		Alt								Alt Gr		Control	

Insert	Inicio	Re Pág	Bloq Num /	*	-
Supr	Fin	AV Pág	7 Inicio	8 ↑	9 Re Pág
			4 ←	5	6 →
			1 Fin	2 ↓	3 AV Pág
←	↑	→	0 Ins	.	Supr
					Intro

When the area of use is set to “J” (for Japan)

The keyboard is fixed as the Japanese keyboard.

Notes

- The keyboard language cannot be changed.
- It is not possible to enter Japanese hiragana, katakana, and kanji.

半角/全角 漢字	!	“	#	\$	%	&	'	()	を	=	^		Back space
1	2	3	4	5	6	7	8	9	0	-	~	^	¥	
Tab	Q	W	E	R	T	Y	U	I	O	P	`	{	Enter	
→	た	て	い	す	か	ん	な	に	ら	せ	@	[↵	
Caps Lock	A	S	D	F	G	H	J	K	L	;	*]		
英数	ち	と	し	は	き	く	ま	の	り	:	れ	:	け]
Shift	Z	X	C	V	B	N	M	<	>	?	.	/	Shift	
⇧	つ	さ	そ	ひ	こ	み	も	,	ね	.	る	/	⇧	
Ctrl	Alt	無変換				変換	カタカナ ひらがな	Alt					Ctrl	

Insert	Home	Page Up	Num Lock	/	*	-
Delete	End	Page Down	7 Home	8 ↑	9 PgUp	+
			4 ←	5	6 →	
	↑		1 End	2 ↓	3 PgDn	Enter
←	↓	→	0 Ins		.	Del

Trademarks and Licenses

MPEG-4 visual patent portfolio license

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR

- (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) AND/OR
- (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

MPEG LA is offering licenses for (i) manufacturing/sales of any storage media storing MPEG-4 Visual video information (ii) distribution/broadcasting of MPEG-4 Visual video information in any manner (such as online video distribution service, internet broadcasting, TV broadcasting). Other usage of this product may be required to obtain license from MPEGLA. Please contact MPEG LA for any further information. MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206, <http://www.mpegla.com>

MPEG-2 video patent portfolio license

ANY USE OF THIS PRODUCT OTHER THAN CONSUMER PERSONAL USE IN ANY MANNER THAT COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206.

“PACKAGED MEDIA” means any storage media storing MPEG-2 video information such as DVD movie which are sold/distributed to general consumers. Disc replicators or sellers of the PACKAGED MEDIA need to obtain licenses for their own business from MPEG LA. Please contact MPEG LA for any further information. MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206
<http://www.mpegla.com>

About IJG (Independent JPEG Group)

This software is based in part on the work of the Independent JPEG.

Character display software “iType”

This product includes technology from Monotype Imaging Inc., including iType® and certain fonts.

Glossary

Clip

A recording unit. Clips are created every time recording starts and stops.

Clip list

A list of locations in the material recorded on the disc, arranged in any order. Clip lists can be created with the scene selection function of this unit, and with the PDZ-1 Proxy Browsing Software.

Composite video signal

A video signal in which luminance and chrominance are combined along with timing reference “sync” information to make composite video.

Drop-frame mode

SMPTE timecode runs at 30 frames/second, while the NTSC color television system runs at about 29.97 frames/second. Drop-frame mode adjusts the running of timecode to eliminate the discrepancy between timecode value and actual time by dropping two frames from the timecode value at the beginning of each minute except every tenth minute.

E-E mode

Electric-to-Electric mode. When you operate a VDR in E-E mode, input video and/or audio signals pass through electric circuits only and then come out from the output connectors, without passing through electromagnetic conversion circuits such as recording heads.

Essence mark

A type of metadata that may be set for a specified frame. For more efficient searches, XDCAM equipment records essence marks as part of Non-RealTime metadata, and uses them to display thumbnails.

HD tri-level sync

An HDTV analog reference signal that applies to 59.94/50Hz systems.

A sync signal defined in SMPTE-274M with positive, negative, and zero values.

HDSDI signal

Abbreviation of HD Serial Digital Interface.

A signal in the HDTV serial interface defined by SMPTE-292M.

Metadata

Information about the properties of video and audio content. XDCAM records metadata such as UMIDs and essence marks, and the PDZ-1 Proxy Browsing Software can be used to record information such as titles and comments.

MXF

Material eXchange Format. A file exchange format developed by the Pro-MPEG Forum. Equipment from different manufacturers can exchange files in this format.

Non-audio

General term for audio signals other than linear PCM, such as Dolby E¹⁾ and Dolby Digital (AC-3).¹⁾ XDCAM can record non-audio as an input signal.

1) Dolby is a trademark of Dolby Laboratories.

Non-drop-frame mode

A mode of advancing timecode which ignores the difference in frame values between real time and the timecode. Using this mode produces a difference of approximately 86 seconds per day between real time and timecode, which causes problems when editing programs in units of seconds using the number of frames as a reference.

Proxy AV data

Low-resolution data with a video bandwidth of 1.5 Mbps and an audio bandwidth of 64 kbps per channel. This unit records proxy AV data automatically whenever high-resolution MPEG HD data is recorded.

Reference video signal

A video signal that contains a sync signal or sync and burst signals, used as a reference for synchronization of video equipment.

SDSDI signal

SD Serial Digital Interface. An interface standardized as SMPTE-259M which enables the transmission of an uncompressed digital component stream.

S/N

Signal-to-Noise ratio. The relation of the strength of the desired signal to the accompanying electronic interference, the noise. If S/N is high, sounds are reproduced with less noise and pictures are reproduced clearly without snow.

Sub clip

One of the sections which make up a clip list. A sub clip may be part of a clip or an entire clip.

Thumbnail image

A reduced still picture of video for display on a GUI screen. XDCAM creates thumbnail images from proxy video, and displays them as index pictures on GUI screens.

Timecode

A digitally encoded signal which is recorded with video data to identify each frame of the video by hour, minute, second and frame number. SMPTE timecode is applied to NTSC system, and EBU timecode to PAL and SECAM systems.

UMID

Unique Material Identifier. A standard (SMPTE-330M) for video and audio metadata. The Basic section of a UMID contains a globally unique number and a material number for the identification of recorded material. An optional section called the “Source Pack” contains information such as the time and location of recording. A UMID with the Basic section only is called a Basic UMID. A UMID with the Source Pack is called an Extended UMID.

User bits

A total of 32 bits are provided in the timecode which the user can use to record such information as date, reel number, or scene number on video tape or disc. Also called user’s bits.

VBID (Video Blanking ID)

This is a video ID signal, defined in the EIAJ CPR-1204 standard, which is inserted into VBS video output to enable the aspect ratio to be detected. The ID signal is inserted into line 20, VBI 283.

Index

A

- AC IN connector 32
- ACCESS indicator 17, 23
- Accessories
 - not supplied 161
 - supplied 161
- Add Sub Clip screen 80
- AGC/limiter display 28
- Alarms 151
- ALL/CH-1 and CH-2 to CH-4
 - adjustment knobs 22
- ANALOG AUDIO
 - INPUT 1 to 4 connectors 33
 - OUTPUT 1 to 4 connectors 33
- Ancillary data 165
- Appendix 148
- Area of use setting 36
- Audio channel 29
- Audio input display 28
- Audio level adjustment section 21
- Audio level meters 28, 31
- AUDIO MONITOR SELECT buttons 21
- AUTO EDIT button 22

B

- BACKLIGHT switch 26
- Basic menu 116
 - changing settings 122
 - items 117
 - operations 121
- Battery
 - attaching a battery pack 35
 - checking the remaining power 36
- Battery pack shoe 16
- BRIGHTNESS adjustment knob 25
- Built-in speakers (stereo) 16

C

- Carrying handle 16
- Chapter
 - function 71
 - thumbnail screen 65
- CHAPTER button 20
- CHROMA switch and adjustment knob 24
- Clip 78
 - changing index picture 73
 - deleting 77
 - duration 64
 - finding 70

- locking 76
- playback screen 62
- properties 74
- thumbnail screen 62, 63
- unlocking 77
- user-defined name 104
- Clip information 27
- Clip List
 - (Move) screen 82
 - (Trim) screen 82
 - user-defined name 104
- Clip list 79
 - changing start timecode 83
 - clearing 84
 - creating and editing 79
 - current clip list 79
 - deleting 85
 - loading 84
 - managing 84
 - playback screen 62
 - previewing 79
 - saving 83
 - sorting 85
 - thumbnail screen 62, 64
- Clip Properties screen 74
- Command list 110
- Communications speed 144
- COMPOSITE IN/OUT connectors 34
- Connections 38
 - cut editing system 39
 - edit list editing system 42
 - editing control unit settings 41
 - FAM connection 38
 - for pool coverage 43
 - for using PDZ-1 38
 - FTP connection 38
- Connector panel 32
- CONTRAST adjustment knob 25
- Control panel 17
- Control panel illumination LED 25
- Current clip list 79

D

- Data indication 28
- Date and time 27
- Date/time setting 37
- DC IN 12V connector 33
- DELETE button 22
- Delete Clip 77
- Delete Clip & Clip List 77
- Digital hours meter 149
 - display modes 149
 - displaying 149
 - exiting 150
- Disc loaded indication 27
- Disc Menu 67
- Disc slot 16

- Discs 86
 - ejecting with the unit powered off 159
 - formatting 54, 87
 - handling 53
 - loading/unloading 53
 - properties 86
 - reconstructing 57
 - salvage functions 57
 - usable discs 53
 - write-protecting 53
- Display 25
- DISPLAY button 26
- Display panel 25
- Display screen 26
 - basic operation display 26
 - video monitor display 31
- DVB-ASI OUTPUT connector 34

E

- EDIT button 22
- Edit list editing 90
 - operations 95
- EDIT LIST screen 92
- Edit Menu 93
- Editing
 - control unit 39
 - controller 41
- Editing modes 95
- Editing operation section 22
- Editing screens 92
 - operations 94
 - switching 90
- EJECT button 16
- Ejecting a disc manually 159
- ENTRY button 23
- Error messages 159
- Essence mark
 - search 72
 - setting 56, 60
 - thumbnail screen 66
- Expand
 - function 12, 70
 - thumbnail screen 65
- EXPAND button 20
- Extended menu 116
 - items 123
 - operations 137
- External synchronization 44
- EXT-LOCK 30

F

- Features 11
- File operations 99
 - Clip directory 101
 - directory structure 99

- Edit directory 101
- General directory 102
- root directory 100
- Sub directory 102
- UserData directory 102
- File Operations in File Access Mode (for Macintosh) 108
 - exiting file operations 109
 - making FAM connections 108
 - operating on files 108
 - reconnecting 109
- File Operations in File Access Mode (for Windows) 106
 - exiting file operations 107
 - making connections 106
 - operating on files 107
 - preparations 106
 - reconnecting 107
 - recording continuous timecode 115
- Format conversion display 29
- Formatting discs 87
- F-RUN/R-RUN switch 18
- FTP file operations 109
 - command list 110
 - logging in 110
 - logging out 110
 - making connections 109
 - preparations 109
 - recording continuous timecode 115
- Function buttons (F1 to F6) 25
- Function menu 26, 50
 - HOME page 50
 - P1 VIDEO page 51
 - P2 AUDIO page 51
 - P3 TC page 52
 - P4 OTHER page 52

G

- Gigabit Ethernet 12
- Glossary 170
- GOTO button 22
- GUI screens 62
 - operations 69

H

- HDMI OUT connector 34
- HDMI output display 29
- HDSDI OUTPUT 1, 2 (SUPER) connectors 33
- HDSDI output conversion display 29
- HDSDI remote control function 56
- HOME button 25
- HUE/CHROMA-PHASE switch and adjustment knob 24

I

- i.LINK HDV TS connector 33
- i.LINK S400 FAM connector 33
- IN and OUT buttons 23
- Index picture
 - changing 73
- Initial setup 36
- Input signal 29
- Input signal display 28
- Insert mode editing 95
- INT/EXT/SDI switch 18

J

- JOG indicator 24
- Jog mode 60
- Jog/shuttle direction indicators 24

K

- KEY INHI indicator 26
- KEY INHI switch 18

L

- Left-/right-arrow buttons 20
- LEVEL adjustment knob 21
- Level bars 29
- Loading/unloading disc 53

M

- Maintenance
 - periodic 149
- MAINTENANCE connectors 34
- Maintenance menu 139
 - communications speed 144
 - items 139
 - network settings 144
 - operations 143
- MARK1/MARK2 buttons 20
- Menu
 - bank setting 120
 - changing settings 122
 - configuration 116
 - disc menu 67
 - edit menu 93
 - function menu 50
 - maintenance menu 139
 - returning to default settings 122
 - setup menu 116
- MENU button 19
- Menu operation section 19
- Menu setting status 27
- Metadata 163
- Meter display mode 29
- MIC POWER (+48 V) 1 and 2 switches 33

- Microphone settings 33
- Monitor channel 28
- Move Shot Mark screen 72

N

- Names and functions of parts 16
- NDF 30
- Network
 - assigning IP address automatically 144
 - connector 34
 - setting IP address 144
 - settings 144
- NEXT button 21
- Normal speed playback 59

O

- On/standby switch 18
- OPERATION indicator 23
- Overlay mode editing 95

P

- PAGE buttons 25
- PAUSE button 21
- PC REMOTE button 18
- PDZ-1
 - connections 38
 - installation 162
 - system requirements 162
- PHONES jack 23
- Planning Metadata 86
- PLAY button 21
- Playback 58
 - clip list 79
 - jog mode 60
 - normal speed 59
 - settings 58
 - shot mark settings 60
 - shuttle mode 60
 - start position 58
 - variable-speed mode 61
- Playback condition
 - display 49
 - mark 48
- PLAYER and RECORDER buttons 18
- PLAYER mode screen 92
- Power status 27, 31
- POWER switch 32
- Preparation
 - initial setup 36
- PRESET/REGEN switch 18
- PREV button 21
- PREVIEW button 22
- Professional Disc 53
- Proxy AV data 12

Proxy Browsing Software 162
PUSH SET knob 19

R

REC button 20
REC INHI indicator 20
RECALL button 22
RECORDER mode screen 93
Recording 55
 HDSDI remote control function
 56
 level adjustment 56
 salvage 57
 settings 55
 shot mark settings 56
 time 35, 74, 86
Recording and playback control
 section 20
Recording format 27
REF.VIDEO IN connector 34
REF.VIDEO OUT connector 34
Reference level 29
Reference signal 29
Remaining recording capacity 30
REMOTE connector 33
Remote control switch 18
Remote interface 27
REMOTE(9P) connector 34
Replace editing 95
RESET button 19
RETURN button 20

S

S.SEL button 19
Salvage function 57
SAVE button 19
Scene
 finding 70, 71, 72
Scene selection 78
Scrollbar 64
SD/HDSDI INPUT connector 33
SDSDI OUTPUT connector 34
SDSDI output conversion display 29
Security slot 16
Select Essence Mark screen 72
Select Index screen 73
SET button 20
Set Start Time Code screen 83
Setup menu
 basic menu 117
 extended menu 123
SETUP/BLACK switch and
 adjustment knob 24
SHIFT button 20
Shortcut 89
Shoulder belt posts 16

Shuttle mode 60
SHUTTLE/JOG button 24
Shuttle/jog dial 24
Shuttle/jog/variable operation section
 24
Skip Scroll 70
Specifications 159
STANDBY indicator 21
STOP button 21
Sub clip 79
 adding 80
 deleting 82
 reordering 82
 trimming 82
SUB CLIP/DISC MENU button 19
Superimposed text information 47
Supplying power 35
 AC power supply 35
 Battery power supply 35
 DC power supply 35
Synchronization reference signals 44
System frequency setting 37
System information 27

T

Text information 47
Thumbnail
 display items 64
 operations 70
 selecting 70
 selecting information displayed
 73
 selecting multiple thumbnails 70
Thumbnail Menu 67
Thumbnail search 70
 using chapter function 71
 using essence marks 72
 using expand function 70
 using thumbnails 70
THUMBNAIL/ESSENCE MARK
 button 19
TIME CODE IN/OUT connectors 34
Time data 30
Time data display area 30, 31
Time data settings section 18
Time data type 30
Timecode 45
 after setting initial value 45
 recording external timecode
 directly 47
 recording sequentially upon the
 last recorded timecode
 46
 recording with the internal
 timecode generator
 synchronized 46
 setting to current time 46

Title 102
TRIM buttons 22
Troubleshooting 151

U

UMID data 163
UNDO button 23
Up-/down-arrow buttons 20
USB connector 34
User bits
 setting 46

V

VAR/JOG button 24
VARIABLE/PRESET switches 22
Variable-speed mode 61
VIDEO PROCESS CONTROL switch
 23
Video processing settings section 23
VIDEO switch and adjustment knob
 23
VITC 30

W

WARNING indicator 26
Write-protecting discs 53

The material contained in this manual consists of information that is the property of Sony Corporation and is intended solely for use by the purchasers of the equipment described in this manual.

Sony Corporation expressly prohibits the duplication of any portion of this manual or the use thereof for any purpose other than the operation or maintenance of the equipment described in this manual without the express written permission of Sony Corporation.

