

REPLACEMENT PARTS FOR A VCT-U14 TRIPOD ADAPTOR

13 Sep 1996

Product: **DXC-537AP, DXC-537P, DXC-537PM, DXC-637P, DXC-M7P, PVW-637P, UVW-100P, UVW-200P, VCT-U14**

Serial No: All

1 DESCRIPTION

Refer to Figure 1. When repairing a VCT-U14 tripod adaptor that has the mark '-B' adjacent to the rear shaft, use the parts listed in Table 1.

Note: Refer to the exploded view in the Service Manual (part number 9-977-221-01).

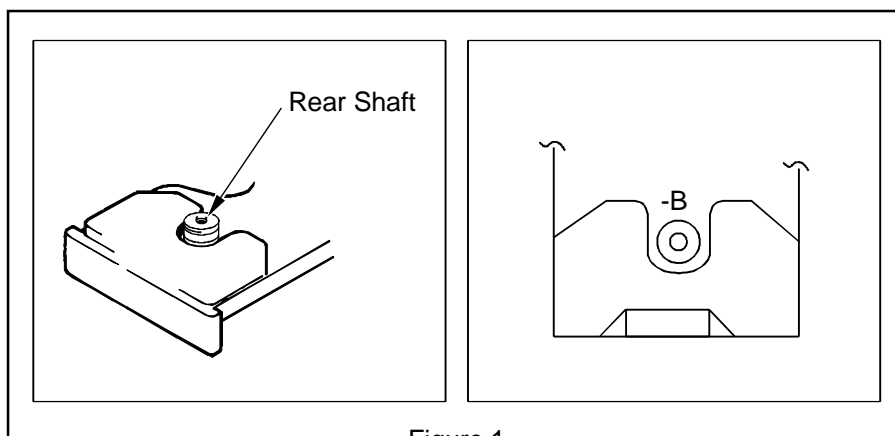


Table 1: Replacement of Parts for the VCT-U14

Repair Item	Part Number	Recommended Replacements	Part Number	Notes
MOUNT	3-679-045-xx	MOUNT	3-679-045-05	Remove the REAR SHAFT
		SPRING B	3-679-056-02	
REAR SHAFT	3-679-043-01	MOUNT	3-679-045-05	
		SPRING B	3-679-056-02	
		REAR SHAFT	3-679-043-01	
BRACKET, UNC, SCREW	3-679-041-xx	MOUNT	3-679-045-05	Remove the SLIDER
		SPRING B	3-679-056-02	
		BRACKET, UNC, SCREW	3-679-041-03	

FOR INFORMATION ONLY

Repair Item	Part Number	Recommended Replacements	Part Number	Notes
SLIDER	3-679-044-xx	MOUNT	3-679-045-05	Remove the BRACKET, UNC, SCREW
		SPRING B	3-679-056-02	
		BRACKET, UNC, SCREW	3-679-041-03	
		SLIDER	3-679-044-03	
BASE	3-679-040-xx	MOUNT	3-679-045-05	Remove the SLIDER
		SPRING B	3-679-056-02	
		BRACKET, UNC, SCREW	3-679-041-03	
		BASE	3-679-040-03	
LEVER	3-679-047-xx	LEVER	3-679-047-02	
		SPRING C	3-679-057-02	

When replacing a part that is not listed above, replace the broken component only.