



LWS 401-440

Kamera / Camera	Höheneinstellung / Height Position	Abstandshülsen / Spacers	Schrauben / Screws
Canon XH G1 / A1	28 mm	16 mm	M5x30
Canon XF 300/305	21,5 mm	8 mm +4 mm	M5x30
Sony HVR-V1	30,5 mm	16 mm +4 mm	M5x30
Sony PMW-EX1	26 mm	16 mm	M5x30
Sony PMW-EX3	21,5 mm	8 mm +4 mm	M5x30
Sony HDR-FX1&HVR-Z1	25,5 mm	16 mm	M5x30
Sony HVR-Z5	26,5 mm	16 mm	M5x30
Sony HVR-Z7	24,5 mm	8 mm +4 mm	M5x30
Sony HXR-NX5	26 mm	16 mm	M5x30
Sony NEX-FS100	40 mm	16 mm +8 mm +4 mm	M5x40
Sony NEX-FS700	31,5 mm	16 mm +4 mm	M5x30
Sony PMW-F3	19,5 mm	8 mm	M5x20
Sony NEX-EA50	31 mm	16 mm +4 mm	M5x30
Panasonic AG-AF100	31,5 mm	16 mm +4 mm	M5x30
Panasonic HVX-200/200A	19,5 mm	8 mm	M5x20
Panasonic HPX-170/171/HMC150/151	27 mm	16 mm	M5x30
Panasonic HPX-250	18 mm	8 mm	M5x20
JVC GY-HD100/101	37 mm	16 mm +8 mm	M5x40
DSLR Canon 5D / Nikon D90	43,5 mm	16 mm +8 mm +4 mm	M5x40
DSLR Canon 7D / PL FGV	43 mm	16 mm +8 mm +4 mm	M5x40
Blackmagic Cinema Camera	21 mm	8 mm	M5x20

Nikon D800	36,5 mm	16 mm +8 mm	M5x40
------------	---------	-------------	-------