

HANDLE BLOCK HANDLE BLOCK

No.	Part No.	SP Description
401	A-8278-801-B	o HANDLE ASSEMBLY, SUB
402	A-8318-193-A	o MOUNTED CIRCUIT BOARD, CN-1549
403	A-8318-200-A	o MOUNTED CIRCUIT BOARD, LE-188
404	A-8318-201-A	o MOUNTED CIRCUIT BOARD, SW-923
405	A-8318-237-A	o MOUNTED CIRCUIT BOARD, CN-1695
406	X-3604-541-1	s COVER ASSEMBLY, HANDLE
407	X-3744-307-1	s SUSPENSION ASSEMBLY
408	1-542-296-21	o MICROPHONE
409	1-669-110-11	o PRINTED WIRING BOARD, CN-1518
410	3-179-882-01	o SPACER, MICROPHONE
411	3-612-600-01	s FIXING BASE, VF SHOE
412	3-612-624-02	s COVER, HANDLE(2)
413	3-612-629-01	s COVER, HANDLE(3)
414	3-612-632-02	s COVER, SW(H)
415	3-612-635-02	o FIXING KNOB, VF
416	3-612-664-01	s COVER, CN(ANTON)
417	3-612-665-01	o CUSHION(2)
418	3-612-701-01	o LABEL, FILTER(A)
419	3-612-822-01	s SPRING, COMPRESSION
420	3-676-244-00	s COVER, SWITCH
421	3-679-543-11	o RING(D), LOCK
422	3-679-684-01	o REST, ARM
423	3-686-197-01	o ARM, SLIDE
424	3-686-261-03	s SHOE3, SLIDE, VF
425	3-687-070-01	o WASHER, SHOE
426	3-688-754-11	s SPRING
427	3-688-755-11	s SHOE, ACCESSORY
428	3-709-096-01	s SCREEN, WIND
429	3-720-919-01	o RUBBER, LOCK RING
430	3-846-067-21	o SPACER (C)
431	3-849-405-00	s COVER, EARPHONE JACK
432	3-184-550-31	s SCREW, B2.6x4

