


Model	Camera
	<p>Canon EOS 1100D(Rebel T3), 1000D (Digital Rebel XS), 650D(T4i), 600D(T3i), 550D(T2i), 500D (Digital Rebel T1i), 450D (Digital Rebel XSi), 400D (Digital Rebel Xti), 350D(Digital Rebel XT), 300D (Digital Rebel), 300V, 300, 60D, 60Da, 50E, 50, 33, 30, 3000...etc.</p> <p>Canon Powershot G12, G11, G10, G1X.</p> <p>Pentax K200, K110D Super, K110D, K100D, K20D, K10D, K-7, K-5, Kr, Kx, *istDS2, *istDS, *istD, *ist, MZ-6, MZ-L, ZX-L.</p> <p>Contax N Digital, NX, N1, 645.</p> <p>Samsung GX-10, GX 1L, GX 1S.</p>
TR3C	<p>Canon EOS 1D Mark IV, 1D(s) Mark III, 1D Mark III, 1D(s) Mark II, 1D Mark II(N), 1D Mark II, 5D Mark III, 5D Mark II, 50D, 40D, 30D, 20D, 10D, 7D, 6D, 5D, 1D X, 1D C, 1Ds, 1D, 1V, EOS 3, D2000.</p>
TR1N	<p>Nikon D800E, D800, D700, D300s, D300, D200, D4, D3S, D3X, D3, D2Xs,D2X, D1X, D2Hs,D2H, D1H, D1, F100, N90s, F90X, F5, F6, F90.</p> <p>Fujifilm S5 Pro, S3 Pro.</p> <p>Kodak DCS-14n.</p>
TR2N	<p>Nikon D80, D70s.</p>
TR3N	<p>Nikon D7000, D5100, D5000, D3200, D3100, D600, D90.</p>
TR1S	<p>Sony A900, A850, A700, A580, A560, A550, A500, A450, A350, A300, A200, A99, A77, A65, A55, A35, A33.</p>
TR3L	<p>Olympus E620, E600, E520, E510, E450, E420, E410, E30, EM5, EP3, EP2,EP1, SP-570UZ, SP-560 UZ, SP-550 UZ, SP-510 UZ.</p>