

YoloLiv 18mm F1.4 Micro Four Thirds Lens

User Manual



Join YoloLiv User Group



Hangzhou Xingxi Technology Co., Ltd.

Official Website: www.yololiv.com

E-Mail: Contact@yololiv.com

Company Address: Room 112, 112M, Building 1, No. 1818-1, Wenyi West Road, Yuhang Street,
Yuhang District, Hangzhou, Zhejiang Province.

YOLOLIV

01 Important Notes

Warning



- Do not point the lens directly at the sun or any strong light source. The concentration of light may cause malfunctions inside the camera body and lens, or may result in smoke or fire. If the lens must be placed under direct sunlight, always keep the lens cap attached.
- When shooting toward the direction of the sun, do not allow the sun to enter the field of view. Otherwise, sunlight may be concentrated at the focal point of the camera, causing smoke or fire. Even if the sun is slightly outside the frame, it may still lead to smoke or fire.
- Do not carry the lens with the front element facing the sun. Sunlight may be concentrated through the lens, potentially causing malfunction.
- Although this lens features dust-proof and drip-resistant design, it is not waterproof. When using the lens in rainy or similar environments, ensure that it is kept away from water droplets.
- If the lens itself is shaken, or if a camera with the lens attached is shaken when the power is turned off, internal components of the lens may produce noise. This does not indicate a malfunction. Additionally, when carrying the lens, body movement may cause the internal lens groups to shift. However, this does not affect lens performance.
- Using this product together with products from other manufacturers may affect functionality and may result in accidents or malfunctions.


02 Attaching / Removing the Lens

Before attaching or removing the lens, hold the main mounting section of the lens. Do not hold any operational controls such as the focusing ring.

Installing the Lens

  
 
1. Remove the rear lens cap and the camera body cap. (Figures ① and ②)
2. Align the red index mark on the lens with the red index mark on the camera (installation indicator), then insert the lens into the camera mount and rotate clockwise until it locks in place. (Figure ③)
 - Do not press the lens release button on the camera while attaching the lens.
 - Do not attach the lens at an angle.
3. Remove the front lens cap.

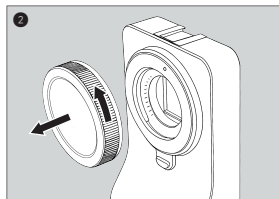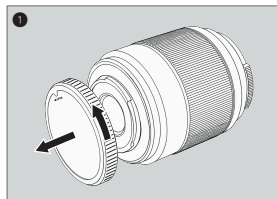

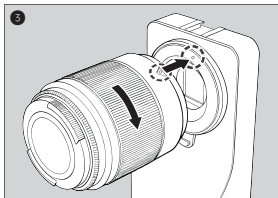

Removing the Lens

  1. Attach the lens cap. (Figure 4)
2. Press and hold the lens release button on the camera, rotate the lens counterclockwise until it stops, and then remove the lens. (Figure 5)

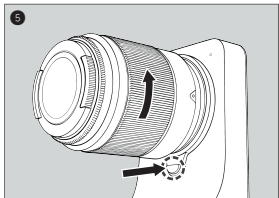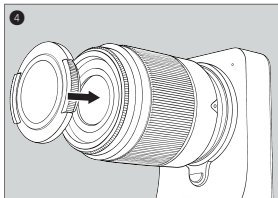

03 Product Specifications

Product Name	YoloLiv 18mm F1.4 Lens
Sensor Size	4/3"
Focal Length	18mm
Maximum Aperture	F1.4
Lens Outer Diameter	Ø65mm
Effective Image Circle	Ø22.6mm
Minimum Focus Distance	0.26m
Maxmium Dimensions	70mm × Ø65mm (LxØ)
Optical Construction	7 groups, 7 elements
Operating Temperature	-10°C to +50°C
Storage Temperature	-20°C to +70°C

04 After-Sales Service and Support

Warranty Terms:

When purchasing this product, please carefully read the warranty terms to ensure your product is covered under warranty.

1. The product has a one-year warranty from the date of purchase. If the product malfunctions within the warranty period due to component quality or manufacturing defects, we offer free repairs and part replacements.
2. A purchase invoice must be provided for warranty service.
3. For warranty inquiries, please contact the purchase channel or directly reach us at contact@yololiv.com

Before using this product, please read this product manual carefully, The manual contains all warnings and important matters related to the product:

1. Exceeding the specified warranty period.
2. Damage caused by misuse, accidents, modifications, inappropriate physical or operational environments, natural disasters, power surges, improper maintenance, or storage.
3. Malfunctions or damage caused by third-party products, software, services, or actions.
4. Normal discoloration, wear, and tear during product use.
5. The product is not guaranteed to operate without interruption or errors.
6. Consumable parts such as cables that wear out over time.
7. Failure to present a valid warranty card and original purchase invoice or

receipt.

8. Failure to use the product according to the accompanying instructions, operation manual, or intended function or environment.
9. The completeness and appearance of the product are not guaranteed. You should inspect the product upon receipt and raise any discrepancies immediately.
10. Damage caused by dropping, impact, or other external forces, or device failure due to water or sweat damage.

After the warranty period expires, users can still receive repair services from the company but need to pay the corresponding fees.