


Left/Right Panel Block

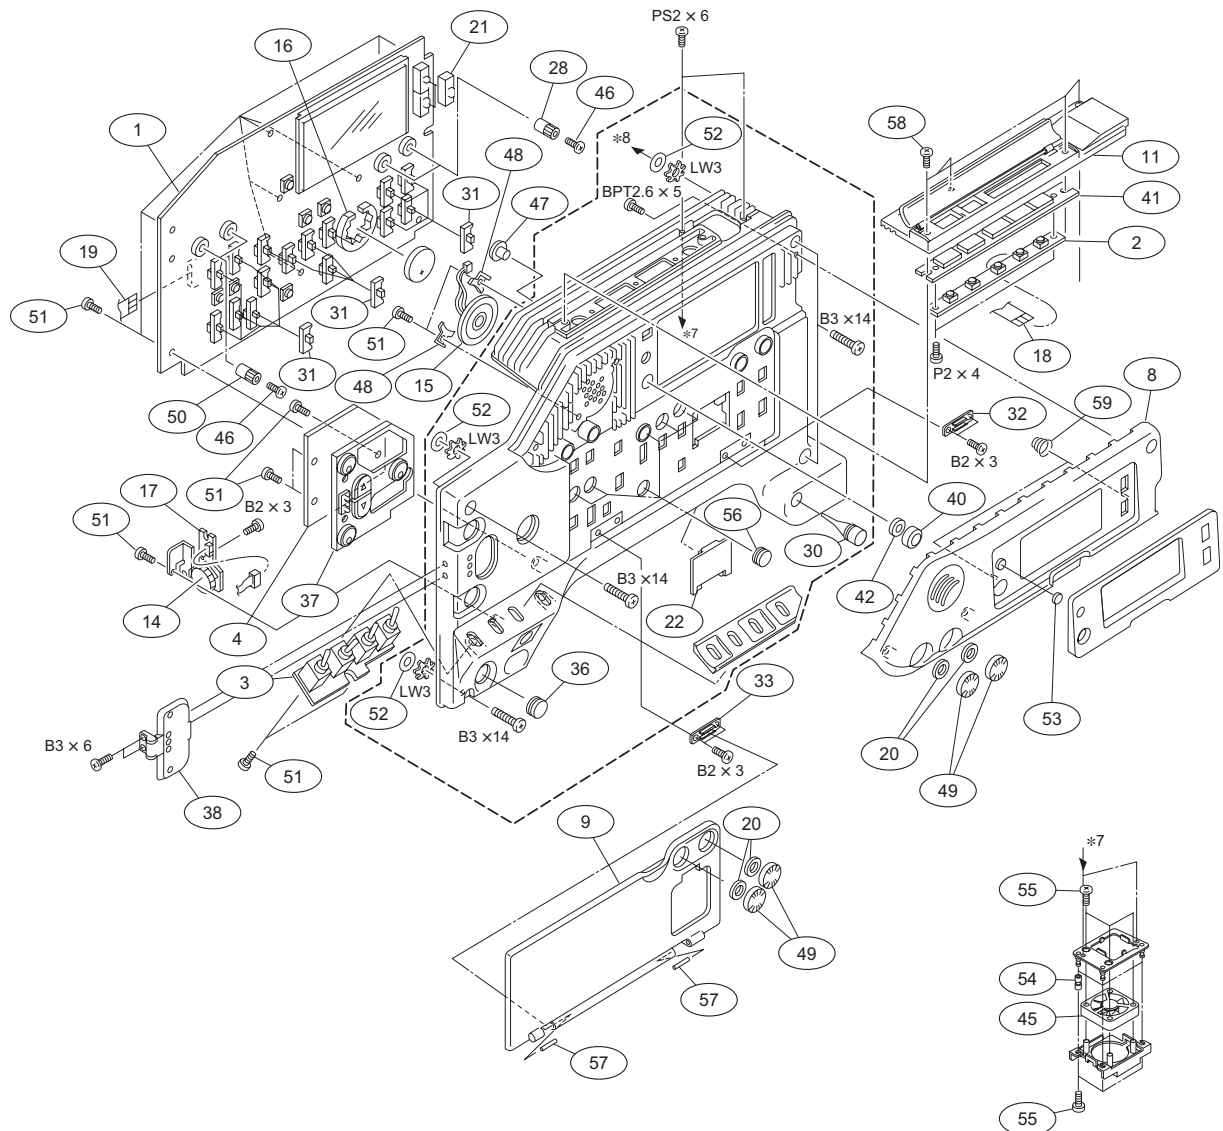

No.	Part No.	SP Description	No.	Part No.	SP Description
29	3-605-946-01	o ROLLER, F	50	3-744-304-01	s KNOB (SUPPORT)
30	3-607-206-02	s FOOT, RUBBER	51	3-625-924-01	s ALOCK SCREW, +B2.6 NI
31	3-612-528-01	s KNOB (M), SW	52	3-672-250-01	s RING (M2.6), O
32	3-612-529-01	s HINGE (F), FP	53	3-717-936-03	o COVER, LED
33	3-612-530-01	s HINGE (R), FP	54	3-617-812-01	o VIBRATION PROOF, RUBBER
34	3-612-572-02	o SUPPORT PANEL, SUB [for DSR-500WS/500WSP]	55	4-963-924-01	s SCREW (DAMPER)
	3-612-572-21	o SUPPORT PANEL, SUB [for DSR-570WS/570WSP]	56	3-672-244-21	s COVER, SWITCH
36	3-612-632-02	s COVER, SW (H)	57	3-703-358-09	s PIN, PARALLEL (DIA. 2X25)
37	3-612-674-01	s COVER, SWITCH	58	3-694-181-02	s SCREW, ALOCK PRECISION +P2.6X5
38	X-3605-488-1	s GUARD ASSEMBLY, SW	59	3-622-568-01	o SPRING, GROUND
39	3-617-811-01	s HOLDER, CLAMP	60	A-8279-116-F	o PANEL ASSY (WS), L [for DSR-500WS/500WSP]
40	3-679-086-01	s BUTTON, PUSH		A-8279-673-A	o PANEL ASSY (WS), L [for DSR-570WS/570WSP]
41	3-679-501-01	o COVER, RUBBER KEY BOARD			
42	3-686-086-01	s CUSHION, BUTTON			
43	3-701-437-11	s WASHER			
44	3-703-358-06	s PIN, PARALLEL (DIA. 2X14)			
45	1-763-337-11	s MOTER, DC FAN			
46	3-704-244-41	s SCREW (P1.7X3.0)			
47	3-718-694-01	s PIN, PUSH BUTTON			
48	3-724-726-01	o HOLDER, SPEAKER			
49	3-724-755-04	s KNOB (F), VR			