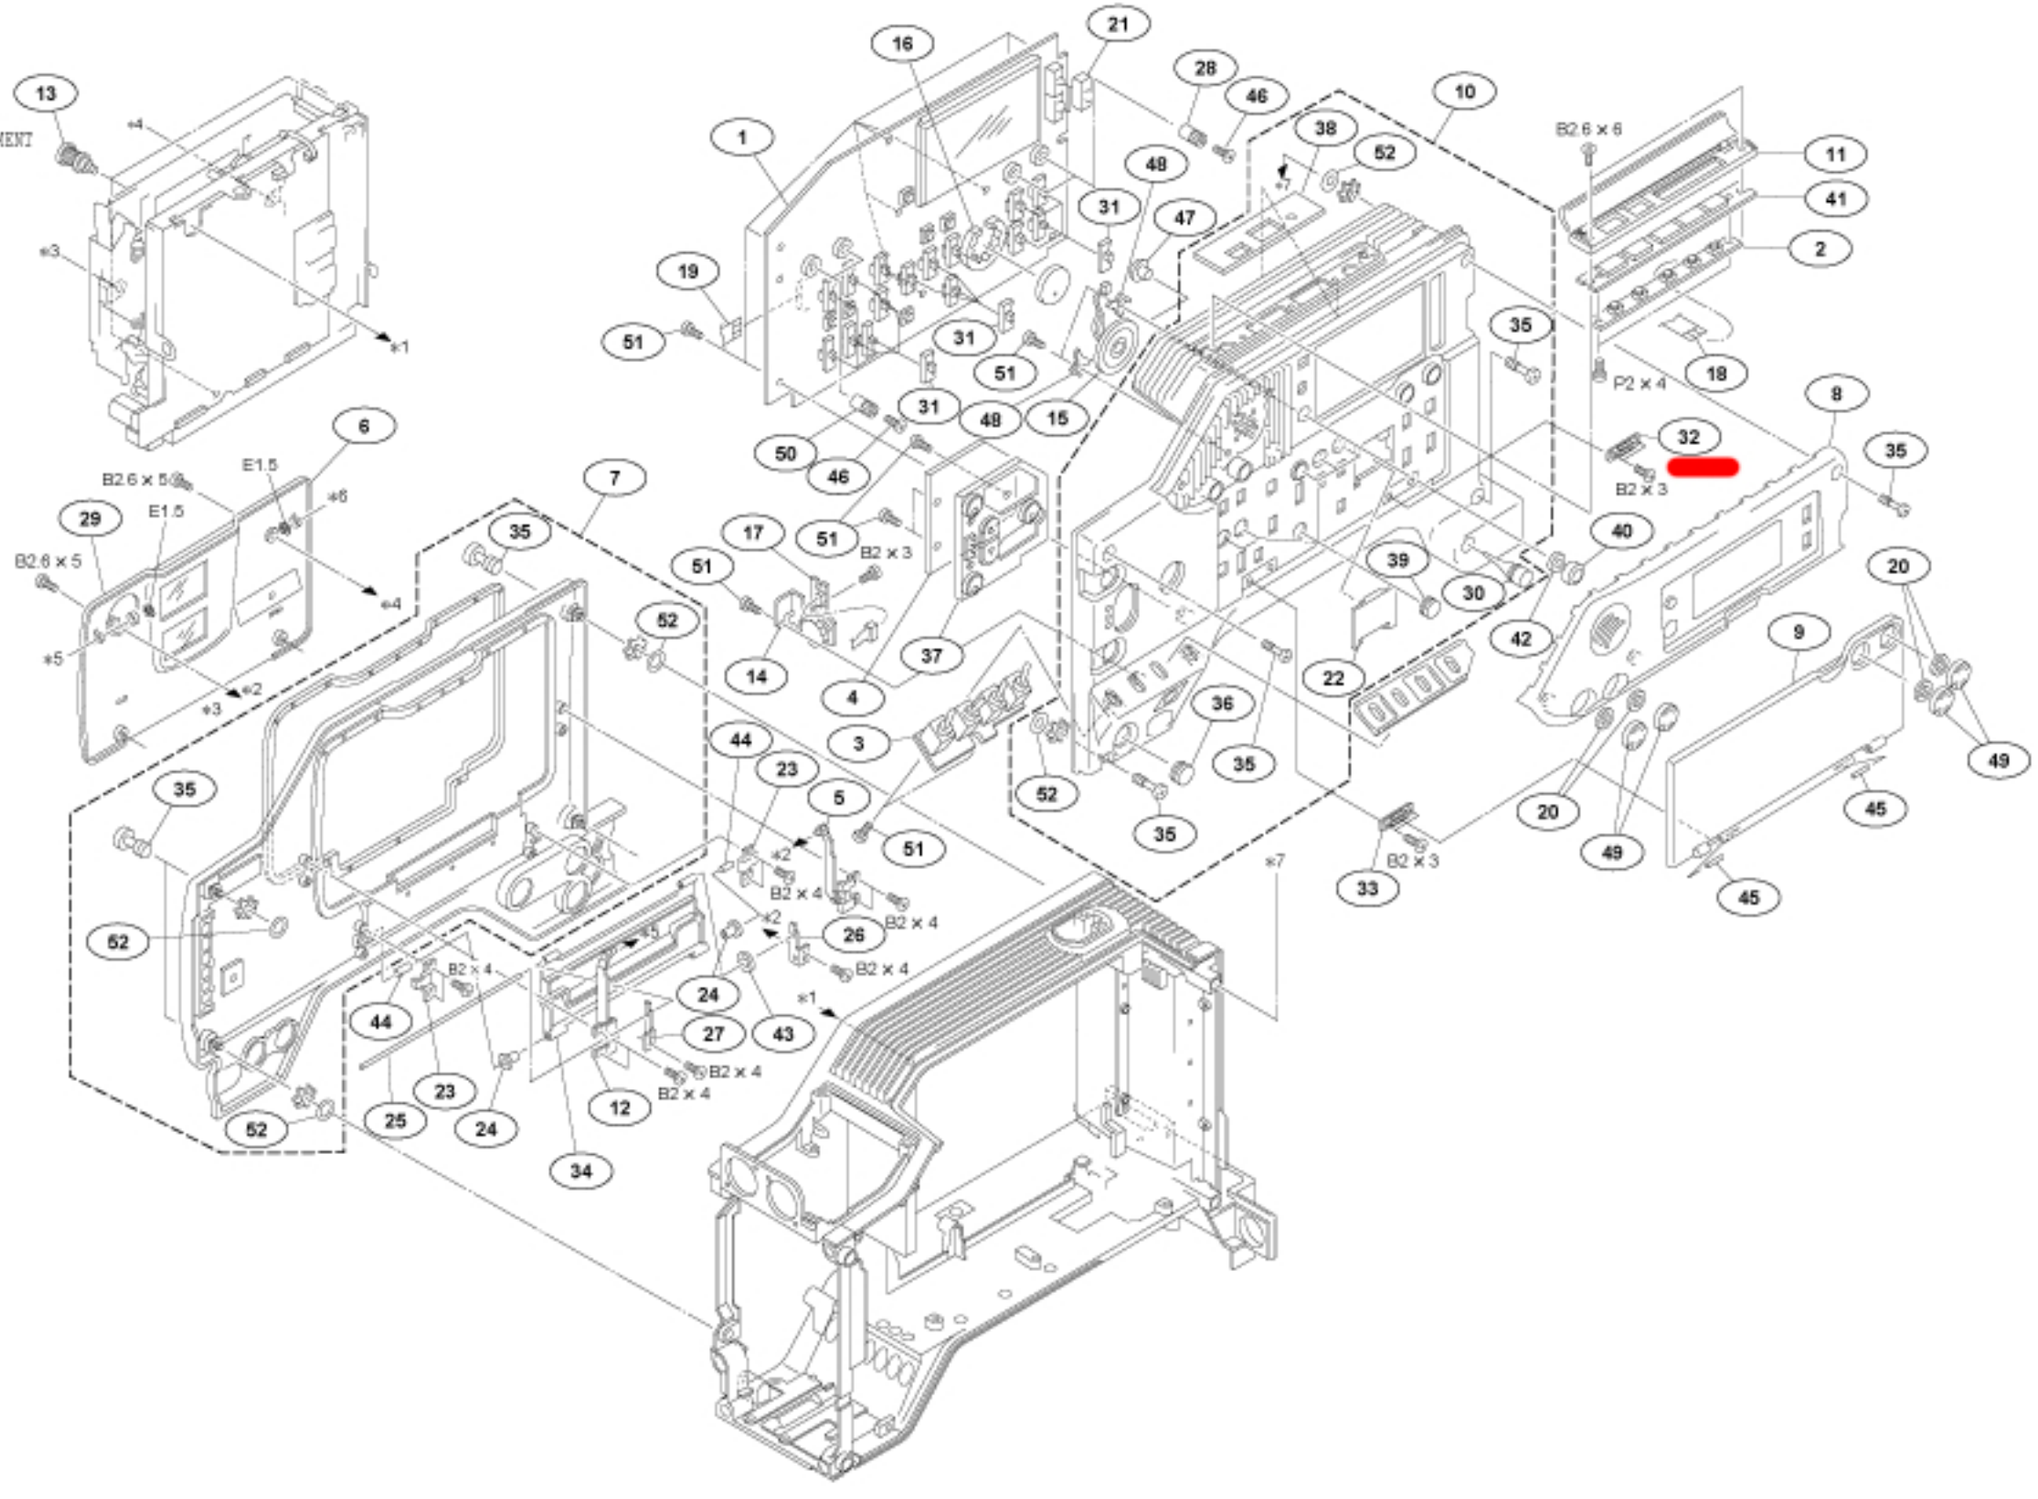No.	Part No.	SP	Description
1	A-6318-043-A	o	MOUNTED CIRCUIT BOARD, FP-98
2	A-6318-188-A	o	MOUNTED CIRCUIT BOARD, KY-405
3	A-6318-230-A	o	MOUNTED CIRCUIT BOARD, GCN-15
4	A-6318-233-A	o	MOUNTED CIRCUIT BOARD, FP-99
5	X-3604-530-1	o	SUPPORT L-M ASSEMBLY, ARM
6	X-3604-535-1	o	LID ASSEMBLY, CASSETTE COMPARTMENT
7	X-3604-536-2	o	L PANEL SUB ASSEMBLY
8	X-3604-537-1	o	PAD ASSEMBLY, R
9	X-3604-538-2	s	COVER ASSEMBLY, FP
10	X-3604-581-2	s	SUB ASSEMBLY, R PANEL
11	X-3678-057-3	o	SUB ASSEMBLY KEY PANEL
12	X-3678-799-5	o	SUPPORT L ASSEMBLY, ARM
13	X-3678-976-3	s	SCREW ASSEMBLY, MD
14	1-473-406-12	s	ENCODER, ED JOG
15	1-544-559-11	s	SPEAKER
16	1-550-414-31	o	HOLDER, BATTERY
17	1-669-104-11	o	PRINTED WIRING BOARD, SW-929
18	1-777-902-11	o	CABLE, FLAT (10-CORE)
19	1-783-363-11	s	CABLE, FLAT (10-CORE)
20	3-176-488-01	s	SHEET, VR
21	3-604-358-01	o	KNOB(H), SW
22	3-604-373-03	o	COVER, BATTERY
23	3-604-805-01	o	CLAMP B, SHAFT
24	3-604-806-01	o	SUPPORT, SHAFT
25	3-604-869-01	o	SHAFT R1, ARM
26	3-604-897-01	o	FL, SUPPORT
27	3-604-898-01	o	FR, SUPPORT
28	3-605-437-01	o	SUPPORT, KNOB
29	3-605-946-01	o	ROLLER, F
30	3-607-206-02	s	FOOT, RUBBER
31	3-612-526-01	s	KNOB(M), SW
32	3-612-529-01	s	HINGE(F), FP
33	3-612-530-01	s	HINGE(R), FP
34	3-612-572-01	o	SUPPORT PANEL, SUB
35	3-612-598-01	s	SCREW, STEP
36	3-612-632-02	s	COVER, SW(H)
37	3-612-674-01	s	COVER, SWITCH
38	3-613-323-02	o	HEAT SINK (R)
39	3-676-244-21	s	COVER, SWITCH
40	3-679-086-01	s	BUTTON, PUSH
41	3-679-501-01	o	COVER, RUBBER KEY BOARD
42	3-686-086-01	s	CUSHION, BUTTON
43	3-701-437-21	s	WASHER
44	3-703-358-06	s	PIN, PARALLEL (DIA. 2X14)
45	3-703-358-09	s	PIN, PARALLEL (DIA. 2X25)
46	3-704-244-41	s	SCREW (P1.7X3.0)
47	3-718-694-01	s	PIN, PUSH BUTTON
48	3-724-726-01	o	HOLDER, SPEAKER
49	3-724-755-04	s	KNOB (F), VR
50	3-744-304-01	s	KNOB (SUPPORT)
51	3-184-550-31	s	SCREW, +B2.6X4
52	3-672-250-01	s	RING (M2.6), O