


## IDS Column Manual

Our New IDS Column requires that you first place the IDS Tripod on the Universal Dolly. Then put the Main Accy Platform in place as well. Once you have mounted the Tripod and the Accy PF on the dolly you will need to extend the tripodlegs to their highest Position...

- 1.** Place the Column on the Accy PF as shown. The top of the Column should now be centered right below the hole of the Mounting - bracket of the IDS Tripod.

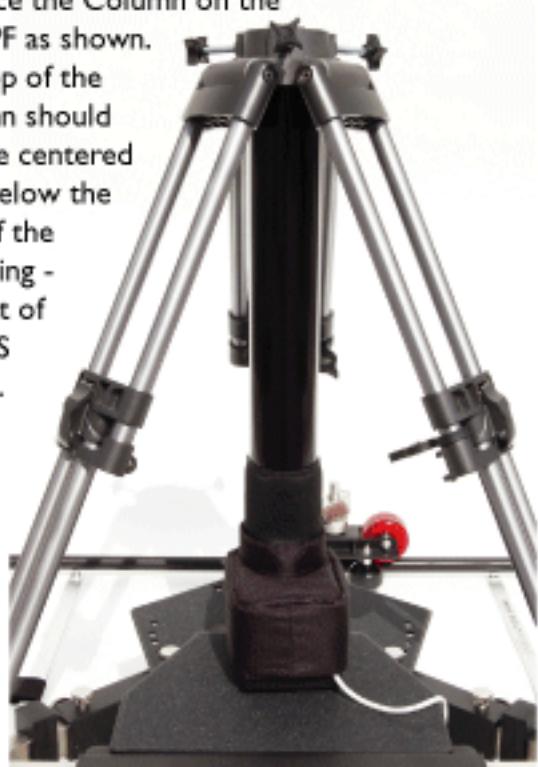

IDS Column on Accy PF. Tripod is fully extended.

- 2.** Un-buckle the three Tripod-legs and carefully lower the Top of the Tripod. The Freestanding Column should sleeve through the Top of the Tripod without touching it if it stands centered in relation to the Tripod. When the rim of the Column is about 2 inches above the Mounting-bracket of the Tripod, fasten the Tripod-leg buckles. Now carefully tighten the 3 tightening bolts on the Mounting-bracket in order to hold the Column in place.




Top of Tripod lowered and positioned about 2" below Rim of Column. **Do not overtighten the 3 screws against the Column, they DO NOT support any vertical load, only horizontal stabilisation !!**

- 3.** Secure the Riser on the top of the Column with the 4 supplied screws. (the screws are in the small pouch)



- 4.** Plug the cables into the controller.

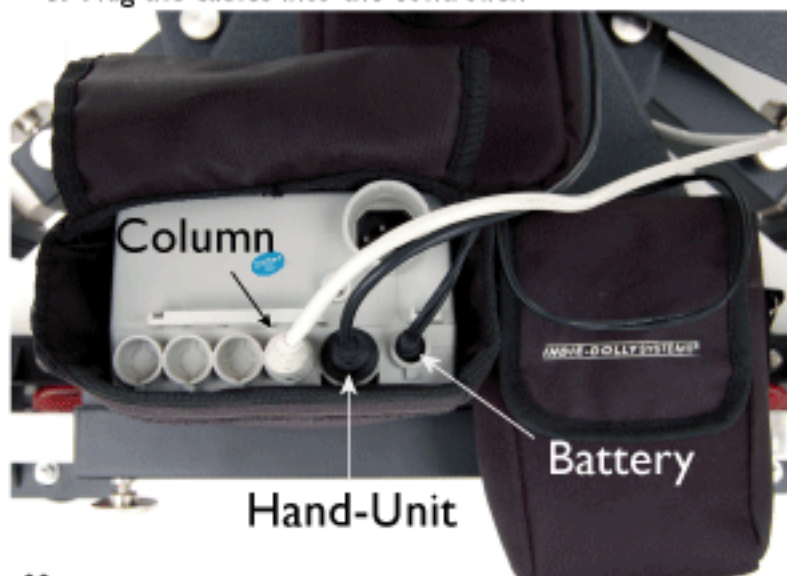

**!!** To Charge the Battery plug the Battery into the controller and the powercord of the controller into the wall. The controller is also a charger. After the Battery is charged **DO NOT UNPLUG** the battery from the controller. If you unplug the battery from the controller, you will first have to plug the controller back into a walloutlet with the battery also plugged into the controller in order to activate Battery-power.

- 5.** The Hand Unit. Press the "UP" or "DOWN" Button once to Start, press it a second time to Stop the Column.

Adjust the Speed with the Dial.



Keep the Battery plugged into the controller after charging!