

### Battery Charging

- System includes rechargeable batteries.
- Plug charger AC adapter into charging base and into wall outlet.

**IMPORTANT:** There are two AC adapters supplied with this system. The Com-Center adapter will fit ONLY the Com-Center.  
**The Charger adapter will fit ONLY the Charger.**

- Batteries should snap into charging slot securely.
- Charge time 2 - 4 hours.

#### LED Indicators:

- GREEN: Fully charged
- RED: Charging
- RED Flashing: Battery Faulty
- NO LIGHT: Battery Improperly inserted



### Battery Facts

- COMSTAR high capacity Lithium batteries provide up to 10 hours of operation.
- Lithium batteries do not develop a memory, so do not need to be drained after use.

### Important Tips

#### Microphone Placement

- COMSTAR headsets include a special noise cancelling microphone. For optimum performance place directly in front of, and approximately 1 - 2" from the user's mouth.



#### Com-Center Placement

- Line of sight: for optimum range, position the Com-Center so that the radio signals have a clear path to the wireless headset/radios.

#### Storage

- Lithium batteries should be at least partially charged when stored for long periods.

### Caution

Compartment on bottom of Com-Center houses switches for factory programming. Call Eartec for more information: 1-800-399-5994.



Duplex Wireless System



**E A R T E C**

145 Dean Knauss Drive  
Narragansett, RI 02882  
Tel: 1-800-399-5994  
In RI: 401-782-4966  
Fax: 401-789-7300  
www.eartec.com

# Operating Instructions

## Com-Center Start:

- Attach AC power cord to Com-Center, then plug into the nearest wall outlet.
- If wall outlet is not available insert rechargeable battery into slot at back of Com-Center (silver contacts must be in proper position).
- OR use five Brand Name AA Batteries in battery sled (provides up to 6 hours of operation).
- Turn Com-Center ON (switch on back panel).

**Note:** If rechargeable battery and AC power cord are used simultaneously, the battery will receive a trickle charge while system is in use.

## Com-Center Facts:

### Line of Sight

- For optimum range, position the Com-Center so that the radio signals have a clear path to the wireless Headsets.

### Dual Channel Feature

- Red & Green LED lights indicate two separate channels are in use.
- Amber LED light indicates conference feature is in use.



**Note:** Switch connects both channels, linking all headsets.

## COMPAK Series Start:

- Plug headset into the side of the COMPAK transceiver.
- Insert battery into COMPAK.
- COMPAK will automatically turn ON.



## "All-In-One" Series Start:

- Insert battery into headset.
  - Headset will automatically turn ON.



**Note:** Slide battery into compartment bottom first, then press top to snap into place. Push latch up to eject.

## Blue LED Indications:


- Flashing blue LED on headset or COMPAK indicates automatic tuning to Com-Center signal.
- When the Com-Center is ON the headset / COMPAK LED will automatically change to solid blue (indicating communication).
- Solid blue LED means headset or COMPAK is communicating.

## Headset / COMPAK Controls:

### Power Button

After the battery is installed, the power button is used to turn the headset "ON" and "OFF".

- **OFF** by pressing & holding until LED goes out.
- **ON** by quick clicking, LED illuminates.

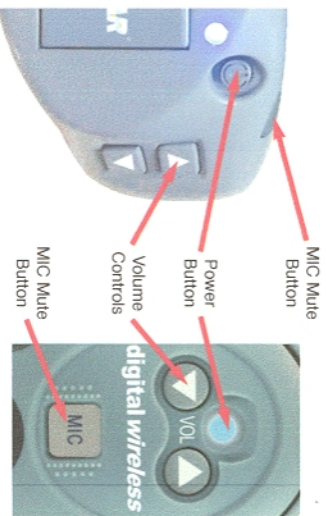

### Volume

- Volume control buttons adjust to any of five settings.

### MIC Mute - grey button

- Click MIC button to mute microphone, audible tone confirms change.
- Repetitive beep indicates battery low.