

ETH-GPI Link Dual

User Manual

September 27, 2025

SKUs: ETH-GPI-LINK-DUAL-V2

Language: English



I Disclaimer

Before using this product, please read and fully understand all instructions provided. This product is classified as Class A equipment and is intended for use by commercial customers only. It is not suitable for residential use and may cause interference in residential environments.

For the most up-to-date specifications, refer to the latest SKAARHOJ data sheets or publications. Availability of products and types may vary by country —please check with a SKAARHOJ sales representative for details.

The information in this document is subject to change without notice. While SKAARHOJ strives to ensure the quality, reliability, and safety of its products, defects cannot be entirely ruled out. To minimize risks of damage or injury, customers must implement appropriate safety measures and follow the intended use guidelines.

SKAARHOJ and its subsidiaries disclaim any liability, warranty, or responsibility for claims, whether in contract, tort, or any other legal theory. SKAARHOJ shall not be liable for any special, direct, indirect, incidental, or consequential damages, including lost profits, revenues, or economic losses, or for third-party claims, equipment replacement, or any other damages.

SKAARHOJ does not assume liability for patent, copyright, or intellectual property infringement arising from the use of its products. No license or rights are granted under any patents or intellectual property of SKAARHOJ or third parties.

If any of the above clauses are not permitted by applicable law, they will be enforced to the maximum extent allowed.

II Imprint

© 2025 SKAARHOJ. All rights reserved.

This device contains proprietary information of SKAARHOJ and is provided under a license agreement with restrictions on use and disclosure, protected by copyright law. Reverse engineering of the hardware and software is prohibited.

No part of this publication may be distributed, reproduced, transmitted, transcribed, stored in a data retrieval system, or translated into any language in any form by any means without prior written permission from SKAARHOJ.

If you download files from our website for personal use, ensure you check for updated versions. SKAARHOJ cannot be held liable for downloaded files, as technical data is subject to change without notice.

Due to ongoing product development, the information in this document may change without notice. The information and intellectual property contained herein is confidential between SKAARHOJ and the client and remains SKAARHOJ's exclusive property. Please report any issues with the documentation in writing. SKAARHOJ does not guarantee this document is error-free.

The source language of this manual is English. Translations into other languages are derived from the English version.

For further assistance:

SKAARHOJ ApS
Rosenkaeret 11C
DK-2860 Soeborg
Denmark
Email: info@skaarhoj.com
Website: www.skaarhoj.com

II.1 Trademarks

SKAARHOJ® is a registered trademark of SKAARHOJ ApS. The following names are also trademarks of SKAARHOJ: Raw Panel™, Blue Pill™, Reactor™, UniSketch™, Device Core™, and ETH-GPI Link Dual™.

All other trademarks are the property of their respective owners and are acknowledged as such.

III Document Legends

This section explains the meaning of various alert levels and informational notes used throughout this document. Each label serves as a guide to indicate the level of attention required and the type of risk involved. Please review these legends carefully to ensure a clear understanding of the warnings, cautions, and helpful tips provided.

Danger

DANGER indicates an imminent hazard. Failure to avoid it will result in death or serious injury. Always follow the recommended actions to prevent this danger.

Warning

WARNING indicates a potential hazard. Failure to avoid it may result in death or serious injury. Always follow the recommended actions to prevent this risk.

Caution

CAUTION indicates a possible hazard. Failure to avoid it may result in minor or moderate injuries. Always follow the recommended actions to prevent this hazard.

Notice

NOTICE indicates a potential risk of equipment or environmental damage. Always follow the recommended actions to avoid damage.

Hint

HINT provides additional information to clarify or simplify a procedure. It is not related to safety.

Contents

I Disclaimer	1
II Imprint	2
II.1 Trademarks	2
III Document Legends	3
1 About this Document	5
2 Safety Information	6
3 About ETH-GPI Link Dual	7
3.1 Feature Highlights	7
3.2 Intended Use	8
3.3 Product Identification	8
3.4 Environmental Conditions	8
3.5 Technical Data and Dimensions	8
3.5.1 Standard Connections	8
3.5.2 Protective Earth	10
3.5.3 Technical Drawing	10
3.5.4 Technical Data	10
3.6 Scope of Delivery and Warranty	11
3.6.1 Recommended Accessories	11
3.7 Certification and Safety Standards	11
3.7.1 EU Declaration of Conformity	11
4 Getting Started with Link IO	12
4.1 Quick Steps	12
4.2 SKAARHOJ Discovery	12
4.3 Configuration via USB	13
4.4 Accessing the Web Interface	15
4.4.1 Network Settings	16
4.5 Firmware Updates	18
4.5.1 New Firmware Releases	18
4.5.2 Factory Reset	20

4.5.3	Wrong Firmware	20
4.5.4	Upgrading to the Link IO Platform	22
5	ETH-GPI Link Dual Functionality	26
5.1	Raw Panel Tab	26
5.2	TSL Tab	28
5.3	HTTP Tab	30
5.4	Link Tab	31
5.5	Devices Tab	32
5.6	Control Tab	34
5.7	Dual Version	35
6	Service	36
6.1	Troubleshooting	36
6.2	Cleaning	36
6.3	Repair	37
6.4	Disposal	38
6.5	Transportation and Storage	38
6.6	SKAARHOJ Service Contacts	39
7	Notes	40

1 About this Document

This operating manual is intended for all users of the SKAARHOJ ETH-GPI Link Dual. It provides essential guidelines for safe and proper operation of the device. All users must read this manual before using the device for the first time to ensure correct usage.

The manual is an important part of the ETH-GPI Link Dual and should be kept easily accessible, close to the device for reference at any time.

For more detailed information about the device's features and functionality, please refer to additional instructions available for download at www.skaarhoj.com or request them via support@skaarhoj.com.

Ensure that the operating manual, user manual, and any other relevant documentation are stored safely for future reference and for any potential future users of the device.

For more resources and helpful information, visit the SKAARHOJ website.

SKAARHOJ offers comprehensive training courses to provide deeper insights into maximizing the potential of SKAARHOJ products.

2 Safety Information

This safety information supplements the specific operating instructions and must be strictly followed. Before operating or installing the device, read and understand all safety and operating instructions. Keep these instructions for future reference. Always follow the guidelines in this and any other documentation provided to avoid injury or damage to the device and surrounding objects.

Assembly and operation should only be performed by trained personnel familiar with the device. Use only the recommended tools, materials, and procedures outlined in this document. For other equipment, refer to the manufacturer's instructions.

Safety instructions, warning symbols, and signal words in this document highlight different levels of risk.

Caution

Using ETH-GPI Link Dual in Humid Environments with Condensation

When moving the device and its accessories from a cool to a warm location, or when used in a damp environment, condensation may form inside the device and on electrical connections. Do not operate the device while condensation is present, as it poses a risk of electric shock and fire due to short circuits.

- Do not use the device or accessories if condensation occurs.
- After moving the device from a cool to a warm environment, allow time for the components to warm up.
- Store the device in a warmer location to reduce the risk of condensation.

Warning

Connected Cables on the Floor

Risk of injury from tripping, falling, or slipping over connected cables.

- Always secure cables connected to the device and accessories properly.
- Install cables in a way that prevents tripping.
- Use a cable duct or secure cables with adhesive tape if necessary.
- Always disconnect cables from the device and accessories before moving them.

3 About ETH-GPI Link Dual

A must-have in any control room and OB van/truck. Designed to seamlessly connect and control a wide range of broadcast devices. Featuring 16 general purpose inputs and 16 general purpose outputs, this versatile converter offers precise control over signal routing, tally control, switching, utility and integration with popular systems like Blackmagic ATEM switchers, AJA KUMO and Grass Valley Routers, RCP controllers, tally lamps and many more. ETH-GPI can be also used as GPIO extension and distribution over standard LAN network.

With ETH-GPI Link Dual you enjoy benefits such as

- 2x16 channels for expanded I/O capabilities, double the standard ETH-GPI Link
- Flexible control over a wide range of devices with digital I/O, enhancing production capabilities
- Raw Panel protocol connects it easily to Blue Pill Inside devices, providing unlimited connectivity options.
- Quick and intuitive parameter setup via UniSketch OS, saving time and effort
- Electrical isolation of inputs/outputs ensures reliability and device safety
- Adaptable to various production environments with open collector and relay output compatibility

3.1 Feature Highlights

- Control popular broadcast devices with ease
- 16 GPI and 16 GPO ports, fully isolated
- User-friendly configuration
- Durable build with dual DB25 connectors
- Micro USB port for configuration and updates
- 100M Ethernet w/Power over Ethernet (PoE IEEE802.3af/t)
- Designed and manufactured in Denmark

3.2 Intended Use

Notice

Intended Use of ETH-GPI Link Dual

All versions of ETH-GPI Link Dual, and accessories are intended for professional use only and must be operated by skilled and trained personnel in non-domestic environments. They must not be used by inexperienced individuals without proper training.

Before use, carefully read and understand both the operating and user manuals. Use the product and its accessories solely for the purposes outlined in this document. Always follow the safety instructions and system requirements for all equipment involved.

SKAARHOJ assumes no liability for damages or modifications resulting from improper use. Modifying the product or its accessories is strictly prohibited.

3.3 Product Identification

The ETH-GPI Link Dual is identified by a label located on the bottom of the device. This label contains important information such as certification marks, product code, and the serial number. Ensure this label remains intact for future reference and support.

3.4 Environmental Conditions


The ETH-GPI Link Dual must be used and stored under specific environmental conditions. Before commissioning and operation, ensure the following conditions are met:

Operating Temperature	0° C to +40° C / +32° F to +104° F
Storage Temperature	-20° C to +45° C / -4° F to +113° F
Humidity	90% RH, non-condensing, from -20° C to +45° C

3.5 Technical Data and Dimensions

3.5.1 Standard Connections

On most SKAARHOJ products, you will find the following cable connections on the backside:

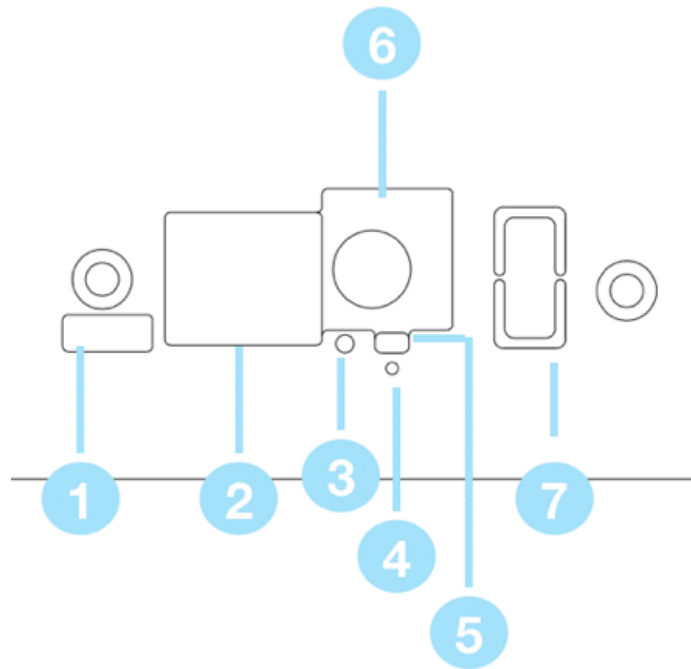

- **1:** Micro USB Port for serial communication with SKAARHOJ Firmware Updater
- **2:** IP Network RJ45 Port for IP control and 5W-30W PoE (+)/PoE Standard: IEEE 802.3af/t
- **3:** Status LED for monitoring and debugging
- **4:** Not used on Blue Pill Inside products.
- **5:** Config Button to enable WiFi Access Point. See WiFi Access Point section
- **6:** 12V DC Power Supply for connection to the supplied DC power adaptor. Center is positive.
- **7:** USB-A Port. Only available on some models for attachment of accessories.

Notice

- Use only shielded Cat6 (STP) cables for Ethernet connections.
- Ensure that your Ethernet switch is properly connected to a protective earth ground.
- All cables, except Ethernet and GPI cables, must be shorter than 3 meters.
- If applicable: The USB-A port's power is not included in the product's maximum power rating. If near maximum load, use a powered USB hub to prevent the USB-A port from impacting the overall power budget.

3.5.2 Protective Earth

Proper grounding of the device in its installation space is highly recommended. In most cases, grounding the unit through a shielded Ethernet cable connected to a properly grounded switch will suffice. However, to fully comply with all immunity standards, more direct grounding may be necessary. If required, attach a protective earth ground wire to the screw located just above the Micro USB port.

3.5.3 Technical Drawing

Figure 1 presents a detailed technical drawing of ETH-GPI Link Dual, highlighting key dimensions and design elements.

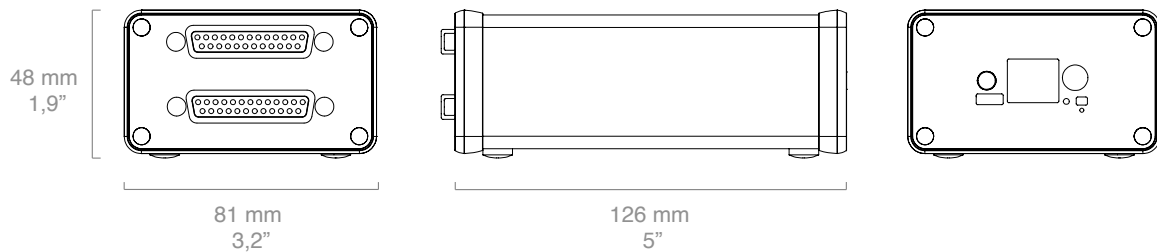


Figure 1: Technical drawing of ETH-GPI Link Dual with key dimensions and layout details.

3.5.4 Technical Data

Technical data for ETH-GPI Link Dual are presented in Table 1.

Hardware Specifications	
Component Highlights	16+16 channels GPIO (16 optoisolated inputs/16 relay outputs)
Connectivity	
Networking	100 Mbit Ethernet w/Power over Ethernet (PoE IEEE802.3af)
Power Supply	12V DC Jack 5.5mm x 2.1mm x 10mm Center Positive PoE IEEE802.3af/t
Service Port	Micro USB for updating firmwares and setting manual IP
Software	
Platform	Link IO
Licenses	N/A
Physical and Shipping	
Product Weight	288 g
Shipping Box Weight	592 g
Country of Origin	Denmark

Table 1: Detailed specifications and technical characteristics for ETH-GPI Link Dual

3.6 Scope of Delivery and Warranty

Notice

Important Information:

The packaging materials are recyclable. To contribute to environmental sustainability, please dispose of the packaging at a certified recycling facility. Ensure that all storage, shipping, and disposal comply with local regulations. SKAARHOJ assumes no responsibility for any consequences arising from improper storage, shipping, or disposal of the product.

Upon receiving the delivery, carefully inspect the package and its contents for any signs of damage or missing components. Do not accept the delivery if the package is damaged or incomplete. The package should contain the following items:

- (This Product)
- 12V Power Supply: Manufacturer: PHIHONG, Model Name: PSA15R-120P, Output: 12V/1.25A, Cable Length: 1.5m, Adapter type: EU, GB, US, AU depending on shipping country, DC Output Connector: 5.5mm x 2.1mm x 10mm Center Positive
- Micro USB Cable
- Getting Started Guide

For details regarding the warranty, please contact your local SKAARHOJ Service Partner. SKAARHOJ is not liable for any issues arising from improper shipping, misuse, or the use of unauthorized third-party products.

3.6.1 Recommended Accessories

- Ethernet Cable: Cat 6 S/FTP or better

3.7 Certification and Safety Standards

3.7.1 EU Declaration of Conformity



Brand Name
Product Description

SKAARHOJ
Universal Control Panel
ETH-GPI Link Dual

4 Getting Started with Link IO

4.1 Quick Steps

Getting started with ETH-GPI Link Dual - your new Link IO accessory - is straightforward. The first step is to access its web interface. Follow these steps:

- **Connect the Link IO Device:** Plug a Cat6 (STP) or better Ethernet cable into your SKAARHOJ Link IO device and ensure it is connected to your local network.
- **Download SKAARHOJ Discovery:** Download the SKAARHOJ Discovery application from www.skaarhoj.com, then launch the application from your Mac or PC on the local network.
- **Connect via USB (if needed):** If the device does not appear automatically in Discovery, connect it directly to your Mac or PC using a USB cable.
- **Set IP Address:** In SKAARHOJ Discovery, switch to the On USB tab. Select your device, click the Change IP Address button, enter a valid IP address, and click Save.
- **Access the Web Interface:** Once your device has a valid IP address, it will appear under the On Network tab with an Open button. Click Open to launch the device's Web UI.

Notice

Screenshots from other Link IO Accessories


In this Getting Started section, some screenshots and illustrations may show other products from the Link IO Accessory series. This is because these devices share the same web interface and follow the same procedure for initial setup as the ETH-GPI Link Dual.

While the appearance of the screenshots may differ slightly depending on the specific accessory, the steps and configuration principles are identical.

4.2 SKAARHOJ Discovery

When you launch the SKAARHOJ Discovery application, it automatically scans your local network for connected SKAARHOJ devices. If DHCP is enabled, the Link IO device will obtain an IP address automatically out of the box, and SKAARHOJ Discovery will display it in the device list. In the example below, the Link IO accessory is an ETH-SDI Link. Clicking on the device will display details on the right side of the screen.


You can also click the Open button for the device to launch its web interface, where you can set IP addresses and configure device-specific settings.

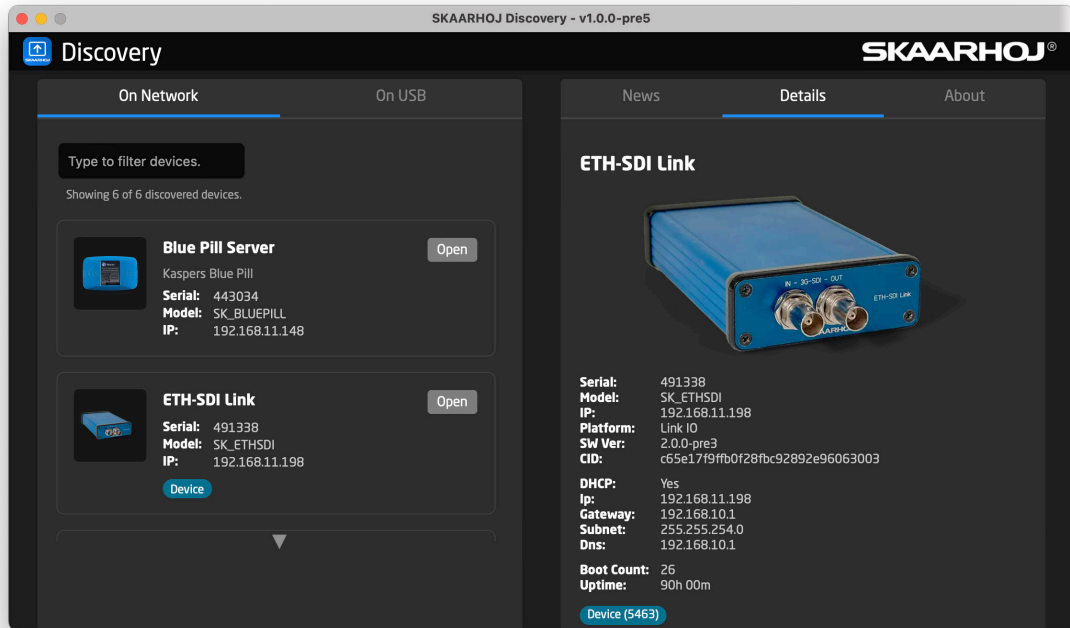

In some cases, your Link IO device may appear in the Network tab but be grayed out, with no Open button available. This can happen if the device has an invalid IP address (e.g., 0.0.0.0) or an unreachable static IP. In that case, connect the device to your computer via Micro USB and assign a new IP address using the USB connection.

4.3 Configuration via USB

Connect the Link IO device to your computer using a Micro USB cable. Launch the SKAARHOJ Discovery application and switch to the On USB tab. Your device should appear in the list. Select it, then click the Change Network Settings button.

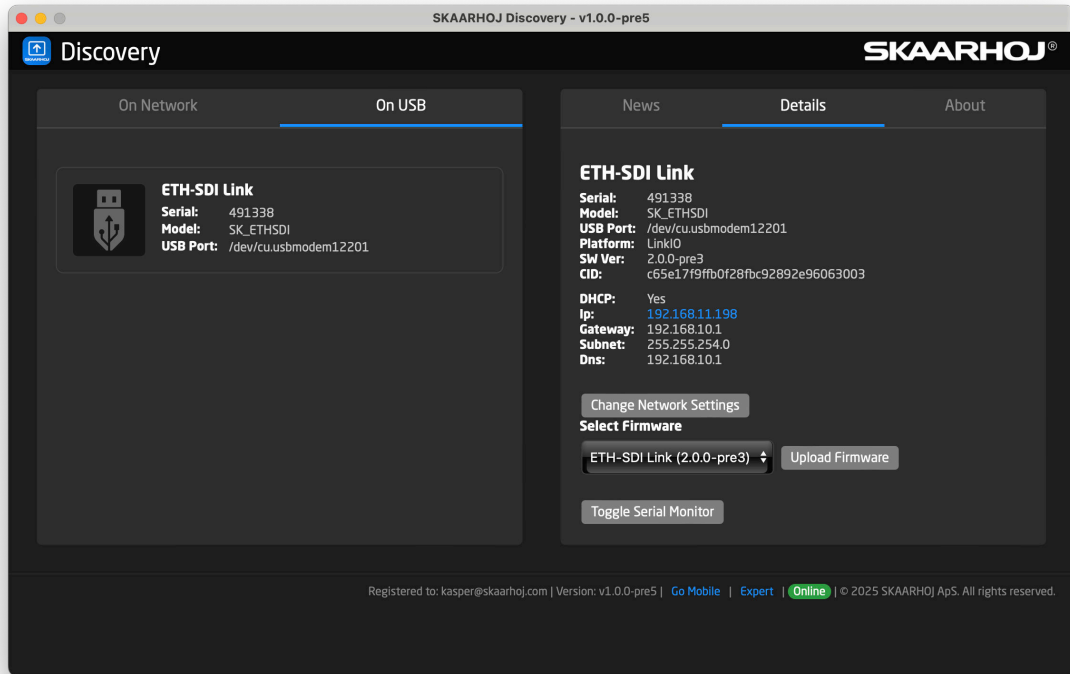

In the fields that appear, enter a static IP address for the device. Make sure to choose an address that is valid for your network and does not conflict with other devices.

The screenshot shows a DHCP configuration dialog box. At the top, there is a "DHCP" label and a toggle switch for "Automatic IP assignment", which is currently turned off. Below this, there are three input fields:


- "IP Address" with the value "192.168.11.198"
- "Subnet Mask" with the value "255.255.254.0"
- "Gateway" with the value "192.168.10.1"

At the bottom of the dialog, there are two buttons: "Update" and "Cancel".

After entering the desired IP address, click the Update button. The new settings will be applied and the device will reboot. Once the update is complete, switch back to the On Network tab to see your device listed with its new IP address.

4.4 Accessing the Web Interface

Once your Link IO device has a valid IP address, it will appear in the On Network tab of the SKAARHOJ Discovery application. Click the Open button next to the device to launch its web interface in your default web browser.

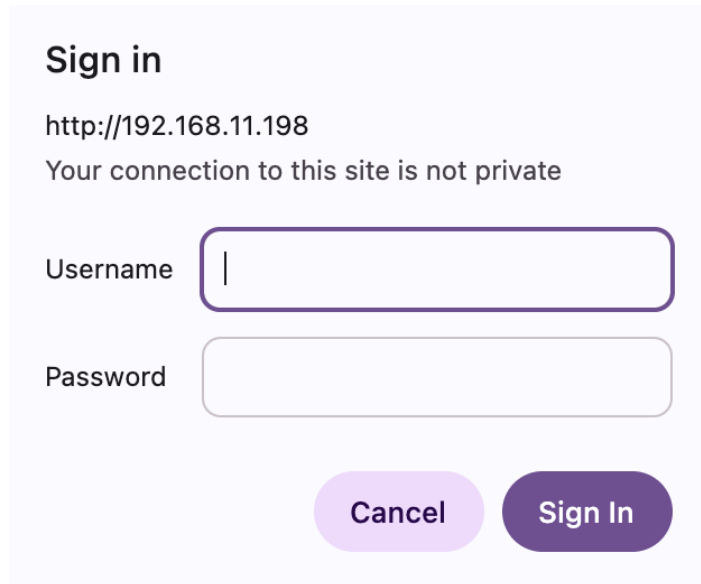

The screenshot shows a web browser window with the following content:

- Sign in**
- URL: `http://192.168.11.198`
- Warning: Your connection to this site is not private
- Username field:
- Password field:
- Buttons: **Cancel** and **Sign In**

You will be prompted to enter a username and password. The default credentials are:

- **Username:** admin
- **Password:** skaarhoj

Caution

Unencrypted Login Credentials

The username and password are transmitted in **unencrypted form** when accessing the Link IO Web UI:

- **Use only on trusted local networks.**
- **Do not expose the device directly to the internet** without proper network safeguards (e.g., VPN or firewall).
- **Be aware of potential security risks** if used on untrusted or public networks.

After logging in, you will see the main dashboard of the Link IO device. From here, you can configure network settings and other device-specific parameters. Below is an example of the dashboard interface from the Link IO device called ETH-SDI Link.

The screenshot displays the web interface for the ETH-SDI Link device. The interface is divided into two main sections: Network Settings and SDI Settings.

Network Settings:

- Device Description:** e.g. ETH-SDI Link 1 (Max 20 characters. Avoid symbols like quotes.)
- DHCP:** Automatic IP assignment (Enabled)
- IP Address:** 192.168.11.198
- Subnet Mask:** 255.255.254.0
- Gateway:** 192.168.10.1
- DNS:** 192.168.10.1
- Password:** Set new password (Up to 20 characters. Leave empty to keep current password.)

SDI Settings:

- SDI Tally Out:** Default (Off until network data) (Controls if/how camera tally data is embedded on the SDI output.)
- SDI Control Out:** Default (On) (Controls if camera control data is embedded on the SDI output.)
- SDI Control:** ETH-SDI Link is designed to receive tally and camera control signals over the network and convert them into ancillary data on the SDI output. Its primary purpose is to serve as a bridge between IP-based control systems and SDI-based production equipment, such as cameras from Blackmagic Design. When a command is received - typically from a SKAARHOJ Device Core or other automation system over the network - ETH-SDI Link encodes tally data into the SDI video stream using the standard Blackmagic Design protocol. This allows connected cameras to respond with appropriate tally indicators (such as red for program or green for preview). While ETH-SDI Link includes a web interface, HTTP API, and optional Raw Panel protocol for direct control of tally and testing, these are secondary features. The intended use is conversion of tally and control signals from network data into SDI ancillary data.

Buttons at the bottom: Save, Save and Reboot, Full Screen.

4.4.1 Network Settings

The **Network** tab allows you to configure how your Link IO device connects to your local network. Some of these settings could also be configured via the SKAARHOJ Discovery application over USB. You can assign a static IP address, enable or disable DHCP, and adjust related options for reliable communication.

The screenshot shows the 'Network Settings' page with the following configuration:

- Device Description:** e.g. ETH-SDI Link 1 (Max 20 characters. Avoid symbols like quotes.)
- DHCP:** Automatic IP assignment (disabled)
- IP Address:** 192.168.11.123
- Subnet Mask:** 255.255.254.0
- Gateway:** 192.168.10.1
- Password:** Set new password (Up to 20 characters. Leave empty to keep current password.)
- Disable all mDNS advertisements:** (disabled) Stops advertising services (Raw Panel, HTTP, etc.) via mDNS.
- Enable Ethernet auto-negotiation:** (enabled) Let the PHY auto-negotiate speed/duplex (if supported).
- Disable Web UI authentication:** (disabled) Warning: Anyone on the network can access the UI when disabled.

Buttons at the bottom: Save, Save and Reboot

The following options are available:

- **Device Description:** Enter a custom name (up to 20 characters) for your device. This helps you identify it in SKAARHOJ Discovery or other network tools.
- **DHCP (Automatic IP Assignment):** When enabled, the device requests an IP address from your network's DHCP server (e.g., your router). Disable this option to set a fixed static IP address manually.
- **IP Address:** The unique network address of your device. If DHCP is disabled, enter a valid static IP address that matches your network range.
- **Subnet Mask:** Defines the network segment the device belongs to. For most local networks, this will be 255.255.255.0.

- **Gateway:** The IP address of your network's default gateway (typically your router). This setting is required if the device needs to communicate outside of the local subnet.
- **Password:** Allows you to change the device's web interface password. Leave this field blank to keep the current password. See below for a setting to disable password protection.

There are also several advanced options available in the Network Settings tab:

- **Disable all mDNS Advertisements:** Stops the device from broadcasting its presence on the network via mDNS (Bonjour/ZeroConf). Useful in large installations where reducing network traffic is important.
- **Enable Ethernet Auto-Negotiation:** When enabled, the device automatically negotiates the best possible speed and duplex mode with your network switch. Historically, this has not been enabled in SKAARHOJ devices, but it is now available for compatibility with modern network equipment.
- **Disable Web UI Authentication:** When enabled, anyone on the network can access the Web UI without logging in. **Use with caution**, as this disables password protection.

Once you have made the necessary changes, click **Save** to apply them, or **Save and Reboot** to restart the device with the new settings.

Notice

Save or Save and Reboot?

When you change settings in the Web UI, you can choose either **Save** or **Save and Reboot**:


- **Save:** Writes the new settings to the device's persistent memory. Some changes take effect immediately without requiring a reboot. This option is faster and suitable for parameters like labels or minor adjustments.
- **Save and Reboot:** Also writes the settings to persistent memory, but additionally restarts the device. A reboot is required for certain changes such as IP configuration, enabling or disabling network services, or changing communication ports. This option ensures that all changes are fully applied, but takes a little longer.

In general, the safe choice is **Save and Reboot**, but it is not necessary for every change you make in the Web UI.


4.5 Firmware Updates

4.5.1 New Firmware Releases

New firmware releases for the Link IO platform are announced through SKAARHOJ Discovery. When you open SKAARHOJ Discovery, it automatically checks for updates and notifies you if a new firmware version is available for your device. The application will then download the update and prompt you to install it when your device is connected via USB.

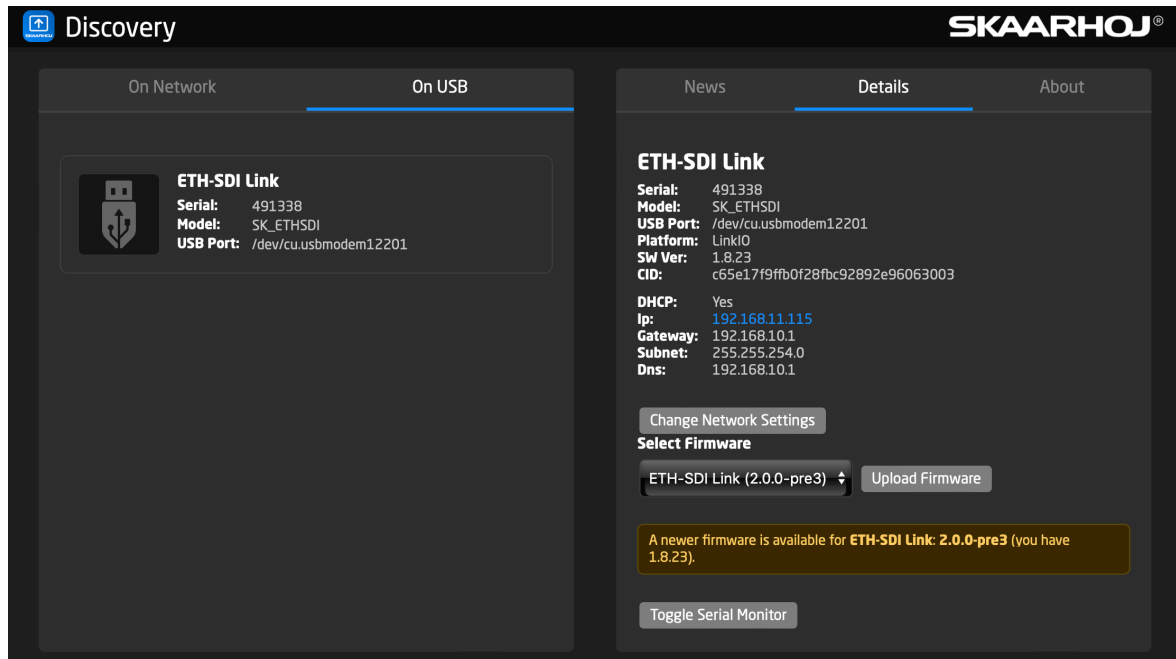

To install the update, simply click the Upload Firmware button. The new firmware will be transferred to your device.

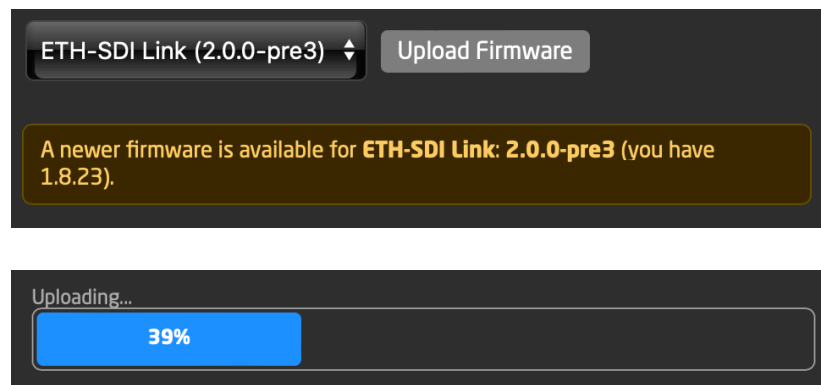

After the update process finishes, the device will reboot automatically. If it does not, you may need to power cycle it by unplugging and reconnecting the device.

Hint

Not Online all the time?

SKAARHOJ Discovery requires an internet connection to download firmware updates. You must therefore be online - at least temporarily - during the update process. For all other interactions with your device, whether over network or USB, an internet connection is not required.


If you see a green badge in the footer of the Web UI, it indicates that your computer running SKAARHOJ Discovery is online and connected to the SKAARHOJ servers.

Registered to: kasper@skaarhoj.com | Version: v1.0.0-pre5 | [Go Mobile](#) | [Expert](#) | [Online](#) | © 2025 SKAARHOJ ApS. All rights reserved.

4.5.2 Factory Reset

If you encounter issues with your device, a factory reset may be required. This restores the device to its original settings and erases all custom configurations. A factory reset can be performed in several ways:

- **From SKAARHOJ Discovery:** In the Details tab, click the Factory Reset button. It's shown if settings have become corrupted.
- **Using the Reset Button:** Hold down the Reset button on the device for 10 seconds. This resets all settings to defaults, including network configuration and any custom labels or parameters.
- **Via Serial Monitor:** Open the Serial Monitor in the Details tab of SKAARHOJ Discovery and type the command `_resetAll`. Be sure to close the Serial Monitor after performing the reset.

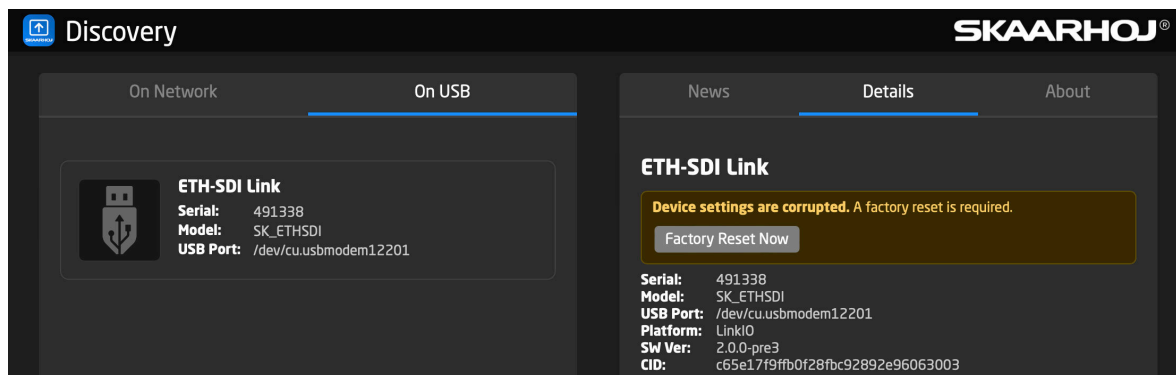

4.5.3 Wrong Firmware

If the wrong firmware has been uploaded to your Link IO device, this will be indicated in SKAARHOJ Discovery.

The screenshot shows the SKAARHOJ Discovery application interface. The top navigation bar includes 'Discovery' and the SKAARHOJ logo. Below the navigation, there are tabs for 'On Network' and 'On USB', with 'On USB' selected. A device card for 'Micro Fly' is displayed, showing its serial number (491338), model (SK_MICROFLY), and USB port (/dev/cu.usbmodem12201). To the right, a 'Details' panel shows the same information and a warning message: 'Firmware/device mismatch. The running firmware doesn't match the registered model. Open the serial monitor and type reset for details.' Below the warning, the device's hardware details are listed: Serial: 491338, Model: SK_MICROFLY, USB Port: /dev/cu.usbmodem12201, Platform: LinkIO, Sw Ver: 3.0.0-pre2, and CID: c65e17f9ffb0f28fbc92892e96063003.

In this case, first enable Expert Mode by clicking the link in the footer. Otherwise you cannot select other firmware types than the one currently installed.

Registered to: kasper@skaarhoj.com | Version: v1.0.0-pre5 | [Go Mobile](#) | [Expert](#) | [Online](#) | © 2025 SKAARHOJ ApS. All rights reserved.

Next, open the Serial Monitor and type `reset`, then press Enter. The device will reboot and display a message indicating the device type it is really registered as. Read the text carefully, as it will tell you which firmware type to select in the next step.


The screenshot shows the Serial Monitor interface. At the top, there is a 'Toggle Serial Monitor' button. The main area displays the following text:

```
Resetting...

*****
SKAARHOJ Device Booting
*****
Compiled: Aug 16 2025 16:35:20
Software Version: 3.0.0-pre2
Model: SK_MICROFLY
CID: c65e17f9ffb0f28fbc92892e96063003
WRONG FIRMWARE LOADED ONTO THIS DEVICE!
Device is registered as: SK_ETHSDI with serial 491338
This firmware is for: SK_MICROFLY
```

At the bottom of the interface, there is a text input field containing the word 'reset'.


From the list of available firmware in SKAARHOJ Discovery, select the correct firmware for your device and click the Upload Firmware button. The device will reboot and be ready for use with the correct firmware installed.

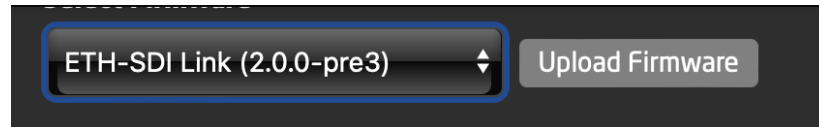


4.5.4 Upgrading to the Link IO Platform

If you wish to upgrade an eligible SKAARHOJ UniSketch or Link IO device to the Link IO platform, follow the steps below. The process requires registering the device on SKAARHOJ's servers, so you must be online during the upgrade. Registration is pending approval by SKAARHOJ and may be free of charge or require a fee, depending on the device and upgrade path.


When you first connect your device, it will appear as Unknown:

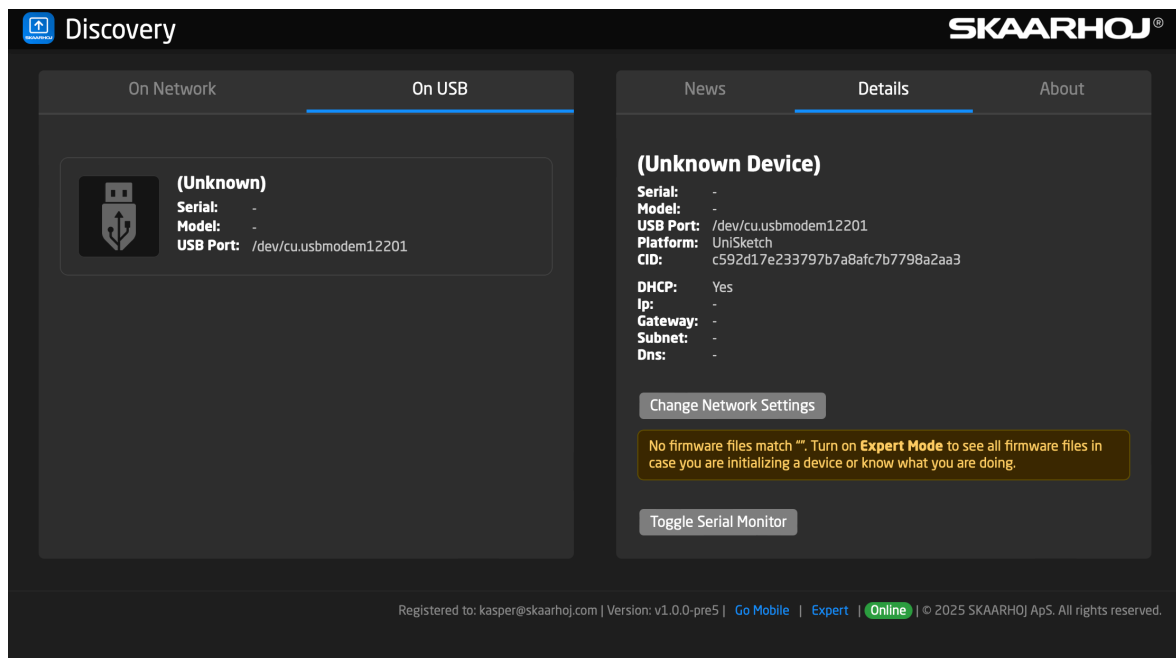


Enable Expert Mode by clicking the link in the footer. This will allow you to select any Link IO firmware type.

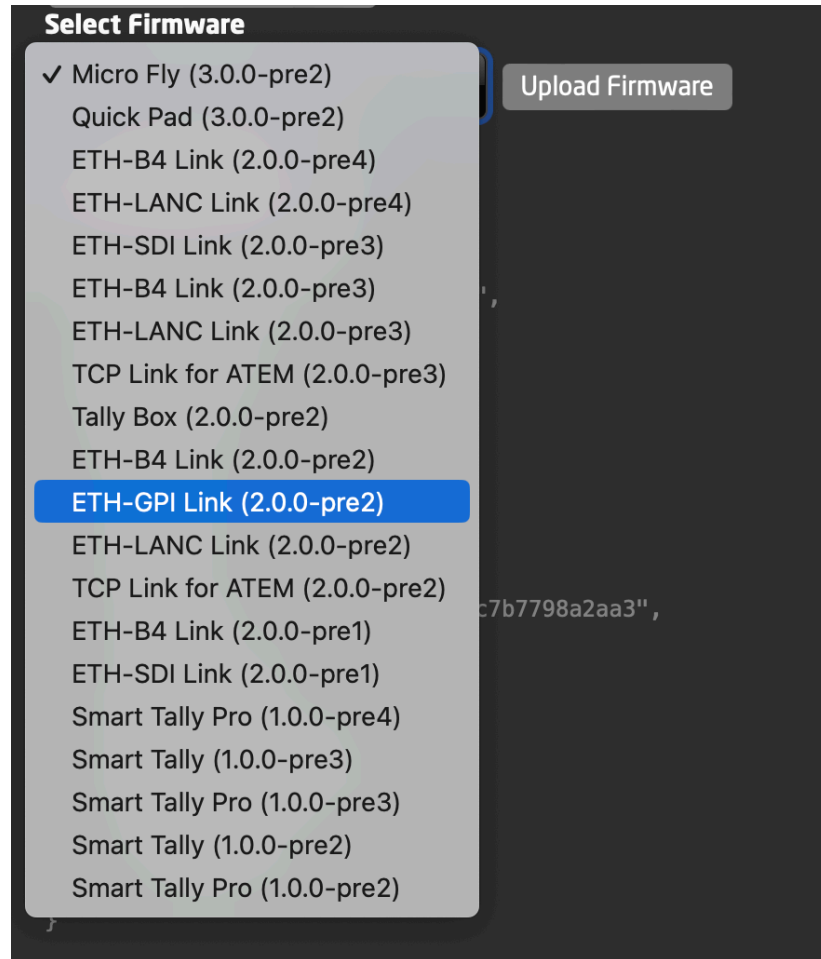

Carefully select the correct firmware type for your device. If you are unsure, contact SKAARHOJ Support for assistance. When you are ready, click the Upload Firmware button.

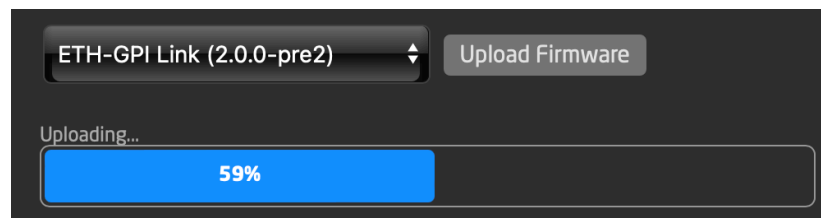

The device will reboot and display a message indicating that it is pending registration. Read the message carefully, and if you agree with its contents, enter the device's serial number and click the Register button.

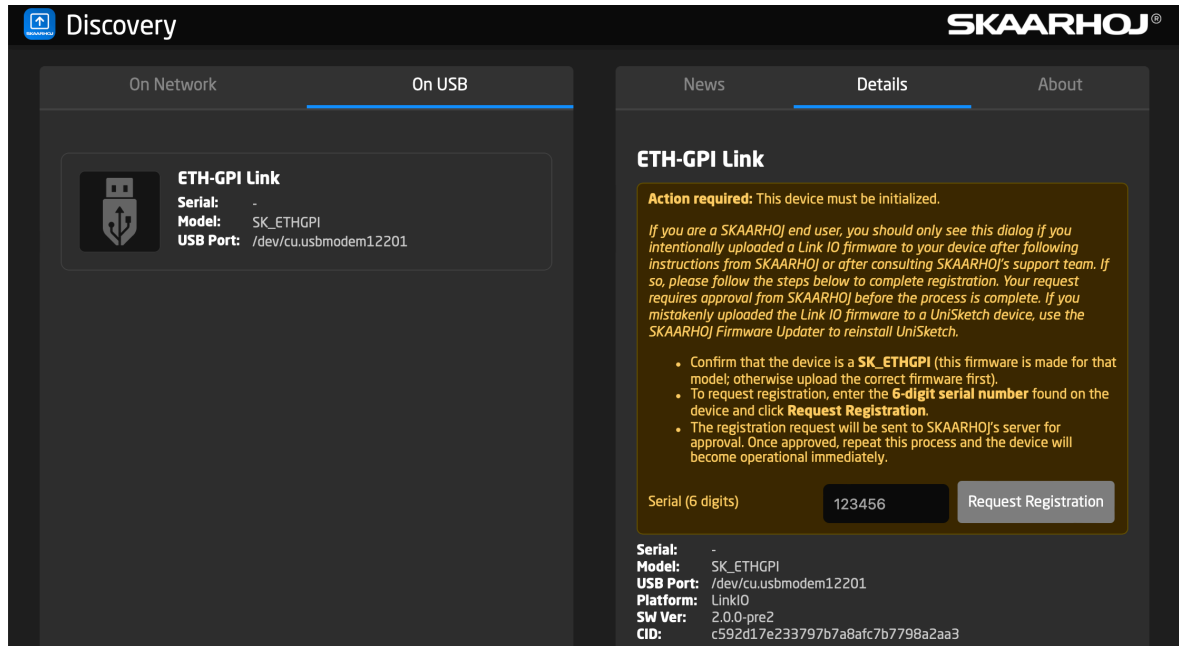


You will then see a confirmation that the device is pending registration. This step must be coordinated with SKAARHOJ Support, so please contact them to complete the approval process.

Registration pending: Registration request received and pending approval.


Once the device has been approved, return to the Web UI, enter the serial number again, and click the Register button. The device will then be fully registered and ready for use with the Link IO platform.

Registration approved: Registration approved.

The device will reboot and may appear as Unknown for a short time:

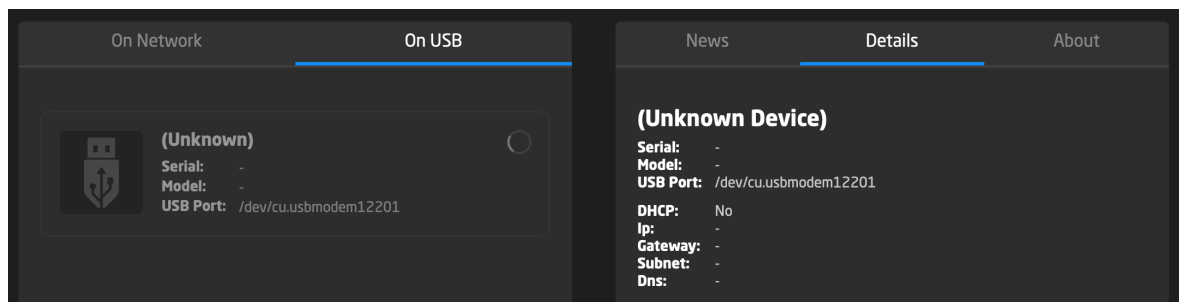

It will then update and show up as the correct device type:

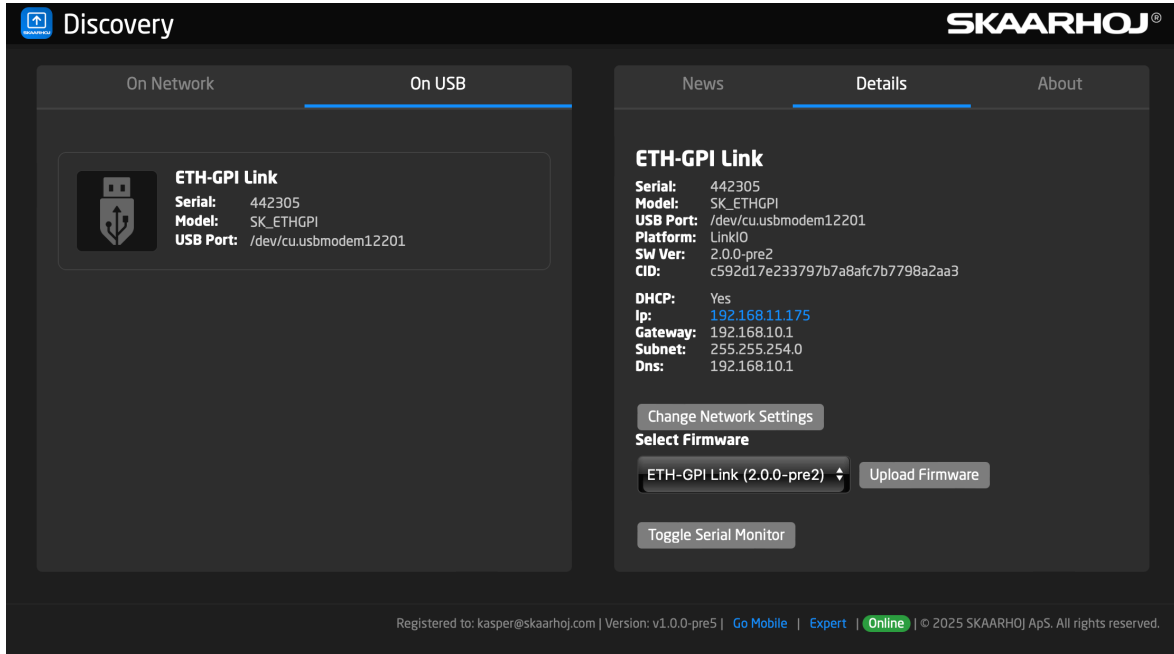

The screenshot displays the SKAARHOJ Discovery application interface. The top navigation bar includes a home icon, the word "Discovery", and the SKAARHOJ logo. Below this, there are two main sections: "On Network" and "On USB". The "On USB" section is active, showing a list of discovered devices. One device, "ETH-GPI Link", is highlighted with a USB icon and the following details: Serial: 442305, Model: SK_ETHGPI, and USB Port: /dev/cu.usbmodem12201. To the right, a "Details" panel for the selected device shows: Serial: 442305, Model: SK_ETHGPI, USB Port: /dev/cu.usbmodem12201, Platform: LinkIO, Sw Ver: 2.0.0-pre2, CID: c592d17e233797b7a8afc7b7798a2aa3, DHCP: Yes, Ip: 192.168.11.175, Gateway: 192.168.10.1, Subnet: 255.255.254.0, and Dns: 192.168.10.1. Below the details are buttons for "Change Network Settings", "Select Firmware" (with a dropdown menu showing "ETH-GPI Link (2.0.0-pre2)"), "Upload Firmware", and "Toggle Serial Monitor". At the bottom, a footer contains registration information: "Registered to: kasper@skaarhoj.com | Version: v1.0.0-pre5 | Go Mobile | Expert | Online | © 2025 SKAARHOJ ApS. All rights reserved."

Hint

Internet Connection Required

The upgrade and registration process requires an active internet connection:


- **Stay online during registration:** Your computer must connect to SKAARHOJ's servers to complete the registration and approval process.
- **Approval is handled remotely:** Registration will remain pending until SKAARHOJ Support approves the request.
- **Offline use afterwards:** Once the upgrade and registration are complete, the device can be used fully offline on your local network.

Make sure you are connected to the internet until the registration process has been successfully completed.

5 ETH-GPI Link Dual Functionality

The ETH-GPI Link Dual provides a bridge between traditional GPI (General Purpose Interface) signals and IP-based control. It can be used in a variety of broadcast control setups, either as part of a SKAARHOJ Blue Pill based system or through standard protocols such as Raw Panel Protocol, TSL, or HTTP. This makes it possible to integrate physical I/O with different devices and workflows in a consistent way.

The configuration of the ETH-GPI Link Dual is divided into several tabs in the web interface. Each tab corresponds to a specific integration method or function: Raw Panel, TSL, HTTP, Link, and Control. The following sections describe each of these tabs in detail, explaining the available settings and how they affect device behavior.

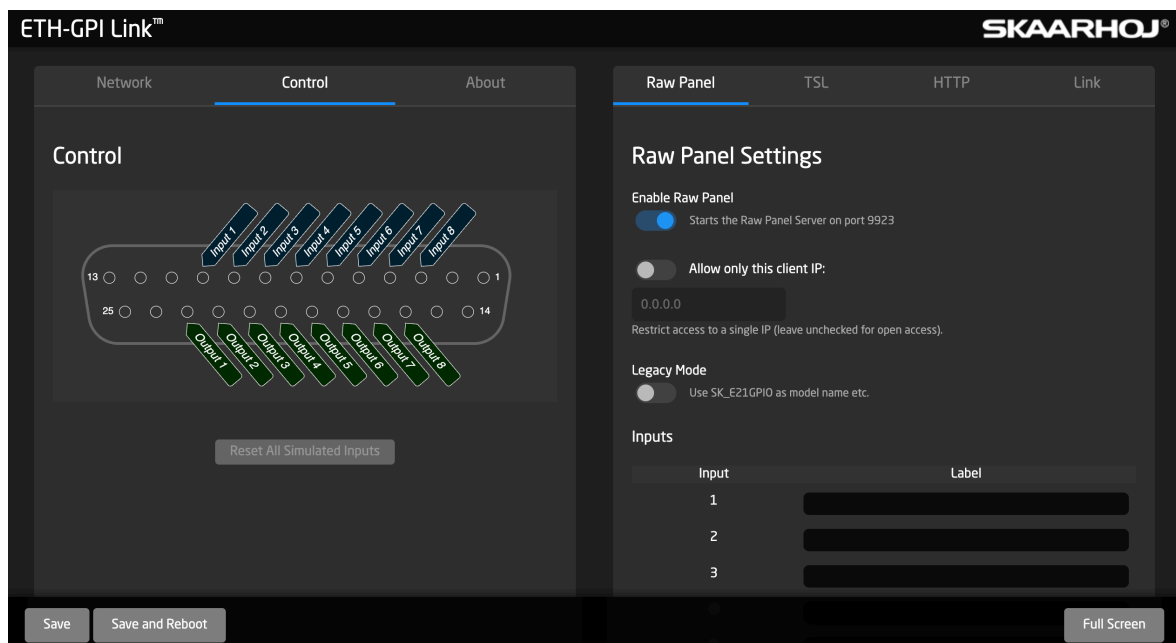


5.1 Raw Panel Tab

The **Raw Panel** tab is where you configure the primary way the ETH-GPI Link Dual integrates with SKAARHOJ's infrastructure, including Reactor on Blue Pill platform products. From Reactor, the ETH-GPI Link Dual can be added as a panel and wired up to various supported devices.

- **Enable Raw Panel:** Starts the Raw Panel Server on TCP port 9923, allowing the device to communicate with Reactor and other SKAARHOJ tools. Up to 3 clients can connect simultaneously. An mDNS service is advertised for discovery.
- **Allow Only This Client IP:** Restrict Raw Panel access to a single IP. If unchecked, any client may connect.

- **Legacy Mode:** When enabled, the device will identify itself as `SK_E21GPIO`, its legacy model name. Useful for backward compatibility with older systems.
- **Input/Output Labels:** Each of the 8 inputs and 8 outputs can be assigned custom labels for easier identification.
- **Help Section:** At the bottom of the tab, a help area describes how the Raw Panel protocol works and links to the full documentation.

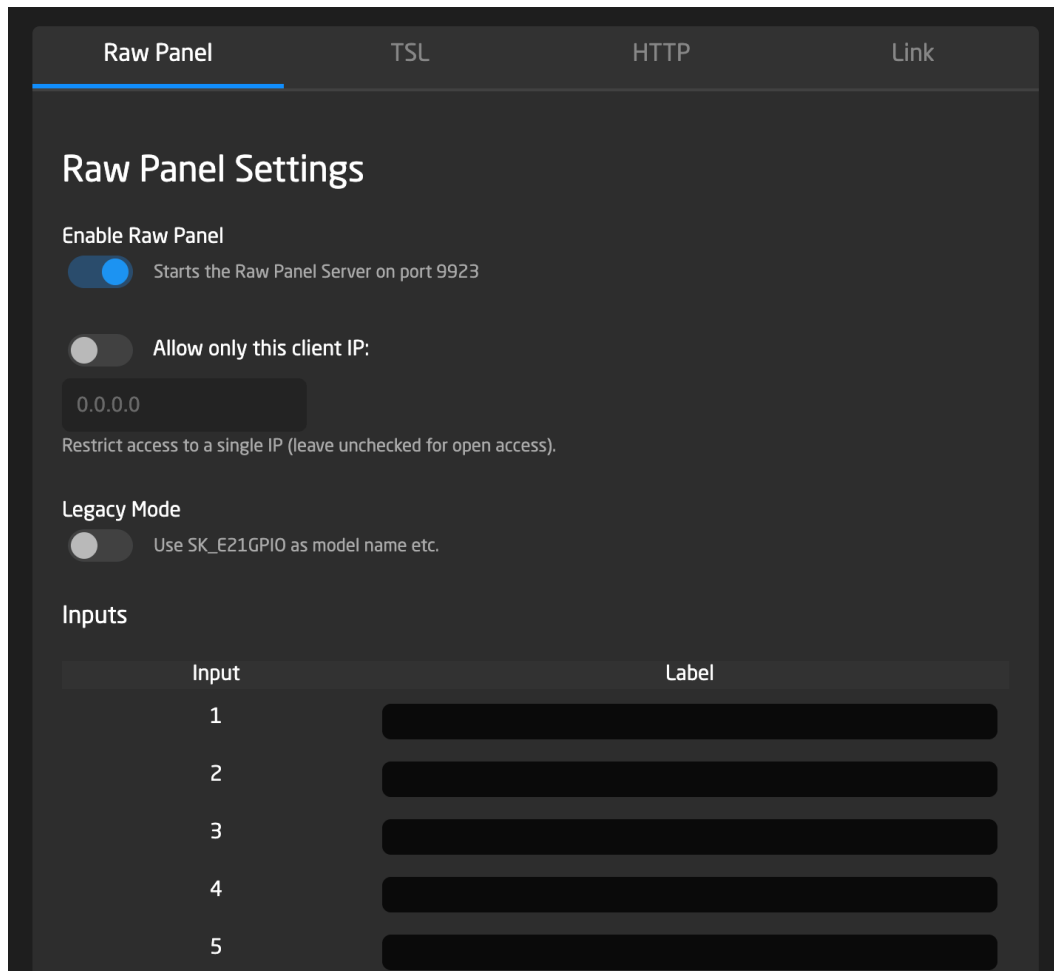

Raw Panel Protocol Integration

Each I/O maps to an HWC ID. Inputs send `Down/Up` messages on state changes, and outputs are controlled via commands.

Connection Details:

- Port: 9923 (TCP)
- Clients: Up to 3 simultaneously

- Discovery: Advertised via mDNS

Command Examples:

Command	Description
HWC#1=32	Turn Output 1 ON
Clear	Clear all relays
state	Request current device state

Behavior:

- Inputs report as HWC#<id>=Down or HWC#<id>=Up.
- First 4 input pins can also act as analog inputs, reporting values Abs:NNN scaled to 0–1000.
- Heartbeat support available via HeartBeatTimer command.

Notice

Legacy Mode Use Case

Only enable Legacy Mode if your integration specifically requires the older model name SK_E21GPIO. For new deployments, leave it disabled.

5.2 TSL Tab

The **TSL** tab configures how the ETH-GPI Link Dual interacts with TSL protocols. This is especially useful for tally connected to outputs.

- **Enable TSL:** Toggle to activate TSL output control.
- **UDP Listening Port:** Configure the port where the ETH-GPI Link Dual listens for TSL traffic (default: 7001).
- **Outputs Table:** Each output can be mapped to a TSL protocol and trigger relays based on tally events.
 - **Mode:** Select between TSL 3.1 and TSL 5.0.
 - **TSL 3.1:** Match by Address (0–126) and Bit (0–3).
 - **TSL 5.0:** Match by Screen, Index, and Bit with tally color mapping.

Raw Panel **TSL** HTTP Link

TSL Settings

Enable TSL
 Activate TSL for output control

UPD Listening Port
7001
UPD port for TSL traffic, either sent directly or broadcast to the subnet.

Outputs

Output	Mode	Config		
1	TSL 3.1	Addr	Bit	
		2	2	
2	TSL 5.0	Screen	Index	Bit
		123	145	Text/Red
3	Off			
4	Off			
5	Off			
6	Off			
7	Off			
8	Off			

Example Scenarios:

- TSL v3.1: If Address 2 sets Bit 2 to ON, Relay #1 activates.
- TSL v5.0: If Screen 123, Index 145 receives a red text tally, Relay #2 activates.

Hint

Note on UDP Traffic

TSL messages are received over UDP and may be broadcast to the subnet. Ensure your network allows UDP traffic on the configured port.

5.3 HTTP Tab

The **HTTP** tab enables a simple REST-style API for automation and testing. This is required for the **Control Tab** to work in the Web UI.

- **Enable HTTP API:** Activates the HTTP interface.
- **Base URL Format:**

```
http://<device_ip>/io/<type>/<index>/<action>
```

- **Supported Types:** `in` (inputs) and `out` (outputs).
- **Supported Actions:**

Type	Action	Description
out	set	Sets output ON
out	clear	Sets output OFF
out	toggle	Toggles output state
out	(none)	Reads output state
in	set	Simulates input ON (Down)
in	clear	Simulates input OFF (Up)
in	toggle	Toggles simulated input
in	reset	Restores input to hardware state
in	resetAll	Restores all inputs to hardware
in	(none)	Reads input state

Example Requests:

```
Set Output #3 HIGH: http://<ip>/io/out/3/set
Toggle Output #5:  http://<ip>/io/out/5/toggle
Read Input #2:     http://<ip>/io/in/2
Reset All Inputs:  http://<ip>/io/in/resetAll
```

Responses: JSON format:

```
{
  "type": "in",
  "index": 4,
  "state": true
}
```

Caution


Automation Security

Credentials can be embedded in URLs as `http://admin:<password>@<ip>/...`. This method is insecure on shared networks - use only in trusted environments.

5.4 Link Tab

The **Link** tab allows multiple units to be connected, expanding I/O capabilities.

- **Enable Linking:** Activates linking mode.
- **IP Address of Linked Device:** Enter the IP of another ETH-GPI Link Dual or a Tally Box to synchronize I/O automatically.

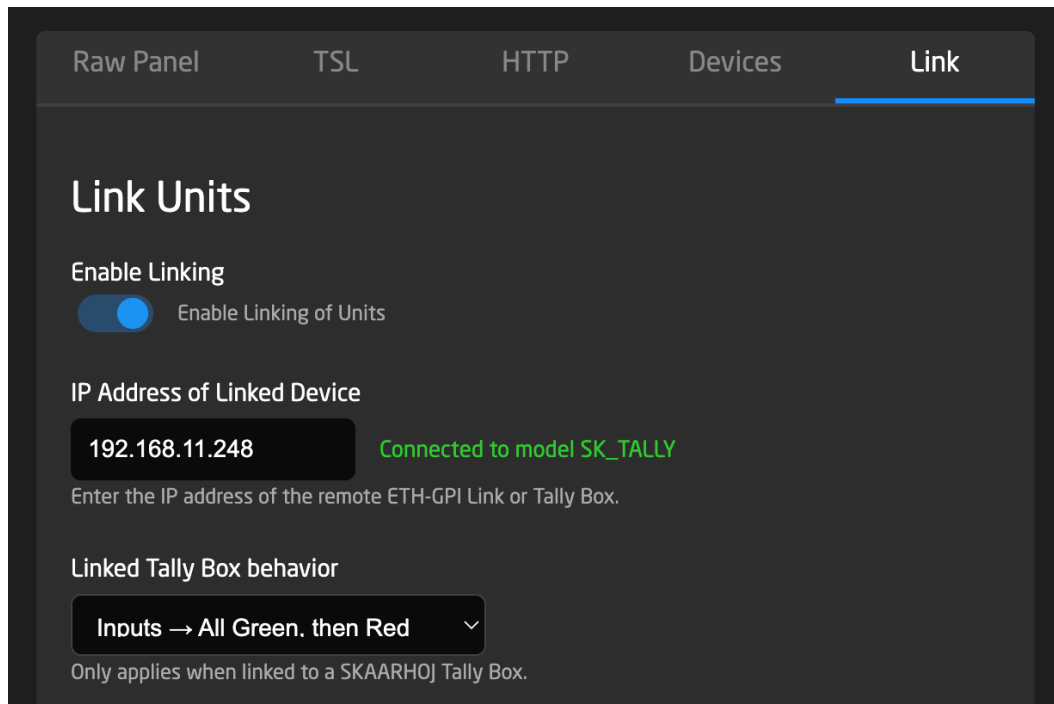

How Linking Works:

- Inputs on this device can trigger outputs on the linked device.
- Outputs on this device can be controlled by the linked unit's inputs.
- Compatible devices: ETH-GPI Link and SKAARHOJ Tally Boxes.

Linked Tally Box Behavior: When linking to a SKAARHOJ Tally Box, a dropdown lets you select how tallies map to ETH-GPI Link inputs:


- **Inputs to Alternating Red/Green**
- **Inputs to All Red, then Green**
- **Inputs to All Green, then Red**

Notice**Important Notes on Linking**

- All linked units must be on the same subnet.
- Remote device should be in Raw Panel mode but not have linking enabled.
- Linking is one-to-one; ensure correct IP configuration.

5.5 Devices Tab

The **Devices** tab configures direct connections to supported switchers such as ATEM and vMix. This allows ETH-GPI inputs to trigger routing actions and outputs to follow program/preview tallies.

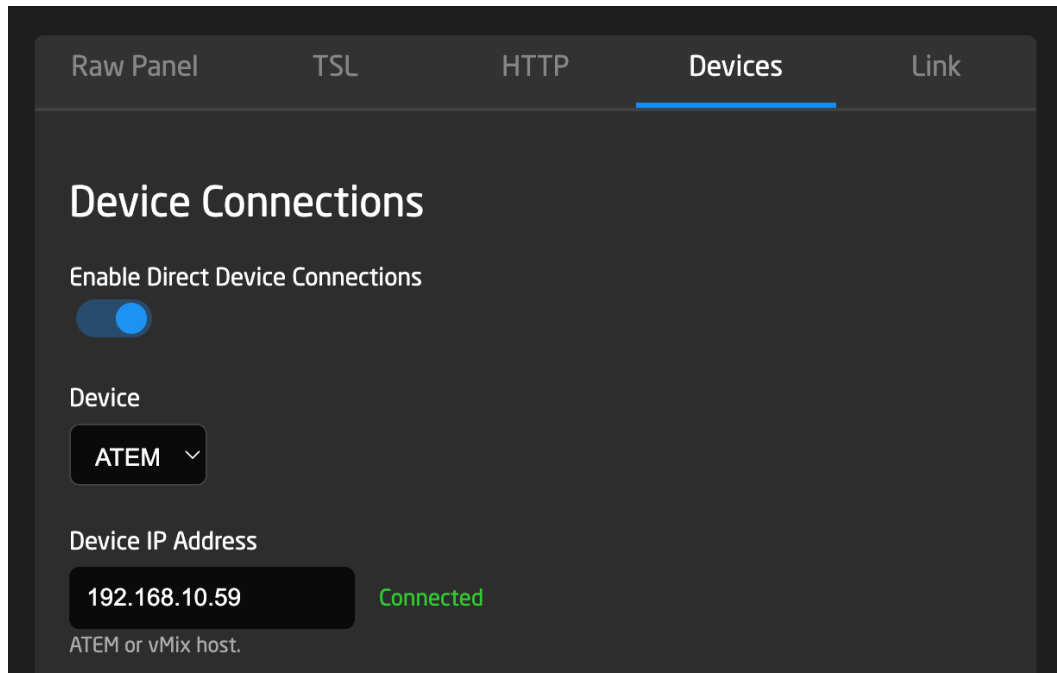

Outputs Mapping

Each row in the outputs table maps a switcher bus + source to a physical relay output. On ATEM, for example:

- **Green Tally** - Relay active if source is on Preview
- **Red Tally** - Relay active if source is on Program
- **Aux N** - Relay active if source is routed to the AUX

Outputs

Output	Bus	Camera
1	Red Tally	Camera 1
2	Red Tally	Camera 2
3	Red Tally	Camera 3
4	Green Tally	Camera 1
5	Green Tally	Camera 2
6	Green Tally	Camera 3
7	Aux 1	Camera 1
8	Aux 1	Camera 2

Inputs Mapping

Each row in the inputs table assigns a routing action when a GPI input is pressed (shorted to GND). Inputs can be configured to cut program/preview buses or assign sources to AUX outputs.

Inputs

Input	Bus	Camera
1	Aux 1	Camera 1
2	Aux 1	Camera 2
3	Aux 1	Camera 3
4	Program ME1	Camera 1
5	Program ME1	Camera 2

Hold Groups

When **Hold Group** is enabled, multiple inputs targeting the same destination act like a stack. Pressing an input pushes its source, releasing pops back to the previous one, restoring the baseline when all are released.




Hold Group (stacked routing)

Inputs targeting the same destination act like a stack: pressing routes the new source, releasing restores the previous one. When all are released, the original baseline source is restored.

5.6 Control Tab

The **Control** tab provides a graphical interface for simulating and testing I/O.

- **Connector Diagram:** Shows the DB25 pinout, mapping Inputs 1–8 and Outputs 1–8.
- **Simulate Inputs:** Click an input to simulate grounding it. A Raw Panel command is sent (Down/Up state).
- **Simulate Outputs:** Click an output to activate its relay, confirming output control in real time.
- **Full Screen Mode:** Button in lower-right corner expands the view for easier testing.

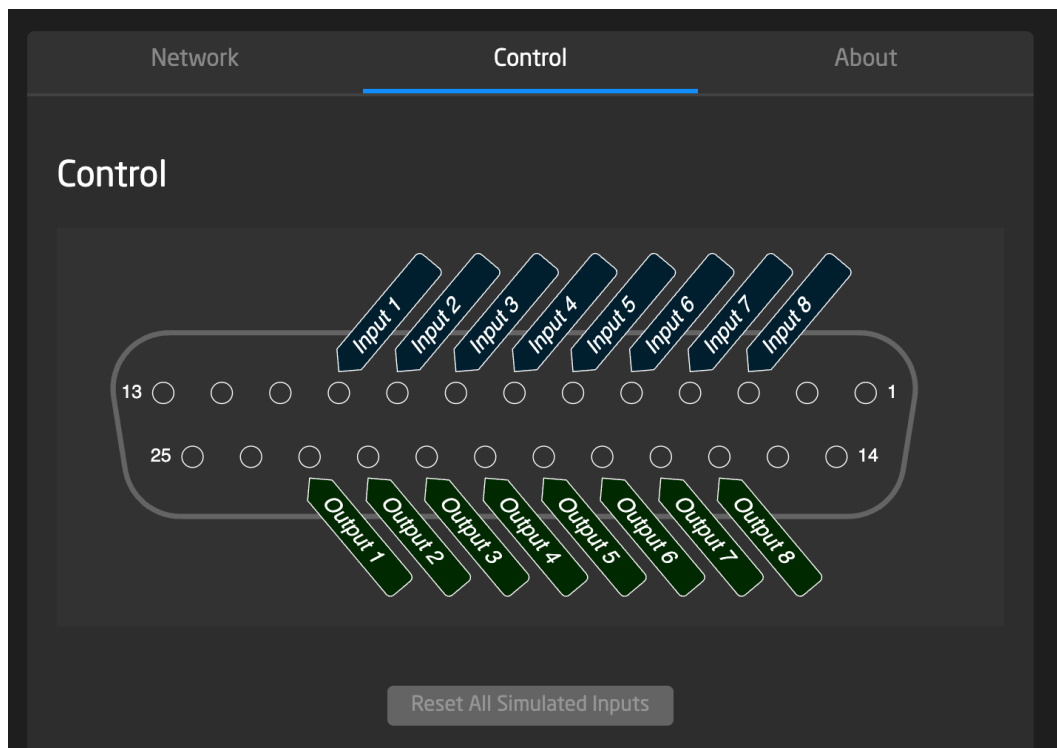

5.7 Dual Version

The ETH-GPI Link Dual is also available in a **Dual** model with two DB25 connectors, providing 16 inputs and 16 outputs. This version is particularly well-suited for linking to a SKAARHOJ Tally Box with two rows of 8 lamps each, matching perfectly to the dual connector layout.

The screenshot displays the web interface for the ETH-GPI Link Dual. The interface is divided into two main sections: Control and Raw Panel Settings.

Control Panel: This section shows two DB25 connector layouts. Each layout has 13 pins on the top row and 25 pins on the bottom row. The top row pins are labeled Input 1 through Input 8. The bottom row pins are labeled Output 1 through Output 8. A red button labeled "Reset All Simulated Inputs" is located at the bottom of the control panel.

Raw Panel Settings: This section is titled "Raw Panel Settings" and includes the following options:

- Enable Raw Panel:** A toggle switch that is currently turned on. Below it, the text reads "Starts the Raw Panel Server on port 9923".
- Allow only this client IP:** A toggle switch that is currently turned off. Below it, the text reads "Restrict access to a single IP (leave unchecked for open access)". A text input field contains "0.0.0.0".
- Legacy Mode:** A toggle switch that is currently turned off. Below it, the text reads "Use SK_E21GPIO as model name etc."
- Outputs:** A table with two columns: "Output" and "Label". The "Output" column lists numbers 1 through 10. The "Label" column contains 10 empty text input fields.

At the bottom of the interface, there are three buttons: "Save", "Save and Reboot", and "Full Screen".

6 Service

6.1 Troubleshooting

For troubleshooting tips, please refer to our online Wiki:

<https://wiki.skaarhoj.com/books/blue-pill-reactor/chapter/troubleshooting>

6.2 Cleaning

Proper cleaning and maintenance of your ETH-GPI Link Dual are critical to ensuring its durability and optimal performance. Regular cleaning, when done with care and the right materials, will help maintain the device in excellent working condition. On the other hand, improper cleaning techniques or the use of harsh chemicals can lead to permanent damage to surfaces, connectors, and labels. To prevent wear and tear, it is important to adhere to the cleaning recommendations outlined in this section.

Notice

Proper Cleaning of ETH-GPI Link Dual

To avoid surface damage, follow these guidelines:

- **Disconnect all accessories and cables** before cleaning.
- **Only use the recommended cleaning agents** listed in this section.
- **Avoid harsh chemicals** like Methanol, Acetone, Benzene, or acids. These substances may damage labels, paint, and polished surfaces.
- **Keep connectors dry** —do not moisten connectors or expose them to cleaning liquids.
- **Avoid touching connector pins** directly while cleaning.
- **Air-blow dust from connectors** before wiping them. Use deionized air if static charge is present.
- **Do not use compressed air** on the housing, as it can push dust into the device.

Recommended Cleaning Agents:

- Water
- Glass Cleaner
- Isopropyl Alcohol

To maintain the longevity and optimal performance of your ETH-GPI Link Dual, it is essential to follow proper cleaning guidelines. Different areas of the device require specific cleaning methods to avoid

damage to sensitive components. The following table outlines the recommended cleaning procedures for key areas of the device.

Area	Recommended Cleaning Procedure
Housing	Wipe the housing and external accessories with a soft, lint-free cloth and a mild cleaner like water or glass cleaner. When necessary, use isopropyl alcohol to remove tough residues, such as adhesive or dirt buildup.
Narrow spaces and gaps	Use a manual air blower or a soft brush to gently remove dust from gaps and tight spaces. For delicate areas, cotton swabs may also be used.

Table 2: Proper cleaning methods for ETH-GPI Link Dual

By following these cleaning instructions, you can avoid damaging your device and its components. Routine maintenance will keep your ETH-GPI Link Dual in top condition and reduce the likelihood of damage that could lead to costly repairs or replacements.

6.3 Repair

In addition to proper cleaning, it is also important to be cautious when it comes to repairs. Performing repairs without the necessary expertise can result in personal injury and may further damage the device.

Warning

Repairs by Untrained Personnel

Attempting to repair the device without proper training can lead to injury and product damage:

- **Only perform maintenance tasks** described in this manual.
- **Do not attempt repairs yourself** —all repairs must be carried out by authorized SKAARHOJ service partners.
- **Warranty is void** if unauthorized repairs are attempted.

Repairs and maintenance should always be conducted by professionals trained to handle the ETH-GPI Link Dual. If you encounter any issues requiring repair, we highly recommend contacting SKAARHOJ's authorized service partners. Unauthorized repairs may void the warranty, cause further damage, and pose significant safety risks.

To keep your ETH-GPI Link Dual functioning optimally, always refer to this manual for proper cleaning and repair procedures. For any work beyond the scope of this manual, please contact SKAARHOJ Support team for assistance.

6.4 Disposal


Notice

Disposal of the Product

You can return the product at your own expense to the manufacturer, SKAARHOJ ApS, for disposal. Always follow local guidelines and laws for proper disposal.

Proper disposal of electronic equipment is essential to reduce environmental impact and ensure that hazardous materials are handled safely. Different countries may have specific laws and guidelines regarding electronic waste disposal. It is important to familiarize yourself with these rules to ensure compliance and minimize risks to both health and the environment.

When disposing of third-party accessories, always consult the instructions provided by the relevant manufacturers to ensure safe and compliant disposal practices.



This product falls within the scope of Directive 2012/19 / EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of June 4, 2012 on waste electrical and electronic equipment (WEEE II).

Accordingly, this product must not be disposed of with household waste. Always adhere to country-specific disposal rules and ensure proper recycling or disposal through authorized facilities.

In addition to the general guidelines provided above, the product must always be disposed of in accordance with local electronic waste regulations. The WEEE Directive sets the framework for the handling of waste electrical and electronic equipment across EU member states. It ensures that electronics are collected and treated separately from household waste to minimize environmental harm.

6.5 Transportation and Storage

Notice

Proper Handling of ETH-GPI Link Dual

To avoid the risk of product damage:

- Follow the recommended environmental conditions at all times.
- Use an appropriate case for transporting the product and its accessories.
- Adhere to the transport and storage guidelines outlined in this section.

Ensuring proper transportation and storage of your ETH-GPI Link Dual is critical to maintaining its performance and longevity. Mishandling the device or its accessories can lead to damage. Please follow these guidelines to protect your equipment during transportation and storage.

Transportation Guidelines:

- Detach all accessories from the product before transport.
- Always transport the product in a protective case designed for its dimensions.
- Avoid exposing the product to strong shocks or impacts during transport.
- Keep the product within the recommended temperature range.

Storage Guidelines:

- Remove all accessories before storing.
- Disconnect all cables and power sources from the product.
- Store the product in a protective case.
- Keep the product within the recommended temperature range.
- Avoid storing the product in environments exposed to extreme temperatures, direct sunlight, high humidity, excessive vibration, dust, or strong magnetic fields.

6.6 SKAARHOJ Service Contacts

For any inquiries, technical support, or service requests regarding your ETH-GPI Link Dual, please reach out to our support team. Our dedicated professionals are ready to assist you with troubleshooting, repairs, and general product information. You can find the contact details for SKAARHOJ below.

SKAARHOJ ApS

Rosenkaeret 11C
DK-2860 Soeborg
Denmark
Email: support@skaarhoj.com
Website: www.skaarhoj.com

SKAARHOJ Inc

2600 W Olive Avenue Suite 500
Burbank, CA 91505
USA
Email: support@skaarhoj.com
Website: www.skaarhoj.com

7 Notes
