

Panasonic®


Operating Instructions

Memory Card Portable Recorder

Model No. AG-HPG10P

Model No. AG-HPG10E

P2HD

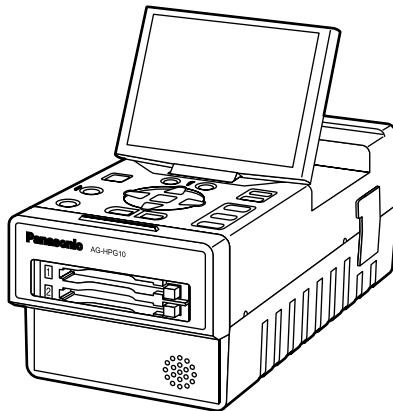

DVCPRO HD

DVCPRO 50

DVCPRO

DV



FRANÇAIS

Pour des explications en français, veuillez vous reporter au CD-ROM fourni.

Before operating this product, please read the instructions carefully and save this manual for future use.

Read this first!

 indicates safety information.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, KEEP THIS EQUIPMENT AWAY FROM ALL LIQUIDS. USE AND STORE ONLY IN LOCATIONS WHICH ARE NOT EXPOSED TO THE RISK OF DRIPPING OR SPLASHING LIQUIDS, AND DO NOT PLACE ANY LIQUID CONTAINERS ON TOP OF THE EQUIPMENT.

CAUTION:

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

THE AC RECEPTACLE (MAINS SOCKET OUTLET) SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.

TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER CORD PLUG FROM THE AC RECEPTACLE.

CAUTION:

Danger of explosion or fire if battery is mistreated.

For Battery Pack

- Replace only with same or specified type.
- Do not disassemble or dispose of in fire.
- Do not store in temperatures over 60°C (140°F).
- Use specified charger.

Memory Card Portable Recorder

The rating plate is on the underside of the unit.

AC Adapter

The rating plate is on the underside of the AC Adapter.

Disconnect the AC mains plug from the AC mains socket when not in use.

CAUTION:

In order to maintain adequate ventilation, do not install or place this unit in a bookcase, built-in cabinet or any other confined space. To prevent risk of electric shock or fire hazard due to overheating, ensure that curtains and any other materials do not obstruct the ventilation.

Operating precaution

Operation near any appliance which generates strong magnetic fields may give rise to noise in the video and audio signals. If this should be the case, deal with the situation by, for instance, moving the source of the magnetic fields away from the unit before operation.

IMPORTANT

"Unauthorized recording of copyrighted television programs, video tapes and other materials may infringe the right of copyright owners and be contrary to copyright laws."

FCC NOTICE (USA)

Declaration of Conformity

Model Number: AG-HPG10P

Trade Name: PANASONIC

Responsible Party: Panasonic Corporation of North America One Panasonic Way, Secaucus, NJ 07094

Support contact: Panasonic Broadcast & Television Systems Company 1-800-524-1448

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To assure continued compliance, follow the attached installation instructions and do not make any unauthorized modifications.

CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user may find the booklet "Something About Interference" available from FCC local regional offices helpful.

FCC Warning:

To assure continued FCC emission limit compliance, the user must use only shielded interface cables when connecting to host computer or peripheral devices. Also, any unauthorized changes or modifications to this equipment could void the user's authority to operate this device.

NOTIFICATION (Canada)

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For USA and Canada



A lithium ion/polymer battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

For USA-California Only

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material – special handling may apply.

See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Read this first! (continued)

For U.K.

 indicates safety information.


Caution for AC Mains Lead

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.


This product is equipped with 2 types of AC mains cable. One is for continental Europe, etc. and the other one is only for U.K.

Appropriate mains cable must be used in each local area, since the other type of mains cable is not suitable.

FOR CONTINENTAL EUROPE, ETC.
Not to be used in the U.K.

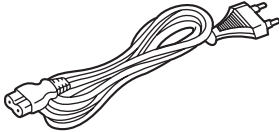

FOR U.K. ONLY

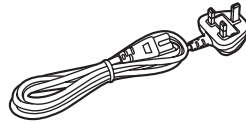



FOR U.K. ONLY

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5 amp fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.


If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.


A replacement fuse cover can be purchased from your local Panasonic Dealer.

How to replace the fuse

1. Open the fuse compartment with a screwdriver.

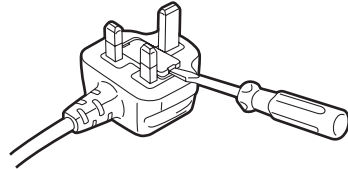

2. Replace the fuse

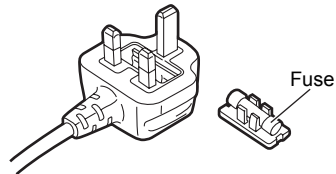

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Recommendation for Use of Genuine Panasonic Battery Pack (Rechargeable Battery)

Thank you for using a Panasonic product.

It has been our policy to recommend that the genuine Panasonic battery pack be used for any Panasonic product that uses a battery pack, including digital cameras. It has, however, been found that imitation battery packs that look very similar to the genuine Panasonic battery pack are marketed in some markets.

Some of these imitation battery packs are not equipped with any protective devices that meet given quality standards for permitting use at high power outputs and for long hours.

If any of these battery packs of inferior quality is used, it could lead to an accident or failure involving firing or explosion.

To ensure that our products are used in utmost safety, we once again remind you that we recommend the use of a genuine Panasonic battery pack for any Panasonic product that is to use a battery pack. The genuine Panasonic battery packs are sold under our stringent quality control.

Please be advised that we are not liable for any accident or failure occurring as a result of use of an imitation battery pack.

We appreciate your kind understanding and cooperation in this regard.

For Europe

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority

for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Attention/Attentie


- Batteries are used for the main power source and memory back-up in the product. At the end of their useful life, you should not throw them away. Instead, hand them in as small chemical waste.
- Voor de primaire voeding en het reservegeheugen van het apparaat wordt gebruikgemaakt van een batterij. Wanneer de batterij is uitgeput, mag u deze niet gewoon weggooien, maar dient u deze als klein chemisch afval weg te doen.



To remove the battery

Main Power Battery

Remove the battery while pressing the battery eject button.

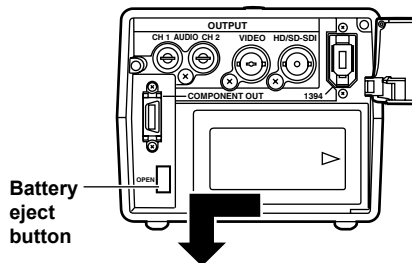

Software information for this product

1. Customer advisory: This product includes software licensed under the GNU General Public License (GPL) and GNU Lesser General Public License (LGPL); customers have the right to download, modify, and redistribute source code for this software. Descriptions of the GPL and LGPL are stored on the installation CD included with this camera-recorder. See the folder named \LDOC. (The description is the original (written in English).) To download the relevant source code, visit <https://eww.pavc.panasonic.co.jp/pro-av/> Please note that we cannot answer any questions you may have about the content, etc. of any source code you may obtain from the above Web site.
2. This product includes software licensed under the MIT License. A description of the MIT is stored on the installation CD included with this portable recorder. See the folder named \LDOC. (The description is the original (written in English).)

- SD logo is a trademark.

All other explanations, company names, and product names are the registered trademarks of the respective companies.

Contents

Read this first!	2
------------------------	---

Introduction

IMPORTANT SAFETY INSTRUCTIONS	5
Recommendation for Use of Genuine Panasonic Battery Pack (Rechargeable Battery)	6
Software information for this product	7
How to use the unit	10
About this manual	12
Before use	12
Accessories	13

Name of the parts

Name of the parts	14
Operation area	14
Mechanism area and input/output connector area	15

Preparations

Charging the battery	16
Charging	16
Installing and removing the power supply	17
Installing and removing the battery	17
Connecting and disconnecting the power cable	17
Basic operations	18
Turning the power on and off	18
Using the LCD monitor	18
Menu operations	19
Operation modes	20
LCD monitor settings	22
Setting the calendar	23
P2 cards	24
Inserting P2 cards	24
P2 card access LED and P2 card status	24
Formatting P2 cards	25
P2 card protection	25
Ejecting P2 cards	26
P2 card recording durations	27
Other	27
Using the USER buttons	27
Charging the internal battery	27
Using SD/SDHC memory cards	28
Inserting/ejecting SD memory cards	28
Formatting SD memory cards	28
Precautions for using SD memory cards	28
Saving USER files on SD memory cards ...	29

Playback

Thumbnail display	30
Playback formats	30
Switching playback formats	30
Names and functions of thumbnail display screen parts	30
Changing the displays on the thumbnail display screen	33
Setting the items to be displayed	34
Clip management	35
Selecting clips	35
Deleting clips	35
Repairing and connecting clips	36
Copying clips	37
Displaying the clip information	38
Editing the clip information	40
Inserting shot marks into clips	41
Displaying the P2 card status	41
Displaying the SD memory card information ...	43
Clip playback	44
Playing back clips	44
Variable-speed searches	45
Clip forward/reverse	45
Rapid forward/rapid reverse playback	45
Frame feed playback	45
Repeat playback	45
Playback from text memo position	46
Deleting text memos	47
Dividing and copying clips using text memos ..	47
Replacing thumbnail images	47
Outputting images to an external monitor for playback	48
Setting the outputs	48
Adjusting the volume level during recording and playback	48

Recording

Recording data on P2 cards	50
1394 input recording	50
2-slot continuous recording	51
Waveform monitor displays	51
Time code displays	51
1394TC preset mode	52
Setting the time code	52
Specifying the time code (TC PRESET)	52
Set the user's bit	53

Saving data

Copying data from P2 cards to the hard drive	54
Copying data from P2 cards to the hard drive (USB HOST mode)	55
Switching to the USB HOST mode.....	55
Usable hard drives	55
Types of hard drives and usable functions	56
Formatting the hard drive	57
Exporting data to a hard drive in 1-card increments	58
Hard drive data display.....	59
Thumbnail displays of clips on the hard drive ..	60
Importing data from a hard drive to P2 cards ..	61
Copying data from P2 cards to the hard drive (1394 HOST mode)	62
Switching to the 1394 HOST mode	62
Formatting the hard drive	62
Copying data from P2 cards to the hard drive ..	63
Hard drive status displays	63

Editing

Editing by means of external devices	64
Editing the P2 card data (USB DEVICE mode/1394 DEVICE mode).....	64
Editing in the USB DEVICE mode.....	64
Editing in the 1394 DEVICE mode	65

Displays

Screen displays	66
Normal displays	66
Warning displays	68
Selecting what is to be displayed on the screen.....	71
List of recording/playback and output formats	72

Menu

Basic operations on the setting menus	74
Initializing the setting menu	74
Setting menu configuration	75
List of setting menus	76
RECORDING SETUP screen	76
SW MODE screen	78
PLAYBACK FUNCTIONS screen	79
AV OUT SETUP screen.....	79
DISPLAY SETUP screen	80
CARD FUNCTIONS screen	81
OTHER FUNCTIONS screen	82
OPTION MENU screen	84

For your reference

Warning system table	85
Main differences between the USB HOST mode and 1394 HOST mode	86
Troubleshooting (Q&A)	87
Operating precautions	90
Updating the drivers installed in the unit ...	92
Maintenance	92
Condensation	92
Storage precautions	93
Handling the data recorded on P2 cards ...	94
Concerning the use of memory cards	95
Specifications	96

How to use the unit

Housed in a compact cabinet which can be battery-powered, this Memory Card Portable Recorder comes with two P2 card slots, a 3.5-inch LCD monitor, USB 2.0, IEEE1394, component signal, composite signal, SDI and many other input/output signal connectors, and it can be easily operated to play back the data content which has been shot by a P2 camera recorder. It is also capable of backup recording and file management, and it supports P2 field recording.

Playing back data content

1 Playing back the data on the unit's LCD monitor (Page 44)

Data content (both pictures and sound) which has been shot on P2 cards using a P2 camera recorder can be played back on the spot.

P2 camera recorder



P2 card




AG-HPG10 (this unit)



2 Outputting the data to the external monitor for playback (Page 48)

The data content (both pictures and sound) which has been shot on P2 cards can be output to the external monitor, and played back.

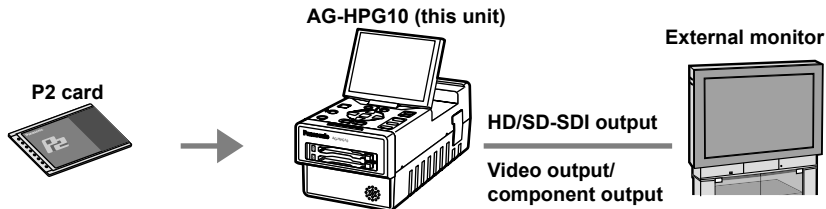


Recording data on P2 cards

3 Simultaneous recording of data onto P2 cards (Page 50)

When connected to a P2 camera recorder, the unit enables the data content being shot to be monitored on the unit's display and the same data to be simultaneously recorded onto a P2 card.


The unit's recording start and stop operations can be performed from the camera recorder.

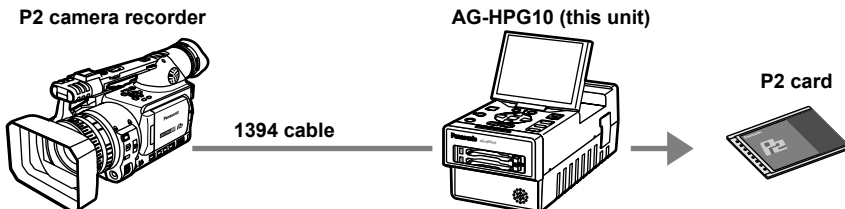

Saving data in external devices

4 Saving data onto an external hard drive (Page 54)


The data content of P2 cards can be saved onto an external hard drive.
Also, the data saved on an external hard drive can be reloaded onto a P2 card.
(Only in the USB HOST mode)

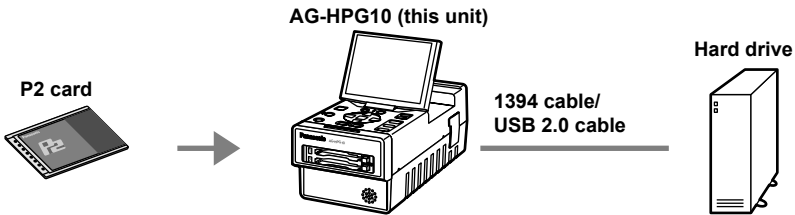

Editing

5 Editing by connecting the unit to a PC (Page 64)

The unit can be connected to a PC, and the PC can then be used to edit the data content on P2 cards.

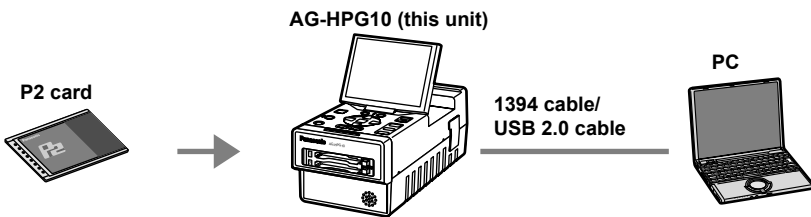

About this manual

Note concerning illustrations in these instructions

- Illustrations (portable recorder, menu screens, etc.) in these operating instructions differ slightly from the actual portable recorder.

References

- References are shown as (Page 12).

Before use

Be absolutely sure to check the calendar and time zone, and set them if necessary.

- The calendar and time zone affect the management and playback sequence of the data content which has been recorded. Before recording, set and check the calendar and time zone. (Page 23)

No compensation can be made for video recordings.

- The manufacturer will not provide any compensation in the event that images fail to be recorded due to trouble while the unit and P2 card are being used.

Concerning copyrights

- You may use the images and sound which you have recorded for your own personal enjoyment only; under copyright laws, you may not use them for any other purpose without the permission of the copyright holders.

Precautions when connecting the unit using a DV(IEEE1394) cable

• Windows :

Before connecting the cable, turn off the unit's power, and check the shape and insertion direction of the cable connector.

• Apple Macintosh :

Before connecting the cable, turn on the power of the Apple computer, and then check the shape and insertion direction of the cable connector. (Page 64)

Media which can be used with this unit


You may use the following media. For further details, refer to the pages on the media concerned.

- P2 cards (Page 24)
- SD/SDHC memory cards (Page 28)

Screw holes

M5 (5 mm diameter) screws with a length of 10 mm can be used for the four screw holes on the side panels of the unit.


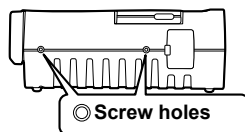





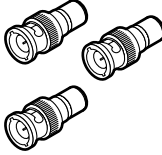


When using the screws, do not tighten them too much. The unit may be damaged if screws other than 10 mm long M5 (5 mm diameter) screws are used.



The other side panel also has two screw holes.

Refer to page 90 for other operating precautions.

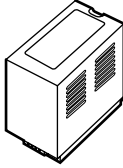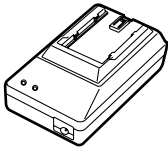
Accessories

<p>Battery*</p> 	<p>AC adapter</p> 	<p>AC power supply cords</p> <p>AG-HPG10P</p>  <p>AG-HPG10E (For the U.K.)</p>  <p>(For areas other than the U.K.)</p> 	
<p>DC cord</p> 	<p>Component video cable</p> 	<p>Pin-BNC conversion plugs (x3)</p> 	<p>Operating Instructions</p>  <p>P2 card driver software (CD-ROM)</p> 

* For the model number of the battery, refer to the [OPTIONAL PERIPHERALS] item. (Page 97)


Name of the parts

Operation area

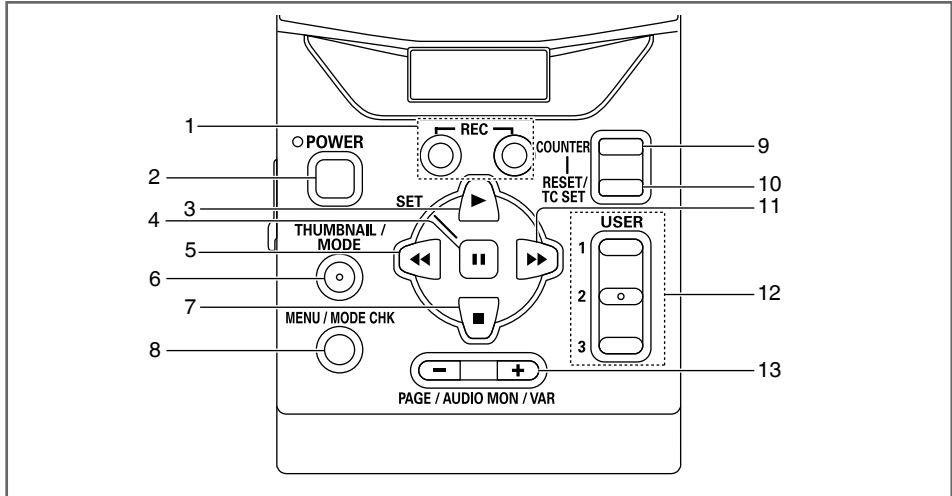

- | | | | |
|---|------------------------------------|----|---|
| 1 | REC button (Page 50) | 8 | MENU/MODE CHK button
(Pages 19, 27) |
| 2 | POWER button (Pages 18, 87) | 9 | COUNTER button (Page 51) |
| 3 | PLAY button (Pages 19, 44) | 10 | RESET/TC SET button (Pages 22, 51) |
| 4 | STILL button (Pages 19, 44) | 11 | FF button (Pages 19, 44) |
| 5 | REW button (Pages 19, 44) | 12 | USER button (Page 27) |
| 6 | THUMBNAIL/MODE button
(Page 20) | 13 | PAGE/AUDIO MON/VAR button
(Pages 35, 45, 48) |
| 7 | STOP button (Pages 19, 44) | | |

Mechanism area and input/output connector area

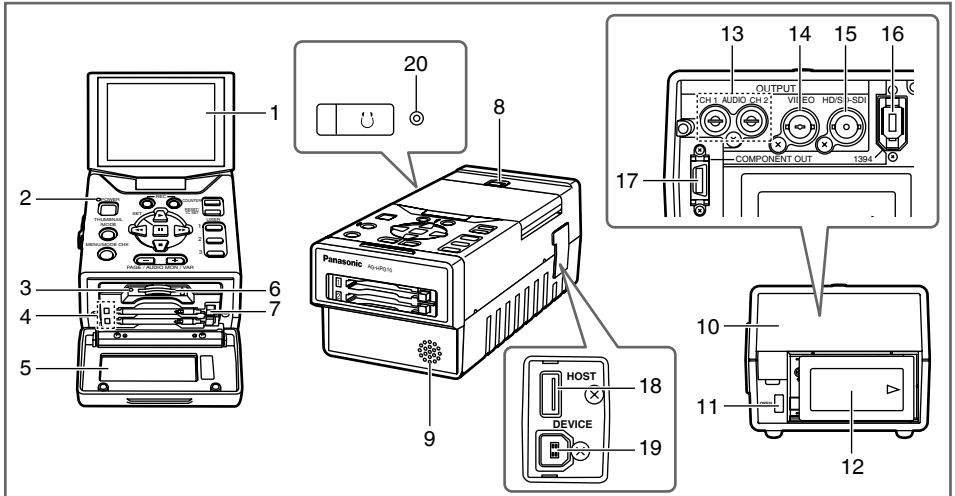

Name of the parts

- | | |
|-------------------------------------|--|
| 1 LCD monitor (Pages 18, 22) | 12 Battery (Page 16) |
| 2 Power lamp (Pages 18, 85) | 13 AUDIO OUT CH1/CH2 connectors (Page 48) |
| 3 SD card access LED (Page 28) | 14 VIDEO OUT connector (Page 48) |
| 4 P2 card access LEDs (Page 24) | 15 HD/SD-SDI OUT connector (Page 48) |
| 5 Card slot cover (Pages 24, 26) | 16 IEEE1394 input/output connector (Page 50) |
| 6 SD card slot (Page 28) | 17 Component output connector (D4 connector) (Page 48) |
| 7 P2 card slots (Page 24) | 18 USB 2.0 connector (Type A) (Page 54) |
| 8 LCD monitor open button (Page 18) | 19 USB 2.0 connector (Type B) (Page 64) |
| 9 Speaker (Pages 48, 68) | 20 Headphone jack (Pages 48, 68) |
| 10 Connector area cover | |
| 11 Battery eject button (Page 17) | |


Charging the battery

Charging

Before using the battery, give it a full charge using the AC adapter. It is recommended that you have a spare battery available in case you need it.


1 Place the battery horizontally while aligning it with the \Rightarrow mark on the AC adapter, and slide it into position.

- If the DC cord is connected to the AC adapter, disconnect it before proceeding any further. The battery cannot be charged if this cable is left connected.

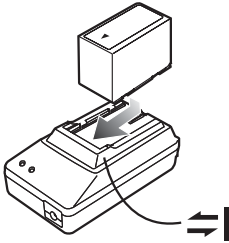


2 Connect the AC cable to the power outlet.

- The POWER and CHARGE lamps on the AC adapter light, and charging starts.
- If the CHARGE lamp fails to light when the battery has been installed, remove the battery and then re-install it.

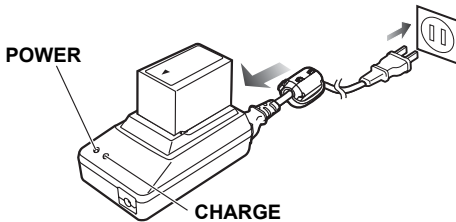

- When the battery has been charged, the CHARGE lamp on the AC adapter goes off.

3 Slide the battery out of position, and remove it.

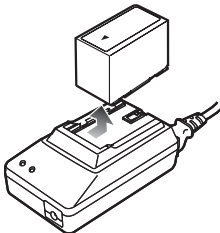

Charging time and play time of supplied battery

Capacity	Charging time	Continuous playback time
5400 mAh	Approx. 330 minutes	Approx. 240 minutes

- The times given in the above table are approximate figures based on playback in the DVCPRO HD mode.
- The times given in the above table are obtained at an ambient operating temperature of 20 °C and an ambient relative humidity of 60 %. It may take longer to charge the battery at other temperature and humidity levels.


- While the battery is being used or charged, it will become hot.
- If the playback and stop operations are repeated more than necessary, the playback time will be shorter than the time given in the above table. When the battery is to be stored for a prolonged period, it is recommended that you charge it once a year, use the battery in the unit until its charge is used up, and then return it to storage.
- When the battery temperature becomes extremely high or low or when a discharged battery has been left unused for a prolonged time, the CHARGE lamp will blink several times, and charging will commence automatically.
- When the CHARGE lamp continues to blink even when the battery is at the right temperature, it may indicate a failure in the battery or AC adapter. Contact your dealer.
- When the battery is warm, it will take longer than usual to recharge it.
- When the AC adapter is used near a radio, the sound from the radio may be distorted. Use the AC adapter and radio at a distance of at least 1 meter from each other.
- Noise may be heard from the AC adapter while the AC adapter is being used: this is normal and not a sign of trouble.
- The battery cannot be charged when power is supplied to the unit from the AC adapter.
- No guarantees are given for the operation of the CGR-D16/CGR-D16s (1600 mAh) optional battery pack.

Installing and removing the power supply

Installing and removing the battery


Insertion

- 1 Insert the battery until it clicks into place.

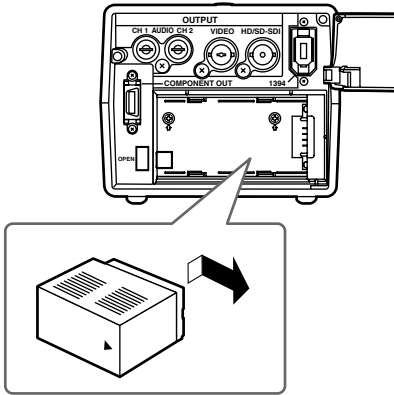

Removal

- 1 Press [POWER] for at least 2 seconds to turn the power off, and check that the power lamp has gone off. (Page 18)
- 2 Remove the battery while pressing the battery eject button.
 - Support the battery with your hand to ensure that it will not drop down.

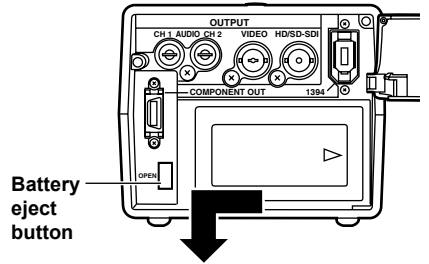


Preparations

Connecting and disconnecting the power cable

Insertion

- 1 Connect the DC cord to the AC adapter.
- 2 Connect the AC power supply cord into the power outlet.
- 3 Insert the DC cord's battery connector until it clicks into place.

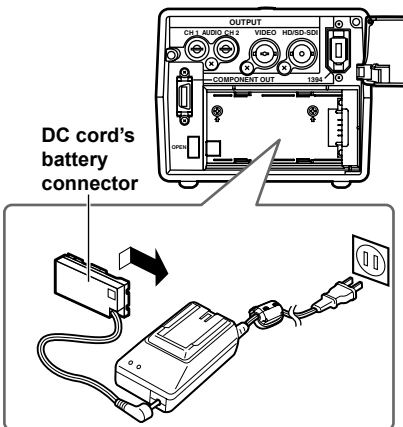

Removal

- 1 Press [POWER] for at least 2 seconds to turn the power off, and check that the power lamp has gone off. (Page 18)
- 2 Remove the DC cord's battery connector while pressing the battery eject button.
- 3 Disconnect the AC power supply cord from the power outlet.

- The battery cannot be charged when power is supplied to the unit from the AC adapter.
- The AC adapter is designed to work anywhere in the world with supply voltages ranging from 100 V to 240 V and with power line frequencies of 50 Hz and 60 Hz. However, in some countries the shape of the power outlet receptacle differs. In cases like this, obtain the plug that will fit the receptacle. Obtain the conversion plugs after consulting with your dealer.
- When the unit is not being used, disconnect the AC cable from the power outlet.

Basic operations

Turning the power on and off


Hold down [POWER] for at least 2 seconds.

- The power lamp lights, and the power is turned on.
- When [POWER] has been held down for more than 2 seconds while the power is on, the power lamp will go off, and the power will be turned off.



Using the LCD monitor

1 Hold down [POWER] for at least 2 seconds to turn the power on.


2 Raise the LCD monitor while pressing the LCD monitor open button in the direction shown by the arrow.

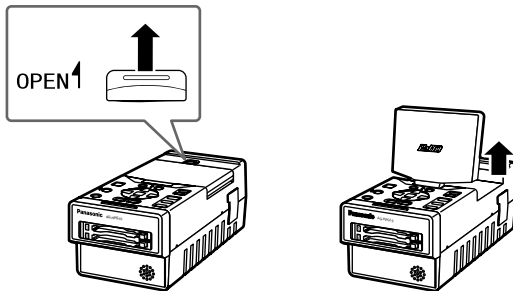


3 Set the LCD screen to the angle where it is easiest to see its displays.

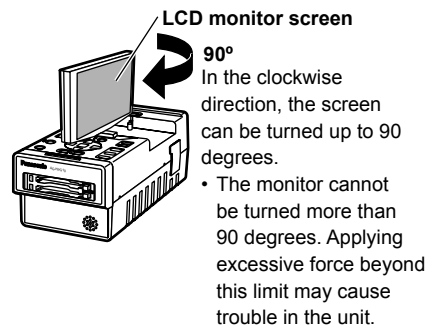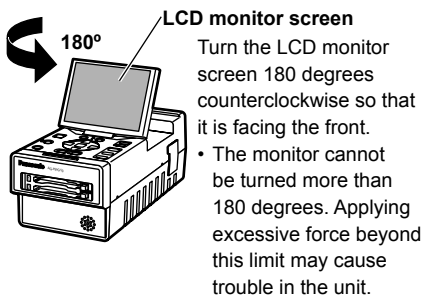

Make sure that the LCD monitor is raised upright before turning it.

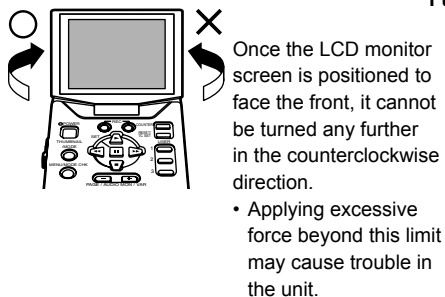



Function buttons

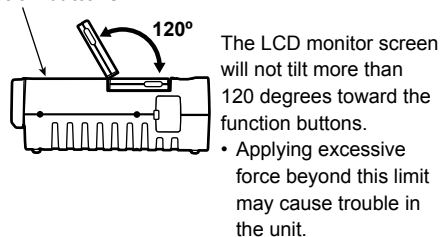

Menu operations


This unit is provided with three kinds of screens: the thumbnail display screen, thumbnail display off screen (1394 input recording standby mode, playback standby mode) and PC mode screen. When [MENU/MODE CHK] is pressed on any of these screens, the menu will be displayed. (No menus are displayed in the USB DEVICE mode or 1394 DEVICE mode.)

Operations performed when the function buttons are pressed

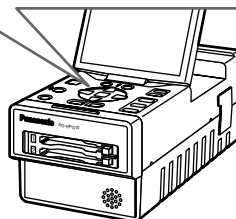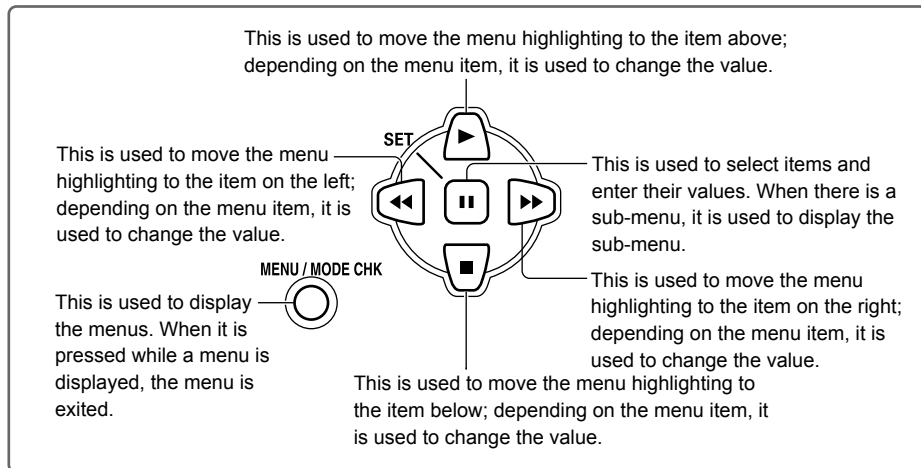

Example of a menu operation: (when the thumbnail display screen is displayed)

1 Press [MENU/MODE CHK] to display the menu.

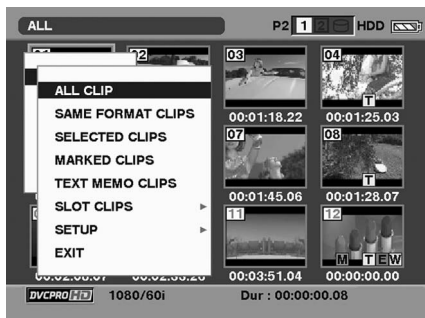

2 Press \uparrow and \downarrow to move the menu highlighting, and select the item.

3 Press \square .

- If another menu has been displayed, repeat steps 2 and 3.
- Depending on the item, the value is changed using \uparrow , \downarrow , \rightarrow and \leftarrow .
- Depending on the item, a confirmation screen will be displayed.
- Depending on the item, the original screen is restored automatically.

4 Press [MENU/MODE CHK] to exit the menu.


For details on the menu operations on the thumbnail display off screen, refer to "Basic operations on the setting menus" on page 74.

Basic operations (continued)

Operation modes

This unit has the following 3 modes which can be selected by pressing [THUMBNAIL/MODE].


POWER




Turn on the power.

Thumbnail display screen

On this screen, the data content on the P2 cards is displayed as thumbnails to playback or manage the clips.



Playback (PLAY, STILL, FF, REW)




Stop (STOP)


THUMBNAIL / MODE

Hold down this button for at least 2 seconds to switch to the PC mode.


THUMBNAIL / MODE



When a P2 card has been ejected




THUMBNAIL / MODE




Thumbnail display off screen (1394 input recording standby, playback standby mode)


- Connect the unit to the device equipped with the IEEE1394 connector, and proceed with playback and recording.




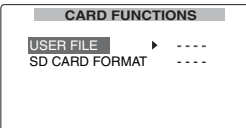
Playback



Recording



• Display the menu, and perform the various settings.



THUMBNAIL / MODE



Hold down this button for at least 2 seconds to switch to the PC mode.

■ PC mode

Connect the unit to the external device, and save or manage the clips. Depending on the connection method and application, the USB HOST mode, USB DEVICE mode, 1394 HOST mode and 1394 DEVICE mode are available; perform the mode settings using the setting menu on the thumbnail display off screen.


- USB HOST mode

Connect to a device equipped with a USB connector, and operate the connected device.

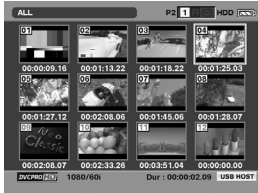


- 1394 HOST mode

Connect to a device equipped with an IEEE1394 connector, and operate the connected device.

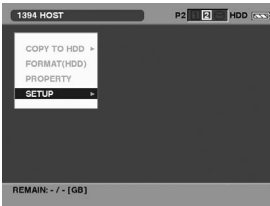

- USB DEVICE mode/1394 DEVICE mode

Connect to a device equipped with an IEEE1394 or USB connector, and operate the data on the unit's P2 card from the connected device.

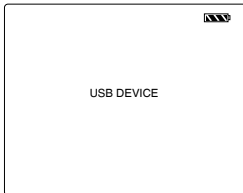

○POWER



Turn the power off (exit the PC mode).

- Do not turn off the power while accessing the data on the hard drive.

Basic operations (continued)

LCD monitor settings

- 1** Hold down [POWER] for at least 2 seconds to turn the power on.


First check that an image is displayed on the LCD monitor, and then adjust the angle of the monitor to the position where it is easiest to see its displays.

- 2** Press [THUMBNAIL/MODE] to display the thumbnail display off screen.


- 3** Press [MENU/MODE CHK].

• Basic operations on the setting menus. (Page 74)

- 4** Using ∇ , Δ , and \square , select “YES” for the “LCD SET” item on the setting menu “DISPLAY SETUP” screen.

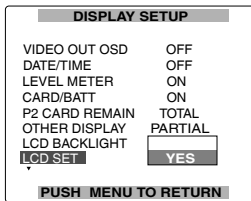

- 5** Using ∇ and Δ , select the item to be set.

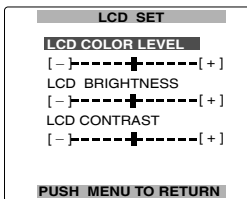

LCD COLOR LEVEL: This adjusts the color density of the screen.

LCD BRIGHTNESS: This adjusts the screen brightness.

LCD CONTRAST: This adjusts the screen contrast.

- 6** Using \rightarrow or \leftarrow , adjust the selected item.

- 7** Press [MENU/MODE CHK] 3 times to release the menu mode.

• When [RESET/TC SET] is pressed, the adjusted values of the selected items can be restored to their factory settings.

Setting the calendar

The "CLOCK SET" value is recorded on the data content (clips), and it affects the sequence in which the thumbnails are played back. Before recording, be absolutely sure to check the "CLOCK SET" and "TIME ZONE" settings, and set them if necessary. Described below is the procedure for setting the clock to 5:20 PM on May 25, 2007.


1 Hold down [POWER] for at least 2 seconds to turn the power on.

2 Press [THUMBNAIL/MODE] to display the thumbnail display off screen.


3 Press [MENU/MODE CHK].

- Basic operations on the setting menus. (Page 74)


4 At the "TIME ZONE" item on the setting menu "OTHER FUNCTIONS" screen, change the time difference from Greenwich Mean Time using \leftarrow and \rightarrow , and press \square . (Page 82)

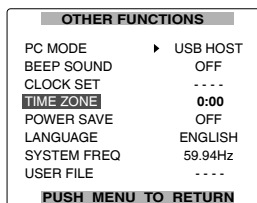

5 Select "YES" at the "CLOCK SET" item on the setting menu "OTHER FUNCTIONS" screen.

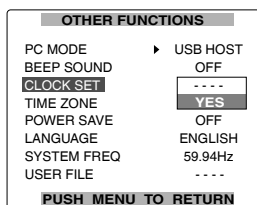


6 Press \rightarrow or \leftarrow to set "YEAR" to "2007".

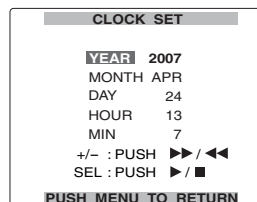


Any year from 2000 to 2030 can be set.

7 Press \rightarrow to move the setting item to "MONTH".

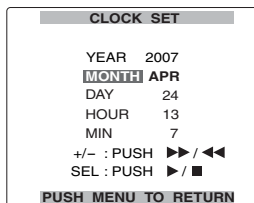


8 Press \rightarrow or \leftarrow to set "MONTH" to "MAY".

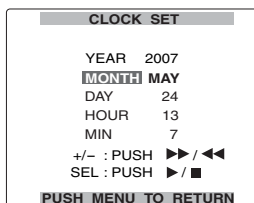

9 Use the same method as in steps 4 and 5 to set "DAY", "HOUR" and "MIN".

- The 24-hour clock system is used by this unit.

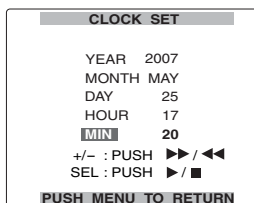

10 Press [MENU/MODE CHK] 3 times to release the menu mode.


- An error will occur in the time so check that the time is correct before shooting.
- If the unit is going to be used overseas, do not set the "CLOCK SET" item to the current time but input the time difference from GMT using the "TIME ZONE" item.

P2 cards

Inserting P2 cards

- When the unit is to be used for the first time, the first step is always to set the internal clock. (Page 23)

- 1** Hold down [POWER] for at least 2 seconds to turn the power on.
- 2** Open the card slot cover, and insert the P2 card into the P2 card slot as far as it will go.
 - When the P2 card is inserted into the unit, the P2 card status is displayed by the P2 card access LED.
For details on the P2 card status displayed, refer to “P2 card access LED and P2 card status.”

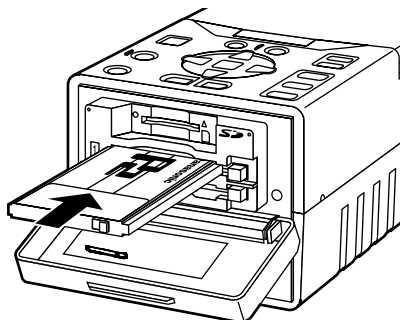

- 3** Close the card slot cover.


P2 card access LED and P2 card status

P2 card access LED	P2 card status
Lights up green	Data can be saved on the card or loaded from the card.
Lights up orange	Data can be saved on the card or loaded from the card, and the data of the current recording is targeted.
Blinks in orange	Data is now being saved or loaded.
Blinks rapidly in orange	The recognition process of the P2 card is underway.
Blinks in green	The P2 card is out of memory. Data can be read out only.
	The write-protect switch on the P2 card is at the PROTECT setting. Data can be loaded only.
Off	The P2 card has not been formatted properly. Re-format the card using the unit.
	The card cannot be used by the unit. Replace the card.
	The P2 card is not installed.
	The P2 card is not being accessed in the USB DEVICE mode.

- The P2 card statuses can be checked in detail.
Refer to “Displaying the P2 card status” on page 41.


Formatting P2 cards

- 1 Hold down [POWER] for at least 2 seconds to turn the power on.**
The thumbnail screen now appears.
- 2 Press [MENU/MODE CHK].**
- 3 Using \downarrow , \uparrow and \square , select "OPERATION" – "FORMAT", and press \square .**
 - A screen such as the one shown below now appears. Select the number of the slot in which the P2 card to be formatted has been inserted. If the card is not going to be formatted, select "EXIT".
 - If [MENU/MODE CHK] is pressed, the menu display is cleared.
- 4 Select "YES" on the confirmation screen, and press \square .**
 - The selected P2 card is now formatted.
- 5 When the completion message has appeared, press "OK" (\square).**

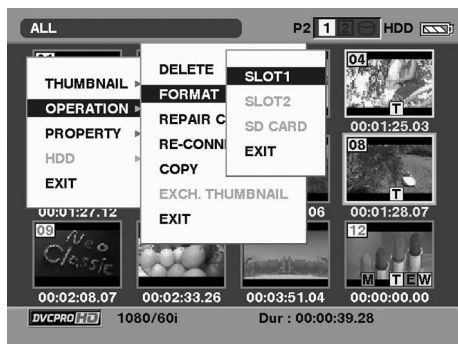

P2 card protection


To prevent the data recorded on the P2 card from being deleted by mistake, set the write-protect switch on the P2 card to PROTECT.

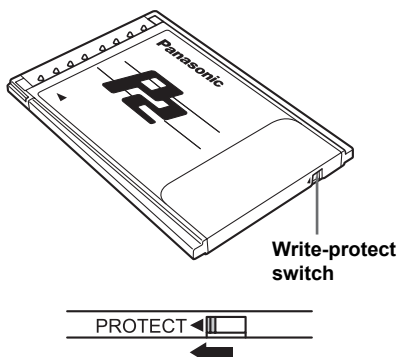

P2 cards (continued)


Ejecting P2 cards

1 Press .

When the P2 card access LED to be ejected is blinking in orange, press  to stop it blinking.

2 Open the card slot cover, push the card eject button once, and when the button pops out, push the button again.

Card eject button

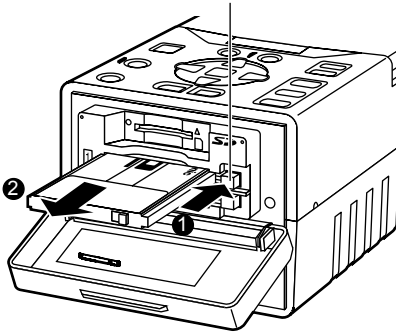

3 After ejecting the P2 card, close the card slot cover.

- Do not eject cards or turn off the power in the following situations: otherwise, this may cause P2 card trouble.
 - ① While the orange P2 card access LED device is changing from blinking to lighting after the P2 card has been inserted
 - ② During recording, during the process to complete recording or while the P2 card access LED is blinking
- In the event that a P2 card being formatted or accessed has been ejected, "TURN POWER OFF" is displayed on the LCD monitor. In a case like this, turn the power off and then turn it back on.

When a card was ejected while it was being formatted:

Re-format the card.

When a card was ejected while its data was being accessed:

Something may have gone wrong with one of the clips (Page 30). Check the clips, and repair the abnormal one. (For details on repairing clips → page 36)

- During playback, a P2 card will not be recognized even if it has been inserted into the other empty slot, and the P2 card access LED will not light. After playback is completed, the P2 card recognition process is started.
- If the P2 card is ejected while thumbnails are displayed, the thumbnail display screen will be cleared.

Precaution for using P2 cards

P2 cards must always be formatted using a P2 device prior to use.

P2 card recording durations

Model number	Capacity	DVCPRO/DV Audio 2CH	DVCPRO50 Audio 4CH	DVCPRO HD*1
AJ-P2C004HG	4 GB	Approx. 16 minutes	Approx. 8 minutes	Approx. 4 minutes
AJ-P2C008HG	8 GB	Approx. 32 minutes	Approx. 16 minutes	Approx. 8 minutes
AJ-P2C016RG	16 GB	Approx. 64 minutes	Approx. 32 minutes	Approx. 16 minutes

- **AJ-P2C002SG (2 GB) cards cannot be used.**
- The memory needed for management and other purposes is included in the memory figure displayed, so the amount of memory you can use for recording is less than what is displayed.
- **Concerning dividing the clips recorded on P2 cards**

If, when a P2 card with a memory capacity of 8 GB or more is used in this unit, the continuous recording time for a single session exceeds the time shown in the table below, the recording will automatically continue as another clip. Furthermore, when performing thumbnail operations (such as display, delete, repair or copy) for clips using the P2 device, these operations can be performed with all the clips treated as a single clip. The clips may be displayed as separate clips by non-linear editing software and PCs.

Recording format	Recording time
DVCPRO HD*1	Approx. 5 minutes
DVCPRO50	Approx. 10 minutes
DVCPRO/DV	Approx. 20 minutes

*1 Signals in the 720P/30PN, 720P/24PN and 720P/25PN DVCPRO HD formats cannot be recorded using this unit.

- When any other kind of card is used, you may need to update the driver installed in the unit. (Page 92)

Other

Using the USER buttons

One of ten different functions can be allocated to each of USER1, 2 and 3 buttons.


The following features are allocated to the buttons at the time of shipping.

USER1: SYS FORMAT
 USER2: SHOT MARK
 USER3: TEXT MEMO


For details, refer to the USER1-3 items (Page 78) on the setting menu "SW MODE" screen.

- The function allocated to [USER] will be displayed while [MENU/MODE CHK] on the thumbnail display off screen is held down for at least 2 seconds.
- Depending on the mode, allocated functions may not be operable.

Charging the internal battery

The date (year/month/day) and time are stored in the memory by the internal battery. When the  display has appeared on the LCD monitor screen, it means that the internal battery charge is low. Follow the steps below to charge the battery. After the battery has been fully charged, set the date and time.

- 1 Connect the AC adapter to the unit.**
Keep the unit's power turned off.
- 2 Maintain this condition for about 4 hours.**
The internal battery will now be charged.
After charging, check the TC and menu.

If  appears even after the internal battery has been charged, the battery must be replaced. Ask your dealer for another battery.


Using SD/SDHC memory cards

USER files can be saved or loaded using SD or SDHC memory cards (both types of cards will now be referred to as “SD memory cards”). (Page 29)

Inserting/ejecting SD memory cards

<Insertion>

- 1 Open the cover, and insert the card while paying attention to its direction.
- 2 Close the cover.

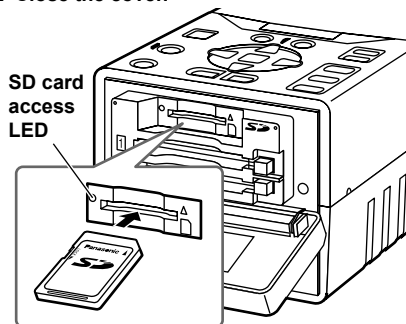


<Removal>

- 1 Open the cover, and check that the SD card access LED is not lighted.
- 2 Push the card further into the unit, clasp it between your fingers, and remove.
- 3 Close the cover.

Formatting SD memory cards

- 1 Hold down [POWER] for at least 2 seconds to turn the power on.
The thumbnail screen now appears.
- 2 Press [MENU/MODE CHK].
- 3 Using ∇ , \triangle and \square , select “OPERATION” – “FORMAT” – “SD CARD”, and press \square .
 - If the card is not going to be formatted, select “EXIT”.

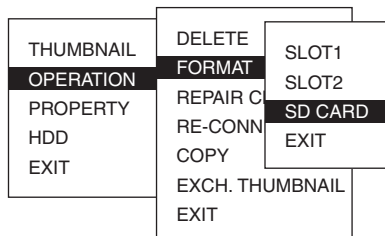

- 4 Select “YES” on the confirmation screen, and press \square .

- The selected SD memory card is now formatted.

- 5 When the completion message has appeared, press “OK” (\square).

- Cards can also be formatted from the “SD CARD FORMAT” item on the “CARD FUNCTIONS” screen. (Page 81)
- With SDHC cards, 32 KB of memory will have already been used up.

Precautions for using SD memory cards

- With this unit, use SD memory cards which meet the SD standard or SDHC standard. Always remember to use this unit to format the SD memory cards. If a card must be formatted using a PC, download the special software from the support site given below. SD memory cards with the following memory sizes can be used within this unit.

SD (8 MB to 2 GB)

8 MB	16 MB	32 MB	64 MB	128 MB
256 MB	512 MB	1 GB	2 GB	

SDHC (4 GB only)

4 GB

To obtain the latest information which is not provided in these Operating Instructions, access the P2 support page on the web site below.
<https://www.pavc.panasonic.co.jp/pro-av/>

- When using the SD memory cards, always remember to close the cover.
- Also refer to “Concerning the use of memory cards” on page 95.

Saving USER files on SD memory cards


Up to four sets of settings can be saved as four files on the SD memory card, and they can be loaded from the card.

1 Press [THUMBNAIL/MODE] to display the thumbnail display off screen.

2 Press [MENU/MODE CHK].


3 Select "USER FILE" on the setting menu "CARD FUNCTIONS" screen, select "YES", and press [ENT].

- Basic operations on the setting menus (Page 74)

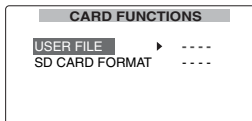


4 Select "FILE SELECT", and press [ENT].

5 Using [UP] or [DOWN], select the file number (1 to 4), and press [ENT].

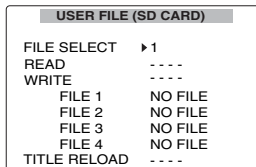


6 Using [UP] and [DOWN], select "WRITE", and press [ENT].

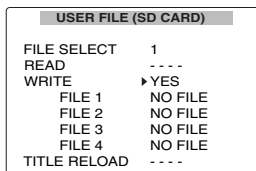

7 Display "YES" using [LEFT] and [DOWN], and press [ENT].

- In the figure below, "TITLE1" is the filename.
- After the data has been saved, "WRITE OK" is displayed.
- The USER file which was written changes to a white display.

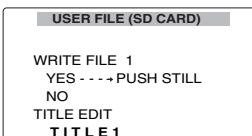

8 Press [MENU/MODE CHK] four times to release the menu mode.

To give titles to files

- 1) Perform steps 1 to 6.
- 2) Select the characters using [UP] and [DOWN], and move to the next character using [RIGHT].
 - The number of characters which can be input is 8.
 - Any of the following characters can be input. (Space), A to Z, 0 to 9, : ; < = ? @ [\] ^ _ - . /
 - All the characters can be deleted using the unit's [RESET/TC SET] button.
- 3) After all the characters have been input, press [RIGHT] at the left end of the characters (or [LEFT] at the right end), display "YES" using [DOWN], and press [ENT].
 - After the data has been saved, "WRITE OK" is displayed.

To load a file

- 1) Perform steps 1 to 5.
- 2) Move to "READ" using [UP] and [DOWN], display "YES", and press [ENT].
 - The files are loaded.
- 3) If "TURN POWER OFF" appears after loading, turn off the power, and then turn it back on. The loaded files are now set.

To reload the files from the SD memory card:

- 1) Perform steps 1 to 3.
- 2) Using [UP] and [DOWN], move to "TITLE RELOAD", display "YES", and press [ENT].
 - The files are now re-loaded.

- If "WRITE NG FORMAT ERROR" is displayed, format the SD memory card. (Page 28)
- If "WRITE NG WRITE PROTECT" is displayed, release the SD memory card protection.
- If "WRITE NG CANNOT ACCESS" is displayed, complete the other operations (such as playback), and then proceed to operate.
- If "WRITE NG ERROR" is displayed, the SD memory card may be defective. Replace the card.

Thumbnail display

The video data produced on a P2 card by a single shooting session is referred to as a clip. When the unit's power is turned on, the clips are displayed as thumbnails on the LCD monitor. (If there are many clips, it will take a few moments for all the clips to be displayed.)

Playback formats

The formats which can be played back by this unit are as follows.

DVCPRO HD

- 1080i/60i (30P over 60i, 24P over 60i, 24PA over 60i) *
- 1080i/50i (25P over 50i)
- 720P/60P (30P over 60P, 24P over 60P) *
- 720P/30PN (native recording) *
- 720P/24PN (native recording) *
- 720P/50P (25P over 50P)
- 720P/25PN (native recording)

DVCPRO50/25, DV

- 480i/60i (30P over 60i, 24P over 60i, 24PA over 60i)
- 576i/50i (25P over 50i)

* 24P: 23.98P, 30P: 29.97P, 60P: 59.94P, 60i: 59.94i


Switching playback formats

To play back clips with different recording formats, switch the playback format.

- The numbers of the clips which cannot be played back are displayed in red.

- 1 Press [THUMBNAİL/MODE] to display the thumbnail display off screen.
- 2 Press [MENU/MODE CHK].
- 3 Using ∇ , \triangle and \square select "RECORDING SETUP" – "SYS FORMAT", and press \square .
- 4 Select the format using ∇ and \triangle , and press \square .
- 5 Press [MENU/MODE CHK] twice to exit the menu.
- 6 Press [THUMBNAİL/MODE] to return to the thumbnail display screen.
 - By allocating "SYS FORMAT" to [USER], the format can be selected on the thumbnail display off screen. (Page 78)
 - It is allocated to [USER1] as the factory setting.

Names and functions of thumbnail display screen parts

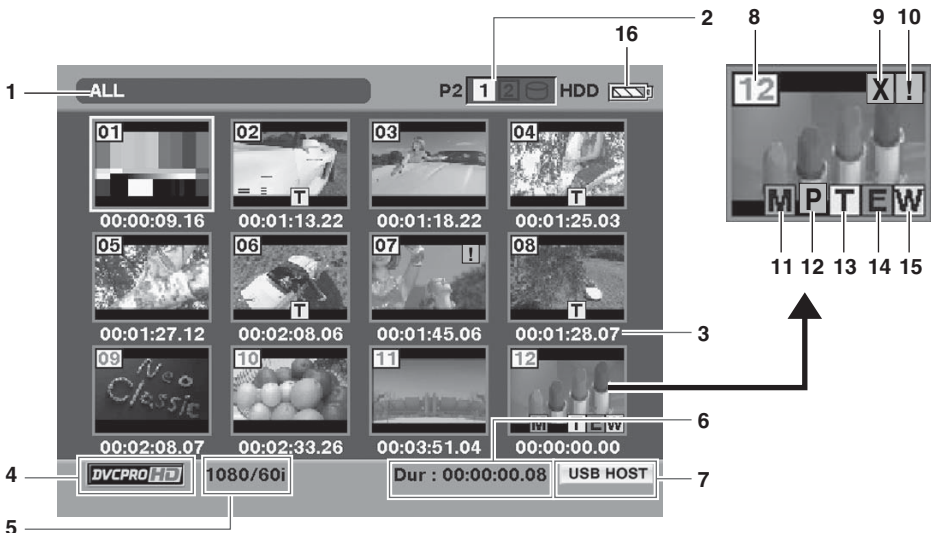

Menu configuration of thumbnail display screen

THUMBNAIL

- ALL CLIP
- SAME FORMAT CLIPS
- SELECTED CLIPS
- MARKED CLIPS
- TEXT MEMO CLIPS
- SLOT CLIPS
- SETUP
- EXIT

OPERATION

- DELETE
- FORMAT
- REPAIR CLIP
- RE-CONNECTION
- COPY
- EXCH. THUMBNAIL
- EXIT

PROPERTY

- CLIP PROPERTY
- CARD STATUS
- DEVICES
- PROPERTY SETUP
- SYSTEM INFO
- EXIT

HDD


- EXPORT
- EXPLORE
- SETUP
- EXIT

1 Display statuses







The types of information which are displayed on the screen are displayed as follows.

ALL:	All clips
SAME FORMAT:	Clip whose format is the same as the system format
SELECT:	Clip selected by the STILL button
MARKER:	Clip to which the shot mark has been added
TEXT MEMO:	Clip with text memo data
SLOT n:	Clip on the P2 card in slot "n"
PROPERTY:	Detailed clip information
P2/REMAIN:	Media information (remaining memory)
P2/USED:	Media information (used memory)

2 P2 card slot numbers and hard drive statuses



The statuses of the P2 cards and USB hard drive are displayed as follows.

 (White)	The numbers of the P2 card slots where P2 cards have been inserted are displayed in white.
 (Yellow)	The number of the P2 card slot, which contains a P2 card with a clip that has its cursor position recorded, is displayed in yellow. When a single clip has been recorded on a multiple number of P2 cards, all the slot numbers of the cards on which the clip is recorded will be displayed. The P2 card slot number is displayed in pink when the inserted P2 card is in one of the following statuses: <ul style="list-style-type: none"> • RUN DOWN CARD (Page 68) When the number of times the card data has been rewritten has exceeded the standard • DIR ENTRY NG CARD (Page 68) When the position of the folder does not comply with the standard
 (Gray)	When a mode other than the USB HOST mode is established or when the USB HOST mode is established but the hard drive is not connected, this status is displayed in gray.
 (White)	When the USB HOST mode is established and the hard drive can be used, this status is displayed in white.
 (Yellow)	When the USB HOST mode is established and the clips on the hard drive are displayed as thumbnails, this status is displayed in yellow.
 (Red)	When the USB HOST mode is established and the hard drive is not in the data copy enable status, this status is displayed in red.

(Continued on the next page)

Thumbnail display (continued)

Names and functions of thumbnail display screen parts (continued)

3 Time display (Page 34)

Depending on what has been set, the time code at the clip recording start point or the user's bit at the clip recording start point, shooting time, shooting date, shooting date/time or USER CLIP NAME is displayed.

4 Recording mode

The recording mode of the clip where the cursor is positioned is displayed.

5 System format

The recording format of the clip where the cursor is positioned is displayed.

6 Duration

The duration of the clip where the cursor is positioned is displayed.



7 USB HOST mode indicator

This appears when the USB HOST mode has been selected.

8 Clip number

These are the numbers which have been set by the unit for all the correctly recognized clips on a P2 card. The numbers are allocated in sequence starting from the earliest shooting date/time. Clips which cannot be played back because, for instance, they have wrong recording formats are displayed in red.

9 Defective clip indicator

This indicates clips whose recording contains problems for reasons such as the power being cut off while they were being recorded. It may be possible to repair clips which are indicated by the yellow defective clip indicator. For further details, refer to "Repairing defective clips" (Page 36). It is not possible to repair clips which are indicated by the red defective clip indicator so delete them. If these clips cannot be deleted, format the P2 card. In the case of clips with the wrong formats,  is displayed instead of .

Unknown clip indicator

10 Incomplete clip indicator

This appears when a single clip has been recorded onto a multiple number of P2 cards and one of the P2 cards concerned has not been inserted into the P2 card slot.

11 Shot mark indicator

This indicates clips where a shot mark has been added to their thumbnails.

12 Clip-with-proxy indicator

This indicates clips for which a proxy has been additionally recorded.

13 Text memo indicator

This indicates clips with text memo data.





14 Edit-copy clip indicator



This indicates clips which have been edit-copied by the AJ-HPM100 or other model which supports the edit-copy function. For details on the edit-copy function, refer to the operating instructions of the model which supports the function.


15 Wide indicator

This indicates clips which have been recorded using the 16:9 aspect ratio. It does not indicate clips which were formatted by a hard drive.

16 Remaining battery charge display

As the remaining charge drops, the display changes in the following sequence:  →  →  → and .

When the charge is virtually depleted, the  (or ) display changes to red.

(While the AC adapter is being used, a display other than  may appear: this is normal and not a sign of trouble.)

Changing the displays on the thumbnail display screen

You can customize the thumbnail display screen to better suit your operating needs for more efficient operation.

- 1 Display the thumbnail display screen.
- 2 Press [MENU/MODE CHK].
- 3 Using \downarrow , \uparrow and \rightarrow , select the type of clip to be displayed at the lower level of "THUMBNAIL", and press \rightarrow .



ALL CLIP:	Select this to display all the clips.
SAME FORMAT CLIPS:	Select this to display the clips whose format is the same as the recording format.
SELECTED CLIPS:	Select this to display the clips selected by the STILL button.
MARKED CLIPS:	Select this to display the clips to which shot marks have been added.
TEXT MEMO CLIPS:	Select this to display the clips with text memo data.
SLOT CLIPS:	Select this to display the clips on the P2 card of slot number "n".
SETUP:	This enables you to change the display of the thumbnail indicators, data displays and other settings.
EXIT	Select this to return to the previous menu.

Thumbnail display (continued)

Setting the items to be displayed

You can customize how the thumbnails are to be displayed to better suit your intended application. This enables you to change the display of the thumbnail indicators, data displays and other settings.

- 1 Display the thumbnail display screen.
- 2 Press [MENU/MODE CHK].
- 3 Using ∇ , \triangle and \square , select the item to be set at the lower level of "THUMBNAIL"
– "SETUP", and press \square .

ALL HIDE:	<u>ON</u>	None of the indicators are displayed.
	<u>OFF</u>	The indicators are displayed in line with the settings of the menu items below.
MARKER IND.:	<u>ON</u>	The shot mark indicator is displayed.
	OFF	The shot mark indicator is not displayed.
TEXT MEMO IND.:	<u>ON</u>	The text memo indicator is displayed.
	OFF	The text memo indicator is not displayed.
WIDE IND.:	<u>ON</u>	The wide indicator is displayed.
	OFF	The wide indicator is not displayed.
PROXY IND.:	<u>ON</u>	The proxy indicator is displayed.
	OFF	The proxy indicator is not displayed.
DATA DISPLAY:	This menu item enables you to select what is to be displayed in the time display (see 3 in "Names and functions of thumbnail display screen parts" on page 32).	
	<u>TC</u>	Time code
	UB	User's bit
	TIME	Time of recording
	DATE	Date of recording
	DATE TIME	Date/time of recording
	USER CLIP NAME	Clip name which was set by the user

DATE FORMAT:	This menu item enables you to select the format in which the date/time of the recording is to be displayed.	
	<u>Y-M-D</u>	Year/month/day
	M-D-Y	Month/day/year
	D-M-Y	Day/month/year
THUMBNAIL SIZE:	<ul style="list-style-type: none"> This setting will also be reflected in the preparation dates of the file displays such as the dates of the recordings which are displayed as one of the clip properties, the dates of the recordings which are displayed when DATE has been selected as the DATA DISPLAY item setting, and the dates of the partition recordings which are indicated on the hard drive data display. (Page 59) 	
	<u>LARGE</u>	Large size
	<u>NORMAL</u>	Standard size
PLAYBACK RESUME:	When the cursor was not moved from the clip where playback was stopped, the next playback starts from that stopped position.	
	<u>ON</u>	Select "ON" to play back from the stop position.
	<u>OFF</u>	Select "OFF" to play back the clip from its beginning.
THUMBNAIL INIT:	This menu item enables you to return the above thumbnail display settings to the factory statuses (default values).	
	<u>YES</u>	The settings are returned to the factory statuses (default values).
	NO	The settings are not returned to the factory statuses (default values).
EXIT:	Select this to return to the previous menu.	

___ The underlined settings are the factory mode settings.

Clip management

Selecting clips

When performing operations on the thumbnail display screen, select the clip which will be the target of these operations as follows.

1 Using **▶** or **◀**, move the yellow frame (cursor) to the target clip.


2 Press **[M]**.

A bluish-green frame now appears at the clip where the cursor is positioned to indicate that the clip has been selected.

To release the selection

1 Move the cursor to the selected clip, and press **[M]** again.

The selection is released.

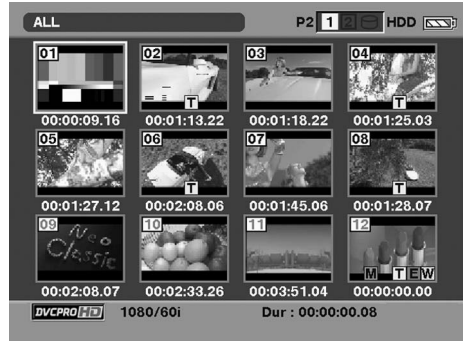

- By repeating steps 1 and 2, you can select a multiple number of clips.
- To move from one page to another, press **◀** or **▶** of **[PAGE/AUDIO/NOV/VIEW]**

Deleting clips

You can delete unwanted clips from the P2 card by proceeding as follows.

1 Display the thumbnail display screen.


2 Select the clips to be deleted.

3 Press **[MENU/MODE CHK]**.

4 Using **▼**, **▲** and **[M]**, select "OPERATION" – "DELETE", and press **[M]**.

5 Select "YES", and press **[M]**.


6 When the completion message has appeared, press "OK" (**[M]**).

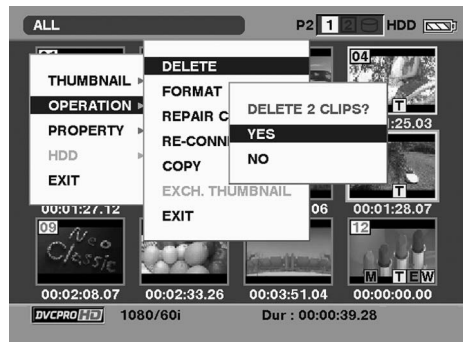







- It may not be possible to delete clips for which the **[X]** defective clip indicator or **[?]** unknown clip indicator is displayed.

Repairing and connecting clips


Repairing defective clips






The defective clip indicator (yellow ) appears in order to indicate that there is a problem in the clip such as the power having been suddenly cut off while it was being recorded. You can repair problem clips by proceeding as follows.

- 1 Display the thumbnail display screen.
- 2 Select the clip to be repaired.
- 3 Press [MENU/MODE CHK].
- 4 Using ,  and , select "OPERATION"
– "REPAIR CLIP", and press .
- 5 Select "YES", and press .

-
- It is not possible to repair clips with some types of damage. These kinds of clips are identified by the red .
-

Connecting incomplete clips

In some cases, clips recorded on a multiple number of P2 cards may not be recognized as a single continuous clip and may be recognized as an incomplete clip () instead. At times like this you can use the connecting function to restore the "incomplete" clip to a continuous (originally connected) clip.

- 1 Display the thumbnail display screen.
- 2 Select the incomplete clip to be connected.
- 3 Press [MENU/MODE CHK].
- 4 Using ,  and , select "OPERATION"
– "RE-CONNECTION", and press .
- 5 Select "YES", and press .

A clip is recognized as incomplete when:

- A clip recorded on a multiple number of P2 cards has been copied separately from one card and then from another or other cards.
 - A clip recorded on a multiple number of cards has first been copied separately from one card and then from another or other cards onto a hard drive and then written back onto the P2 cards.
 - A long clip lasting more than 5 minutes in the DVCPRO HD format (10 or so minutes in the DVCPRO50 format, or 20 or so minutes in the DVCPRO, DV format) has first been copied to a hard drive and then written back onto the P2 cards.
-

- Normally, thumbnails with the incomplete clip indicator are displayed side by side.
 - If only parts of incomplete clips separated into 3 or more have been connected, the incomplete clip indicators will remain on the screen until all the clips which make up the original clip are connected.
-

Copying clips

Clips can be copied onto the P2 cards in either of the P2 card slots.

- While clips are being copied, do not turn off the power or eject the card. Otherwise, defective clips will be produced. If defective clips are produced, delete them, and copy the original clips again.
- Copy incomplete clips after having connected them.

1 Display the thumbnail display screen.


2 Select the clip to be copied.

3 Press [MENU/MODE CHK].

4 Using , and , select “OPERATION” – “COPY” – “SLOT n” (where “n” is the number of the P2 card slot into which the copy destination P2 card was inserted), and press .

5 Select “YES”, and press .

Clip copying now starts.

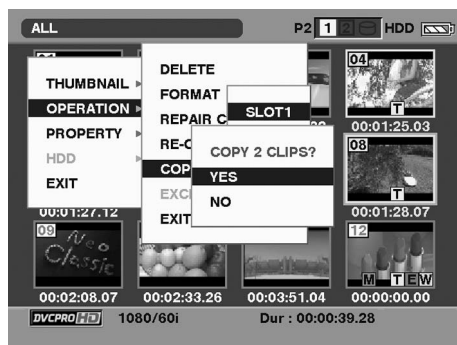

- To stop the copying process at any time, press to cancel the copying. The partially copied clip at the copy destination will be deleted.
- If there is a clip with the same GLOBAL CLIP ID—one which, for instance, was previously copied to the copy destination—“OVER WRITE” will appear. To overwrite the existing clip, select YES or to cancel the overwriting, select NO, and press . (“OVER WRITE” also appears when copying onto the P2 card a different clip which has been recorded on a multiple number of cards.)

6 When the completion message has appeared, press “OK” ().

Clips cannot be copied when any of the following error messages are displayed.

- “LACK OF REC CAPACITY!”
Clips will not be copied because there is insufficient memory at the copy destination.
- “UNKNOWN CONTENTS FORMAT!”
Clips will not be copied because the selected clips include defective clips.
- “NO COPY TO SAME CARD!”
Clips will not be copied because an attempt is being made to copy clips to the same card.
- “TOO MANY CLIPS!”
Clips will not be copied because too many clips have been selected.


- Clips displayed by the defective clip indicator cannot be copied.
- It may not be possible to copy clips for which the unknown clip indicator is displayed.

Clip management (continued)


Displaying the clip information

You can display detailed information about clips on the screen, and check it.

- 1 Display the thumbnail display screen.
- 2 Using **▶** or **◀**, move the cursor to the target clip.
- 3 Press **[MENU/MODE CHK]**.
- 4 Using **▼** and **▲**, select "PROPERTY", and press **[ENTER]**.
- 5 Select "CLIP PROPERTY" on the sub-menu displayed, and press **[ENTER]**.

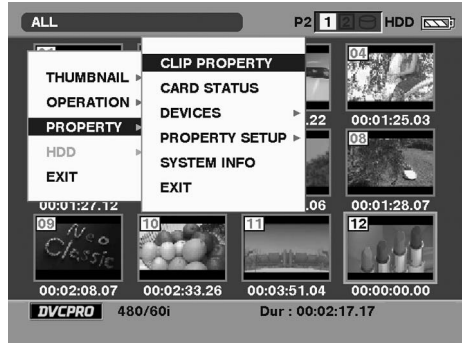

Information on the selected clip now appears on the screen.

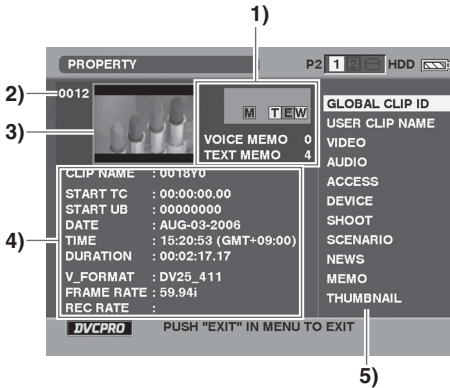

1) Information added to clips (Page 32)

The indicators or numbers of text memos or voice memos, which have been inserted into clips, are displayed. In addition, when a P2 card on which clips have been recorded has been write-protected, the **Ⓛ** mark is displayed.

• **V** Voice memo indicator

- This is displayed on clips to which voice memos have been added. It appears only in the clip property mode.
- Voice memos cannot be recorded or played back using this unit.

2) Clip number

3) Thumbnail

4) Clip information

The following information is displayed.


CLIP NAME:	Clip name
START TC:	Time code when recording was started
START UB:	User's bit when recording was started
DATE:	Date on which the clip was recorded
TIME:	Time at which the clip was recorded
DURATION:	Length of the clip
V_FORMAT:	Recording format of the clip
FRAME RATE:	Playback frame rate
REC RATE:	Recording frame rate (displayed on clips specially recorded by the camera recorder)

When ◀ or ▶ is pressed, the information of the previous or next clip is displayed.

5) Clip meta-data

Items for referencing the detailed information on the clips (clip meta-data) are displayed.

6 If necessary, reference the clip meta-data contents.

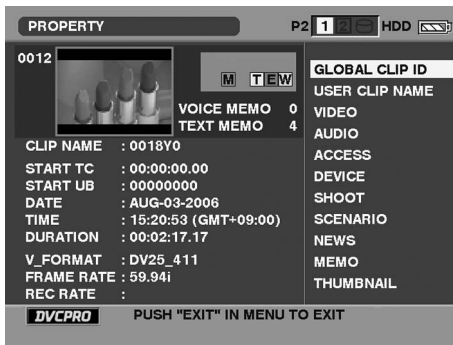

When the clip meta-data item is selected using ▢ and ▣, and then ▢ is pressed, the following information is displayed.

GLOBAL CLIP ID:	Global clip ID (a unique number which is not assigned to any other clips in the world)
USER CLIP NAME:	Clip name which can be assigned by the user Normally, the GLOBAL CLIP ID is provided as the clip name.

VIDEO:	Video signal system, etc. (frame rate, pull-down, aspect ratio)
AUDIO:	Audio channel system, etc. (sampling rate, bit rate)
ACCESS:	Last update date, etc. (name of the person who created the clip and date on which it was created, date on which the clip was last updated and name of the person who last updated the clip)
DEVICE:	Serial number of device used to record the clip (name of the device manufacturer, serial number, model number)
SHOOT:	Recording start and end dates, etc. (name of person who shot the clip, date on which shooting started, date on which shooting ended, shooting location information, altitude, longitude, latitude, shooting location information source, shooting location)
SCENARIO:	Program name, scene number, etc. (program name, scene number, take number)
NEWS:	Reporter, news-gathering object, etc. (reporter, purpose of news gathering, object of news gathering)
MEMO:	TEXT MEMO number, position, name, text content (no., recording position, person who input the memo, text information)

- An OFFSET is indicated by the number of frames from the beginning. On a thumbnail text memo display, this OFFSET is indicated as a time code instead.
- Texts consisting of up to 1,000 characters can be attached, but only the first 100 characters will actually be displayed.
- The left and right cursors are used to move from one text number to another.

THUMBNAIL: Information on the thumbnail images
The frame positions and sizes (frame offset, height and width) of the thumbnail source images are displayed.

7 Press [MENU/MODE CHK], and select "EXIT" to exit.


Clip management (continued)

Editing the clip information

You can edit the clip information.

- 1 Display the thumbnail display screen.
- 2 Using **▶** or **◀**, move the cursor to the target clip.
- 3 Press **[MENU/MODE CHK]**.
- 4 Using **▼**, **▲** and **[M]**, select “PROPERTY” – “CLIP PROPERTY”, and press **[M]**.
 - The clip information is displayed.
- 5 Using **▼** and **▲**, select the item to be edited, and press **[M]**.
- 6 The window with the items to be edited now appears so select an item using **▼** and **▲**, and then press **[M]**.

- 7 The editing keyboard window now appears. Using **▶**, **◀**, **▼** and **▲**, select the keys, and while entering them using **[M]**, edit the information.

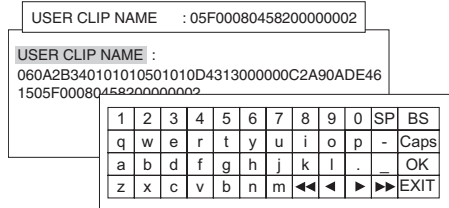

- 8 Select “OK” using **▼** or **▲**, and press **[M]** to exit the editing.
 - To edit another item, repeat steps 6 to 8.
- 9 Using **▼** and **▲**, select “OK” to exit the item display.
- 10 Press **[MENU/MODE CHK]**, and select “EXIT” to exit the clip information screen.

You can edit the following information.

USER CLIP NAME		This displays the name of the clip which has been set by the user; the global clip ID is set as the default value.
ACCESS	CREATOR	Name of the person who did the recording
SHOOT	SHOOTER	Name of the person who did the shooting
	LOCATION	Altitude of the shooting location
	ALTITUDE	Altitude of the shooting location
	LONGITUDE	Longitude of the shooting location
	LATITUDE	Latitude of the shooting location
	PLACE NAME	Place name
SCENARIO	PROGRAM NAME	Program name
	SCENE NO	Scene number
	TAKE NO	Take number
NEWS	REPORTER	Name of the reporter
	PURPOSE	Purpose of the news gathering
	OBJECT	Object of the news gathering
MEMO	PERSON	Name of the person who recorded the text memo which was added to the clip
	TEXT	Content of the text memo

- “LONGITUDE” and “LATITUDE” cannot be deleted separately. To delete, set “ALTITUDE” to blank.
- To modify the meta-data of clips displayed by the incomplete clip indicator **[I]**, insert the P2 card on which the remaining clips were recorded.
- Attached memo items of 100 characters or more cannot be modified.
- When editing “LONGITUDE” or “LATITUDE”, **▶** or **◀** is sometimes used to move to the item.

Inserting shot marks into clips

You can differentiate one clip from all the other clips by inserting shot marks.

- 1 Display the thumbnail display screen.
- 2 Using **[▶]** or **[◀]**, move the cursor to the target clip.
- 3 Press **[USER]** in which the shot mark function was allocated. (Page 27)

To release a shot mark, repeat the above steps.

- If the video data created by a shooting session consists of a multiple number of clips, it will not be possible to set or release the shot marks unless all the P2 cards containing the video data are inserted into the slots.
- Shot marks cannot be inserted into the clips on a card whose write protect switch is at the PROTECT position.
- Shot marks can be inserted during recording as well. (Page 50)

Displaying the P2 card status

The statuses of the P2 card slots, operation statuses of the P2 cards and other card information can be displayed on the screen, and checked.


- 1 Display the thumbnail display screen.
- 2 Press **[MENU/MODE CHK]**.
- 3 Using **[▼]**, **[▲]** and **[M]**, select “PROPERTY” – “PROPERTY SETUP” – “P2 CARD CAP”, and press **[M]**.
- 4 Use **[▼]** and **[▲]** to select the item to be set, and press **[M]**.

REMAIN:	Remaining memory display (default value)
----------------	--


USED:	Used memory display
--------------	---------------------

- 5 Press **[◀]**.
- 6 Using **[▼]** and **[▲]**, select “CARD STATUS”, and press **[M]**.

[When REMAIN has been selected]

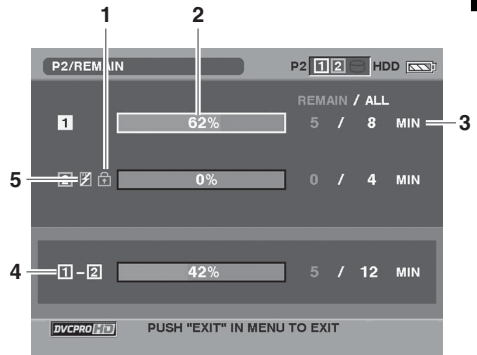

[When USED has been selected]

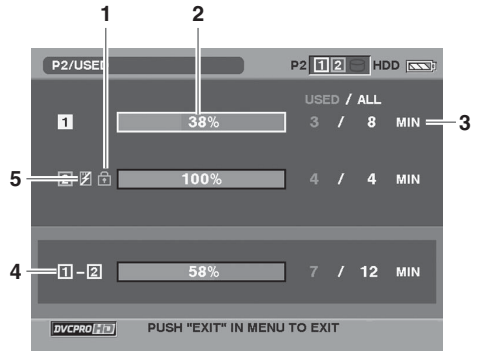


- 7 Press **[MENU/MODE CHK]**, and select “EXIT” to exit.

(Continued on the next page)

Displaying the P2 card status (continued)

1) Write-protect mark



The  mark is displayed when a P2 card is write-protected.

2) P2 card status


With the remaining memory display, the P2 card's remaining memory is indicated using a meter and as a percentage. With the used memory display, the P2 card's used memory is indicated using a meter and as a percentage. Depending on the status of the card, one of the following messages may be displayed.

FORMAT	An unformatted P2 card has been inserted.
ERROR:	A card which is not supported by the unit has been inserted.
NOT SUPPORTED:	A P2 card has not been inserted.
NO CARD:	

P2 card details display

When the cursor is moved to the slot whose P2 card status is displayed and  is pressed, the model number of the P2 card and other detailed information on the card will be displayed. When  is pressed again, the detailed information is cleared.

The card details are displayed as follows.

BRAND	: Panasonic
MODEL NO.	: AJ-P2C008HG
SERIAL NO.	: AEC06H0371
USER ID	:
	

3) P2 card remaining memory (or used memory) and total memory


In line with the format which was set by "Switching playback formats" (Page 30), the remaining memory (or used memory) and total memory of the P2 card are converted into minutes and displayed. Fractions of a minute are discarded so that the total of the remaining memory (or used memory) on each P2 card may not exactly correspond to the total memory.

4) Slot remaining memory (or used memory) total

A figure representing the total for the remaining memory (or used memory) of the cards in the two P2 card slots is displayed.

- The free memory of a write-protected P2 card is not included in the total free memory.

5) P2 card warning displays

 is displayed when the P2 card is in one of the following statuses:

Details of the warnings can be checked on the P2 card details display.

• RUN DOWN CARD:

When the number of times the card data has been rewritten has exceeded the standard

• DIR ENTRY NG CARD:

When the position of the folder does not comply with the standard

Displaying the SD memory card information

You can display the usage statuses of the SD memory cards on the screen, and check them.

- 1 Display the thumbnail display screen.
- 2 Press [MENU/MODE CHK].
- 3 Using ∇ , \triangle and \square , select “PROPERTY” – “DEVICES” – “SD CARD”, and press \square .
The following information is displayed.

SD STANDARD: Whether the SD memory card has been formatted in compliance with the SD/SDHC standard is displayed.

SUPPORTED: The card format complies with the SD/SDHC standard.

NOT SUPPORTED: The card format does not comply with the SD/SDHC standard.

USED: Used memory [bytes]

BLANK: Free memory [bytes]


TOTAL: Total memory [bytes]

NUMBER OF CLIPS: Number of clips contained on the SD memory card when the clips were copied onto an SD memory card with a proxy or P2 camera-recorder

PROTECT: Write-protect status

- Proxy recording is not possible with this unit.

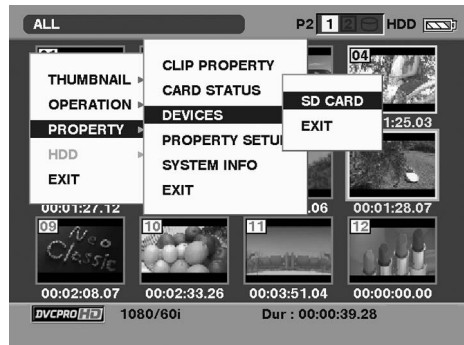

- 4 Press “OK” (\square).
- 5 Press [MENU/MODE CHK] to exit the procedure.



Clip playback

Playing back clips


1 Display the thumbnail display screen.



2 Using  or , move the yellow frame (cursor) to the target clip.

3 Press .

Playback starts from the clip where the cursor is positioned. When this clip has finished playing back, the subsequent clips with the same playback format are played back in turn, and when the last clip has been played back, the thumbnail screen is restored.

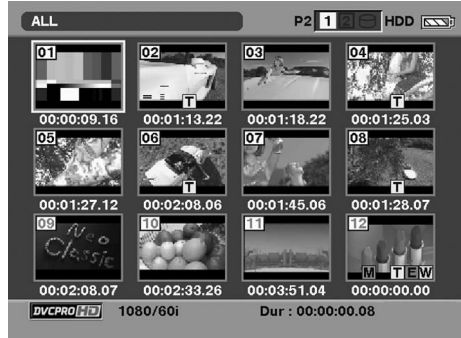- When "TEXT MEMO" is allocated to [USER] (Page 78), text memos can be inserted during playback (but shot marks cannot be inserted).




- When playing back a clip, there is no need to select it (provided that the bluish-green frame is displayed on the thumbnail).
- It is not possible to play back clips for which the  defective clip indicator or  unknown clip indicator (Page 32) is displayed.
- By changing the thumbnail display setting, you can play back only the clips you have selected, or play back only the clips in which text memos have been inserted, for instance.
- It is not possible to play back clips whose numbers are indicated in red. (Page 32) Change the playback format to the format used to record the clips. (Page 30)
- Up to 100 text memos can be inserted in one clip.

Basic playback operations



Play (▶)

When this button is pressed during stop, playback begins from the start of the selected clips. When it is pressed during playback, the variable speed search mode (Page 45) is set, and the clips are played back at the 1x speed.

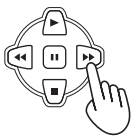

Rapid forward playback (▶▶)

When this button is pressed during playback, the clip currently selected is played rapidly in the forward direction (at 4x normal speed). When the thumbnail image is released, this type of playback is possible even during stop. If the button is held down, the playback speed is increased (to 32x normal speed). When it is pressed during pause, the next clip is selected for playback.



Rapid reverse playback (◀◀)

When this button is pressed during playback, the clip currently selected is played rapidly in the reverse direction (at 4x normal speed). When the thumbnail image is released, this type of playback is possible even during stop. If the button is held down, the playback speed is increased (to 32x normal speed). When it is pressed during pause, the previous clip is selected for playback.



Stop (■)



Pause (||)

When this button is pressed again, playback is resumed.

Variable-speed searches

You can change the playback speed and search for specific locations.

- 1 Press **[△]** during playback.
1X ▷ is displayed.
- 2 Press **[REVERSE]**, and change the playback speed.

X ▷ /X ▷▷ or X < /X << is displayed.

- Each time the button is pressed, the playback speed changes by one setting in the following sequence: 1/5x, 1x, 2x, 4x, 12x and 24x. No sound will be played back at the 12x or 24x speed.
- Use **[▶]** to increase the speed, and **[◀]** to decrease it.

To return to normal playback, press **[△]**.

Clip forward/reverse

- 1 Press **[⏸]** during playback to establish the pause mode.
- 2 Press **[▶]** or **[◀]**.
CLIP ▷▷ or CLIP <<◀ is displayed.

Rapid forward/rapid reverse playback

- 1 During playback, press **[▶]** or **[◀]**.
The clip is played back rapidly at 4x normal speed in the forward or reverse direction. When the button is held down, the speed increases (to 32x normal speed).
▷▷ or <<◀ is displayed.

To return to normal playback, press **[△]**.

Frame feed playback


- 1 Press **[⏸]** during playback to establish the pause mode.
- 2 Press **[REVERSE]**.
 - The clips are fed frame by frame in the forward direction using **[▶]** and in the reverse direction using **[◀]**.
◻◻▷ or <◻◻ is displayed.
 - When the button is held down, frame feeding is continued.

To return to normal playback, press **[△]**.

Repeat playback

The selected clip is played repeatedly.

- 1 Press **[THUMBNAIL/MODE]** to display the thumbnail display off screen.
- 2 Press **[MENU/MODE CHK]**.
- 3 Using **[▽]**, **[△]** and **[◻]**, select “PLAYBACK FUNCTIONS” – “REPEAT PLAY” – “ON”, and press **[◻]**.
- 4 Press **[MENU/MODE CHK]** twice.
The repeat playback icon is displayed on the thumbnail display off screen.

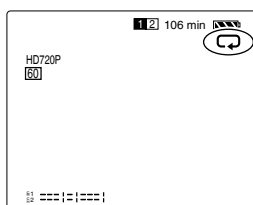

Repeat playback icon

- 5 Press **[THUMBNAIL/MODE]** to display the thumbnail display screen.
- 6 Using **[▶]** or **[◀]**, move the yellow frame (cursor) to the repeat playback clip, and press **[◻]**.
- 7 Press **[MENU/MODE CHK]**.
- 8 Using **[▽]**, **[△]** and **[◻]**, select “THUMBNAIL” – “SELECTED CLIPS”, and press **[◻]**.
- 9 Press **[△]**.
The selected clip is now played back repeatedly.

- Playback is repeated until **[▽]** is pressed.
- If a clip has not been selected, all the currently displayed clips which can be played back will be played back repeatedly.
- To turn off the repeat playback setting, select “OFF” in step 3.
- When rapid forward or rapid reverse playback is performed during repeat playback, playback stops after the first playable clip or last playable clip is played back.

Clip playback (continued)

Playback from text memo position

1 Display the thumbnail display screen.

2 Press [MENU/MODE CHK].

3 Using ∇ , Δ and \square , select “THUMBNAIL” – “TEXT MEMO CLIPS”, and press \square .

Thumbnails of the clips to which text memos were added now appear at the top of the LCD monitor screen. Information on the text memo of the clip selected by the cursor appears at the bottom of the LCD monitor screen.




Thumbnail display area

Indicated here are the still images associated with the text memos.

Indicated here is the total number of text memos which were added to the clips.

4 Using \blacktriangleright and \blacktriangleleft , move the cursor to the clip which is to be played back, and press \square .

The cursor moves to the bottom of the LCD monitor screen.

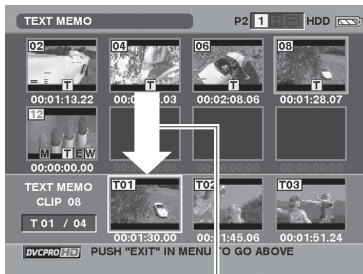

The cursor moves here.

5 Using \blacktriangleright or \blacktriangleleft , move the cursor to the number of the text memo to be played back, and press Δ .

Playback starts from the time code position of the text memo where the cursor is positioned. When playback ends at the end of the clip, the thumbnail screen is restored, and the cursor returns to the time code position where playback was started.

6 Press [MENU/MODE CHK], and then select “EXIT” using ∇ , Δ and \square .

The cursor returns to the top of the thumbnail screen.

Text memos can be inserted while clips are being played back or recorded.

Deleting text memos

- 1** Proceed with steps 1 to 4 in “Playback from text memo position”, and select the text memos in the clips.
- 2** Move the cursor to the text memo to be deleted, and press **[M]**.
- 3** Press **[MENU/MODE CHK]**, and then select “OPERATION” – “DELETE” using **[V]**, **[A]** and **[M]**.
- 4** Select “YES”, and press **[M]**.
The text memo is now deleted.

Dividing and copying clips using text memos

- 1** Proceed with steps 1 to 4 in “Playback from text memo position,” and select the text memos in the clips.
- 2** Move the cursor to the text memo to be copied, and press **[M]**.
A multiple number of text memos can be selected.
- 3** Press **[MENU/MODE CHK]**, and then select “OPERATION” – “COPY” using **[V]**, **[A]** and **[M]**, and press **[M]**.
- 4** Using **[V]** or **[A]** and **[M]**, select the slot with the copy destination card, select “YES”, and press **[M]**.
Copying is now executed.
- 5** When the completion message has appeared, press “OK” (**[M]**).

- The block between the selected text memo and the next text memo is copied. If there is no text memo after the selected text memo, the block from the text memo position to the end of the clip will be copied.
- While copying is underway, the progress made in copying and cancel are displayed. To stop the copying at any time, press **[M]**. The “YES/NO” confirmation screen now appears. Using **[V]** and **[M]**, select “YES”.

Replacing thumbnail images


The thumbnail display images of the clips to which text memos were added at the top of the LCD monitor screen can be replaced with still images to which the time stamps were added at the bottom of the screen.

- 1** Proceed with steps 1 to 4 in “Playback from text memo position.”
- 2** Using **[▶]** or **[◀]**, move the cursor to the still image to which the time stamp number has been added and whose thumbnail is displayed, and press **[MENU/MODE CHK]**.
- 3** Using **[V]**, **[A]** and **[M]**, select “OPERATION” – “EXCH. THUMBNAIL”, and press **[M]**.
- 4** Select “YES”, and press **[M]**.
The thumbnail display is replaced with the selected still image.

- You can view the thumbnail change position (number of frames from the start) using the clip information display “THUMBNAIL” item. (Page 39) “0” is normally displayed for the thumbnail of the start frame.
- Playback from a thumbnail begins from the start of the clip even when the thumbnail has been changed.

Outputting images to an external monitor for playback

You can connect an external monitor to the output connector of the unit, output clips to the external monitor and play them back on the monitor.

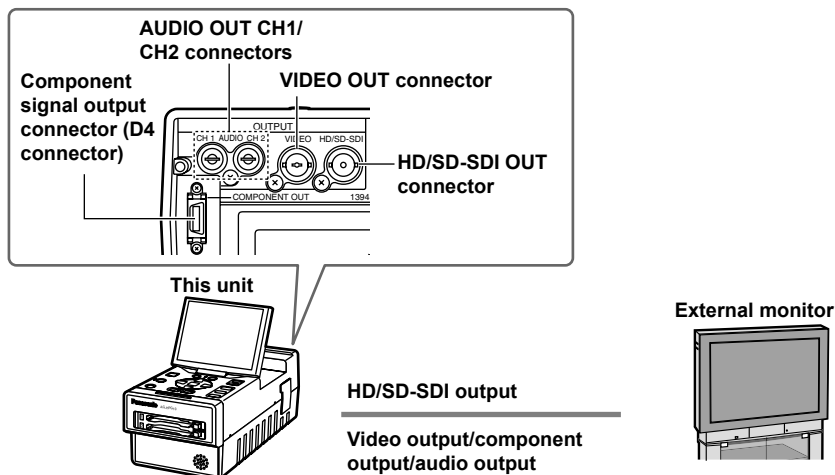

Setting the outputs

- 1 Hold down [POWER] for at least 2 seconds to turn the power on.
- 2 Press [THUMBNAİL/MODE].
The thumbnail display off screen appears.
- 3 Press [MENU/MODE CHK].
- 4 Using ∇ and \triangle , select “AV OUT SETUP” setting item, and press \square .
- 5 Using ∇ and \triangle , select the setting, and press \square .
- 6 Press [MENU/MODE CHK] to end the procedure.

When the PC mode (Page 21) has been selected, no sound will be output from any of the connectors except for the headphone jack.

Adjusting the volume level during recording and playback

The volume level of the sound from the speaker or headphone jack can be adjusted by pressing \square on the thumbnail display off screen during recording or playback.

CMPNT/SDI SEL :	This is used to set the format of the D connector output and HD/SD-SDI output signals.	
(When SYSTEM FREQ is set to 59.94 Hz)	<u>AUTO</u>	The signals corresponding to the setting for SYS FORMAT item (Page 76) on the RECORDING SETUP screen are output.
	1080i	720P signals are cross-converted to 1080i signals, and output.
	480i	480i format signals are output; 720P/1080i signals are down-converted to 480i and output.
(When SYSTEM FREQ is set to 50 Hz)	AUTO	The signals corresponding to the setting for SYS FORMAT item (Page 76) on the RECORDING SETUP screen are output.
	1080i	720P signals are cross-converted to 1080i signals, and output.
	576i	576i format signals are output; 720P/1080i signals are down-converted to 576i and output.
SDI OUT	<u>ON</u>	SDI signals are output.
	OFF	SDI signals are not output.
SDI METADATA	<u>ON</u>	The meta-data is superimposed onto the HD-SDI signals.
	OFF	The meta-data is not superimposed onto the HD-SDI signals.
SDI EDH	<u>ON</u>	EDH is superimposed onto the SD-SDI signals.
	OFF	EDH is not superimposed onto the SD-SDI signals.
SETUP	This is used to adjust the setup level of the video output signals during playback in the 480i format.	
	• This item is not displayed on the menu when SYSTEM FREQ is set to 50 Hz.	
	0%	The setup level of the video output signals is set to 0 %.
	<u>7.5%A</u>	The setup level of the video output signals is set to 7.5 %.
The setup level for component output (D connector), SDI output and 1394 input recording is set to 0 %.		

_____ The underlined settings are the factory mode settings.

The HD/SD-SDI output signals comply with the following standards.


HD : SMPTE 292M, 296M, 299M

SD : SMPTE259M-C/272M-A, ITU-R BT. 656-4

Recording data on P2 cards

1394 input recording

You can connect a digital video component equipped with a 1394 connector, and digitally record video signals, audio signals or time codes, etc. on the unit.

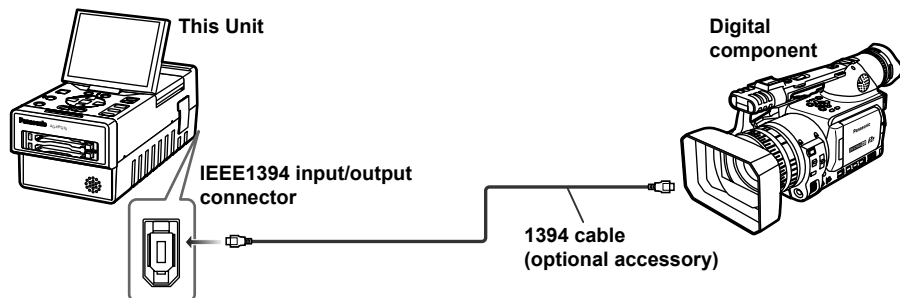


1 Hold down [POWER] for at least 2 seconds to turn the power on.

The thumbnail screen appears.

2 Press [THUMBNAIL/MODE].

The thumbnail display off screen appears.

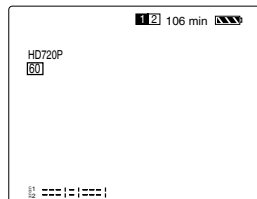

3 Press [MENU/MODE CHK].

4 Using ∇ , \triangle and \square , select the "RECORDING SETUP"– "SYS FORMAT" setting, press \square , and ensure that the 1394 video input image format and the unit's recording format are the same.

For details, refer to setting menu "RECORDING SETUP" screen. (Page 76)

5 As in step 4, after selecting "RECORDING SETUP" using ∇ and \square , set the time code, user's bit and so on.

For details, refer to setting menu "RECORDING SETUP" screen. (Page 76)


6 Press the two [REC] buttons together.

Recording now starts.

- To stop the recording, press ∇ .
- While recording is underway, text memos or shot marks assigned to [USER] (Page 78) can be inserted.
- No signals are recorded if video signals are not input to the IEEE1394 input/output connector.

-
- 1394 input signals will not be recorded if the system format has been set to 720P/30PN, 720P/24PN or 720P/25PN.
 - When the PC mode (Page 21) has been selected, the 1394 input signals cannot be recorded.
 - When the 1394 connector has been used to connect the unit to a camera recorder with an external device control function, the unit can be made to start recording, pause recording and stop recording using the settings established by the camera recorder.
For further details, refer to the operating instructions of the camera recorder.
-

- Before connecting or disconnecting the 1394 cable, you must turn off the power of the component connected to the unit.
- When connecting the unit to a component which uses a 6-pin type of 1394 connector, thoroughly check the 1394 cable and shapes of the connectors at its ends before initiating the connection. Connecting the cable the wrong way round may result in damaging the unit's inside parts and trouble.

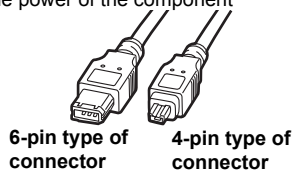

- Before recording signals from an external device, check that video signals are being input.
- While signals from an external device are being recorded, do not stop the signal output at the external device or disconnect the device's cable. Otherwise, the device may not be recognized when recording is undertaken again.
- While signals from an external device are being recorded, do not change the format of the signals which are being output from the external device. Otherwise, it will not be possible for the signals to be recorded properly.
- Once the 1394 cable has been connected to the 1394 connector, do not subject the connector to heavy external loads. Doing so may damage the connector.
- The automatic video recording function on a DVD component may not work properly. If this is the case, record the images manually.

2-slot continuous recording

If P2 cards have been inserted into both of the P2 card slots, you can continuously record images first on one card and then on the other. While images are being recorded on one card, you can replace the other card with a fresh card and in this way record continuously onto 3 or more cards. (This is called hot swap recording.) However, the fresh P2 card may not be recognized when it is inserted into the empty slot at certain timings (Before and after when recording continuously from one slot to the other). It is recommended that you insert a fresh P2 card while the card on which images are being recorded still has at least one minute of remaining memory. When "SLOT SEL" is assigned to [USER] using the "USER" item (Page 78) on the "SW MODE" screen, you can change the slot targeted for recording at the touch of a button.

- Changing slots is not possible while recording is in progress, so do this in the recording standby status.
- The unit does not support hot swap playback.

Waveform monitor displays

You can display the simplified waveform monitor on the recording-in-progress screen, and monitor the images being recorded, for instance.

The monitor can be displayed when the "WFM" item on the setting menu "DISPLAY SETUP" screen is set.

- When "WFM" is assigned to [USER] using the "USER" item (Page 78) on the "SW MODE" screen, the selected setting will change in sequence from "WAVE" to "VECTOR" and then to "OFF" each time [USER] is pressed.
- The display appears during clip playback and when 1394 input signals are being supplied.
- The monitor will not be displayed during playback in the "USB HOST" mode.

Time code displays

You can change what is displayed in the time code display area. (Page 66)

1 Press [COUNTER].

Each time the button is pressed, the data changes as follows.

TC:	Time code displays
UB:	User's bit value
COUNTER:	Counter display (this appears only during 1394 input recording)
FR:	Frame rate information
No display:	No data displayed

Resetting the counter value

On the thumbnail display off screen, press [RESET/TC SET] while the counter value is displayed.

Recording data on P2 cards (continued)

1394TC preset mode

The TC initial value can be synchronized when images are shot using multiple cameras. Preset operations cannot be performed during recording or playback. Perform them in the stop status.

- 1 Connect the two units using a 1394 cable, and turn on their power.
- 2 Set the camera recorder to the status in which the video signals are output from the 1394 connector.
 - Select the same recording format for the camera recorder and the unit.

All the following operations are performed using the controls on the unit.

 - Basic operations on the setting menus. (Page 74)
- 3 Select “OFF” as the “1394 TC REGEN” item setting on the setting menu “RECORDING SETUP” screen, and set the counter to the TCG display.
 - You cannot do this if you have selected REGEN.
- 4 Select “ON” as the “1394 IN PRESET” item setting on the “RECORDING SETUP” screen.
 - “1394TC” appears on the screen. (Page 71)
- 5 Press [RESET/TC SET]. The TCG value is preset to the TC value which was input from the 1394 connector.
 - “TC SET OK” is displayed for about 2 seconds in the center of the screen.

Setting the time code

In the setup menus, “RECORDING SETUP” screen, set the following time code related items. (Page 76)


- 1394 TC REGEN
- TC MODE
- TCG
- TC PRESET

When “ON” is set for the “1394 TC REGEN” item, the settings of the items shown above cannot be changed.

Specifying the time code (TC PRESET)


Set “TC PRESET” so you can record a value of your choice as the initial setting for the time code to be used at the start of recording.

- 1 Hold down [POWER] for at least 2 seconds to turn the power on.
- 2 Select “OFF” as the “1394 TC REGEN” item setting on the setting menu “RECORDING SETUP” screen.
 - Basic operations on the setting menus. (Page 74)
- 3 Select “YES” at the “TC PRESET” item on the “RECORDING SETUP” screen, and press [u].


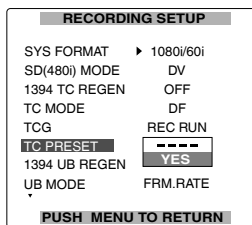


- 4 When the following screen appears, set the time code value.

- Using [v] and [b], select the time code value.

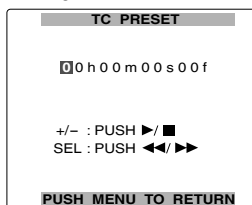


Using [v], move to the next digit, and using [v] and [b], select the time code value again.

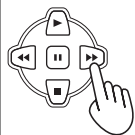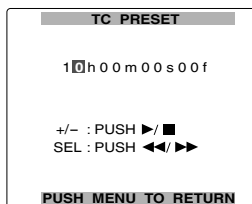

If [RESET/TC SET] is pressed while setting the time code, the time code value will be reset to zero.

5 After the time code value has been set, press [MENU/MODE CHK].

6 Using Δ , move to “YES”, and press \square .

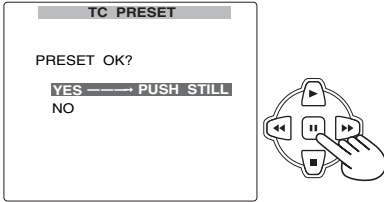

7 Press [MENU/MODE CHK] 2 times to release the menu mode.

Set the user's bit

Setting user's bit allows you to store 8-digit information (such as the date and time) in the hexadecimal format on the sub code track. User's bit is automatically saved in the memory and retained after you turn off the power.


1 Hold down [POWER] for at least 2 seconds to turn the power on.

2 Select “OFF” as the “1394 UB REGEN” item setting on the setting menu “RECORDING SETUP” screen.

- Basic operations on the setting menus. (Page 74)

3 Select “USER” as the “UB MODE” item setting on the “RECORDING SETUP” screen.


4 Select “YES” at the “UB PRESET” item on the “RECORDING SETUP” screen, and press \square .

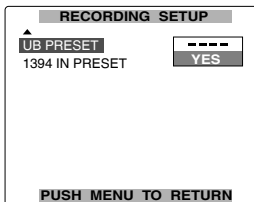


5 Set the user's bit.

Using ∇ and Δ , select the user's bit characters.

- You can use numbers from 0 to 9 and letters from A to F.

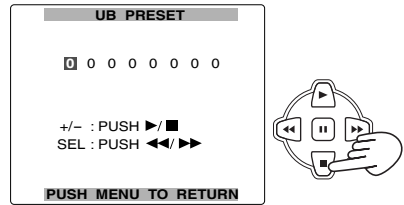


Using \triangleright , move to the next digit, and press ∇ and Δ again to select the character.

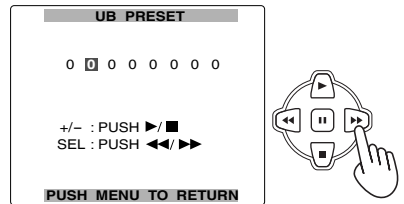

If [RESET/TC SET] is pressed while setting the user's bit, the user's bit value will be reset to zero.

6 After the user's bit has been set, press [MENU/MODE CHK].


7 Using Δ , move to “YES”, and press \square .

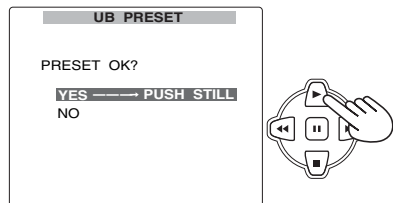

8 Press [MENU/MODE CHK] 2 times to release the menu mode.

Copying data from P2 cards to the hard drive

You can connect a hard drive equipped with a USB 2.0 or 1394 connector, and copy data from P2 cards onto the hard drive.

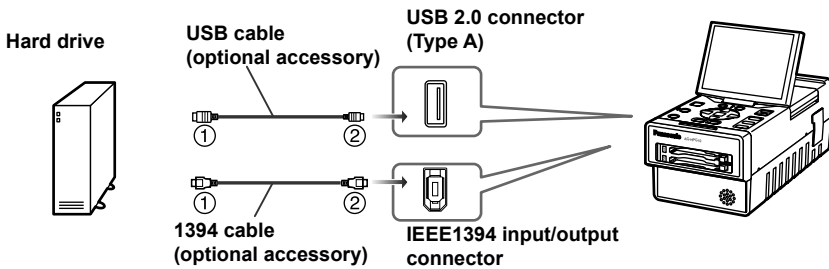

The following conditions must be met when using a USB connection.

- This unit supports only USB 2.0. Use a USB 2.0-compatible hard drive.
- Only one hard drive must be connected.
- No operations can be performed if a hub or other device is connected between the unit and hard drive. A USB cable more than 3 meters long must not be used. Otherwise, malfunctioning may occur.

The following conditions must be met when using a 1394 connection.

- The Apple machine must support 1394.a (SBP2 protocol).
- Only one hard drive must be connected.
- No operations can be performed if a hub or other device is connected between the unit and hard drive.

-
- Use a hard drive which meets the following conditions.
 - 1) The hard drive may be formatted for use with the unit.
 - 2) The hard drive must be used within its guaranteed operating ranges (temperature, etc.).
 - 3) The hard drive must not be installed where it will be susceptible to vibration or be unstable.
 - Hard drives with a memory size of 2 TB or more are not supported.
 - In the case of some hard drives, the intended operations may not be performed properly.
 - A hard drive with a SATA (serial ATA) or PATA (parallel ATA) interface connected through a USB conversion cable may not be recognized.
 - While formatting or copying is in progress, do not disconnect the cables, eject the P2 cards or turn off the power of the unit or hard drive. Such actions will require the power to be turned on again.
 - A hard drive is a high-precision device: as such, when it is used under certain conditions, it may quite possibly fail to read or write data.

Panasonic disclaims all liability for the loss of data caused by a failure of or any form of trouble occurring in the hard drive, and also for any direct and indirect damages suffered as a result of such failure or trouble. Users are asked to bear this in mind.

- When the hard drive used for copying data from the unit has been replaced by a PC or other device, no guarantees can be made for the subsequent operations involving the unit or for the data on the hard drive.
- It is recommended that you repair P2 cards containing defective clips* before copying their data using the unit.

*A "defective clip" is a clip with some kind of problem in its recording which was caused because a P2 card was ejected or the power was turned off while its recording was still in progress, and it is indicated by the mark when the thumbnail screen is displayed.

- If, when the drive mount converter which Panasonic makes available free of charge from its web site given below is used and the hard disk has been connected to a Windows PC, the hard disk partition can be mounted in the specified folder. Use this when there is an overlap between one or more already allocated network and drives so that one or more partitions are concealed as a result.


<https://www.pavc.panasonic.co.jp/pro-av/>

Copying data from P2 cards to the hard drive (USB HOST mode)

Switching to the USB HOST mode

- 1** Hold down [POWER] for at least 2 seconds to turn the power on.
The thumbnail screen now appears.
- 2** Press [THUMBNAIL/MODE] to display the thumbnail display off screen.
- 3** Press [MENU/MODE CHK].
- 4** Using \downarrow , \uparrow and \square , select “OTHER FUNCTIONS” – “PC MODE”, and press \square .
- 5** Using \downarrow and \uparrow , select “USB HOST”, and press \square .
- 6** Press [MENU/MODE CHK] twice to display the thumbnail display off screen.

- 7** Hold down [THUMBNAIL/MODE] for at least 2 seconds.
The USB HOST mode is now established, and “USB HOST” appears at the bottom of the thumbnail screen.

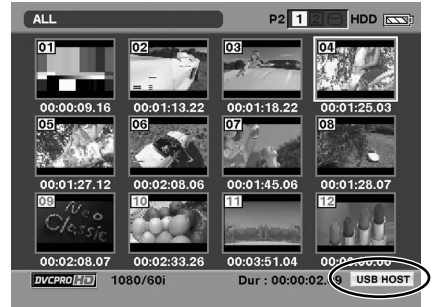

- Use a hard drive with enough memory to accommodate the data to be copied.
- Clips on the hard drive cannot be played back.
- In the USB HOST mode, 1394 input signals cannot be recorded.
- In the USB HOST mode, no sound will be output from any of the connectors except for the headphone jack.

To exit the HOST mode

- 1** Hold down [POWER] for at least 2 seconds to turn off the unit's power.
The PC mode cannot be released simply by holding down [THUMBNAIL/MODE].

Usable hard drives

The following hard drive can be used.

- Panasonic portable hard disk unit for P2 store (AJ-PCS060G)
- Any hard drive which can be connected using USB 2.0

- USB bus power (5 V, 0.5 A) is also supported, but some hard drives cannot be started up using it. If this is the case, supply power from a separate source to the hard drive.
- Some hard drives may not operate properly.
- Do not use USB memories or other removable media.

Copying data from P2 cards to the hard drive (USB HOST mode) (continued)

Types of hard drives and usable functions

The functions that can be used differ from one hard drive to another. The hard drive type is displayed following [PARTITION:] on the left of the HDD EXPLORE screen in the unit's HOST mode.


Hard drive type	Features	Functions that can be used
TYPE S	This is a special format for writing and reading all the data on one card at a time at high speed. This is the format used when a hard drive is formatted by the unit.	Writing and reading all the data on one card at a time, thumbnail displays, reading data one clip at a time, formatting
P2STORE	This refers to the P2 store (AJ-PCS060G) hard drive. It cannot be used to write data.	Reading all the data on one card at a time, thumbnail displays, reading data one clip at a time
FAT	FAT16 or FAT32 is the first basic partition on a PC, etc., and the [CONTENTS] folder must be in the root folder of this partition.	Thumbnail displays, reading data one clip at a time, formatting * After this drive has been formatted by the unit, it is treated as a "TYPE S" drive.
OTHER	All other types of hard drives * This applies when the [CONTENTS] folder is not in the root folder or a file system other than FAT16 and FAT32, such as NTFS, is used.	Formatting * After this drive has been formatted by the unit, it is treated as a "TYPE S" drive.

Formatting the hard drive

Formatting initializes the hard drive to a format which can be used by TYPE S.

• Bear in mind that when the hard drive is formatted, all the existing data on that drive will be erased.

- 1 Switch to the USB HOST mode.
- 2 Connect the USB hard drive.
- 3 Press [MENU/MODE CHK].
- 4 Using \downarrow , \uparrow and \square , select “HDD” – “EXPLORE”, and press \square .
The HDD EXPLORE screen is opened.
- 5 Press [MENU/MODE CHK], select “OPERATION” – “FORMAT (HDD)” using \downarrow , \uparrow and \square , and press \square .
- 6 Select “YES”, and press \square .
- 7 When the confirmation message appears again, select “YES”, and press \square .
The hard drive is now formatted.
- 8 When the completion message has appeared, press “OK” (\square).

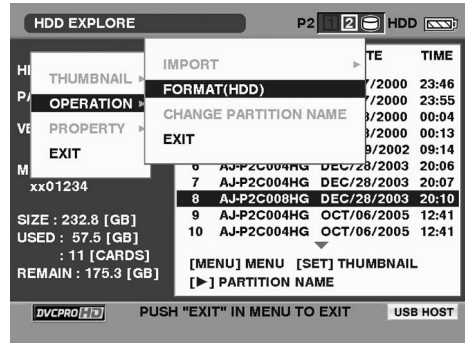

Copying data from P2 cards to the hard drive (USB HOST mode) (continued)

Exporting data to a hard drive in 1-card increments

If you are using a TYPE S hard drive, you can export all the data on one P2 card at a time to the hard drive (write data from P2 cards onto the hard drive). Before proceeding, use the unit to format the hard drive. The data of up to 23 cards can be stored on the hard drive. The computer or other device used will recognize each P2 card from which the data is exported to be a separate drive.

- 1 Switch to the USB HOST mode.
- 2 Connect the USB hard drive.
Format the hard drive if it has not already been formatted by the unit.
Refer to "Formatting the hard drive" (Page 57).
- 3 Insert the P2 card.
- 4 Press [MENU/MODE CHK].
- 5 Using \downarrow , \uparrow and \square , select "HDD" – "EXPORT", and press \square .

- A progress bar is displayed while the data is being exported.
- To stop exporting the data at any time, press \square , move the cursor to "YES" on the "CANCEL" confirmation display, and press \square .
- It will take less time for the exporting to be completed if you set it up so that verification of the two sets of data is not required during exporting. To do this, set the menu item "HDD" – "SETUP" – "VERIFY" to "OFF".
- The copying of the P2 card data will also be terminated if the process is aborted during verification of the two sets of data.



When the exporting is completed, "COPY COMPLETED!" appears on the screen.



- 6 Select the number of the P2 card slot where the P2 copy source card was inserted, and press \square .
- 7 Select "YES", and press \square .

Hard drive data display

You can display the hard drive information.

- 1 Switch to the USB HOST mode.
- 2 Connect the USB hard drive.
- 3 Press [MENU/MODE CHK].
- 4 Using ∇ , \triangle and \square , select "HDD" – "EXPLORE", and press \square .
The hard drive information is displayed.

With a TYPE S or P2STORE hard drive

7

HDD	NO.	MODEL	DATE	TIME
1	AJ-P2C008HG	JAN/17/2000	23:46	
2	AJ-P2C004HG	JAN/17/2000	23:55	
3	AJ-P2C008HG	JAN/18/2000	00:04	
4	AJ-P2C008HG	JAN/18/2000	00:13	
5	AJ-P2C008HG	MAR/19/2002	09:14	
6	AJ-P2C004HG	DEC/28/2003	20:06	
7	AJ-P2C004HG	DEC/28/2003	20:07	
8	AJ-P2C008HG	DEC/28/2003	20:10	
9	AJ-P2C004HG	OCT/06/2005	12:41	
10	AJ-P2C004HG	OCT/06/2005	12:41	

1 PARTITION : TYPE S
 2 VENDOR : Panasonic
 3 MODEL : xx01234
 4 SIZE : 232.8 [GB]
 5 USED : 57.5 [GB]
 6 REMAIN : 175.3 [GB]

[MENU] MENU [SET] THUMBNAIL
 [▶] PARTITION NAME

DVCPRO [F1] PUSH "EXIT" IN MENU TO EXIT USB HOST

1. PARTITION	Type of hard drive
2. VENDER	Name of vender
3. MODEL	Hard drive model name
4. SIZE	Total memory size of hard drive
5. USED	Amount of hard drive memory used (unit: GB) and area of P2 card used (unit: cards)
6. REMAIN	Remaining hard drive memory (unit: GB)
7. Partition number	Partition (unit equivalent to one P2 card) number inside hard drive

- Using \triangleright and \triangleleft , you can switch the display between the list with the dates/times and the names of the partitions given by the user.
- While the thumbnail display of the hard drive is on the screen, press [MENU/MODE CHK], and select "OPERATION" – "CHANGE PARTITION NAME". You can now give a name (consisting of up to 20 characters) to the partition.

With FAT

HDD	NO.	MODEL	DATE	TIME
1	FAT32			

1 PARTITION : FAT
 2 VENDOR : Panasonic
 3 MODEL : xx01234
 4 SIZE : 27.9 [GB]
 USED : - [GB]
 : - [CARDS]
 REMAIN : - [GB]

[MENU] MENU [SET] THUMBNAIL

DVCPRO [F1] PUSH "EXIT" IN MENU TO EXIT USB HOST

Copying data from P2 cards to the hard drive (USB HOST mode) (continued)



Thumbnail displays of clips on the hard drive

You can also display and manage thumbnails of the clips stored on the hard drive just as you can with clips on the P2 cards installed in the unit.

1 Display the HDD EXPLORE screen.

2 Using ∇ and \triangle , select the partition to be displayed, and press \square .

The clips of the partition are now displayed as thumbnails.

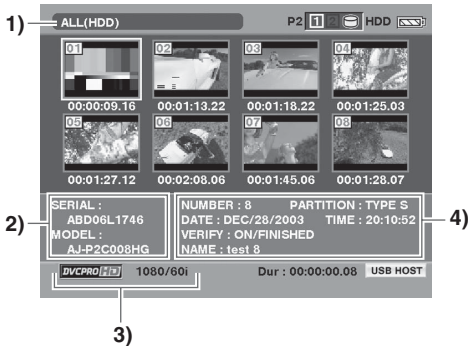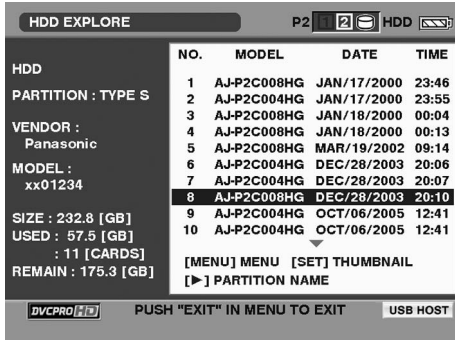

1 Display statuses

Displays the thumbnail display status of the hard drive clips.

2 Partition information

The following information is displayed.

SERIAL:	Serial number of P2 card
MODEL:	Model name of P2 card

3 Recording mode and system format

The recording mode of the clip at the cursor position and system format are displayed.

4) Disk information

NUMBER (NO.):	Partition number (starting from 1)
DATE/TIME:	Partition recording date/time
VERIFY:	Setting for verifying during recording, and verifying results
ON	The two sets of data have been verified and found to match.
ON FAILED:	The two sets of data have been verified and found not to match.
OFF:	The two sets of data were not verified.
* “-” is displayed in the case of a P2 store hard drive.	
NAME:	Partition name

- When the menu is displayed and “EXIT” is selected, the HDD EXPLORE screen is restored.
- If necessary, you can change the displays on the thumbnail screen. The steps taken to do this are the same as for the thumbnail displays for cards. Refer to “Changing the displays on the thumbnail display screen” (Page 33).
- Even with a FAT type of hard drive, clips after the first thousand clips will not be displayed.

Displaying the clip information

You can display the meta-data of the clips stored on the hard drive. This information is the same as the properties of the clips on the P2 cards.

1 Select the target clip on the thumbnail screen of the hard drive.

You can display detailed information about clips on the screen, and check it.

2 Press [MENU/MODE CHK].

3 Using ∇ , \triangle and \square , select “PROPERTY” – “CLIP PROPERTY”, and press \square .


For details, refer to “Displaying the clip information” (Page 38).

Importing data from a hard drive to P2 cards

Importing clips one partition at a time from a TYPE S or P2 store hard drive

You can import data (load data from the hard drive to a P2 card) at high speed one partition at a time (one card at a time) onto a P2 card of the same size as the original card.

- 1 Insert the P2 card that will serve as the import destination.
- 2 Press the [MENU/MODE CHK].
- 3 Using ∇ , \triangle and \square , select “HDD” – “EXPLORE”, and press \square .
- 4 Using ∇ and \triangle , select the copy source partition, and press \square .
- 5 Press [MENU/MODE CHK].
- 6 Using ∇ , \triangle and \square , select “OPERATION” – “IMPORT” – “ALL CLIP”, and press \square .

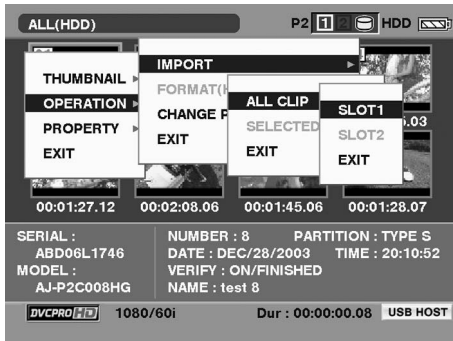

- 7 Move the cursor to the number of the P2 card slot which serves as the import destination and which contains a formatted P2 card, and press \square .
- 8 Select “YES”, and press \square .
Importing now begins.
When importing is completed, “COPY COMPLETED!” appears on the screen.

- When data has been imported to a P2 card which is different from the source P2 card, some clips may be incomplete (in which case, they will be indicated by the \square indicator). If this is the case, use the connecting function to reconfigure these clips. Refer to “Connecting incomplete clips” (Page 36).
- Using a menu setting, you can choose whether to verify the two sets of data when copying.

Importing one clip at a time to a P2 card

You can select the hard drive clips, and import them onto a P2 card.


- 1 Insert the P2 card that will serve as the import destination.
- 2 Press [MENU/MODE CHK].
- 3 Using ∇ , \triangle and \square , select “HDD” – “EXPLORE”, and press \square .
- 4 Using ∇ and \triangle , select the copy source partition, and press \square .
- 5 Select the clip to be copied.
- 6 Press [MENU/MODE CHK].
- 7 Using ∇ , \triangle and \square , select “OPERATION” – “IMPORT” – “SELECTED CLIPS”, and press \square .
- 8 Using ∇ and \triangle , select the number of the P2 card slot whose data is to be imported, and press \square .
- 9 Select “YES”, and press \square .
Importing now begins. When importing is completed, “COPY COMPLETED!” appears on the screen.

- Verifying is not executed when importing one clip at a time.
- The operation involved in importing one clip at a time is similar to copying the clips.
For the precautions to be observed when importing one clip at a time, refer to “Copying clips” (Page 37).

Copying data from P2 cards to the hard drive (1394 HOST mode)

Switching to the 1394 HOST mode

- 1 Turn on the power of the hard drive (which supports 1394.a SBP2) to be connected, connect it to the unit using the IEEE1394 cable, and hold down [POWER] on the unit for at least 2 seconds to turn on its power. The thumbnail screen now appears.
- 2 Press [THUMBAIL/MODE] to display the thumbnail display off screen.
- 3 Press [MENU/MODE CHK].
- 4 Using ∇ , \triangle and \square , select "OTHER FUNCTIONS" – "PC MODE", and press \square .
- 5 Using ∇ and \triangle , select "1394 HOST", and press \square .
- 6 Press [MENU/MODE CHK] twice to display the thumbnail display off screen.
- 7 Hold down [THUMBAIL/MODE] for at least 2 seconds. The 1394 HOST mode screen now appears.

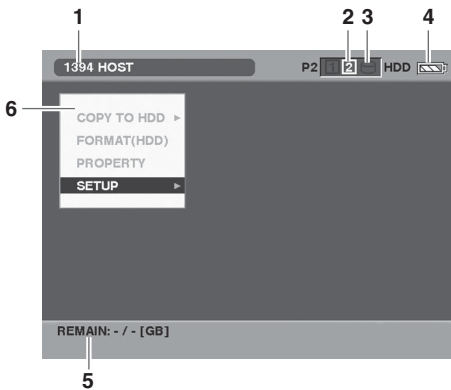


- | | |
|------------------------|--|
| 1. Mode display | 1394 HOST mode is displayed here. |
| 2. P2 card slot number | The numbers of the P2 card slots where P2 cards have been inserted are displayed in white. |

- | | |
|--|---|
| 3. Hard drive status display | The status is displayed in white if the hard drive is connected and can be used, in black when it is not connected, and in red when data cannot be copied because of its formatting or other reasons. If you plan to copy data onto a hard drive indicated in red, format the hard drive first. |
| 4. Remaining battery charge | The remaining battery charge is displayed here. |
| 5. Remaining hard drive memory display | The remaining memory and total memory of the hard drive are displayed here. "-/-" indicates that the hard drive is not connected. |
| 6. Menu display | The menu used in the 1394 HOST mode is displayed here. |

- Connect the unit and the hard drive using the 1394 cable. Do not connect (using a chain or hub, for instance) a multiple number of hard drives even if no power is being supplied (to the chain or hub).

Formatting the hard drive

- 1 Using ∇ and \triangle , select "FORMAT (HDD)", and press \square .

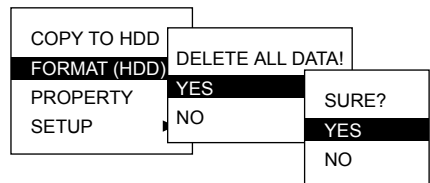

- 2 Select "YES", and press \square .

- 3 When the confirmation message appears again, select "YES", and press \square .


Formatting now begins. (Formatting will be completed in about 2 or 3 seconds.)

- Bear in mind that all the data will be erased on the hard drive being formatted.

Copying data from P2 cards to the hard drive

- Use a hard drive with enough memory to accommodate the data to be copied.
- Proceed with copying after checking that the unit has a sufficient remaining battery charge.

1 After inserting the copy source P2 card into the unit's P2 card slot, select "COPY TO HDD" using ∇ and \triangle , and press \square .

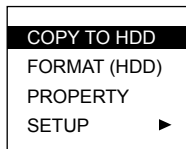


- The data is copied onto the hard drive one card at a time.

2 Using ∇ and \triangle , select the card slot, and press \square .

Then select "YES" using \triangle , and press \square .

Copying now begins.

- To stop copying at any time, press \square . Select "YES" on the confirmation screen, and press \square .
- The data of up to 15 cards can be stored on the hard drive.

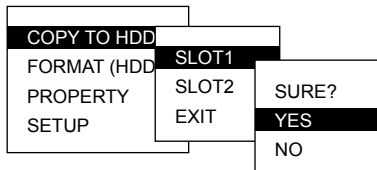

To verify (inspect the two sets of data) after copying data onto a hard drive


Switch to the 1394 HOST mode, and select "SETUP" – "VERIFY" – "ON" using ∇ , \triangle and \square , and press \square .

- The copying of the P2 card data will also be terminated if the process is aborted during verification of the two sets of data.

Hard drive status displays

You can display the status of the hard drive which is connected to the unit.

1 Using ∇ and \triangle , select "PROPERTY", and press \square .

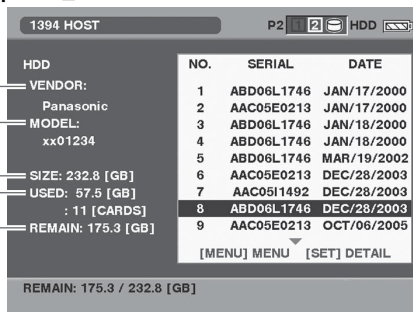

1. VENDER	Name of vender
2. MODEL	Hard drive model name
3. SIZE	Total memory size of hard drive
4. USED	Amount of hard drive memory used (unit: GB) and area of P2 card used (unit: cards)
5. REMAIN	Remaining hard drive memory (unit: GB)

2 Using ∇ and \triangle , select the partition, and press \square .

Detailed information of the partition is now displayed.


3 Press [MENU/MODE CHK] to complete the process.

- You cannot copy data from a hard drive onto a P2 card.
- Supply power from a source other than the 1394 bus. (Power is not supplied from the unit itself.)
- No guarantees for operation are given if the 1394 HOST mode is established first without connecting the hard drive (which supports 1394. a SBP2) and then the hard drive is connected. In a case like this, turn off the power, turn it back on, and release the 1394 HOST mode.
- In the 1394 HOST mode, the clips in the partition will not be displayed as thumbnails.
- In the 1394 HOST mode, no signals can be output to an external monitor.

Editing by means of external devices

Editing the P2 card data (USB DEVICE mode/1394 DEVICE mode)

You can connect a personal computer to the unit using a USB cable (for a Windows machine) or a 1394 cable (for a Macintosh machine), and operate the image data on the unit's P2 card from the computer.

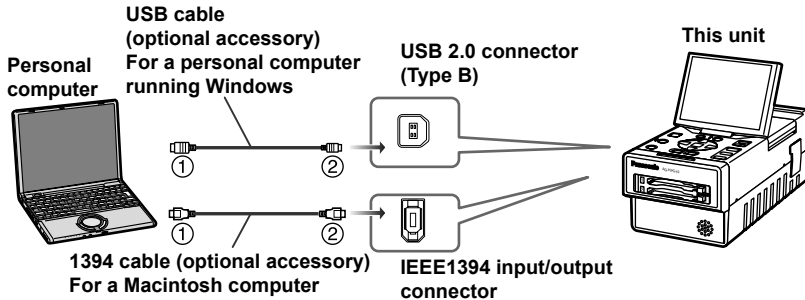

Editing in the USB DEVICE mode

The following conditions must be met when using a USB connection.

- The PC with the hard drive must run Windows 2000 or Windows XP.
- When making a USB connection for the first time, install the P2 software from the CD-ROM provided with the unit in the PC.
- This unit supports only USB 2.0. Use a USB 2.0-compatible PC.
- Only one PC must be connected.
- Operation will not be possible if a hub or other device is connected between the unit and PC. A USB cable more than 3 meters long must not be used. Otherwise, malfunctioning may occur.
- No guarantees are made for the operations performed by the Macintosh operating system.

1 Hold down [POWER] for at least 2 seconds to turn the power on.

The thumbnail screen now appears.

2 Press [THUMBNAI/LMODE] to display the thumbnail display off screen.

3 Press [MENU/LMODE CHK].

4 Using ∇ , \triangle and \square , select "OTHER FUNCTIONS" – "PC MODE", and press \square .

5 Using ∇ and \triangle , select "USB DEVICE", and press \square .

6 Press [MENU/LMODE CHK] twice to display the thumbnail display off screen.

7 Hold down [THUMBNAI/LMODE] for at least 2 seconds.

After "USB DEVICE" is displayed, "USB DEVICE CONNECT" is displayed once the file access enable status is established.

- The mode cannot be changed or menus cannot be displayed while the USB DEVICE mode is established.
- Do not remove the P2 card while the USB connection is established.

8 Edit the data on the P2 card using the personal computer.

9 After the data has been edited, disconnect the USB cable.

The display on the LCD monitor changes from "USB DEVICE CONNECT" to "USB DEVICE DISCONNECT."

- When disconnecting the cable, perform the "safe removal of hardware" procedure at the personal computer.

-
- 10 Hold down [POWER] for at least 2 seconds to turn off the unit's power.**
The PC mode cannot be released simply by holding down [THUMBNAIL/MODE].
-

- While the USB connection is established, the P2 card access LEDs will remain off at all times except when the data on the cards is being accessed.
 - In the USB DEVICE mode, no signals can be output to an external monitor.
-

Editing in the 1394 DEVICE mode

The following conditions must be met when using a 1394 connection.

- The Apple machine must run Apple MacOSX10.2.7 or above.
 - The Apple machine must support 1394.a (SBP2 protocol).
 - No guarantees are made for the operations performed by the Windows operating system.
 - Only one PC must be connected.
 - Operation will not be possible if a hub or other device is connected between the unit and PC.
-

- 1 Hold down [POWER] for at least 2 seconds to turn the power on.**

The thumbnail screen now appears.

- 2 Press [THUMBNAIL/MODE] to display the thumbnail display off screen.**

- 3 Press [MENU/MODE CHK].**

- 4 Using ∇ , \triangle and \square , select "OTHER FUNCTIONS" – "PC MODE", and press \square .**

- 5 Using ∇ and \triangle , select "1394 DEVICE", and press \square .**

- 6 Press [MENU/MODE CHK] twice to display the thumbnail display off screen.**

- 7 Hold down [THUMBNAIL/MODE] for at least 2 seconds.**

After "1394 DEVICE" is displayed, "1394 DEVICE CONNECT" is displayed once the file access enable status is established.

- The mode cannot be changed or menus cannot be displayed while the 1394 DEVICE mode is established.

- 8 Edit the data on the P2 card using the personal computer.**

- 9 After the data has been edited, disconnect the 1394 cable.**

The display on the LCD monitor changes from "1394 DEVICE CONNECT" to "1394 DEVICE DISCONNECT."

- After depositing all the drive icons into the trash, check that "1394 DEVICE DISCONNECT" is displayed on the LCD monitor, and then disconnect the 1394 cable.

- 10 Hold down [POWER] for at least 2 seconds to turn off the unit's power.**

The PC mode cannot be released simply by holding down [THUMBNAIL/MODE].


-
- Do not remove the P2 card while the 1394 connection is established.

- Before replacing one P2 card with another, deposit the drive icon in the trash.
-

- In the 1394 DEVICE mode, no signals can be output to an external monitor.
-

Screen displays

Normal displays

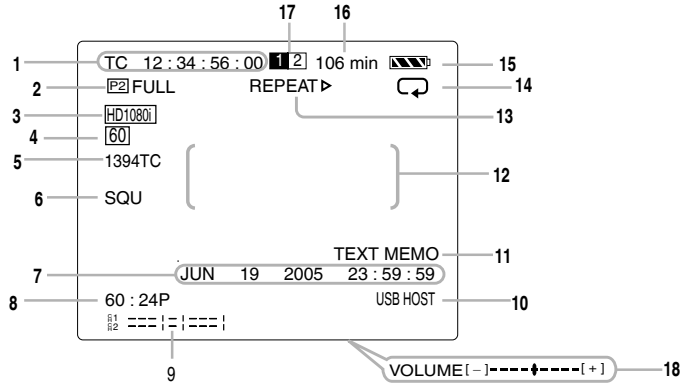

1 Time code displays

Each time [COUNTER] is pressed, the following data (or no information displayed) is selected in turn.

The time code is not displayed in the 1394 input recording standby mode if the recording format has been set to 720P/30PN, 720P/24PN or 720P/25PN.

COUNTER: (Only during recording standby or recording)

Counter value

TC:

Time code value: [TC *] is displayed when the time code value could not be read correctly from the P2 card.

UB:

User's bit: [UB *] is displayed when the user's bit value could not be read correctly from the P2 card.

FR:

Information on the frame rate of recordings shot by the camera recorder such as the AG-HVX200

- FR 60I : 60i interlace mode
(60 fields per second)
- FR 60P : 60P progressive mode
(60 frames per second)
- FR 30P : 30P progressive mode
(30 frames per second)
- FR 24P : 24P progressive mode
(24 frames per second)
- FR 24PA : 24P advanced mode
(24 frames per second)
- FR 50I : 50i interlace mode
(50 fields per second)

- FR 50P : 50P progressive mode
(50 frames per second)
- FR 25P : 25P progressive mode
(25 frames per second)
- FR— : No information

No information displayed

2 Warning information

:

This blinks when a P2 card has not been inserted or if it is write-protected.

FULL :

This blinks when there is no more free memory on the P2 card.

:

This blinks when there is no charge left in the battery.

:

This blinks when the internal battery for the calendar has no charge left. (Page 27)

3 System format displays

HD1080i:

Recording and playback in the 1080i DVCPRO HD format

HD720P:

Recording and playback in the 720P DVCPRO HD format

HD720P30PN:

720P 30PN native playback
(only when 59.94 Hz is set), no recording

HD720P24PN:

720P 24PN native playback
(only when 59.94 Hz is set), no recording

HD720P25PN:

720P 25PN native playback
(only when 50 Hz is set), no recording

50M:

Recording and playback in the 480i, 576i DVCPRO50 format

25M:

Recording and playback in the 480i, 576i DVCPRO25 format

DV:

Recording and playback in the 480i, 576i DV format

4 System frequency displays

60: 59.94 Hz

50: 50 Hz

5 1394TC display

This appears when ON has been selected as the 1394 IN PRESET item setting on the setting menu RECORDING SETUP screen.

6 Squeeze recording display

This appears when images which were squeeze-recorded in the 480i/576i format are input to the 1394 connector or played back.

7 Date and time display

The mmm/dd/yyyy, hh:mm:ss format (month/day/year/hours/minutes/seconds) is used to display the date and time.

- The date and time set by the camera recorder are displayed when the unit is connected to the AG-HVX200 or other camera recorder using a 1394 cable.

8 Playback frame rate display

24P, 24PA, 60P, 30P, 50P, 25P

- The “Variable rate: recording rate” display appears when native recording clips shot by a camera recorder, such as the AG-HVX200 are played back.

Example: 12:24P

12P (for the variable rate recording of clips that are not native recording clips)

- The frame rate is not displayed during the playback of 60i or 50i content.

9 Audio level meter display

The meter indicates the levels of the signals which are output to the CH1 and CH2 audio output (AUDIO OUT) connectors (pin jacks).

10 USB HOST display

This display appears while the USB HOST mode is established.

11 Text memo, shot mark displays

These displays appear for about 3 seconds when [USER], to which a shot mark or a text memo has been assigned ahead of time, is pressed and the shot mark or text memo is recorded.

MARK ON :

When a shot mark has been added

MARK OFF :

When a shot mark has been deleted

TEXT MEMO :

When a text memo has been added

INVALID :

When shot marks or text memos cannot be added or deleted

12 Information display

The following information is displayed depending on the circumstances.

- Warning displays, error displays
- Displays for mode switching using [USER] (V OUT OSD, AUDIO OUT, SLOT SEL, SYS FORMAT, SD MODE)
- The function assigned to [USER] is displayed while [MENU/MODE CHK] is pressed.



13 Operation status displays

REC : Recording



PAUSE : Recording standby

: Playback pause





REPEAT  : Repeat playback

 ():



Rapid forward playback (rapid reverse playback)

 ():

Forward frame feed playback (reverse frame feed playback)

x  /x  (x  /x ):

Forward variable-speed playback (reverse variable-speed playback)






CLIP  (CLIP ):

Forward clip feed (reverse clip feed)


14 Repeat playback setting display

This appears when “ON” has been selected for the “REPEAT PLAY” item setting on the setting menu “PLAYBACK FUNCTIONS” screen.

15 Remaining battery charge display

As the remaining charge drops, the display changes in the following sequence:     and .

When the charge is low, “LOW BATTERY” appears on the LCD monitor.

(While the AC adapter is being used, a display other than  may appear: this is normal and is not a sign of trouble.)

(Continued on the next page)

Screen displays (continued)

16 Remaining media memory displays

The amount of memory remaining on the card in the slot targeted for recording is displayed when "ONE CARD" is selected as the "P2 CARD REMAIN" item setting on the setting menu "DISPLAY SETUP" screen. The target slot can be switched to another slot using "SLOT SEL" assigned to [USER]. When "TOTAL" is selected, the total amount of memory remaining on the two cards is displayed.

17 Media information displays

The card slots in which P2 cards have been inserted and the basic information on the cards are displayed.

 **Lighted:**

Recordable P2 card

 **Lighted in green:**

P2 card targeted for recording

 **Blinking:**

Card recognition underway

 :

No card inserted


P : Write-protected card



F : No memory remaining

X : Card cannot be recognized

E : Improperly formatted P2 card (which can be used if it is formatted properly)

18 Monitor volume level meter

When  is pressed, the level of the volume which is output from the speaker and headphone jack is displayed.

You can adjust the volume level using the  and  buttons.

Warning displays

LOW BATTERY

No operation is possible because the battery charge is depleted.

INCOMPATIBLE CARD

The card complies with the different standard and so it cannot be used.

COPY INHIBITED

The input signals are copy-guarded so they cannot be recorded correctly.

DIR ENTRY NG CARD

The card contains folders which are organized illegally. A warning will be displayed when this P2 card is inserted into a P2 device or when recording has ended.

RUN DOWN CARD

The P2 card has reached the end of its service life. It is recommended that you replace it. Even when a warning appears, it can still be used for recording or playback. However, a warning will be displayed when this P2 card is inserted into a P2 device or when recording has ended.

FORMAT ERR !

The card does not comply with the P2 standard.

< Thumbnail screen >

CANNOT ACCESS!

Data cannot be accessed because of a problem in the content or for some other reason. Restore the media or clips to the normal operating status, and then use the data.

WRITE PROTECTED!

The P2 or SD card is write-protected. Insert a media on which data can be saved.

NO CARD!

The P2 or SD card has not been inserted. Insert a media which is supported.

CARD FULL!

There is no more free memory on the P2 or SD card. Insert a media with free memory.

CANNOT DELETE!

Data cannot be deleted because of a mismatch in the content versions. Ensure that the same content version as the device is used.

CANNOT FORMAT!

The P2 card cannot be formatted because of a problem. Check the P2 card.

CANNOT REPAIR!

The content does not need to be repaired because there is nothing wrong with it or because of a similar reason. Check the selected content.

CANNOT RE-CONNECT!

Clips cannot be reconnected because content which is contained on no more than one card has been selected or because of a similar reason. Check the selected content.

NO COPY TO SAME CARD!

Data cannot be copied because the same card is being specified for the copy source and copy destination. Copy the data onto a card which does not contain the selected clip.

TOO MANY CLIPS!

Too many clips have been selected. Reduce the number of clips which have been selected.

LACK OF REC CAPACITY!

There is not enough memory on the card for the clips to be recorded. Insert a card with enough memory on the card for the clips to be recorded.

HDD CAPACITY FULL!

The hard drive does not have enough free memory. Use a new hard drive or formatted hard drive since the connection destination target does not have enough remaining memory.

TOO MANY PARTITIONS!

There are too many partitions. The maximum number of partitions available on a hard drive is 23 in the USB HOST mode or 15 in the 1394 HOST mode. Use a new hard drive or formatted hard drive.

HDD DISCONNECTED!

The hard drive has been disconnected. Re-establish the USB connection. If the hard drive still fails to operate properly, turn its power off, and then turn it back on.

TOO MANY TARGETS!

A multiple number of devices have been connected. After disconnecting the unnecessary devices, turn the power of the required device off and then turn it back on.

CANNOT ACCESS TARGET!

An error occurred while accessing the connection destination target. Check the hard drive status and connections.

CANNOT ACCESS CARD!

An error occurred while accessing the P2 card. Check the P2 card.

MISMATCH COMPONENT!

Data cannot be copied because of a mismatch in the memory or format of the copy source P2 card and copy destination P2 card. Use P2 cards with the right amount of memory.

UNKNOWN DEVICE CONNECTED!

A DVD drive or other devices which are not supported have been connected. After disconnecting the unnecessary devices, turn the power of the required device off and then turn it back on.

P2 CARD IS UNFORMATTED!

The P2 card has not been formatted. Use a P2 card which has been formatted.

CARD IS EMPTY! CANNOT COPY!

The P2 card whose data is to be copied is blank. A blank card cannot be copied because there is no data to be copied.

VERIFICATION FAILED!

A mismatch was found by verification after copying. Copy the data again.

TURN POWER OFF!

Turn the power off, and turn it back on for use.

CANNOT RECOGNIZE HDD!

The connection destination target cannot be recognized correctly. Turn the power of the hard drive off and then back on or change the connected hard drive.

PLEASE FORMAT P2 CARD!

This message warns the user that data cannot be copied when data is imported from a hard drive to a P2 card because the P2 card already has data recorded on it. No data can be copied because the copy destination P2 card is not a blank card. After formatting the card using the P2 device, initiate copying again.

NO REPAIR CLIP!

The clip to be repaired has not been selected.

MISSING CLIP!

Shot marks cannot be added to consecutive clips on more than one card which are not all in the slots. Insert all the cards containing the consecutive clips.

UNKNOWN CONTENTS FORMAT!

This message warns the user of a contents version mismatch or of a clip for which the unknown clip indicator is displayed. Match the unit and contents versions.

Screen displays (continued)

Error displays

Errors are displayed when trouble has occurred in the unit, P2 card, etc. If the error persists even after turning the power off and back on, depending on what the error message says, replace the card or contact your dealer.

SYSTEM ERROR

This appears when trouble has occurred in the system. Turn the system's power off and then back on. P2 MICON ERROR (no response from P2 microprocessor), P2 CONTROL ERROR (P2 control trouble)

TURN POWER OFF

This appears when trouble has occurred because a card was ejected while its data was being accessed. Turn the system's power off and then back on.

REC WARNING

This appears when trouble has occurred during recording. Initiate the recording again. If the warning is still displayed, consult your dealer.

CARD ERR (1) (2) (1/2)

(Trouble with the P2 card in the slot corresponding to the number shown)

- If the warning persists, turn off the power.
- If the warning persists even when recording is initiated again, replace the existing card with another one.

REC RAM OVERFLOW

(Recording RAM overflow)

CANNOT PLAY

This appears when trouble has occurred during playback.

CARD ERR (1) (2) (1/2)

(Trouble with the P2 card in the slot corresponding to the number shown)

ERROR (Other errors)

1394

This appears when trouble has occurred in the 1394 connection or signals.

1394 INITIAL ERROR (Connection trouble)

There is trouble in the 1394 connector connection or the signals are not being input or output correctly. This error may appear with some connected hard drives. Check the connections between the unit and the other device. If the error display is not cleared, turn the power off and then back on.

1394 INPUT ERROR (OTHER FORMAT)

(Wrong input format)

1394 INPUT ERROR (Input trouble)

Selecting what is to be displayed on the screen

The following items appearing on the LCD monitor screen are displayed when [MENU/MODE CHK] is held down or when a setting for the "OTHER DISPLAY" item (Page 80) on the setting menu "DISPLAY SETUP" screen has been selected.

Item displayed	MODE CHECK	OTHER DISPLAY item setting		
		ALL	PARTIAL	OFF
1 Time code displays	✓	—	—	—
2 Warning information	—	—	—	—
3 System format displays	✓	✓	✓	x
4 System frequency displays	✓	✓	✓	x
5 1394TC display	✓	✓	x	x
6 Squeeze recording display	✓	✓	✓	x
7 Date and time display	✓	—	—	—
8 Playback frame rate display	✓*	✓	x	x
9 Audio level meter display	✓	—	—	—
10 USB HOST display	✓	✓	✓	✓
11 Text memo, shot mark displays	—	—	—	—
12 Information display	✓	—	—	—
13 Operation status displays	✓	✓	✓	✓
14 Repeat playback setting display	✓	✓	✓	x
15 Remaining battery charge display	✓	—	—	—
16 Remaining media memory displays	✓	—	—	—
17 Media information displays	✓	—	—	—
18 Monitor volume level meter	—	—	—	—

✓ : Displayed

x : Not displayed

— : Displayed by another setting

"✓" in the MODE CHECK column indicates the items which are displayed when [MENU/MODE CHK] is held down.

* The FRAME RATE is not displayed when the 60i format is used.

List of recording/playback and output formats

When the 59.94 Hz system format is set

Format setting	Recording status		Output setting	Output status				
	Recording status	Recording/playback audio channels		SDI OUT	SDI OUT AUDIO	COMPONENT OUT	VIDEO OUT	Playback 1394 output
SYS FORMAT	1394 recording/playback format		CMPNT/SDI SEL	SDI OUT	SDI OUT AUDIO	COMPONENT OUT	VIDEO OUT	Playback 1394 output
1080i/60i	DVCPRO HD 1080i/59.94i	4CH	AUTO	1080i/59.94i	4CH	1080i/59.94i	480i/59.94i	DVCPRO HD 1080i/59.94i
			1080i	1080i/59.94i		1080i/59.94i		
			480i	480i/59.94i		480i/59.94i		
720P/60P	DVCPRO HD 720P/59.94P	4CH	AUTO	720P/59.94P	4CH	720P/59.94P	480i/59.94i	DVCPRO HD 720P/59.94P
			1080i	1080i/59.94i		1080i/59.94i		
			480i	480i/59.94i		480i/59.94i		
720P/30PN	60P recording disabled/playback only*1	4CH*4	AUTO	720P/59.94P	4CH*4	720P/59.94P	480i/59.94i	DVCPRO HD 720P/59.94P
			1080i	1080i/59.94i		1080i/59.94i		
			480i	480i/59.94i		480i/59.94i		
720P/24PN	60P recording disabled/playback only*2	4CH*4	AUTO	720P/59.94P	4CH*4	720P/59.94P	480i/59.94i	DVCPRO HD 720P/59.94P
			1080i	1080i/59.94i		1080i/59.94i		
			480i	480i/59.94i		480i/59.94i		
480i/60i	DVCPRO50/DVCPRO/DV 480i/59.94i*5	4CH or 2CH*7	Invalid	480i/59.94i	4CH or 2CH*6	480i/59.94i	480i/59.94i	DVCPRO50/DVCPRO/DV 480i/59.94i *4

- *1 The signals are converted to OVER 60P by 2:2 pull-down for playback.
- *2 The signals are converted to OVER 60P by 2:3 pull-down for playback.
- *3 The signals are converted to OVER 50P by 2:2 pull-down for playback.
- *4 Clips recorded with the sound muted are played back with the sound muted.
- *5 The DVCPRO50, DVCPRO or DV format is selected according to the "SD MODE" setting.
- *6 The sound is delivered through 4 channels with the DVCPRO50 format and through 2 channels or 4 channels with the DVCPRO or DV format.
- *7 When 32 kHz 4-channel sound of the DV format is input, it is converted to 48 kHz 4-channel sound and recorded.


When the 50 Hz system format is set

Format setting	Recording status		Output setting	Output status				
	1394 recording/ playback format	Recording/ playback audio channels		CMPNT/ SDI SEL	SDI OUT	SDI OUT AUDIO	COMPONENT OUT	VIDEO OUT
1080i/ 50i	DVCPRO HD 1080i/50i	4CH	AUTO	1080i/ 50i	4CH	1080i/ 50i	576i/50i	DVCPRO HD 1080i/50i
			1080i	1080i/ 50i		1080i/ 50i		
			576i	576i/ 50i		576i/ 50i		
720P/ 50P	DVCPRO HD 720P/50P	4CH	AUTO	720P/ 50P	4CH	720P/ 50P	576i/50i	DVCPRO HD 720P/50P
			1080i	1080i/ 50i		1080i/ 50i		
			576i	576i/ 50i		576i/ 50i		
720P/ 25PN	50P recording disabled/ playback only*3	4CH*4	AUTO	720P/ 50P*6	4CH*4	720P/ 50P	576i/50i	DVCPRO HD 720P/50P
			1080i	1080i/ 50i		1080i/ 50i		
			576i	576i/ 50i		576i/ 50i		
576i/ 50i	DVCPRO50/ DVCPRO/DV 576i/50i*5	4CH or 2CH*7	Invalid	576i/ 50i	4CH or 2CH*6	720P/ 50P	576i/50i	DVCPRO50/ DVCPRO/DV 576i/50i*4
						1080i/ 50i		
						576i/ 50i		

- *1 The signals are converted to OVER 60P by 2:2 pull-down for playback.
- *2 The signals are converted to OVER 60P by 2:3 pull-down for playback.
- *3 The signals are converted to OVER 50P by 2:2 pull-down for playback.
- *4 Clips recorded with the sound muted are played back with the sound muted.
- *5 The DVCPRO50, DVCPRO or DV format is selected according to the "SD MODE" setting.
- *6 The sound is delivered through 4 channels with the DVCPRO50 format and through 2 channels or 4 channels with the DVCPRO or DV format.
- *7 When 32 kHz 4-channel sound of the DV format is input, it is converted to 48 kHz 4-channel sound and recorded.


Basic operations on the setting menus

- 1 Hold down [POWER] for at least 2 seconds to turn the power on.
- 2 Press [THUMBNAIL/MODE] to switch to the thumbnail display off screen.

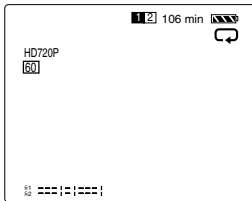


- 3 Press [MENU/MODE CHK] to display the menu.

Example:

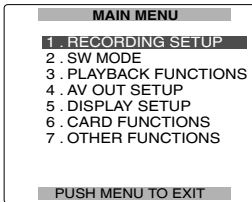


- 4 Using \downarrow and \triangleleft , move the highlighting to the function to be set.

- 5 Press \square to display the setting item.
- Example:

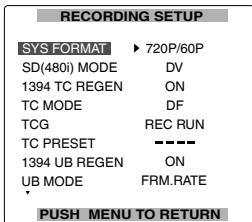

- 6 Using \downarrow and \triangleleft , move to the item to be set.
- 7 First press \square , then select the setting to be changed using \downarrow and \triangleleft , and press \square .

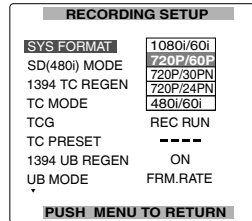

To change a numerical value, etc., use \rightarrow and \leftarrow to change the setting.


- 8 To change other items, repeat steps 6 and 7. To exit the settings, press [MENU/MODE CHK] and return to the thumbnail display off screen.
- 9 To change another function, repeat steps 3 to 7. To exit the settings, press [MENU/MODE CHK] and return to the thumbnail display off screen.

Initializing the setting menu

You can return (initialize) the setting menu user files to the factory status.

- 1 Switch the display to the thumbnail display off screen.
- 2 Press [MENU/MODE CHK].
- 3 Using \downarrow , \triangleleft and \square , select "OTHER FUNCTIONS" – "USER FILE" – "INITIAL", and press \square .
- 4 Select "YES", using \downarrow , and press \square .
When the "TURN POWER OFF" message appears, turn off the power, and then turn it back on.
The menu settings of the user files currently being used are returned to the factory status.

Setting menu configuration

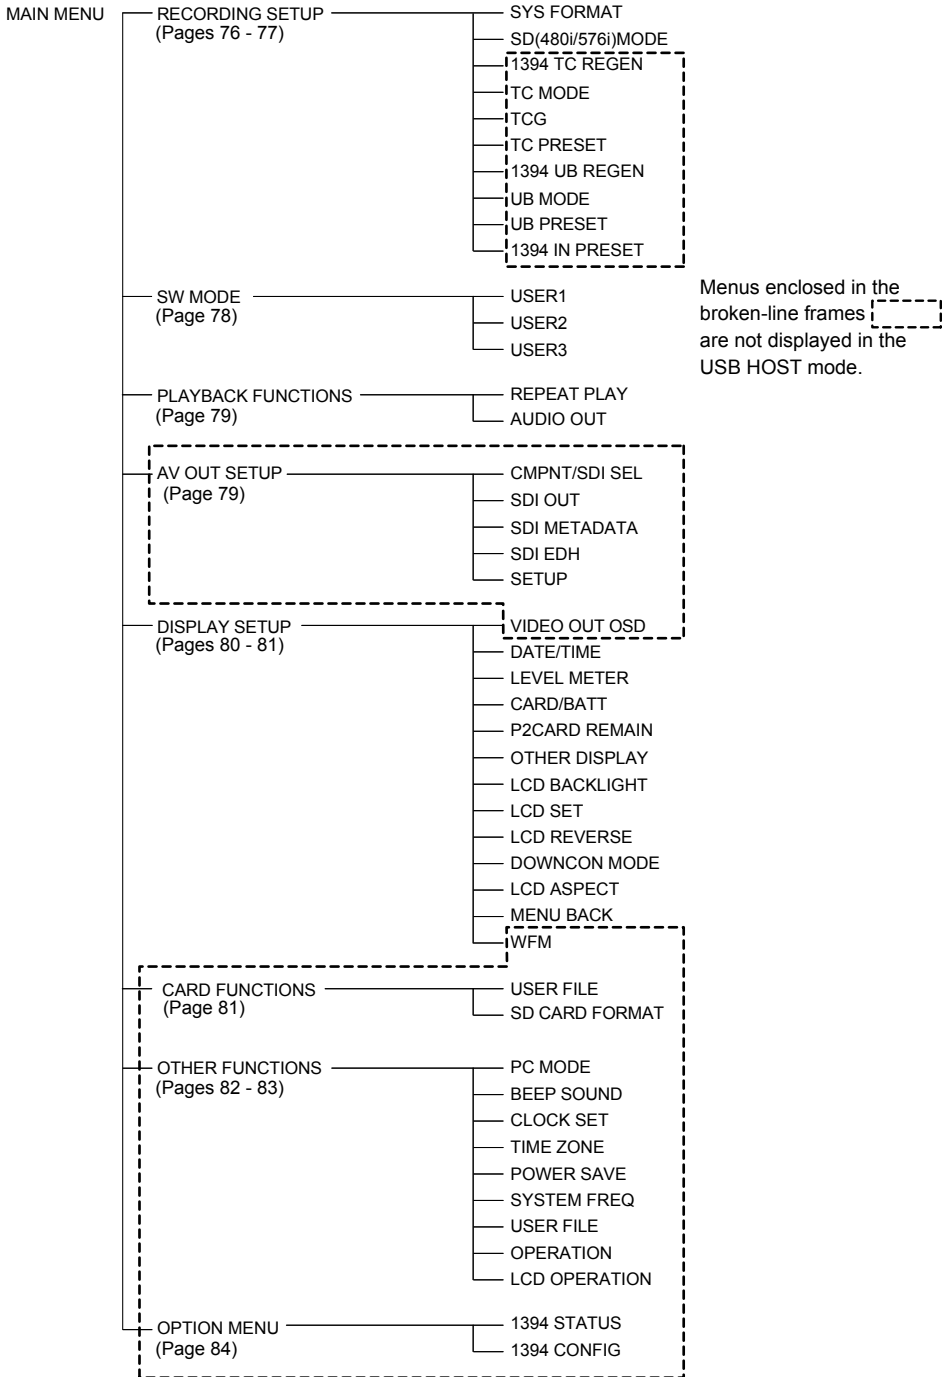

List of setting menus

RECORDING SETUP screen

When the settings are changed using the "SYSTEM FREQ" item (Page 83) on the "OTHER FUNCTIONS" screen, whatever has been set for "SYS FORMAT" on the "RECORDING SETUP" screen will be changed to the initial setting.

Item	Description of settings
SYS FORMAT	This is used to set the 1394 input recording format and playback format. (When 59.94 Hz has been set) 1080i/60i, 720P/60P, 720P/30PN, 720P/24PN, 480i/60i (When 50 Hz has been set) 1080i/50i, 720P/50P, 720P/25PN, 576i/50i
SD(480i/576i) MODE	This is used to set the 1394 input recording video compression format and playback format. DVCPRO50, DVCPRO, DV
1394 TC REGEN	This is used to select the time code to be recorded when recording signals from a device which is connected to the 1394 connector. ON: The data is recorded using the time code of the signals supplied to the 1394 connector. OFF: The data is recorded using the time code set using the TC MODE item or TCG item. When this item has been set to "ON", it takes priority over the TC MODE item and TCG item settings.
TC MODE (only when 59.94 Hz is set)	This is used to select the time code compensation mode when recording the time codes of the internal time code generator. "OFF" must be selected for the "1394 TC REGEN" item setting. (Page 52) DF: The drop frame mode is used. NDF: The non-drop frame mode is used.
TCG	This is used to set the operation mode for running the time code of the internal time code generator. "OFF" must be selected for the "1394 TC REGEN" item setting. (Page 52) FREE RUN: The time code runs no matter what operating mode is established. REC RUN: The time code runs only during recording.
TC PRESET	This is used to set the initial value of the time code to be recorded. "OFF" must be selected for the "1394 TC REGEN" item setting. (Page 52)
1394 UB REGEN	This is used to set the recording of the user's bit when recording input signals from a device which is connected to the 1394 connector. ON: The signals are recorded using the user's bit of the signals supplied to the 1394 connector. OFF: The signals are recorded using the user's bit selected by the UB MODE item. When this item has been set to ON, it takes priority over the UB MODE item.

____ The underlined settings are the factory mode settings.

RECORDING SETUP screen (continued)

Item	Description of settings
UB MODE	<p>This is used to set what is to be recorded as the user's bit. "OFF" must be selected for the "1394 UB REGEN" item setting. (Page 53)</p> <p>USER: The user information is recorded.</p> <p>TIME: The time of the recording is recorded.</p> <p>DATE: The date/time of the recording are recorded.</p> <p>TCG: The value generated by the time code generator is recorded.</p> <p>FRM. RATE: The information of the frame rate after frame conversion is recorded.</p> <div style="text-align: center;"> <pre> * * 0 * * * * * a b c d </pre> </div> <p>a: Information on the verification of the user's bit value</p> <p>b: Frame sequence number • "F" is displayed in the 60i/30P mode.</p> <p>c: Frame rate information</p> <ul style="list-style-type: none"> • Frame rate (60, 30 or 24) • I/P identification information • Conversion information • Frame rate factor <p>d: Recording control information</p> <ul style="list-style-type: none"> • Updated frame information • REC START/STOP information <p><Note> When playing back native recorded clips To set the 1394 output user's bit as the frame rate information, select FRM. RATE for this setting, and play back the clips. If this is the case, the user's bit displayed on the screen will also be changed to the frame rate information.</p>
UB PRESET	<p>This is used to set the user's bit. "OFF" must be selected for the "1394 UB REGEN" item setting and "USER" must be selected for the "UB MODE" item setting. (Page 53)</p>
1394 IN PRESET	<p>When [RESET/TC SET] is pressed, the value generated by the internal time code generator is synchronized with the 1394 input time code. "OFF" must be selected for the "1394 TC REGEN" item setting. (Page 52)</p> <p>ON: The 1394 input synchronization setting mode is established.</p> <p>OFF: The 1394 input synchronization setting mode is released.</p>

___ The underlined settings are the factory mode settings.

List of setting menus (continued)

SW MODE screen

Item	Description of settings
USER1	<p>This is used to set which function is to be assigned to the USER1 button.</p> <p><u>SYS FORMAT:</u> System format (Page 76)</p> <p>SD MODE : SD mode (Page 76)</p> <p>SHOT MARK : A shot mark is recorded on the clip. (Page 41)</p> <p>TEXT MEMO : A text memo is recorded. (Pages 44, 46)</p> <p>LCD BL : LCD backlight (Page 80)</p> <p>V OUT OSD : Video output on-screen display (Page 80)</p> <p>AUDIO OUT : Audio output (Page 79)</p> <p>SLOT SEL : P2 card slot selection (Page 51)</p> <p>LCD RVS : LCD reverse (Page 80)</p> <p>WFM : Waveform monitor (Pages 51, 81)</p>
USER2	<p>This is used to set which function is to be assigned to the USER2 button. The settings of this item are the same as the USER1 item settings.</p> <p><u>SHOT MARK</u></p>
USER3	<p>This is used to set which function is to be assigned to the USER3 button. The settings of this item are the same as the USER1 item settings.</p> <p><u>TEXT MEMO</u></p>

____ The underlined settings are the factory mode settings.

PLAYBACK FUNCTIONS screen

Item	Description of settings
REPEAT PLAY	<p>This is used to set repeat playback. (Page 45)</p> <p>ON: Playback is repeated. After playing back the last clip in the playable format which has been set in the "SYS FORMAT" item on the "RECORDING SETUP" screen, the first clip in the playable format is played back in succession.</p> <p>OFF: Playback is not repeated. After playing back the last clip in the playable format, playback stops.</p> <p><Note></p> <ul style="list-style-type: none"> • Repeat playback is not performed when playing back from a text memo position. • If a P2 card is ejected during repeat playback, playback stops when the clip on the ejected P2 card is reached. • If a P2 card is inserted during repeat playback, the clips on the inserted P2 card will be played back when repeat playback is next performed.
AUDIO OUT	<p>This is used to set the audio signals to be output from the AUDIO OUT connectors (pin jacks), speaker and headphone jack during playback.</p> <p>CH1 · CH2: CH1 connector = CH1 signal, CH2 connector = CH2 signal, CH1: CH1 connector = CH1 signal, CH2 connector = CH1 signal, CH2: CH1 connector = CH2 signal, CH2 connector = CH2 signal, CH3 · CH4: CH1 connector = CH3 signal, CH2 connector = CH4 signal, CH3: CH1 connector = CH3 signal, CH2 connector = CH3 signal, CH4: CH1 connector = CH4 signal, CH2 connector = CH4 signal,</p>

AV OUT SETUP screen

Item	Description of settings
COMPNT/SDI SEL	<p>This is used to set the format when D connector signals and HD/SD-SDI signals are output. (When the 59.94 Hz system format is set) A setting other than 480i/60i or 576i/50i must be selected for the "SYS FORMAT" item. (Page 72)</p> <p>AUTO: Operation reflects the setting selected for the SYS FORMAT item on the RECORDING SETUP screen.</p> <p>1080i, 480i (When the 50 Hz system format is set)</p> <p>AUTO: Operation reflects the setting selected for the SYS FORMAT item on the RECORDING SETUP screen.</p> <p>1080i, 576i</p>
SDI OUT	<p>This is used to set the SDI output.</p> <p>ON: SDI signals are output. OFF: SDI signals are not output.</p>
SDI METADATA	<p>This is used to set whether to superimpose the meta-data when HD-SDI signals are output.</p> <p>ON: The meta-data is superimposed. OFF: The meta-data is not superimposed.</p>
SDI EDH	<p>This is used to set whether to superimpose error detection handling (EDH) when SD-SDI signals are output.</p> <p>ON: EDH is superimposed. OFF: EDH is not superimposed.</p>
SETUP (This item is displayed only when 59.94 Hz is set.)	<p>The setup level of the video signals during playback is set.</p> <p>0%: 0 % is set as the output setup level. 7.5%A: 7.5 %A is set as the output setup level.</p>

List of setting menus (continued)

DISPLAY SETUP screen

Item	Description of settings
VIDEO OUT OSD	When ON is selected as this item's setting, the information displayed on the LCD monitor is output as a video output signal together with the video signals. (Component output signals, VIDEO output signals, SDI output signals) ON, OFF <Note> Warnings are not displayed with component outputs or SDI outputs.
DATE/TIME	This is used to select the setting for displaying the date and time on the LCD monitor and video output signals. OFF: The date and time are not displayed. TIME: The time is displayed. DATE: The date is displayed. TIME&DATE: The date and time are displayed.
LEVEL METER	This is used to set the audio level meter display to ON or OFF. ON, OFF
CARD/BATT	This is used to set the display of the amount of memory remaining on the card and charge level remaining in the battery to ON or OFF. ON, OFF
P2CARD REMAIN	This is used to set how the display of the amount of memory remaining on the P2 card is to be calculated. ONE-CARD: The amount of memory remaining on the P2 card in the selected slot is calculated. TOTAL: The amount of memory remaining on the P2 cards in both slots is calculated.
OTHER DISPLAY	This is used to set the amount of information to be displayed on the LCD monitor. (Page 71) OFF, PARTIAL, ALL
LCD BACKLIGHT	This is used to adjust the backlight of the LCD monitor. The backlight becomes brighter than usual when HIGH is selected. HIGH, <u>NORMAL</u>
LCD SET	This is used to adjust the display level of the images on the LCD monitor. (Page 22) LCD COLOR LEVEL LCD BRIGHTNESS LCD CONTRAST
LCD REVERSE	This is used to set the function for reversing the top/bottom and left/right of the images displayed on the LCD monitor. NORMAL: The images are displayed normally. REVERSE: The images are displayed with their top/bottom and left/right reversed. <Note> The direction in which the menu highlighting moves and the direction of the cursor movement on the thumbnail display screen cannot be reversed in either the up/down or left/right direction.

____ The underlined settings are the factory mode settings.

DISPLAY SETUP screen (continued)

Item	Description of settings
LCD ASPECT	<p>This is used to select the aspect ratio for the LCD monitor. SYS FORMAT needs to be set to 480i/60i or 576i/50i.</p> <p>AUTO: The aspect ratio is automatically selected based on the recording mode, playback mode and other information.</p> <p>4:3: The aspect ratio is fixed at 4:3.</p> <p><Note> When images are displayed with the 16:9 aspect ratio, black bands appear at the top and bottom of the screen. No parts of the images are missing.</p>
MENU BACK	<p>This is used to reduce the transmittance of the background behind the menu display screen so that the menu characters can be seen more easily.</p> <p>ON: The background transmittance is reduced.</p> <ul style="list-style-type: none"> This transmittance is not reduced while the LCD SET item on the DISPLAY SETUP screen is being set. <p>OFF: The background transmittance is 100 %.</p>
DOWNCON MODE	<p>This is used to set the down-converter output signal mode. A setting other than 480i/60i or 576i/50i must be selected for the "SYS FORMAT" item.</p> <p>SIDE CROP, LETTER-BOX, SQUEEZE</p>
WFM	<p>This is used to select what is to be displayed on the waveform monitor.</p> <p>OFF: No display</p> <p>WAVE: Waveforms are displayed.</p> <p>VECTOR: Vectors are displayed.</p> <p><Note> The waveform monitor is not displayed during playback in the USB HOST mode.</p>

CARD FUNCTIONS screen

Item	Description of settings
USER FILE	Up to four sets of menu item settings can be saved on the SD memory card. Titles can be given to the files which have been saved. (Page 29)
SD CARD FORMAT	This is used to format SD memory cards. (Page 28)

___ The underlined settings are the factory mode settings.

List of setting menus (continued)

OTHER FUNCTIONS screen

Item	Description of settings																																																																																																												
PC MODE	<p>This is used to select the connectors and mode to be used for data transfer. (The USB and 1394 connectors cannot be used at the same time.)</p> <p>USB DEVICE: File transfer mode using the USB connector</p> <p>USB HOST: In this mode, files are copied on an external hard disk from the P2 card using the USB connector.</p> <p>1394 DEVICE: File transfer mode using the 1394 connector</p> <p>1394 HOST: In this mode, files are copied on an external hard disk from the P2 card using the 1394 connector.</p>																																																																																																												
BEEP SOUND	<p>This is used to set the beep sound to ON or OFF. (Page 85)</p> <p>ON, OFF <Note> The sound from the output connectors is muted when beeps are sounded.</p>																																																																																																												
CLOCK SET	<p>This is used to set the unit's internal calendar. (Page 23)</p>																																																																																																												
TIME ZONE	<p>The time is set in 30-minute increments from 12:00 hours behind GMT to 13:00 hours ahead of GMT (a setting of 12:45 hours ahead is also available). (Refer to the table below.)</p> <p>0:00</p> <table border="1" data-bbox="339 722 983 1433"> <thead> <tr> <th>Time difference (from GMT)</th> <th>Region (city)</th> <th>Time difference (from GMT)</th> <th>Region (city)</th> </tr> </thead> <tbody> <tr><td>00:00</td><td>Greenwich</td><td>- 00:30</td><td></td></tr> <tr><td>- 01:00</td><td>Azores</td><td>- 01:30</td><td></td></tr> <tr><td>- 02:00</td><td>Central Atlantic</td><td>- 02:30</td><td></td></tr> <tr><td>- 03:00</td><td>Buenos Aires</td><td>- 03:30</td><td>Newfoundland</td></tr> <tr><td>- 04:00</td><td>Halifax (Nova Scotia)</td><td>- 04:30</td><td></td></tr> <tr><td>- 05:00</td><td>New York</td><td>- 05:30</td><td></td></tr> <tr><td>- 06:00</td><td>Chicago</td><td>- 06:30</td><td></td></tr> <tr><td>- 07:00</td><td>Denver</td><td>- 07:30</td><td></td></tr> <tr><td>- 08:00</td><td>Los Angeles</td><td>- 08:30</td><td></td></tr> <tr><td>- 09:00</td><td>Alaska</td><td>- 09:30</td><td>Marquesas Islands</td></tr> <tr><td>- 10:00</td><td>Hawaii</td><td>- 10:30</td><td></td></tr> <tr><td>- 11:00</td><td>Midway Islands</td><td>- 11:30</td><td></td></tr> <tr><td>- 12:00</td><td>Kwajalein Atoll</td><td>+ 11:30</td><td>Norfolk Islands</td></tr> <tr><td>+ 13:00</td><td></td><td>+ 10:30</td><td>Lord Howe Island</td></tr> <tr><td>+ 12:00</td><td>New Zealand</td><td>+ 09:30</td><td>Darwin Islands</td></tr> <tr><td>+ 11:00</td><td>Solomon Islands</td><td>+ 08:30</td><td></td></tr> <tr><td>+ 10:00</td><td>Guam</td><td>+ 07:30</td><td></td></tr> <tr><td>+ 09:00</td><td>Tokyo</td><td>+ 06:30</td><td>Rangoon</td></tr> <tr><td>+ 08:00</td><td>Beijing</td><td>+ 05:30</td><td>Mumbai (Bombay)</td></tr> <tr><td>+ 07:00</td><td>Bangkok</td><td>+ 04:30</td><td>Kabul</td></tr> <tr><td>+ 06:00</td><td>Dhaka</td><td>+ 03:30</td><td>Teheran</td></tr> <tr><td>+ 05:00</td><td>Islamabad</td><td>+ 02:30</td><td></td></tr> <tr><td>+ 04:00</td><td>Abu Dhabi</td><td>+ 01:30</td><td></td></tr> <tr><td>+ 03:00</td><td>Moscow</td><td>+ 00:30</td><td></td></tr> <tr><td>+ 02:00</td><td>Eastern Europe</td><td>+ 12:45</td><td>Chatham Islands</td></tr> <tr><td>+ 01:00</td><td>Central Europe</td><td></td><td></td></tr> </tbody> </table>	Time difference (from GMT)	Region (city)	Time difference (from GMT)	Region (city)	00:00	Greenwich	- 00:30		- 01:00	Azores	- 01:30		- 02:00	Central Atlantic	- 02:30		- 03:00	Buenos Aires	- 03:30	Newfoundland	- 04:00	Halifax (Nova Scotia)	- 04:30		- 05:00	New York	- 05:30		- 06:00	Chicago	- 06:30		- 07:00	Denver	- 07:30		- 08:00	Los Angeles	- 08:30		- 09:00	Alaska	- 09:30	Marquesas Islands	- 10:00	Hawaii	- 10:30		- 11:00	Midway Islands	- 11:30		- 12:00	Kwajalein Atoll	+ 11:30	Norfolk Islands	+ 13:00		+ 10:30	Lord Howe Island	+ 12:00	New Zealand	+ 09:30	Darwin Islands	+ 11:00	Solomon Islands	+ 08:30		+ 10:00	Guam	+ 07:30		+ 09:00	Tokyo	+ 06:30	Rangoon	+ 08:00	Beijing	+ 05:30	Mumbai (Bombay)	+ 07:00	Bangkok	+ 04:30	Kabul	+ 06:00	Dhaka	+ 03:30	Teheran	+ 05:00	Islamabad	+ 02:30		+ 04:00	Abu Dhabi	+ 01:30		+ 03:00	Moscow	+ 00:30		+ 02:00	Eastern Europe	+ 12:45	Chatham Islands	+ 01:00	Central Europe		
Time difference (from GMT)	Region (city)	Time difference (from GMT)	Region (city)																																																																																																										
00:00	Greenwich	- 00:30																																																																																																											
- 01:00	Azores	- 01:30																																																																																																											
- 02:00	Central Atlantic	- 02:30																																																																																																											
- 03:00	Buenos Aires	- 03:30	Newfoundland																																																																																																										
- 04:00	Halifax (Nova Scotia)	- 04:30																																																																																																											
- 05:00	New York	- 05:30																																																																																																											
- 06:00	Chicago	- 06:30																																																																																																											
- 07:00	Denver	- 07:30																																																																																																											
- 08:00	Los Angeles	- 08:30																																																																																																											
- 09:00	Alaska	- 09:30	Marquesas Islands																																																																																																										
- 10:00	Hawaii	- 10:30																																																																																																											
- 11:00	Midway Islands	- 11:30																																																																																																											
- 12:00	Kwajalein Atoll	+ 11:30	Norfolk Islands																																																																																																										
+ 13:00		+ 10:30	Lord Howe Island																																																																																																										
+ 12:00	New Zealand	+ 09:30	Darwin Islands																																																																																																										
+ 11:00	Solomon Islands	+ 08:30																																																																																																											
+ 10:00	Guam	+ 07:30																																																																																																											
+ 09:00	Tokyo	+ 06:30	Rangoon																																																																																																										
+ 08:00	Beijing	+ 05:30	Mumbai (Bombay)																																																																																																										
+ 07:00	Bangkok	+ 04:30	Kabul																																																																																																										
+ 06:00	Dhaka	+ 03:30	Teheran																																																																																																										
+ 05:00	Islamabad	+ 02:30																																																																																																											
+ 04:00	Abu Dhabi	+ 01:30																																																																																																											
+ 03:00	Moscow	+ 00:30																																																																																																											
+ 02:00	Eastern Europe	+ 12:45	Chatham Islands																																																																																																										
+ 01:00	Central Europe																																																																																																												

___ The underlined settings are the factory mode settings.


OTHER FUNCTIONS screen (continued)

Item	Description of settings
POWER SAVE	<p>This is used to select the power-saving mode which is to be established when none of the function keys or buttons have been operated for 5 or so minutes.</p> <p>ON: The unit's power is turned off.</p> <p>OFF: The unit's power is not turned off, and it remains in the power ON mode.</p> <ul style="list-style-type: none"> • While the unit is connected by an IEEE1394 cable or USB cable to an external device and communicating with it, the power will not be turned off even if the function keys or buttons have not been operated for the prescribed period of time. • Even when ON is selected as this item's setting, the power will not be turned off during playback (PLAY, CUE (rapid forward), REV (rapid reverse), FF, REW or STILL) or during recording.
SYSTEM FREQ	<p>This is used to switch the system frequency.</p> <p><u>59.94 Hz</u>, 50 Hz (AG-HPG10P) <u>59.94 Hz</u>, <u>50 Hz</u> (AG-HPG10E)</p> <p><Note> When the system frequency has been changed, turn the unit's power off and then back on so that the setting takes effect.</p>
USER FILE	<p>LOAD: The settings of the user files last saved are loaded.</p> <p>SAVE: The settings of the user files which have been changed are stored.</p> <p>INITIAL: The user file settings are returned to the factory settings. In order for the settings to take effect after loading or initializing, turn off the unit's power and turn it back on.</p> <ul style="list-style-type: none"> • Even when initializing has been performed, the TIME ZONE item (Page 82) will remain unchanged.
OPERATION	This is used to display the power-on time (using 5 digits).
LCD OPERATION	This is used to display the power-on time (using 5 digits) for the backlight of the LCD monitor.

___ The underlined settings are the factory mode settings.

List of setting menus (continued)

OPTION MENU screen

This screen appears when [MENU/MODE CHK] is pressed while  is held down on the thumbnail display off screen.

Item	Description of settings
1394 STATUS	<p>The 1394 status display sub-screen is displayed.</p> <p>FORMAT: Format of the input or output signals</p> <p>RATE: Transfer rate of the input or output signals</p> <p>60/50: System of input or output signals</p> <p>CH: Value of the channels whose signals are input or output</p> <p>SPEED: Transfer speed of the input or output signals</p> <p>STATUS NOPKT: Status of the signals which are input or output by the IEEE1394 digital interface</p> <p>VIDEO: Status of the input or output video signals</p> <p>AUDIO: Status of the input or output audio signals</p>
1394 CONFIG	<p>The 1394 expansion menu is displayed.</p> <p><u>DFLT:</u> For normal operation, keep this setting.</p> <p>1-255</p>

____ The underlined settings are the factory mode settings.

Warning system table

When trouble is detected immediately after the power is turned on or during operation, the user is alerted by the power lamp and beep sound (provided that "ON" is selected as the "BEEP SOUND" setting on the "OTHER FUNCTIONS" screen (Page 82)).

Priority	Type of warning	LCD monitor screen display	Power lamp	Beep sound	Warning description and record/playback operation	Action to be taken
1	System error	SYSTEM ERROR Cause displayed* ¹ , blinks in red.	Blinks at a rate of 4 times per second.	Beeps continuously.	P2 microprocessor or control trouble. Operation is stopped.	Check the cause display* ¹ , and consult your vendor.
2	P2 card ejection trouble	TURN POWER OFF Blinks in red.	Blinks at a rate of 4 times per second.	Beeps continuously.	Trouble has occurred in the internal memory because a P2 card was ejected while its data was being accessed. Both access LEDs blink in orange (4 Hz).	Turn off the power. If something is wrong with the clips on the ejected P2 card, repair them.
3	Low battery charge	LOW BATTERY Blinks in red. Blinks with the remaining battery display empty. (This display appears even when it has been set to OFF on the setting menu.)	Blinks at a rate of once per second.	Beeps continuously.	The battery charge is low. Recording or playback stops. If the voltage falls further, the power is automatically turned off.	Replace the battery.
4	P2 card full	[P2] FULL Blinks in red (display appears only for 3 seconds when [REC] is pressed).	Blinks at a rate of 4 times per second upon completion of recording.	Beeps continuously upon completion of recording.	There is no more free memory left on the P2 card. Recording is stopped* ³ .	Delete the unnecessary clips or insert a new card.
5	Recording trouble	REC WARNING Cause displayed* ² , blinks in red.	Blinks at a rate of 4 times per second.	Beeps intermittently at a rate of 4 times per second.	Recording trouble. Recording is stopped* ⁴ .	Turn off the power and turn it back on. Then check the recording/playback. Replace the P2 card if recording cannot be performed properly.
6	Connection error in PC mode at 1394 HOST.	None	Blinks at a rate of 4 times per second.	None	The 1394 cable has been disconnected or a multiple number of units have been connected. (Ordinary PC mode operations can be performed.)	Connect the hard drive as specified in the procedure concerned.
7	Near low battery charge	One block on the remaining battery display is blinking. (This display appears even when it has been set to OFF on the setting menu.)	Blinks at a rate of once per second.	None	The battery charge is falling to low. Operation is continued.	Replace the battery as necessary.
8	P2 card nearly full	Remaining media memory display blinks.	Blinks at a rate of once a second during recording.	None	Under 2 minutes of memory remaining on the P2 card (remaining memory display shows less than one minute). This warning appears only during recording.	Replace the P2 card or add another card as necessary.

*1 P2 SYSTEM ERROR Cause display

- P2 MICON ERROR: P2 microprocessor does not respond.
- P2 CONTROL ERROR: Trouble has occurred in the P2 recording control.
- REC RAM OVERFLOW: Recording RAM overflow

*2 REC WARNING Cause display

- CARD ERROR*: P2 card trouble (slot number of trouble card is displayed in *)
- REC RAM OVERFLOW: Recording RAM overflow
- ERROR: Other recording trouble

*3 The warning is cleared when any one of the following operations is performed.

- When a playback function button (STOP, PLAY, STILL, FF or REW) is pressed
- When the PC mode is selected while [THUMBNAIL/MODE] is held down for more than 2 seconds
- When a P2 card has been ejected or another card has been inserted

*4 The warning is cleared when any one of the following operations is performed.

- When a playback function button (STOP, PLAY, STILL, FF or REW) is pressed
- When a P2 card has been ejected

Main differences between the USB HOST mode and 1394 HOST mode

Function	USB HOST	1394 HOST
Export of data on a card by card basis	✓ (max. 23)	✓ (max. 15)
Import from hard drive to P2 card	✓ (clips selectable)	X
Thumbnail display of clips on hard drive	✓	X
Change of partition name	✓	X
Playback of clips from hard drive	X	X
Bus power function	✓	X

Troubleshooting (Q&A)

Power-related Q&A

No power.	<ul style="list-style-type: none">• Has the battery or AC adapter been connected properly? Check the connections.• When turning on the power, hold down [POWER] for at least 2 seconds.	P 17 P 18
The power suddenly goes off without warning.	<ul style="list-style-type: none">• In order to preserve the battery charge, the power will be automatically turned off when more than 5 minutes with no operations performed have elapsed. Check the setting for the POWER SAVE item on the setting menu OTHER FUNCTIONS screen.	P 83
The power is turned on but it goes off immediately.	<ul style="list-style-type: none">• Has the battery charge been depleted? If the remaining battery charge display is blinking or <input type="checkbox"/> is displayed, it means that there is little or no charge left in the battery. Charge the battery or replace the existing battery with a fully charged battery.	P 67

Battery-related Q&A

The battery charge is depleted quickly.	<ul style="list-style-type: none">• Was the battery charged sufficiently? Charge the battery until the CHARGE lamp on the AC adapter goes off.• Is the battery being used in a location where the temperature is low? Batteries are affected by the ambient temperature. Batteries operate for shorter periods of time at low-temperature locations.• Has the battery reached the end of its service life? The battery may have reached the end of its service life. Although the service life will differ depending on how the battery has been used, if the battery can be used only for short periods of time even after it has been fully charged, it means that it has reached the end of its service life.	P 16 — —
The battery cannot be charged.	<ul style="list-style-type: none">• The battery cannot be charged if the DC cord is connected to the AC adapter.	P 17

Troubleshooting (Q&A) (continued)

Recording

Recording does not start.	<ul style="list-style-type: none">• Is the unit's power on?• Has the battery reached the end of its service life? The battery may have reached the end of its service life. Although the service life will differ depending on how the battery has been used, if the battery can be used only for short periods of time even after it has been fully charged, it means that it has reached the end of its service life.	P 18 —
The P2 card has been inserted properly, but recording is not possible.	<ul style="list-style-type: none">• Is the P2 card's write-protect switch at the PROTECT position? Images cannot be recorded while this switch is at the PROTECT position.• Does the P2 card have very little remaining memory? Either save the data concerned on another media and delete the unnecessary data on the P2 card concerned or replace the P2 card with a new card.• Has the P2 card been formatted properly? Does the card have a format which cannot be used? Format the card using the unit.• P2 cards with a memory size of 2 GB cannot be used.	P 25 P 42 P 25 P 27

Editing

Data cannot be read on the SD memory card.	<ul style="list-style-type: none">• Has the SD memory card been formatted properly? Format the card using the unit.	P 28
Non-linear editing is not possible.	<ul style="list-style-type: none">• Check the specifications of the cable used to connect the unit with the computer.	P 64

Playback

Mosaic-like noise appears during rapid forward or rapid reverse playback.	<ul style="list-style-type: none"> • This phenomenon is characteristic of digital equipment. It is not a sign of trouble. 	—
No playback pictures appear even though the TV set is connected properly.	<ul style="list-style-type: none"> • Is the input selector on the TV set at the “video input” position? Carefully read the instructions accompanying the TV set, and select the connected video input connector. 	—
No playback sound is heard from the unit’s speaker.	<ul style="list-style-type: none"> • Has the unit’s volume level been turned down too low? Press the PAGE/AUDIO MON/VAR “+” button, and adjust the volume level. • No sound can be heard from the speaker when headphones are connected to the headphone jack. 	P 66 —
No hot swap playback.	<ul style="list-style-type: none"> • This unit does not support hot swap playback. To continue playback, stop playback, and then replace the P2 card with another card. 	P 51

Operating precautions

When using the unit in rainy or snowy weather, at the beach or other locations, take care to protect it from precipitation and sea water.

- Otherwise, trouble may occur in the unit and its cards. (It may not be possible to restore the original functions.)

Keep the unit away from appliances (such as TV sets and TV game machines) which generate magnetic fields.

- When the unit is used on top of or near a TV set, the images and sound may be distorted by the electromagnetic waves emanating from the TV set.
- Strong magnetic fields generated by speakers or large motors may damage the recordings or distort the images.
- The electromagnetic waves emanating from microprocessors may adversely affect the unit and distort the images and sound.
- If the unit is adversely affected by an appliance that generates magnetic fields and fails to operate properly as a result, turn off its power, and either remove its battery or unplug the AC adapter from the power outlet. Then install the battery again or re-connect the AC adapter. After doing this, turn the unit's power back on.

Do not use the unit near a radio transmitter or high-voltage appliance.

- Doing so may adversely affect the recorded images and sound.

When using the unit at the beach or similar locations, take care to protect it from sand and dust.

- Sand and dust may damage the unit and its cards. (Take particular care when inserting or ejecting the cards.)

Installation location

Do not place this unit where it will be exposed to direct sunlight. Doing so may cause deterioration of the cabinet and/or damage to the LCD screen.

AC adapter and battery

- When the battery temperature is extremely high or extremely low or when the battery has not been used for a prolonged period and been left discharged, the [CHARGE] lamp will blink several times, and charging will start automatically.
- If the [CHARGE] lamp continues blinking even when the battery temperature is normal, this may be a sign of trouble in the battery or AC adapter. Consult with your dealer.
- When the battery is warm, it will take longer than usual to recharge it.
- When the AC adapter is used near a radio, the sound from the radio may be distorted. Use the AC adapter and radio at a distance of at least 1 meter from each other.
- Noise is output while the AC adapter is being used, but this is not a sign of trouble.

When carrying the unit around, take care not to drop it.

- Strong impacts may damage the unit's body, preventing it from operating properly.

Do not expose the unit to insecticides or volatile sprays or liquids.

- These substances may deform the unit's body or cause its paint to peel off.
- Do not bring the unit into contact with products made of rubber or vinyl for prolonged periods of time.

Characteristics of the battery

A rechargeable lithium-ion battery is used in this unit. Electrical energy is generated by the chemical reactions taking place inside it. These reactions are susceptible to the effects of the ambient temperature and humidity, and the higher or the lower the temperature, the quicker the battery charge will be used up. When the battery is used where the temperature is extremely low, it will power the unit for only 5 minutes or so. When the battery reaches an extremely high temperature, its protection function is activated, making it impossible for the battery to be used for a while.

After using the unit, always remember to remove the battery.

Be sure to remove the battery from the unit. (If it is left in place, a very faint current will continue to flow even when the unit's power has been turned off.) If the battery is left in place for a prolonged period, it may discharge excessively so that it cannot be used again even when it is charged at a later time.

Protect the battery terminals.

Keep the battery terminals free from dust and foreign matter.

If the battery has been inadvertently dropped, check whether its body and terminal area have been deformed.

Installing a deformed battery in the unit or in the AC adapter may damage the unit or AC adapter.

Precautions when memory cards are to be destroyed or given to other parties

The formatting and deletion functions provided by the unit and personal computers serve merely to change the file management information: they will not completely erase all the data on the memory card. When a memory card is to be destroyed or given to another party, it is recommended that you destroy the actual card physically or use a data deletion software program for use with personal computers available on the market to completely erase all the data on the card. You, the user, are responsible for managing the data on your memory cards.

Liquid crystal display

- When the same image or characters are left displayed on the LCD monitor for a prolonged period, they may become burned into the screen. However, the original condition of the screen will be restored after the power has been kept off for several hours.
- The liquid crystal part of the monitor has been fabricated using high-precision technology. The number of its effective pixels is more than 99.99 %, but this still leaves less than 0.01 % of its pixels which may be missing or permanently lighted. This is not a sign of trouble and will have absolutely no effect on the images which have been recorded.
- The surface of the liquid crystal display may be marked or scratched if it is wiped or rubbed firmly with a rough cloth.
- The response speed and brightness of the liquid crystal change depending on the temperature at which the display is used.
- Condensation may form on the liquid crystal part of the monitor if the unit is placed in a location where there is a significant difference in the temperature levels. If this happens, wipe off the condensation with a soft dry cloth.
- If the unit becomes very cold, the LCD monitor screen will be darker than usual immediately after the power has been turned on. When the temperature inside the unit rises, the normal brightness will be restored.

Protective caps for the connectors

Cover the connectors which are not going to be used with the protective caps.

Updating the drivers installed in the unit

For the latest information concerning drivers, access the P2 support page on the web site given below.

<https://eww.pavc.panasonic.co.jp/pro-av/>

When updating a driver, check the unit's version by selecting thumbnail menu "OPERATION" – "SERVICE" – "SYSTEM INFO", then access the above web site, and download the driver if necessary.

Complete the updating by loading the downloaded file into the unit through an SD memory card. For details on the updating procedure, refer to the information on the above site.

- When installing the update, be absolutely sure to connect the AC adapter.
- It is recommended that SD memory cards which comply with the SD standard be used by the unit. Be absolutely sure to use the unit to format the SD memory cards. If they need to be formatted using a personal computer, download the special software from the above site, and use it to format them.

Maintenance

Do not use benzine or paint thinners to clean the unit.

- Doing so may deform the unit or cause its paint to peel off.
- Before cleaning the unit, remove the battery or unplug the AC cord from the power outlet.
- Wipe the unit with a clean soft cloth. To remove stubborn dirt, dip a cloth into some kitchen detergent which has been diluted with water, wring it out and wipe off the dirt, and then use a dry cloth to take up any remaining moisture.

Condensation

When condensation forms on or inside the unit, the principle behind its formation is the same as when droplets of water form on the window panes of a heated room. It forms when the unit and its cards are brought into a space with significantly different temperature and humidity levels, specifically when:

- They have been brought to a very humid location full of steam or to a room immediately after the heating has been turned on.
- They have suddenly been brought from an air-conditioned place to a location with high temperature and humidity levels.
- If the unit and its cards are brought to such locations, do not turn on the unit's power but leave the unit and cards standing for about 10 minutes.

Storage precautions

Before storing the unit, remove its battery.

Select a location with minimal moisture and a relatively constant temperature to store the unit.

[Recommended temperature: 15 °C to 25 °C
(59 °F to 77 °F)]

[Recommended relative humidity: 40 % to 60 %]

Unit

- Wrap the unit in a soft cloth to protect it from dust and dirt.

Battery

- The service life of the battery will be shortened if the battery is kept where the temperature is extremely high or extremely low.
- Storing the unit in a location with high concentrations of oily smoke or dust may cause the connectors to become corroded and other trouble to occur.
- **Ensure that the battery terminals are not brought into contact with any metal objects (such as necklaces or hairpins). Otherwise, the terminals may be shorted and generate heat which could cause burns if touched.**
- When the battery is to be stored for a prolonged period, it is recommended that you charge it once a year, use the battery in the unit until its charge is used up, and then return it to storage.

P2 cards

- After removing the P2 cards from the unit, always remember to cover their terminals with the dedicated caps to keep sand and dust away from the connector areas. Keep the P2 cards in their protective cases when storing them or carrying them around.
- Do not store P2 cards wherever there are corrosive gases in the atmosphere.

SD memory cards


- After removing the SD memory cards from the unit, always remember to put them in their protective cases.
- Do not store SD cards wherever there are corrosive gases in the atmosphere.
- Do not leave SD memory cards inside vehicles or in places exposed to direct sunlight or where the temperature will be high.
- Do not leave SD memory cards in places where the humidity level is high or where there is a great deal of dust.

Handling the data recorded on P2 cards

“P2 cards” are semiconductor memory cards which have been adopted as the recording media for the “DVCPRO P2 series” of professional-use video production and broadcast equipment.

- The data recorded in the DVCPRO P2 format is in a file format which is highly compatible with personal computers. The data file structure has its own format, the files contain not only the video and audio data which are converted into MXF files but various other important information, and the data is associated in the folder configuration shown on the right.

Changing or deleting some of this information may result in trouble: for instance, it may make it impossible for the data to be recognized as P2 data or for the cards to be used in P2 devices.

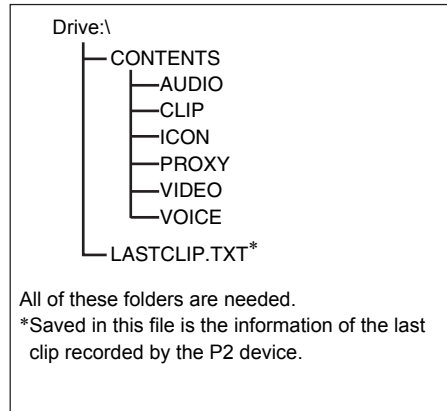

- In order to prevent any of the information from being lost when transferring the data on a P2 card to a personal computer or writing the data stored in a personal computer onto a P2 card, be absolutely sure to download the “P2 viewer” dedicated software from the following web site and use it for this purpose. (Operating systems supported: Windows XP, Windows 2000)

<https://eww.pavc.panasonic.co.jp/pro-av/>

- When transferring data to a personal computer using a regular IT tool such as Microsoft Windows Explorer or Apple Finder, proceed as follows.


To return the data to the P2 card, be absolutely sure to use the P2 viewer.

- Transfer the data together with the CONTENTS folder and LASTCLIP.TXT file.
Do not perform any operations for the files under the CONTENTS folder.
When copying data, copy the LASTCLIP.TXT file together with the CONTENTS folder.
- When transferring the data on a multiple number of P2 cards to a personal computer, create the folder for each P2 card in order to prevent the same clip names from being overwritten.
- Do not delete the data on P2 cards.
- P2 cards must always be formatted using a P2 device prior to use.

-
- “Microsoft” and “Windows” are the registered trademarks of Microsoft Corporation of the United States in the United States and other countries.
 - “Apple” and “Macintosh” are the registered trademarks of Apple Inc., of the United States in the United States and other countries.

Concerning the use of memory cards

In this unit, use SD memory cards which comply with the SD standard or SDHC standard. If miniSD or miniSDHC cards are going to be used in this unit, be absolutely sure to install the special adapter prior to using them. (The unit will not operate properly if only the adapter is installed on the unit. You must insert the memory card into the adapter for use.)

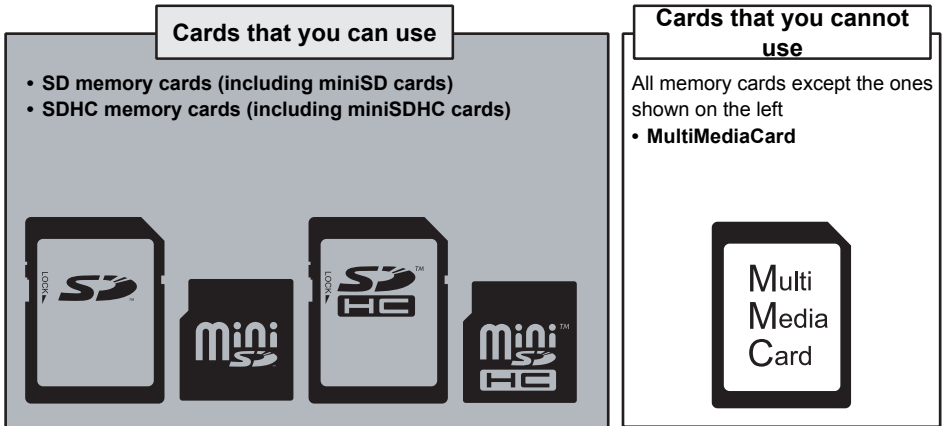

SD memory cards with the following memory sizes can be used within this unit.

SD (8 MB to 2 GB)

8 MB	16 MB	32 MB	64 MB	128 MB
256 MB	512 MB	1 GB	2 GB	

SDHC (4 GB only)

4 GB

It is recommended that the SD and SDHC memory cards or the miniSD and miniSDHC cards made by Panasonic be used.

For the latest information on the unit and the memory cards which can be used by the unit, access the P2 support page on the web site below.

<https://www.pavc.panasonic.co.jp/pro-av/>

- SDHC is a new standard for memory cards with memory sizes of 2 GB or more which was formulated in 2006 by the SD Association.
- The SD card logo is a registered trademark.
- MMC (MultiMediaCard) is a registered trademark of Infineon Technologies AG.

Specifications

[GENERAL]

Supply voltage	DC7.2 V/7.9 V
Power consumption	11 W

indicates safety information.

Operating ambient temperature

0 °C to 40 °C (32 °F to 104 °F)

Operating ambient humidity

10 % to 80 % (no condensation)

Weight

1.1 kg (2.42 lb) (main unit)

Dimensions (W x H x D)

104.0 mm x 83.0 mm x 227.0 mm
(4-3/32 inches x 3-9/32 inches x 8-15/16 inches)
(excluding feet)

Recording media

P2 card

Recorded files

MXF files (FAT 32 file system)

[VIDEO]

Video recording formats (1394 input)

1080i/60i, 1080i/50i, 720P/60P, 720P/50P

(DVCPRO HD)

480i/60i, 576i/50i (DVCPRO50, DVCPRO and DV formats selectable)

* 60P: 59.94P, 60i: 59.94i

Playback formats

DVCPRO HD

1080i/60i (30P over 60i, 24P over 60i, 24PA over 60i)

1080i/50i (25P over 50i)

720P/60P (30P over 60P, 24P over 60P)

720P/30PN (native recording)

720P/24PN (native recording)

720P/50P (25P over 50P)

720P/25PN (native recording)

DVCPRO50/25, DV

480i/60i (30P over 60i, 24P over 60i, 24PA over 60i)

576i/50i (25P over 50i)

* 24P: 23.98P, 30P: 29.97P, 60P: 59.94P,

60i: 59.94i

Sampling frequency

Y: 74.25 MHz, Pb/Pr: 37.125 MHz

(DVCPRO HD)

Quantizing

8 bit (DVCPRO HD)

Video compression system

DCT + variable-length code (DVCPRO HD)

Video compression ratio

1/6.7 (DVCPRO HD)

Video bit rate

100 Mbps (DVCPRO HD)

Video outputs

HD/SD-SDI output:

BNC x 1, 0.8 Vp-p, 75 Ω

HD : Compliance with SMPTE292M/296M/299M standards

SD : Compliance with SMPTE259M-C/272M-A, ITU-R BT.656-4 standards

Analog composite output:

BNC x 1, Video: 1.0 Vp-p, 75 Ω

Analog component output:

D4 connector x 1 (Y, Pb, Pr) Y: 1.0 Vp-p, 75 Ω, Pb/Pr: 0.7 Vp-p, 75 Ω

[MEMORY CARDS]

Recording/playback time

Card number	No. of cards used	Formatting		
		DVCPRO/DV (2 audio channels)	DVCPRO50 (4 audio channels)	DVCPRO HD (4 audio channels)
AJ-P2C 008HG	1 card	Approx. 32 minutes	Approx. 16 minutes	Approx. 8 minutes
	2 cards	Approx. 64 minutes	Approx. 32 minutes	Approx. 16 minutes
AJ-P2C 016RG	1 card	Approx. 64 minutes	Approx. 32 minutes	Approx. 16 minutes
	2 cards	Approx. 128 minutes	Approx. 64 minutes	Approx. 32 minutes

[AUDIO]**Audio recording formats (1394 input)**

48 kHz, 16 bits, 4 channels (DVCPRO HD, DVCPRO50)

48 kHz, 16 bits, 2 channels or 4 channels (DVCPRO/DV)

* 32 kHz, 12 bits, 4 channel input signals in the DV format are converted into 48 kHz, 16 bits and 4 channels, and recorded.

Sampling frequency

48 kHz

Quantizing

16 bit/4 channels

Frequency response

20 Hz to 20 kHz

Audio outputs

LINE output

Pin jacks x 2 (CH1, CH2)

316 mV, 600 Ω

Headphones

Stereo mini-jack (3.5 mm diameter) x 1

Internal speaker

20 mm round type x 1 (monaural)

[OTHER INPUTS/OUTPUTS]**IEEE1394 digital input/output**

IEEE1394a 6-pin x 1 (400, 200 or 100 Mbps selectable)

USB 2.0

HOST x 1 (type A, bus power)

DEVICE x 1 (type B)

[P2 CARD SLOTS]

P2 card slots x 2

[SD CARD SLOT]

SD memory card slot x 1

(MultiMediaCards cannot be used.)

[LCD MONITOR]

3.5-inch LCD color monitor (210,000 pixels)

[AC ADAPTER]**Rated input**

100 V to 240 V AC, 50/60 Hz, 24 W

Rated output

7.9 V DC, 1.9 A (Video Camera)

8.4 V DC, 1.2 A (during charging)



indicates safety information.

Weight

160 g (0.35 lb)

Dimensions (W x H x D)

70.0 mm x 44.5 mm x 116.0 mm

(2-3/4 inches x 1-3/4 inches x 4-9/16 inches)

[OPTIONAL PERIPHERALS]**Battery**

CGP-D28/CGP-D28s (2800 mAh)

CGA-D54/CGA-D54s (5400 mAh: identical to supplied battery)

Weight and dimensions are approximate.
Specifications are subject to change without notice.



This manual was printed
with soy based ink.

Panasonic®

Panasonic Broadcast & Television Systems Company Unit Company of Panasonic Corporation of North America

Executive Office:

One Panasonic Way 4E-7, Secaucus, NJ 07094 (201) 348-7000

EASTERN ZONE:

One Panasonic Way 4E-7, Secaucus, NJ 07094 (201) 348-7196

Southeast Region: (201) 348-7162

WESTERN ZONE:

3330 Cahuenga Blvd W., Los Angeles, CA 90068 (323) 436-3500

Government Marketing Department:

One Panasonic Way 2E-10, Secaucus, NJ 07094 (201) 348-7587

Broadcast PARTS INFORMATION & ORDERING:

9:00 a.m. – 5:00 p.m. (EST) (800) 334-4881/24 Hr. Fax (800) 334-4880

Emergency after hour parts orders (800) 334-4881

TECHNICAL SUPPORT:

Emergency 24 Hour Service (800) 222-0741

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3 (905) 624-5010

Panasonic de Mexico S.A. de C.V.

Av angel Urraza Num. 1209 Col. de Valle 03100 Mexico, D.F. (52) 1 951 2127

Panasonic Puerto Rico Inc.

San Gabriel Industrial Park, 65th Infantry Ave., Km. 9.5, Carolina, Puerto Rico 00630 (787) 750-4300

Matsushita Electric Industrial Co., Ltd.

Web Site: <http://panasonic.net>

Professional & Broadcast IT Systems Business Unit Europe Panasonic AVC Systems Europe a Division of Panasonic Marketing Europe GmbH

Hagenauer Str. 43, 65203 Wiesbaden-Biebrich Deutschland Tel: 49-611-235-481

